
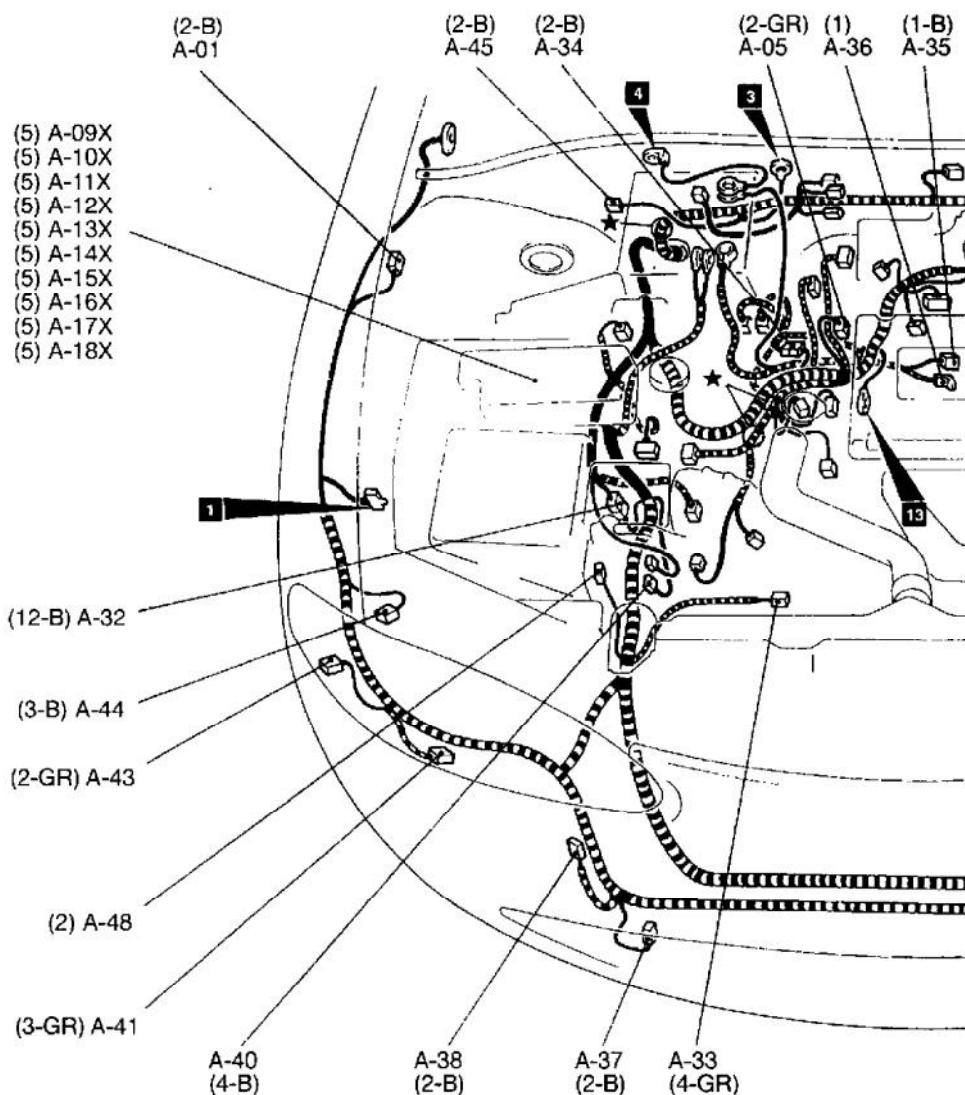


Vehicle: Diagrams


Engine Compartment Harness - A Connectors

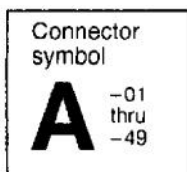

A-01 ABS wheel-speed sensor (right side)
 A-02 Generator
 A-03 Generator
 A-04 Crankshaft position sensor
 A-05 Knock sensor
 A-08 ABS wheel-speed sensor (left side)
 A-09X Condenser fan relay (LO)
 A-10X Condenser fan relay (HI)
 A-11X Radiator fan relay (LO 1)
 A-12X Radiator fan relay (LO 2)
 A-13X Radiator fan relay (HI)

A-14X Headlight relay
 A-15X Taillight relay
 A-16X Fog light relay
 A-17X Horn relay
 A-18X A/C compressor clutch relay
 A-20 Front combination light (left side)
 A-21 Hood switch <with theft-alarm system>
 A-22 Front side-marker light (left side)
 A-23 Hydraulic unit <ABS>
 A-24 Hydraulic unit <ABS>
 A-25 Headlight (left side)



Engine Compartment Harness (Part 1 Of 4)

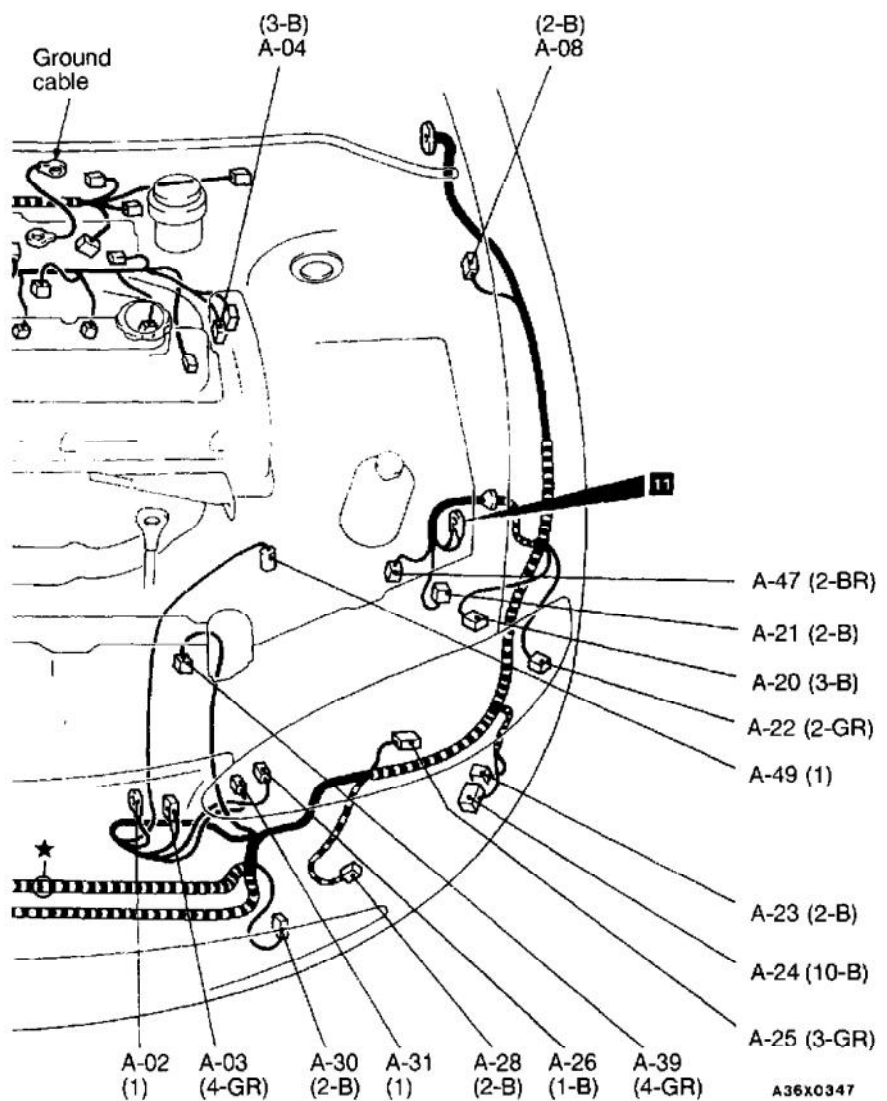

A-26 Oil pressure gauge unit
 A-28 Horn
 A-30 Fog light (left side)
 A-31 Oil pressure switch
 A-32 Front wiring harness and control wiring harness combination
 A-33 Radiator fan motor
 A-34 Control wiring harness and battery cable combination
 A-35 Starter motor
 A-36 Starter motor

A-37 Fog light (right side)
 A-38 No connection
 A-39 Condenser fan motor
 A-40 Generator relay
 A-41 Headlight (right side)
 A-43 Front side-marker light (right side)
 A-44 Front combination light (right side)
 A-45 Theft-alarm horn
 A-47 Dual pressure switch
 A-48 No connection
 A-49 Power steering pressure switch


Engine Compartment Harness (Part 2 Of 4)

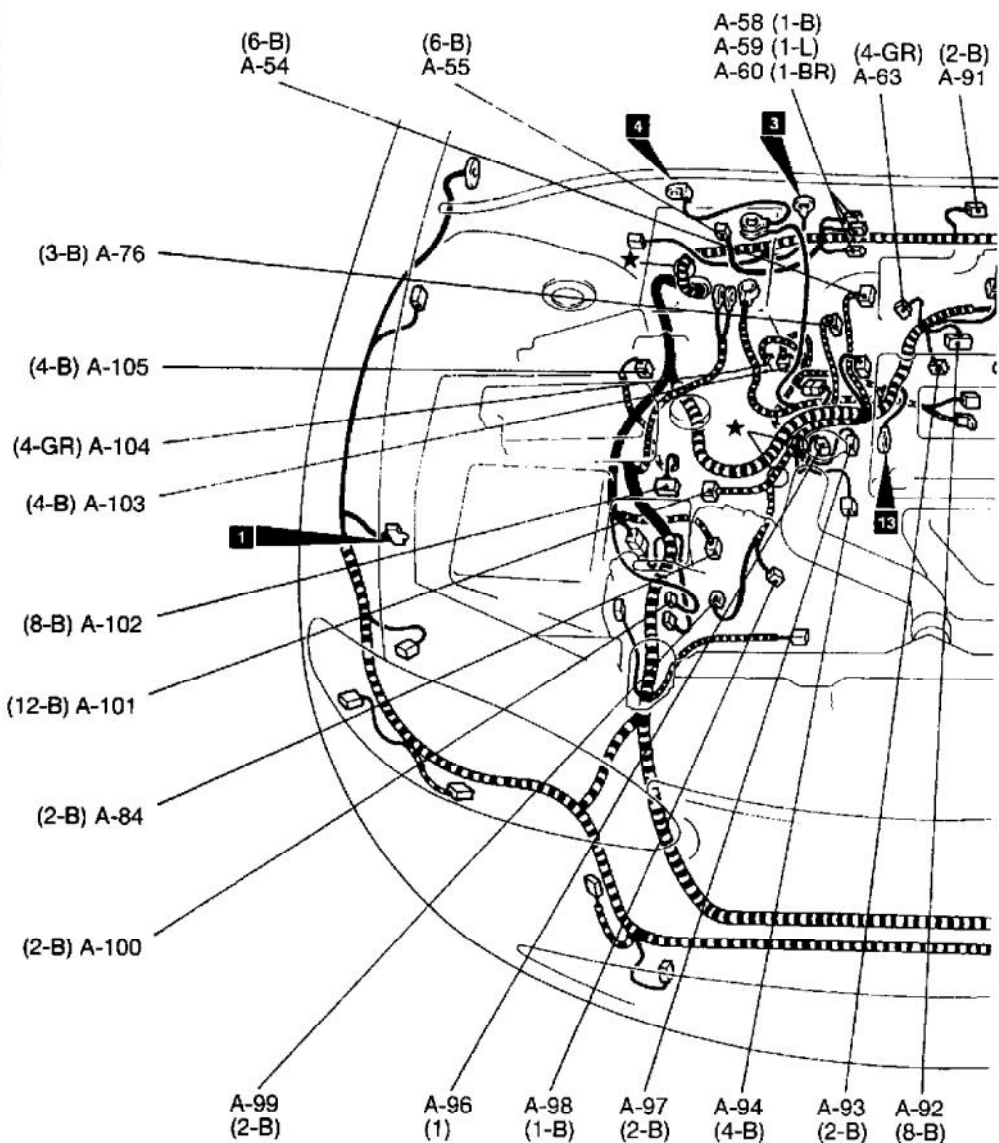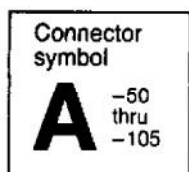

A-50 Injector No.1
 A-54 Idle air control motor
 A-55 Windshield wiper motor
 A-56 Injector No.2
 A-58 Fuel pump check connector
 A-59 Engine speed detection connector
 A-60 Ignition timing adjustment connector
 A-61 Injector No.3
 A-62 Ignition coil

A-63 Throttle position sensor
 A-64 Capacitor
 A-65 Manifold differential pressure sensor
 A-66 Evaporative emission purge solenoid valve
 A-67 Brake fluid level switch
 A-76 Vehicle speed sensor
 A-79 Fuel pressure solenoid valve
 A-80 Resistor
 A-81 Camshaft position sensor

Engine Compartment Harness (Part 3 Of 4)

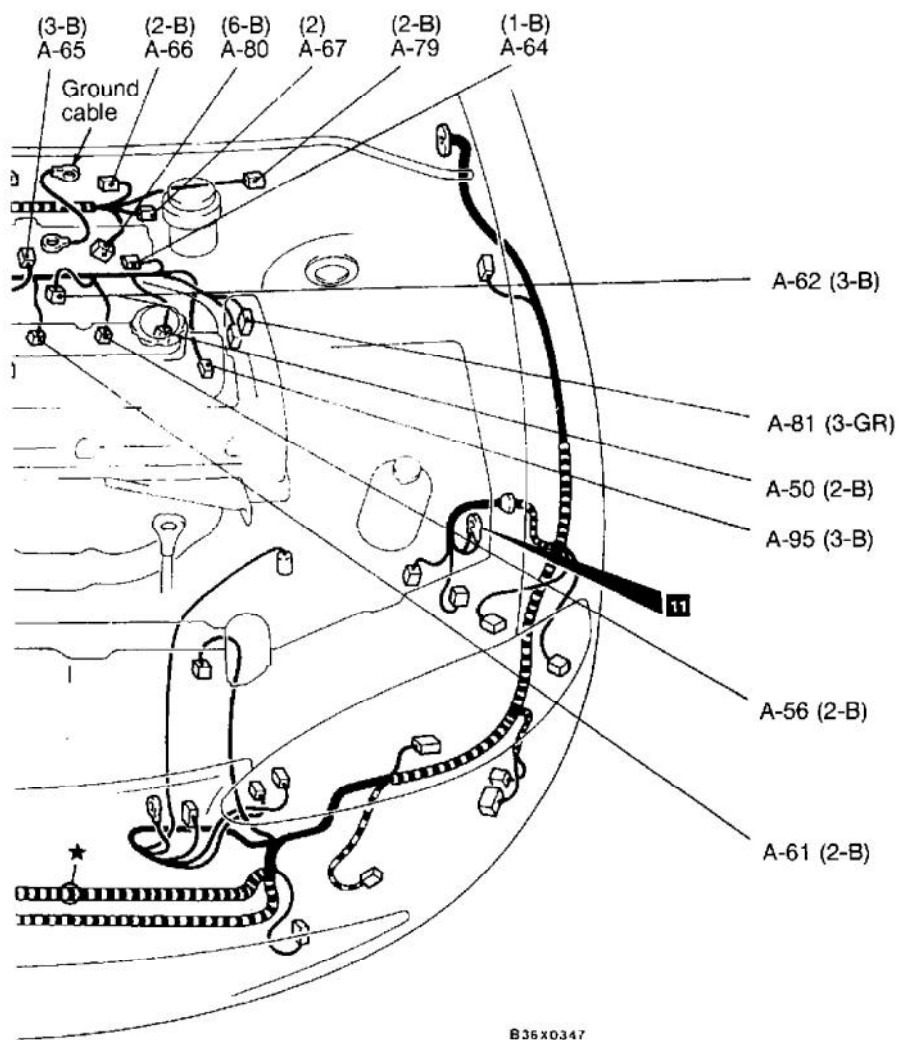

A-84 Back-up light switch <M/T>

A-91 EGR solenoid valve

A-92 Ignition power transistor

A-93 Injector No.4

A-94 Heated oxygen sensor (front)

A-95 A/C compressor

A-96 Engine coolant temperature gauge unit

A-97 Engine coolant temperature sensor

A-98 Kickdown servo switch <A/T>

A-99 A/T fluid temperature sensor

A-100 Turbocharger waste gate solenoid valve

A-101 Park/neutral position switch <A/T>

A-102 Volume air flow sensor

A-103 ELC 4-speed automatic transaxle control solenoid valve

A-104 Pulse generator <A/T>

A-105 Auto-cruise control vacuum pump

Engine Compartment Harness (Part 4 Of 4)