

# HOW TO USE THE WIRING DIAGRAMS

Each electrical circuit is illustrated in a clear and easy to follow style.

There are 7 steps that should be followed to use this diagram to diagnose electrical problems.

- Verify the complaint
- Refer to the Index for system location
- Locate inoperative system on schematic
- Identify other systems on the circuit
- Isolate the problem area
- Correct the problem
- Operate the corrected system

## VERIFY THE COMPLAINT

To diagnose a customer complaint "Back Up Lights Don't Work" the first thing we should do is verify the complaint.

If both lights do not work, refer to the INDEX on page 1 of the vehicle schematic.

## REFER TO THE INDEX

An INDEX is provided on page 1 to locate the inoperative components.

See LAMPS – BACK-UP on the INDEX. The INDEX lists the location of the part on the drawing.

The drawing is set up like a road map. For example: the Pinto Back-up lights are located at J-40. To locate J-40 on the schematic, find the number 40 at the top of the illustration.

Now, find the letter J on the side of the illustration. Follow the number and the letter until they intersect. The part will be within an inch or two of the intersection.

## LOCATE INOPERATIVE SYSTEM

Generally, the power supply for all components on this drawing comes from the top of the page and over to the battery at the left.

The ground for each component is always toward the bottom of the drawing.

There are symbols used on this drawing that are explained as follows:

- Ground symbols are shown in Figure 1. A ground wire connected away from the component is identified by a code G1 or G2, etc. The location of the remote ground is listed in the GROUND CODES chart and the bottom of the page.



Fig. 1 — Ground Symbols

- Wire color code is shown in Fig. 2. Wiring Color Codes are listed at the bottom of the drawing. The Standard Wiring Color Codes are listed behind these instructions.

140B

Fig. 2 — Wire Color Code

# FOREWORD

This book contains wiring and vacuum diagrams for all Ford and Lincoln-Mercury car lines and all Ford trucks.

Both wiring and vacuum diagram replacement sheets will be released as required to keep the book current.

All vacuum systems are contained in a separate section.

This book is divided by vehicles. Refer to the applicable section as follows:

- Pinto
- Maverick and Comet
- Mustang
- Cougar
- Torino and Montego
- Ford and Meteor
- Mercury
- Thunderbird
- Mark IV
- Lincoln
- Bronco
- Econoline
- P-Series
- F-100—350 Series
- B and F-500—750 Series
- C-Series
- W-Series
- L-Series — Line Haul
- L-Series — City Delivery



Ford Marketing Corporation  
Ford Customer Service Division  
Service Technical Communications Department

The illustrations contained in this book were in effect at the time the book was approved for printing. Ford Motor Companies, whose policy is one of continuous improvement, reserves the right to discontinue models at any time, or to change specifications or design, without notice and without incurring obligation.

If a vehicle specific wire color in a connector does not match the diagram shown, it can usually be identified by comparing the other colors shown at the wire connectors. Specific wire color deviations in the manufacturing of a wire harness are usually for a short duration.

- Harness number is shown in Figure 3. The 5 or 6 digit number near the wire indicates the wire harness basic part number.



Fig. 3 — Harness Number

- Wire Connector identification code is shown in Figure 4. The key for the connector codes is located at the bottom of the wiring diagram.

 


Fig. 4 — Wire Connector Code

- Male connector symbol is illustrated in Figure 5. The symbol used for the diagram and chart is shown.

 


Fig. 5 — Male Connector Codes

- Female connector symbol is shown in Figure 6.

 


Fig. 6 — Female Connector Codes

- Splice is shown in Figure 7. A splice is a common point where two wires are joined together. Location of splice is at bottom of schematic page.



Fig. 7 — Splices

- Heavy lines for the wires indicate a direct to battery feed.
- Heavy dashed lines indicate an ignition switch accessory feed.
- The number located after the wire color code (16) indicates wire gauge size.

#### IDENTIFY OTHER SYSTEMS ON CIRCUIT

Now that the inoperative back-up light system has been located on the diagram, we should note the other systems that use the same power supply.

At J-40 on the diagram, follow back-up light wire 140 to wire connector C-38. Note radio power comes from connector C-38. To determine if power is available at C-38, turn on the radio.

If the radio works, the problem is between connector C-38 and the splice at the back-up lights (harness 14405).

If the radio doesn't work, the problem is between the connector C-38 and the fuse panel.

#### ISOLATE PROBLEM AREA

Now to trace a back-up light problem such as between connector C-38 and the back-up lights, we can check for power at connector C-52. To identify the specific terminals at connector C-52, refer to the Wire Connector Code Chart at the bottom of the page.

The Connector Code Chart illustrates the connector C-52 (Fig. 8). It is a 4-wire connector black in color unless otherwise specified and located at the lower opening of the L.H. cowl side.

Check connector C-52 for power. If it is OK, the problem is between connector C-52 and the splice at the back-up lights.

If power is not available at connector C52, the problem is between connectors C-52 and C-38.

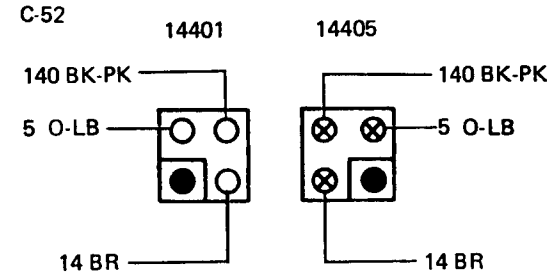


Fig. 8 — Connector C-52

#### CORRECT THE PROBLEM

Use standard continuity tests for open circuits and short circuit tests to find the specific problem.

Repair or replace the electrical component that is malfunctioning.

#### OPERATE CORRECTED SYSTEM

It is a good practice to operate the system after a repair has been made to see if it now works.

#### BULB AND FUSE CHART

A bulb and fuse chart is included on the first page of this schematic for your convenience.

# CAR STANDARD WIRE COLOR CODE CHART

CIRCUIT	DESCRIPTION	COLOR	CIRCUIT	DESCRIPTION	COLOR
* 1	HORN SWITCH CONTROL	DK BLUE	111	WARNING LAMP TO LIGHTS ON RELAY	BLACK-YELLOW STRIPE
2	RH FRONT TURN SIGNAL LAMP	WHITE-LT BLUE STRIPE	112	WARNING LAMP RELAY FEED	BLACK-YELLOW DOT
3	LH FRONT TURN SIGNAL LAMP	LT GREEN-WHITE STRIPE	113	STARTING MOTOR TO STARTING MOTOR RELAY	YELLOW-LT BLUE DOT
4	ALTERNATOR REG. "S" TERM. TO ALTERNATOR "S" TERM	WHITE-BLACK STRIPE	114	FEED TO VACUUM DOOR LOCK SWITCH	TAN-YELLOW HASH
5	RH REAR TURN SIGNAL LAMP	ORANGE-LT BLUE STRIPE	115	VACUUM DOOR LOCK SWITCH TO SOLENOID (LOCK)	LT GREEN
6	HORN RELAY TO HORN	YELLOW-LT GREEN HASH	116	VACUUM DOOR LOCK SWITCH TO SOLENOID (UNLOCK)	BROWN-ORANGE DOT
7	SEAT SWITCH ARM TERM TO RELAY FIELD TERM	LT GREEN-YELLOW DOT	117	DOOR LOCK MOTOR (LOCK)	PINK-BLACK DOT
8	TURN SIGNAL FLASHER FEED	ORANGE-YELLOW STRIPE	118	DOOR LOCK MOTOR (UNLOCK)	PINK-ORANGE DOT
9	LH REAR TURN SIGNAL LAMP	LT GREEN-ORANGE STRIPE	119	DOOR LOCK SWITCH (LOCK)	PINK-YELLOW DOT
10	STOPLAMP SWITCH FEED	LT GREEN-RED HASH	120	DOOR LOCK SWITCH (UNLOCK)	PINK-LT GREEN DOT
12	HEADLAMP DIMMER SWITCH TO HIGH BEAMS	LT GREEN-BLACK STRIPE	122	TOP CONTROL SWITCH TO TOP CONT. MOTOR OR RELAY	YELLOW
13	HEADLAMP DIMMER SWITCH TO LOW BEAMS	RED-BLACK STRIPE	123	TOP CONTROL SWITCH TO TOP CONT. MOTOR OR RELAY	RED
* 14	HEADLAMP SWITCH TO TAIL LAMPS AND SIDE MARKER LAMPS	BROWN	125	MAP LAMP SWITCH TO RH MAP LAMP	BROWN-YELLOW STRIPE
15	HEADLAMP SWITCH TO HEADLAMP DIMMER SWITCH	RED-YELLOW STRIPE	126	COURTESY LAMP SW. TO INSTR. PANEL COURTESY LAMP	BLACK-ORANGE DOT
16	IGNITION SWITCH TO IGNITION COIL "BATT." TERMINAL	RED-LT GREEN STRIPE	127	COURTESY LAMP SW. TO "C" PILLAR LAMPS	BLACK-LT BLUE DOT
17	LOW OIL PRESSURE WARNING LAMP TO LOW OIL PRESS. SENDING UNIT	WHITE	131	CIGAR LIGHTER LAMP FEED	PURPLE-ORANGE STRIPE
18	SEAT SWITCH TO RELAY FIELD TERM	ORANGE-YELLOW DOT	133	RELAY TO MAP LAMP SWITCH	TAN-RED HASH
19	INSTRUMENT PANEL LAMPS FEED	LT BLUE-RED STRIPE	137	RADIO & ANTENNA SWITCH FEED	YELLOW-BLACK HASH
22	BRAKE FEED	LT BLUE-BLACK STRIPE	138	DOOR JAMB SWITCH TO LIGHTS ON RELAY	BROWN-LT BLUE STRIPE
28	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	BLACK-PINK DOT	140	BACK UP LAMP	BLACK-PINK STRIPE
29	FUEL GAGE TO FUEL GAGE SENDER	YELLOW-WHITE STRIPE	144	AMPLIFIER TO SERVO TRANSDUCE FEED	ORANGE-YELLOW HASH
30	CONSTANT VOLTAGE UNIT AND INDICATOR LAMPS FEED	BLACK-LT GREEN STRIPE	145	SERVO SOURCE VACUUM SOLENOID TO CONTROL TRANSISTOR	GRAY-BLACK HASH
31	OIL PRESSURE INDICATOR TO OIL PRESSURE SENDING UNIT	WHITE-RED STRIPE	146	SERVO VENT SOLENOID TO CONTROL TRANSISTOR	WHITE-PINK HASH
32	STARTER CONTROL	RED-LT BLUE STRIPE	147	AMPLIFIER FEEDBACK POTENTIOMETER FEED	PURPLE-LT BLUE HASH
35	ALTERNATOR REGULATOR "F" TERM, TO ALTERNATOR	ORANGE-LT BLUE STRIPE	148	SERVO FEEDBACK POTENTIOMETER SIGNAL TO AMPLIFIER	YELLOW-RED HASH
36	ALTERNATOR OUTPUT	YELLOW-WHITE DOT	149	SERVO FEEDBACK POTENTIOMETER BASE TO AMPLIFIER	BROWN-LT GREEN HASH
* 37	BATTERY TO LOAD	YELLOW	150	SENSOR SIGNAL TO AMPLIFIER	DK GREEN-WHITE STRIPE
38	POWER SUPPLY TO BATTERY	BLACK-ORANGE STRIPE	151	SPEED CONTROL ON-OFF SWITCH TO AMPLIFIER	LT BLUE-BLACK HASH
39	TEMP. GAGE TO TEMP. SENDING UNIT	RED-WHITE STRIPE	153	STARTING MOTOR RELAY TO FLASHER	RED-WHITE STRIPE
40	CIGAR LIGHTER FEED	LT BLUE-WHITE STRIPE	158	KEY WARNING SWITCH TO BUZZER	BLACK-PINK HASH
41	WARNING LAMP FEED	BLACK-LT BLUE HASH	159	DOOR JAMB SWITCH TO BUZZER	RED-PINK STRIPE
42	SWITCH TO WARNING LAMP	RED-WHITE DOT	160	BUZZER TO WARNING INDICATOR RELAY	WHITE-PINK STRIPE
43	LOW AIR BUZZER FEED	ORANGE-LT BLUE HASH	162	EMERG. BRAKE WARNING LAMP TO EMERG. BRAKE SWITCH	LT GREEN-RED DOT
44	TURN SIGNAL FLASHER TO TURN SIGNAL SWITCH	LT BLUE	170	WINDOW REGULATOR SWITCH FEED	RED-LT BLUE DOT
45	HOT WATER TEMP. RELAY TO HOT WATER TEMP. SENDING UNIT	YELLOW-RED STRIPE	171	CIRCUIT BREAKER TO SEAT LATCH RELAY	BLACK-WHITE STRIPE
* 48	BLIND CIRCUIT TERM IN HARNESS CANNOT BE CHECKED FOR CONT (COLOR OPT) USED TO HOLD RESISTOR WIRE IN CONNECTOR		172	RELAY TO SEAT LATCH SOLENOID	ORANGE
51	SEAT REG. CONTROL SWITCH FEED	BLACK-WHITE DOT	173	DOOR SWITCH TO SEAT LATCH RELAY (COIL TERM.)	PINK-WHITE STRIPE
53	COURTESY LAMP SWITCH TO COURTESY LAMP	BLACK-LT BLUE STRIPE	175	TOP CONTROL SWITCH OR RELAY FEED	BLACK-YELLOW DOT
54	INTERIOR LAMP SWITCH FEED	LT GREEN-YELLOW STRIPE	176	REAR WINDOW REGULATOR SWITCH FEED	WHITE
55	CARGO LAMP SW. TO CARGO LAMP	BLACK-PINK STRIPE	179	HORIZONTAL SEAT REG. MOTOR TO RELAY	YELLOW
56	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	DK BLUE-ORANGE STRIPE	180	HORIZONTAL SEAT REG. MOTOR TO RELAY	RED
* 57	GROUND CIRCUIT	BLACK	181	BLOWER MOTOR FEED	BROWN-ORANGE STRIPE
58	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	WHITE	182	THERMOSTAT SWITCH FEED	BROWN-WHITE STRIPE
60	CONSTANT VOLTAGE UNIT TO GAGE	BLACK-LT GREEN DOT	184	AIR COND SW. (LO) TO AIR COND BLOWER MOTOR	TAN-ORANGE HASH
61	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	YELLOW-RED STRIPE	186	DEFOGGER SW. TO DEFOGGER MOTOR	BROWN-LT BLUE HASH
63	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	RED	188	CIRCUIT BRKR. TO HEADLAMP SW. "BATT." TERM.	BLACK
65	WINDSHIELD WIPER SW. TO WINDSHIELD WIPER MOTOR	DK GREEN	191	DEFOGGER SW. TO DEFOGGER MOTOR	DK BLUE-YELLOW STRIPE
69	COIL TERM. IGN. SW. TO FUEL SOLENOID	RED-PINK HASH	193	WINDOW REGULATOR RELAY FEED	YELLOW-LT GREEN HASH
74	RELAY "H" TERMINAL TO LAMP (WATER)	LT GREEN	194	WINDOW REGULATOR RELAY ACCY FEED	PINK
75	STARTING MOTOR RELAY TO SERIES PARALLEL SW. (No. 1 TERM)	LT GREEN-PURPLE HASH	196	COOLANT FAN CONTROL RELAY FEED	TAN-RED DOT
80	ENGINE COMPARTMENT LAMP FEED	BLACK-ORANGE DOT	197	COOLANT TEMPERATURE SWITCH TO CONTROL RELAY	TAN-ORANGE DOT
81	EMISSION CONTROL VALVE TO SWITCH	BROWN-YELLOW DOT	198	A/C PRESSURE SWITCH TO CONTROL RELAY	TAN-YELLOW DOT
84	DECK LID SOLENOID FEED	PURPLE-YELLOW HASH	199	CONTROL RELAY TO IGNITION RELAY	TAN-LT GREEN DOT
88	INSTRUMENT PANEL LAMP SWITCH FEED	BLACK-WHITE STRIPE	200	IGNITION RELAY TO COOLANT FAN	TAN-LT BLUE DOT
			*206	GROUND RETURN TO TOWING VEHICLE	WHITE
			215	SIGNAL UNIT LAMP TO FUEL SIGNAL RELAY	YELLOW-BLACK DOT

# CAR STANDARD WIRE COLOR CODE CHART (CONTINUED)


CIRCUIT	DESCRIPTION	COLOR	CIRCUIT	DESCRIPTION	COLOR
226	LF WINDOW REG SW. TO LF WINDOW REG MOTOR	RED	385	FLASHER TO EMERGENCY WARNING SWITCH	WHITE-RED HASH
227	LF WINDOW REG SW. TO LF WINDOW REG MOTOR	YELLOW	387	READING LAMP SW. TO LAMP (L.H.)	LT. GREEN
241	DE-ICE SOLENOID CONTROL	LT BLUE-YELLOW STRIPE	399	HEATER BLOWER SWITCH FEED	BROWN-YELLOW STRIPE
243	POWER SERVO TO CLIMATE CONTROL UNIT (MODE)	LT GREEN-ORANGE HASH	400	SAFETY RELAY LOAD TERM. TO WIND. REG. SW. FEED	LT BLUE-BLACK DOT
244	THERMAL SW. TO CLIMATE CONTROL UNIT	YELLOW-WHITE HASH	401	LIMIT SW. TO BACK WINDOW REG. MOTOR	GRAY-BLACK STRIPE
245	POWER SERVO TO CLIMATE CONTROL UNIT (AMP)	BROWN-LT GREEN STRIPE	402	WINDOW REG. SW. TO BACK WINDOW REG. MOTOR	GRAY-RED STRIPE
246	POWER SERVO TO CLIMATE CONTROL UNIT (AMP)	PURPLE	403	WINDOW REG. SW. TO WIND. REG. MOTOR	GRAY-WHITE STRIPE
247	POWER SERVO TO CLIMATE CONTROL UNIT (AMP)	WHITE-YELLOW STRIPE	404	WINDOW REG. SW. TO BACK WIND. SW.	PURPLE-LT GREEN STRIPE
248	HEATER & A/C CONTROL SW. (DE-ICE) TO CLIMATE CONTROL UNIT	YELLOW-LT BLUE HASH	405	WINDOW REG. SW. TO BACK WIND. SW.	PURPLE-LT BLUE STRIPE
249	HEATER & A/C CONTROL SW. (LO-NORM) TO CLIMATE CONTROL UNIT	DK BLUE-LT GREEN STRIPE	406	WINDOW REG. SW. TO BACK WIND. AUX. SW.	TAN
250	HEATER & A/C CONTROL SW. (LO-NORM) TO POWER SERVO	ORANGE	407	WINDOW REG. SW. REAR TO LIMIT SW.	TAN-BLACK STRIPE
260	BLOWER MOTOR TO SWITCH - LO	RED-ORANGE HASH	408	WINDOW REG. SW. FRONT TO LIMIT SW.	TAN-RED STRIPE
261	BLOWER MOTOR TO SWITCH - HI	ORANGE-BLACK STRIPE	409	PRESSURE SWITCH TO KEY SWITCH	TAN-BLACK DOT
262	STARTING MOTOR RELAY TO IGN. COIL "I" TERM.	BROWN-PINK STRIPE	442	SEQUENTIAL LH REAR INBOARD TURN SIGNAL LAMP	LT GREEN-ORANGE STRIPE
269	HEATER BLOWER MOTOR TO SWITCH (MEDIUM)	LT BLUE-ORANGE HASH	443	SEQUENTIAL LH REAR CENTER TURN SIGNAL LAMP	LT GREEN-RED STRIPE
*282	TURN SIGNAL SW. TO RH REAR TURN SIGNAL LAMP	DK GREEN	444	SEQUENTIAL LH REAR OUTBOARD TURN SIGNAL LAMP	LT GREEN-BLACK STRIPE
*283	TURN SIGNAL SW. TO LH REAR TURN SIGNAL LAMP	YELLOW-BLACK STRIPE	445	SEQUENTIAL RH REAR INBOARD TURN SIGNAL LAMP	ORANGE-LT BLUE STRIPE
*284	BATTERY FEED TO STOPLAMP SWITCH	RED	446	SEQUENTIAL RH REAR CENTER TURN SIGNAL LAMP	ORANGE-WHITE STRIPE
287	SPEAKER VOICE COIL RETURN	BLACK-WHITE HASH	447	SEQUENTIAL RH REAR OUTBOARD TURN SIGNAL LAMP	ORANGE-RED STRIPE
296	FUSED ACCY FEED No. 1	WHITE-PURPLE STRIPE	450	SEAT BELT WARNING INDICATOR LAMP FEED	DK GREEN-LT GREEN STRIPE
297	ACCY FEED FROM IGNITION SWITCH	BLACK-LT GREEN HASH	454	IGN. SW. COIL TERM. TO CIRCUIT BREAKER	RED-LT GREEN STRIPE
298	FUSED ACCY FEED No. 2	PURPLE-ORANGE HASH	455	CIRCUIT BREAKER TO FUEL VALVE	LT GREEN-YELLOW HASH
306	SEAT REG. SW. TO HORIZ. SOLENOID BATT. TERM.	LT BLUE	458	TURN SIGNAL SWITCH TO INDICATOR RELAY	ORANGE-BLACK HASH
307	SEAT REG. SW. TO VERT. SOLENOID BATT. TERM.	WHITE	459	INDICATOR RELAY TO FLASHER	ORANGE-LT GREEN STRIPE
313	LEFT FRONT WINDOW REGULATOR SWITCH TO RIGHT FRONT WINDOW REGULATOR MOTOR	YELLOW-BLACK STRIPE	460	HORN SWITCH FEED	YELLOW-LT BLUE DOT
314	LEFT FRONT WINDOW REGULATOR SWITCH TO RIGHT FRONT WINDOW REGULATOR MOTOR	RED-BLACK STRIPE	469	SEAT BELT WARNING SWITCH FEED	LT GREEN
316	LEFT FRONT WINDOW REGULATOR SWITCH TO LEFT REAR WINDOW REGULATOR MOTOR	YELLOW-LT BLUE STRIPE	474	STOPLAMP RELAY FEED	PINK-BLACK STRIPE
317	LEFT FRONT WINDOW REGULATOR SWITCH TO LEFT REAR WINDOW REGULATOR MOTOR	RED-LT BLUE HASH	475	STOPLAMP SW. TO STOPLAMP RELAY (COIL TERM)	DK GREEN-WHITE STRIPE
319	LEFT FRONT WINDOW REGULATOR SWITCH TO RIGHT REAR WINDOW REGULATOR MOTOR	YELLOW-BLACK HASH	478	FOG LAMP SW. TO FOG LAMP	TAN-ORANGE STRIPE
320	LEFT FRONT WINDOW REGULATOR SWITCH TO RIGHT REAR WINDOW REGULATOR MOTOR	RED-BLACK HASH	485	IGNITION SWITCH ACCY. TERM. TO DECK LID OPEN WARNING LAMP	BROWN-PINK HASH
328	WINDOW REG. MASTER CONT. SW. TO WIND. REG. SW. FEED	RED-YELLOW DOT	486	DECK LID OPEN WARNING LAMP TO DECK LID OPEN SWITCH	BROWN-WHITE DOT
333	WINDOW REG. SW. TO WINDOW REG. MOTOR	YELLOW-RED STRIPE	487	READING LAMP SWITCH TO READING LAMP	PINK-ORANGE STRIPE
334	WINDOW REG. SW. TO WINDOW REG. MOTOR	RED-YELLOW STRIPE	494	TURN SIGNAL RELAY TO TURN SIGNAL FLASHER	TAN-LT GREEN HASH
347	COMPRESSOR CLUTCH FEED	BLACK-YELLOW HASH	500	HEADLAMP DIMMER SWITCH TO HEADLAMP DIMMER RELAY	PURPLE
348	THERMOSTATIC SW. TO AIR COND SW. SELECTOR TERM.	LT GREEN-PURPLE HASH	502	HEADLAMP DIMMER RELAY TO HEADLAMP DIMMER SWITCH	GRAY
364	BLOWER MOTOR RELAY FEED	BLACK-LT GREEN STRIPE	503	HEADLAMP DIMMER RELAY TO FUSE HOLDER	LT BLUE
365	FUEL LEVEL WARNING RELAY FEED	LT BLUE-RED HASH	504	FUSE HOLDER TO HEADLAMP DIMMER AMPLIFIER	DK BLUE-WHITE HASH
366	FUEL WARNING RELAY CONTROL	RED-BLACK HASH	505	HEADLAMP DIMMER SWITCH TO HEADLAMP DIMMER AMPLIFIER	BLACK
367	FUEL LEVEL RECEIVER TO FUEL LEVEL WARNING RELAY (REG. TERM.)	DK GREEN-WHITE DOT	507	AMPLIFIER TO RHEOSTAT	YELLOW
369	VACUUM SOLENOID TO TEMP. SW.	BROWN-ORANGE HASH	508	RHEOSTAT TO SENSOR	WHITE
371	BLOWER MOTOR RELAY TO MOTOR	PINK-WHITE HASH	509	AIR COND. CONDENSOR THERMAL SWITCH FEED	TAN-YELLOW STRIPE
375	MOVABLE STEERING COLUMN SOLENOID FEED	YELLOW-LT GREEN DOT	511	STOPLAMP SW. TO TURN SIGNAL SW.	LT GREEN
379	TURN SIGNAL SWITCH TO RH CORNERING LAMP	BROWN-WHITE HASH	515	RESISTOR TO BLOWER MOTOR (HI)	ORANGE-RED STRIPE
380	TURN SIGNAL SWITCH TO LH CORNERING LAMP	PURPLE-YELLOW STRIPE	517	CIRCUIT BREAKER (LOAD TERM) TO CONTROL SW. (BATT. TERM)	BLACK-WHITE STRIPE
381	MOVABLE STEERING COLUMN SOLENOID TO COURTESY LAMP SWITCH	ORANGE-WHITE STRIPE	520	SEAT BELT WARNING LAMP TO WARNING LAMP SWITCH	PURPLE-WHITE HASH
383	EMERGENCY WARNING FLASHER FEED	RED-WHITE HASH	527	HEADLAMP DIMMER SWITCH OVERRIDE TO RHEOSTAT	RED
			536	BLOWER MOTOR RELAY (LOAD TERM) TO BLOWER MOTOR	BLACK-LT GREEN DOT
			568	ALTERNATOR RELAY TO ALTERNATOR REGULATOR	LT GREEN
			587	WINDSHIELD WIPER INTERMITTENT GOVERNOR FEED	BLACK-WHITE HASH
			589	WINDSHIELD WIPER SWITCH TO INTERMITTENT GOVERNOR GROUND	ORANGE
			590	INTERMITTENT GOVERNOR TO W/S WIPER SWITCH	DK BLUE-WHITE STRIPE
			591	SPEED CONTROL RELAY TO SPEED REGULATOR	BLACK-ORANGE STRIPE
			592	STOPLAMP SW. TO SPEED CONTROL RELAY	LT BLUE-WHITE HASH
			596	PRIMER SW. TO OIL PRESSURE SAFETY SWITCH	BLACK-ORANGE DOT

## CAR STANDARD WIRE COLOR CODE CHART (CONTINUED)


CIRCUIT	DESCRIPTION	COLOR	CIRCUIT	DESCRIPTION	COLOR
597	COIL TERM. OF IGN. SW. TO OIL PRESSURE SAFETY SWITCH	RED	788	REHEAT AMPLIFIER TO HEAT DUCT THERMISTOR	RED-ORANGE DOT
598	COIL TERM. OF IGN. SW. TO FUEL PUMP PRIMER SWITCH	PINK-YELLOW STRIPE	790	HEATER AND A/C CONTROL SW. TO INST. PANEL THERMISTOR	WHITE-ORANGE STRIPE
600	FEED TO FAILURE SWITCH	DK BLUE	797	BATTERY FEED TO STEREO	LT GREEN-PURPLE STRIPE
601	BRAKE SKID CONTROL MODULE FEED	LT BLUE-PINK STRIPE	804	SPEAKER VOICE COIL FEED-FRONT (LEFT CHANNEL)	ORANGE-LT GREEN HASH
602	COIL TERM. OF IGN. SWITCH TO BRAKE SKID CONTROL MODULE	RED-LT GREEN HASH	805	SPEAKER VOICE COIL FEED-FRONT (RIGHT CHANNEL)	WHITE-LT GREEN HASH
603	FAILURE WARNING LITE	DK GREEN	806	SPEAKER VOICE COIL FEED-REAR (LEFT CHANNEL)	PINK-LT BLUE STRIPE
604	SKID CONTROL MODULE TO RH WHEEL SENSOR HI	ORANGE-RED HASH	807	SPEAKER VOICE COIL FEED-REAR (LEFT CHANNEL)	PINK-LT GREEN STRIPE
605	SOLENOID	RED	808	SELECTOR SWITCH TO FUEL TANK SOLENOID VALVE	BROWN-ORANGE STRIPE
625	OPEN DOOR WARNING LAMP FEED	PINK-YELLOW HASH	810	STOPLAMP SW. TO STOPLAMP	RED-LT GREEN HASH
627	OPEN DOOR WARNING LAMP TO OPEN DOOR WARNING SW.	BLACK-ORANGE HASH	817	INDICATOR RELAY TO RH TURN LAMP	TAN-LT BLUE HASH
632	IGN. SW. COIL TERM. TO OIL TEMP. WARNING LAMP	BLACK	818	INDICATOR RELAY TO LH TURN LAMP	TAN-WHITE HASH
633	IGN. SW. TO OIL TEMP. WARNING RELAY	RED	822	SPEAKER VOICE COIL FEED	BLACK-LT GREEN DOT
634	OIL TEMP. WARNING RELAY TO OIL TEMP. WARNING LAMP	LT BLUE	823	RADIO TO FADER CONTROL	LT GREEN
635	OIL TEMP. WARNING LAMP TO OIL TEMP. WARNING SW.	LT GREEN	848	BALLAST RESISTOR "F" TERM. TO TRANSISTOR UNIT "E" TERM.	RED-ORANGE DOT
640	WARNING LAMPS FEED	RED-YELLOW HASH	850	BALLAST RESISTOR COIL TERM. TO IGN. COIL BATT. TERM.	LT BLUE-WHITE DOT
642	WATER TEMP. WARNING LAMP TO WATER TEMP. SW. (COLD)	WHITE-LT GREEN STRIPE	851	TRANSISTOR UNIT "B" TERM. TO DISTRIBUTOR	LT GREEN
647	WATER TEMP. WARNING LAMP TO WATER TEMP. SW. (HOT)	RED-BLACK DOT	852	TRANSISTOR UNIT "C" TERM. TO BALLAST RESISTOR "C" TERM.	LT BLUE-PINK HASH
648	TACHOMETER FEED	RED-LT BLUE DOT	853	COIL TERM. IGN. SW. TO BALLAST RESISTOR "E" TERM.	RED-ORANGE HASH
654	ALT. SHUNT TO AMMETER	YELLOW-LT GREEN STRIPE	854	C.S. RELAY TO STARTER SOLENOID "I" TERM.	BROWN-YELLOW HASH
655	STARTING MOTOR RELAY SHUNT TO AMMETER	RED-ORANGE STRIPE	858	MAKE READY SWITCH TO BRAKE PEDAL PAD SWITCH	PINK-ORANGE HASH
660	AIR COND. CONTROL SW. TO FRESH-AIR RECIRC. DOOR SOLENOID	YELLOW-LT GREEN DOT	859	BRAKE PEDAL PAD SWITCH TO CONTROL RELAY TERM. No. 4	YELLOW
671	SPEED REG. SW. "ON" POSITION TO ON & OFF RELAY	WHITE	860	MAKE READY SWITCH TO SET SPEED SWITCH	PURPLE-WHITE STRIPE
686	HEAD LP TIME DELAY CONTROL RELAY TO CIR. BREAKER	GRAY-ORANGE STRIPE	861	RETARD SWITCH TO CONTROL RELAY TERM. No. 7	LT BLUE-WHITE STRIPE
687	ACC FEED	GRAY-YELLOW STRIPE	863	BRAKE SWITCH TO HOLDING RELAY	BLACK-YELLOW STRIPE
688	HTD BACKLITE SW. TO TIME DELAY RELAY	GRAY-LT BLUE STRIPE	869	RETARD VALVE TO CONTROL RELAY TERM. No. 1	LT GREEN-YELLOW STRIPE
697	SPEED REG. SW. "OFF" POSITION TO ON & OFF RELAY	ORANGE-BLACK STRIPE	883	AIR COND CONTROL RELAY FEED	PINK-LT BLUE HASH
745	ANTENNA SWITCH TO POWER ANTENNA (UP)	RED-PINK HASH	904	(COIL) OR (ACCY.) TERM. OF IGN. SW. TO ALT. REG. (IGA. TERM.)	LT GREEN-RED STRIPE
746	ANTENNA SWITCH TO POWER ANTENNA (DOWN)	DK GREEN-YELLOW STRIPE	914	SPEED REGULATOR SWITCH FEED	DK. GREEN-ORANGE STRIPE
751	BLOWER MOTOR SPEED CONTROLLER TO RESISTOR No. 3 (MED.)	DK BLUE-WHITE HASH	917	VENT SWITCH TO BLOWER MOTOR LO	PINK-LT GREEN HASH
752	BLOWER MOTOR SPEED CONTROLLER TO RESISTOR No. 2 (MED.)	YELLOW-RED DOT	920	BRAKE SW. TO SPEED CONTROL	WHITE-YELLOW HASH
753	HEATER & A/C CONTROL SW. TO BLOWER RELAY SW.	YELLOW-RED STRIPE	923	SPEED CONTROL SW. TO SPEED REG. SOLENOID	PURPLE
754	BLOWER MOTOR SPEED CONTROLLER TO RESISTOR No. 1 (MED.)	LT GREEN-WHITE HASH	924	HOLDING RELAY TO SPEED CONTROL SW. FEED	RED
755	BLOWER MOTOR SWITCH RELAY TO RESISTOR (LOW SPEED)	BROWN-WHITE STRIPE	925	SPEED CONTROL SW. TO SPEED REG. COUPLING COIL	WHITE-ORANGE STRIPE
756	HEATER AND A/C CONTROL SW. (HI-NORM) TO RESISTOR (LOW RANGE)	RED-PINK DOT	934	EMISSION SPEED SENSOR TO MODULATOR CONTROL	TAN-WHITE STRIPE
757	HEATER AND A/C CONTROL SW. (HI-NORM) TO BLOWER MOTOR SW. RELAY	RED-WHITE STRIPE	939	MODULATOR TO THERMO. SW.	TAN-BLACK HASH
758	HEATER AND A/C CONTROL SW. (LO-NORM) TO RESISTOR (LOW RANGE)	PURPLE-WHITE DOT	941	WASHER PUMP MOTOR FEED	BLACK-WHITE STRIPE
761	BLOWER MOTOR RELAY TO ENG. WATER TEMP. SWITCH (COLD)	WHITE-LT GREEN STRIPE	946	REAR WASHER PUMP FEED	PURPLE-LT GREEN HASH
765	HEATER AND A/C CONTROL SW. TO REHEAT AND A/C FEED	LT GREEN-YELLOW HASH	950	WASHER CONTROL SWITCH FEED	WHITE-BLACK STRIPE
766	HEATER AND A/C CONTROL SW. (DE-FOG TO INLET AIR CONTROL SOLENOID)	RED-LT GREEN DOT	955	W/SHIELD WIPER MOTOR ARM RH TO W/S WIPER SWITCH	RED-ORANGE STRIPE
767	AMBIENT SENSOR TO INST. PANEL THERMISTOR	LT BLUE-ORANGE STRIPE	956	W/SHIELD WIPER SW. TO W/SHIELD WIPER MOTOR FIELD RH	LT GREEN-ORANGE STRIPE
768	REFERENCE SENSOR TO HEAT DUCT THERMISTOR	LT GREEN-YELLOW HASH	960	AUX. HEATER FEED TO SWITCH	RED-YELLOW DOT
769	HEATER AND A/C CONTROL SW. (HI & LO NORM) TO BLOWER MTR. SW. RELAY	LT BLUE-YELLOW HASH	976	FUSE PANEL TO FUEL GAGE INDICATOR	BLACK-LT GREEN DOT
773	HEATER AND A/C CONTROL SW. (TEMP. SELECTOR) TO REHEAT AMPL.	DK GREEN-ORANGE HASH	977	BRAKE WARNING SWITCH TO INDICATOR LAMP	PURPLE-WHITE STRIPE
775	HEATER AND A/C CONTROL SW. (DEFOG) TO DEFROST CONT. SOLENOID	WHITE-PINK STRIPE	978	SEAT REGULATOR SWITCH TO FRONT MOTOR (LH)	YELLOW-LT BLUE STRIPE
776	CLIMATE CONTROL BOX TO HIGH BLOWER RELAY	ORANGE-BLACK DOT	979	SEAT REGULATOR SWITCH TO FRONT MOTOR (RH)	RED-LT BLUE STRIPE
780	ENGINE ALARM RELAY (OIL PRESS.) "F" TERM. TO "A" TERM. IGN. SW.	RED	980	SEAT REGULATOR SWITCH TO HORZ. MOTOR (LH)	YELLOW-WHITE STRIPE
787	FUEL PUMP SAFETY SWITCH TO FUEL PUMP MOTOR	PINK-BLACK HASH	981	SEAT REGULATOR SWITCH TO HORZ. MOTOR (RH)	RED-WHITE STRIPE
			982	SEAT REGULATOR SWITCH TO REAR MOTOR (LH)	YELLOW-LT GREEN STRIPE
			983	SEAT REGULATOR SWITCH TO REAR MOTOR (RH)	RED-LT GREEN STRIPE
			984	SEAT REGULATOR SWITCH TO FRONT MOTOR (RH)	YELLOW-LT BLUE DOT
			985	SEAT REGULATOR SWITCH TO FRONT MOTOR (RH)	RED-LT BLUE DOT
			986	SEAT REGULATOR SWITCH TO HORZ. MOTOR (RH)	YELLOW-WHITE DOT
			987	SEAT REGULATOR SWITCH TO HORZ. MOTOR (RH)	RED-WHITE DOT
			988	SEAT REGULATOR SWITCH TO REAR MOTOR (RH)	YELLOW-LT GREEN DOT
			989	SEAT REGULATOR SWITCH TO REAR MOTOR (RH)	RED-LT GREEN DOT
			990	SEAT REGULATOR SWITCH TO FRONT MOTOR (LH)	YELLOW-LT BLUE HASH
			993	INTERMITTENT GOVERNOR TO WINDSHIELD WIPER SWITCH	BROWN-WHITE STRIPE

# VACUUM SYSTEMS INDEX


	Page		Page
COMET .....	V-3	MERCURY .....	V-6, 7 and 8
COUGAR .....	V-4	METEOR .....	V-6, 7 and 8
FORD .....	V-6, 7 and 8	MONTEGO .....	V-5
LINCOLN .....	V-10	MUSTANG .....	V-4
MARK IV .....	V-9	PINTO .....	V-2
MAVERICK .....	V-3	THUNDERBIRD .....	V-9
		TORINO .....	V-5

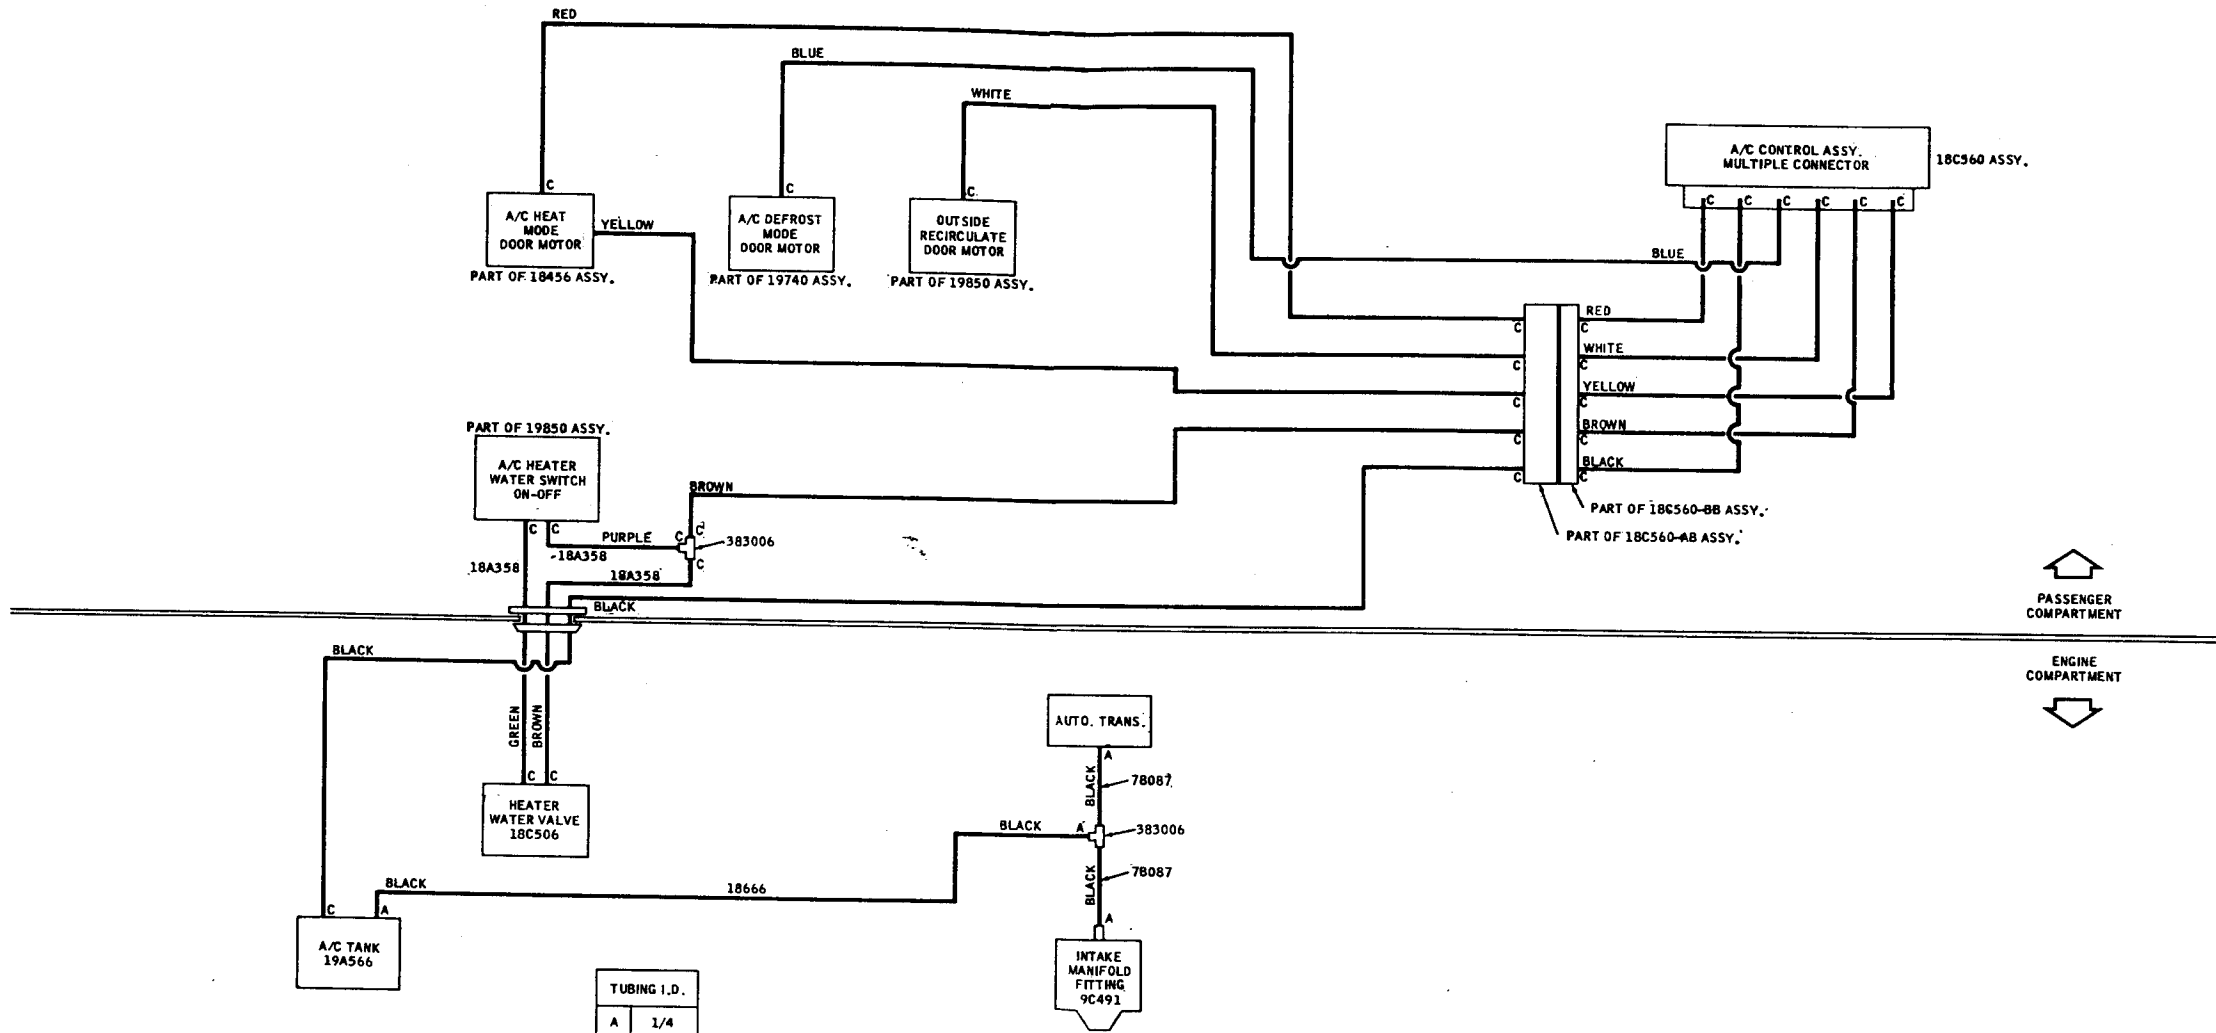

TUBING I.D.	
A	1/4
B	3/16
C	1/8

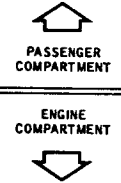

1972 PINTO

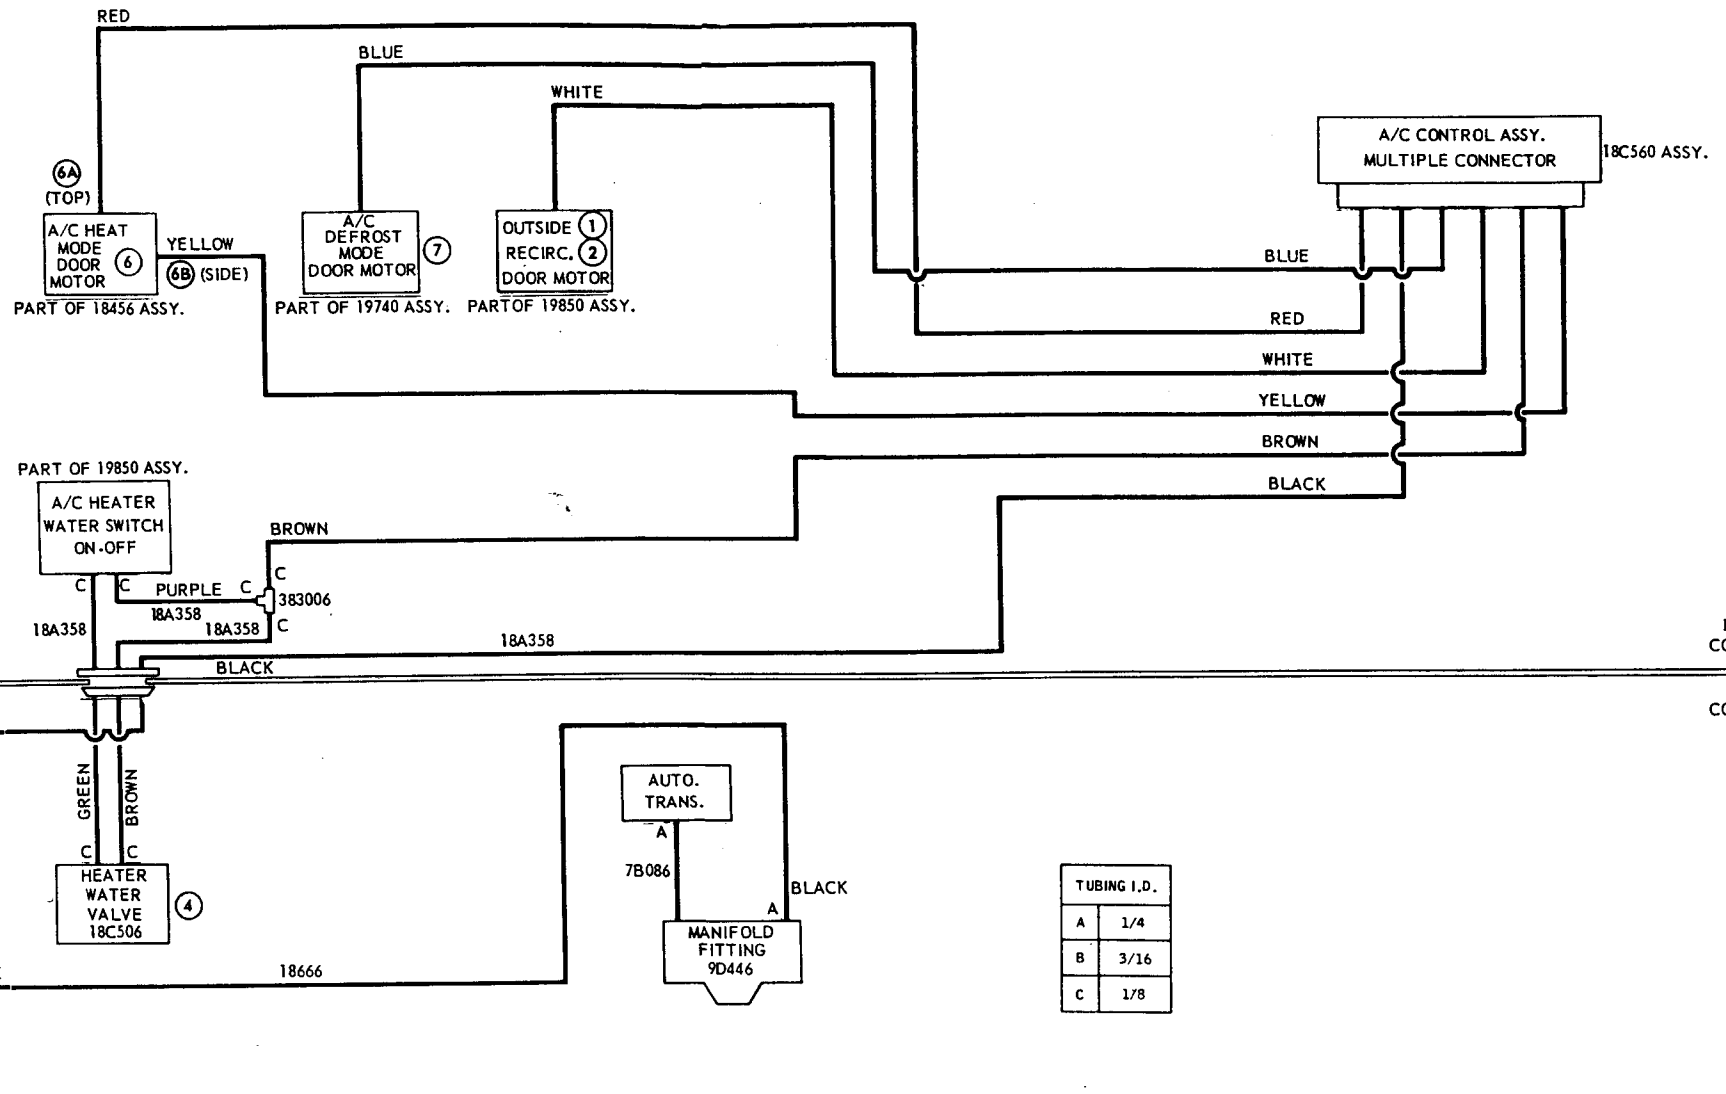


↑  
PASSENGER  
COMPARTMENT

ENGINE /  
COMPARTMENT  
↓

TUBING I.D.	
A	1/4
B	3/16
C	1/8






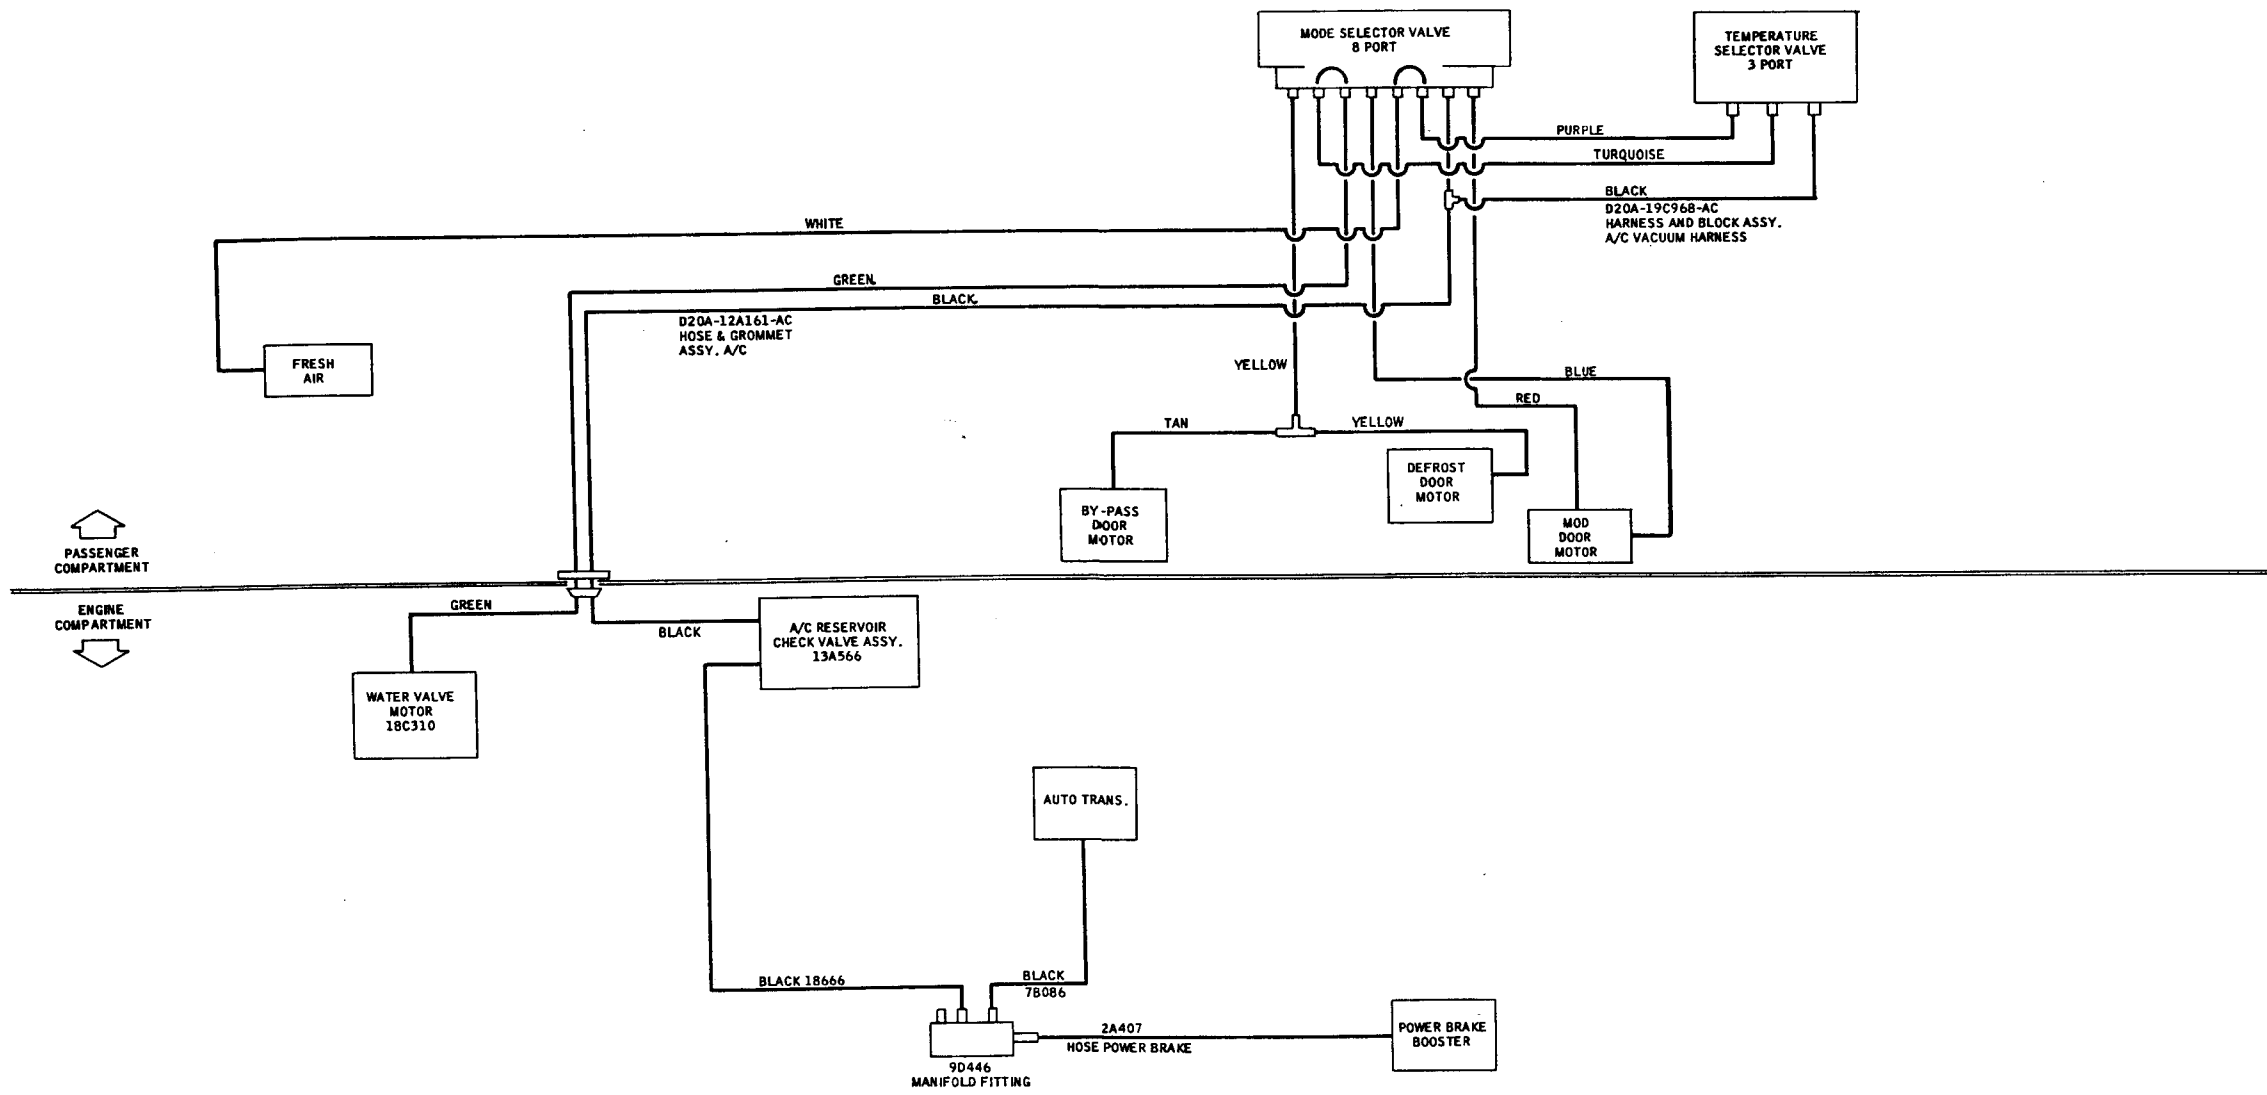

1972 TORINO & MONTEGO


VACUUM SCHEMATIC V-5  
6-4-71

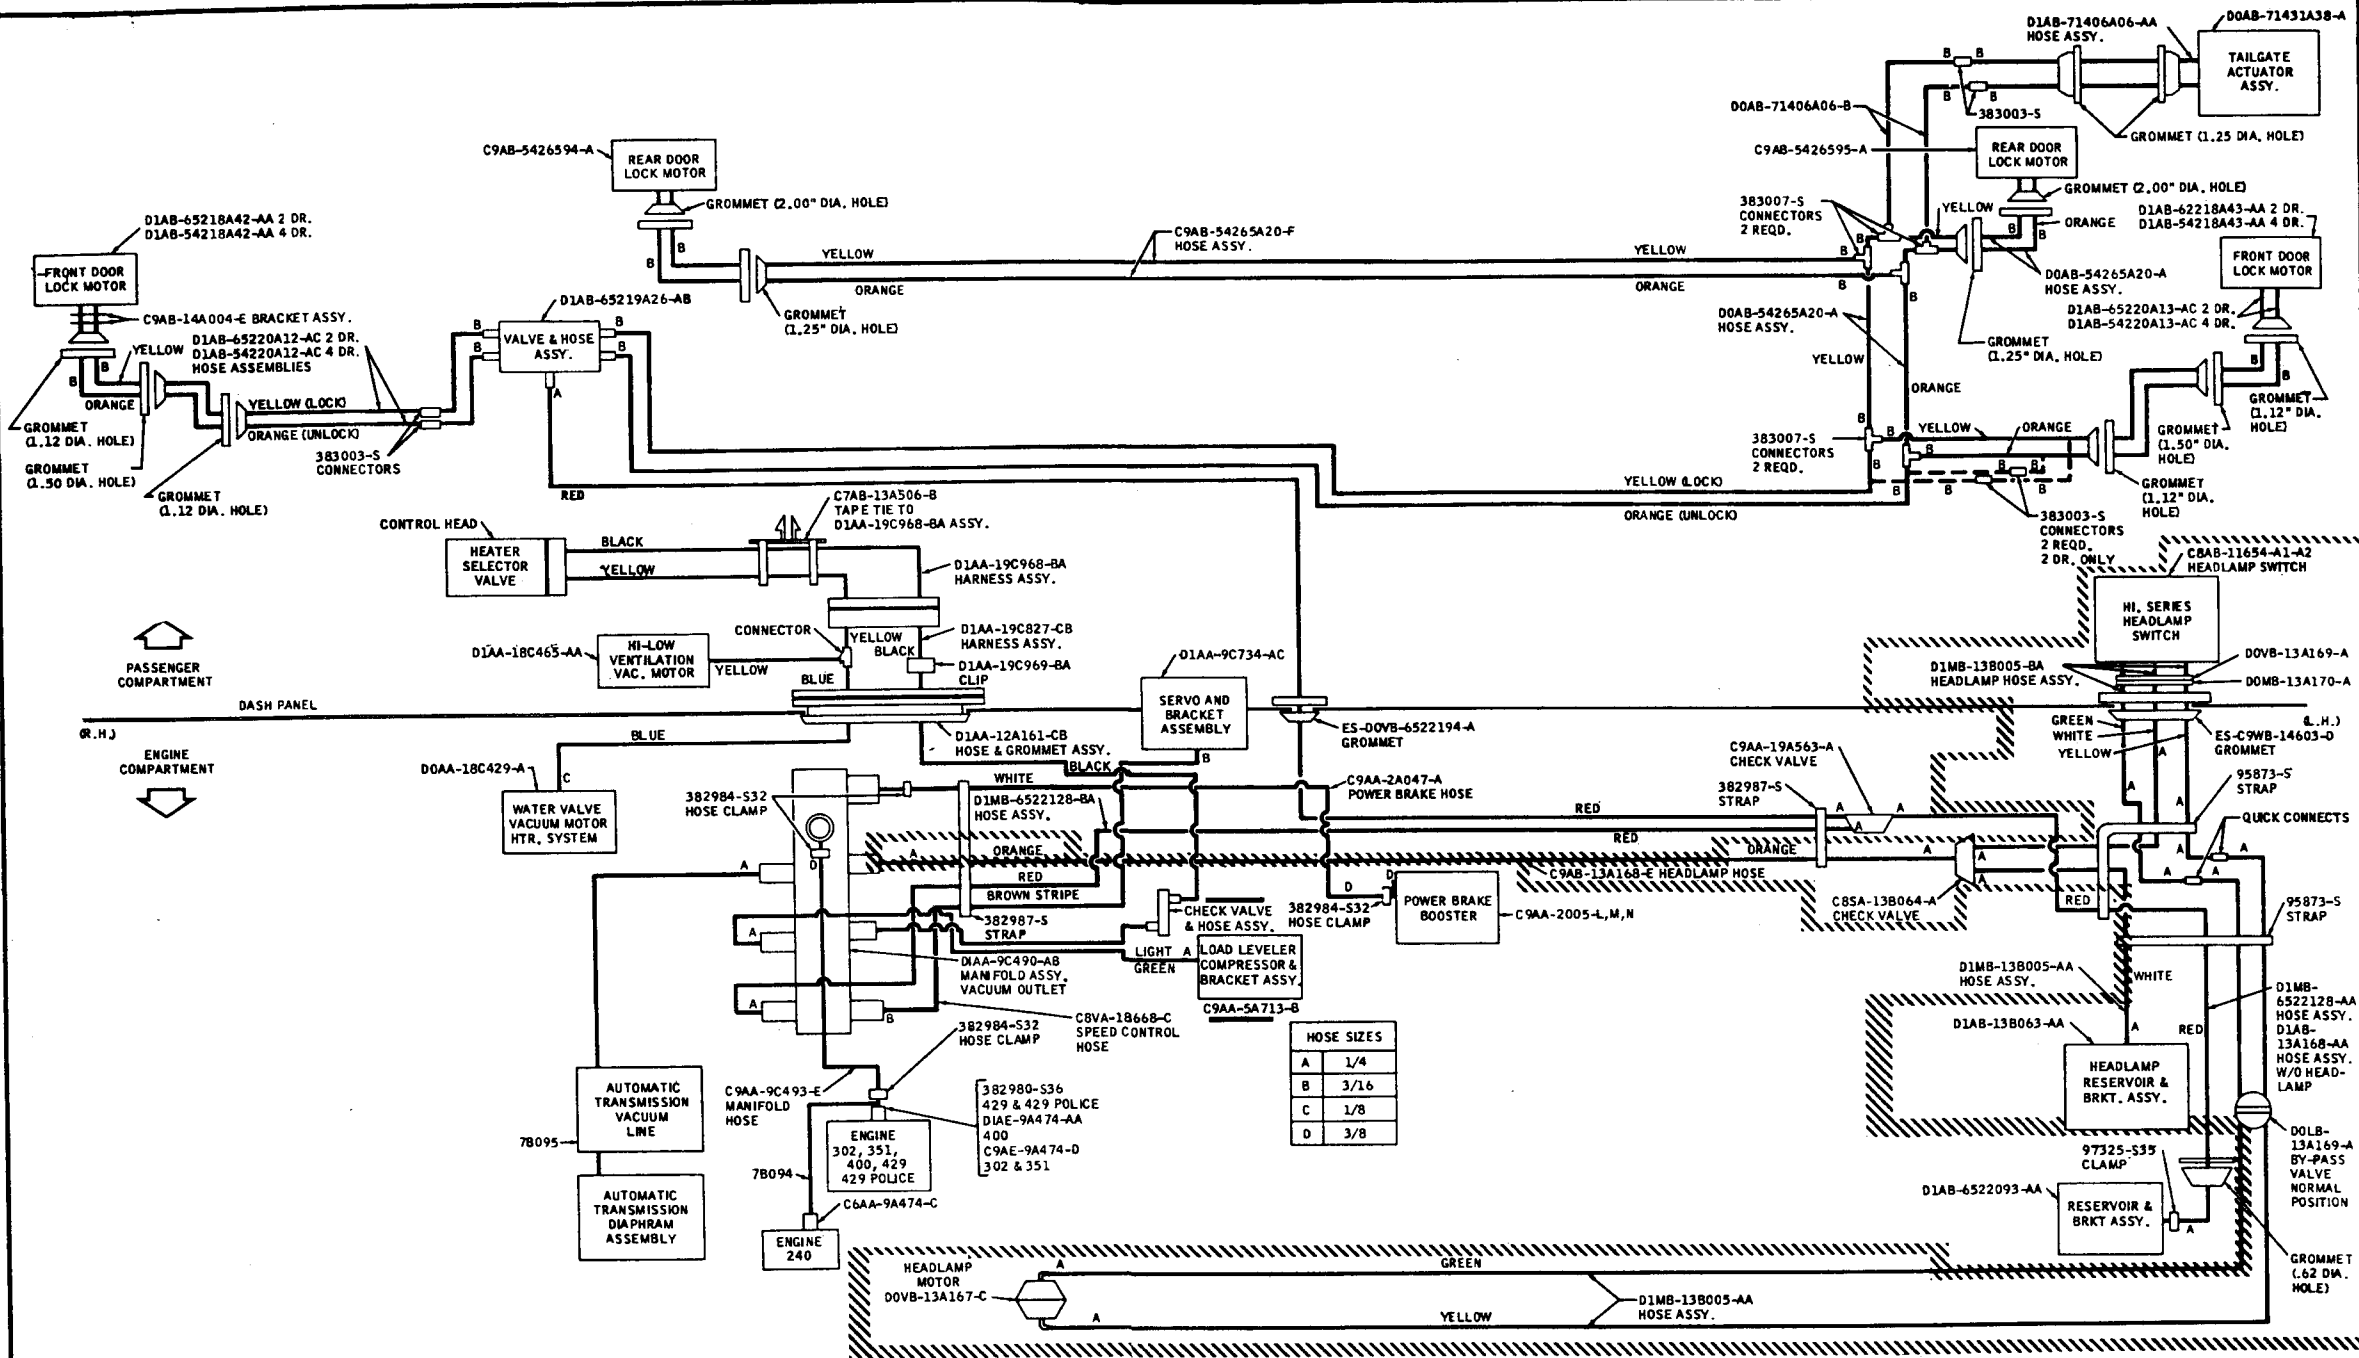

1972 FORD, MERCURY & METEOR  
FORCED VENT

 MERCURY HI-SERIES


VACUUM SCHEMATIC V-6  
6-4-71

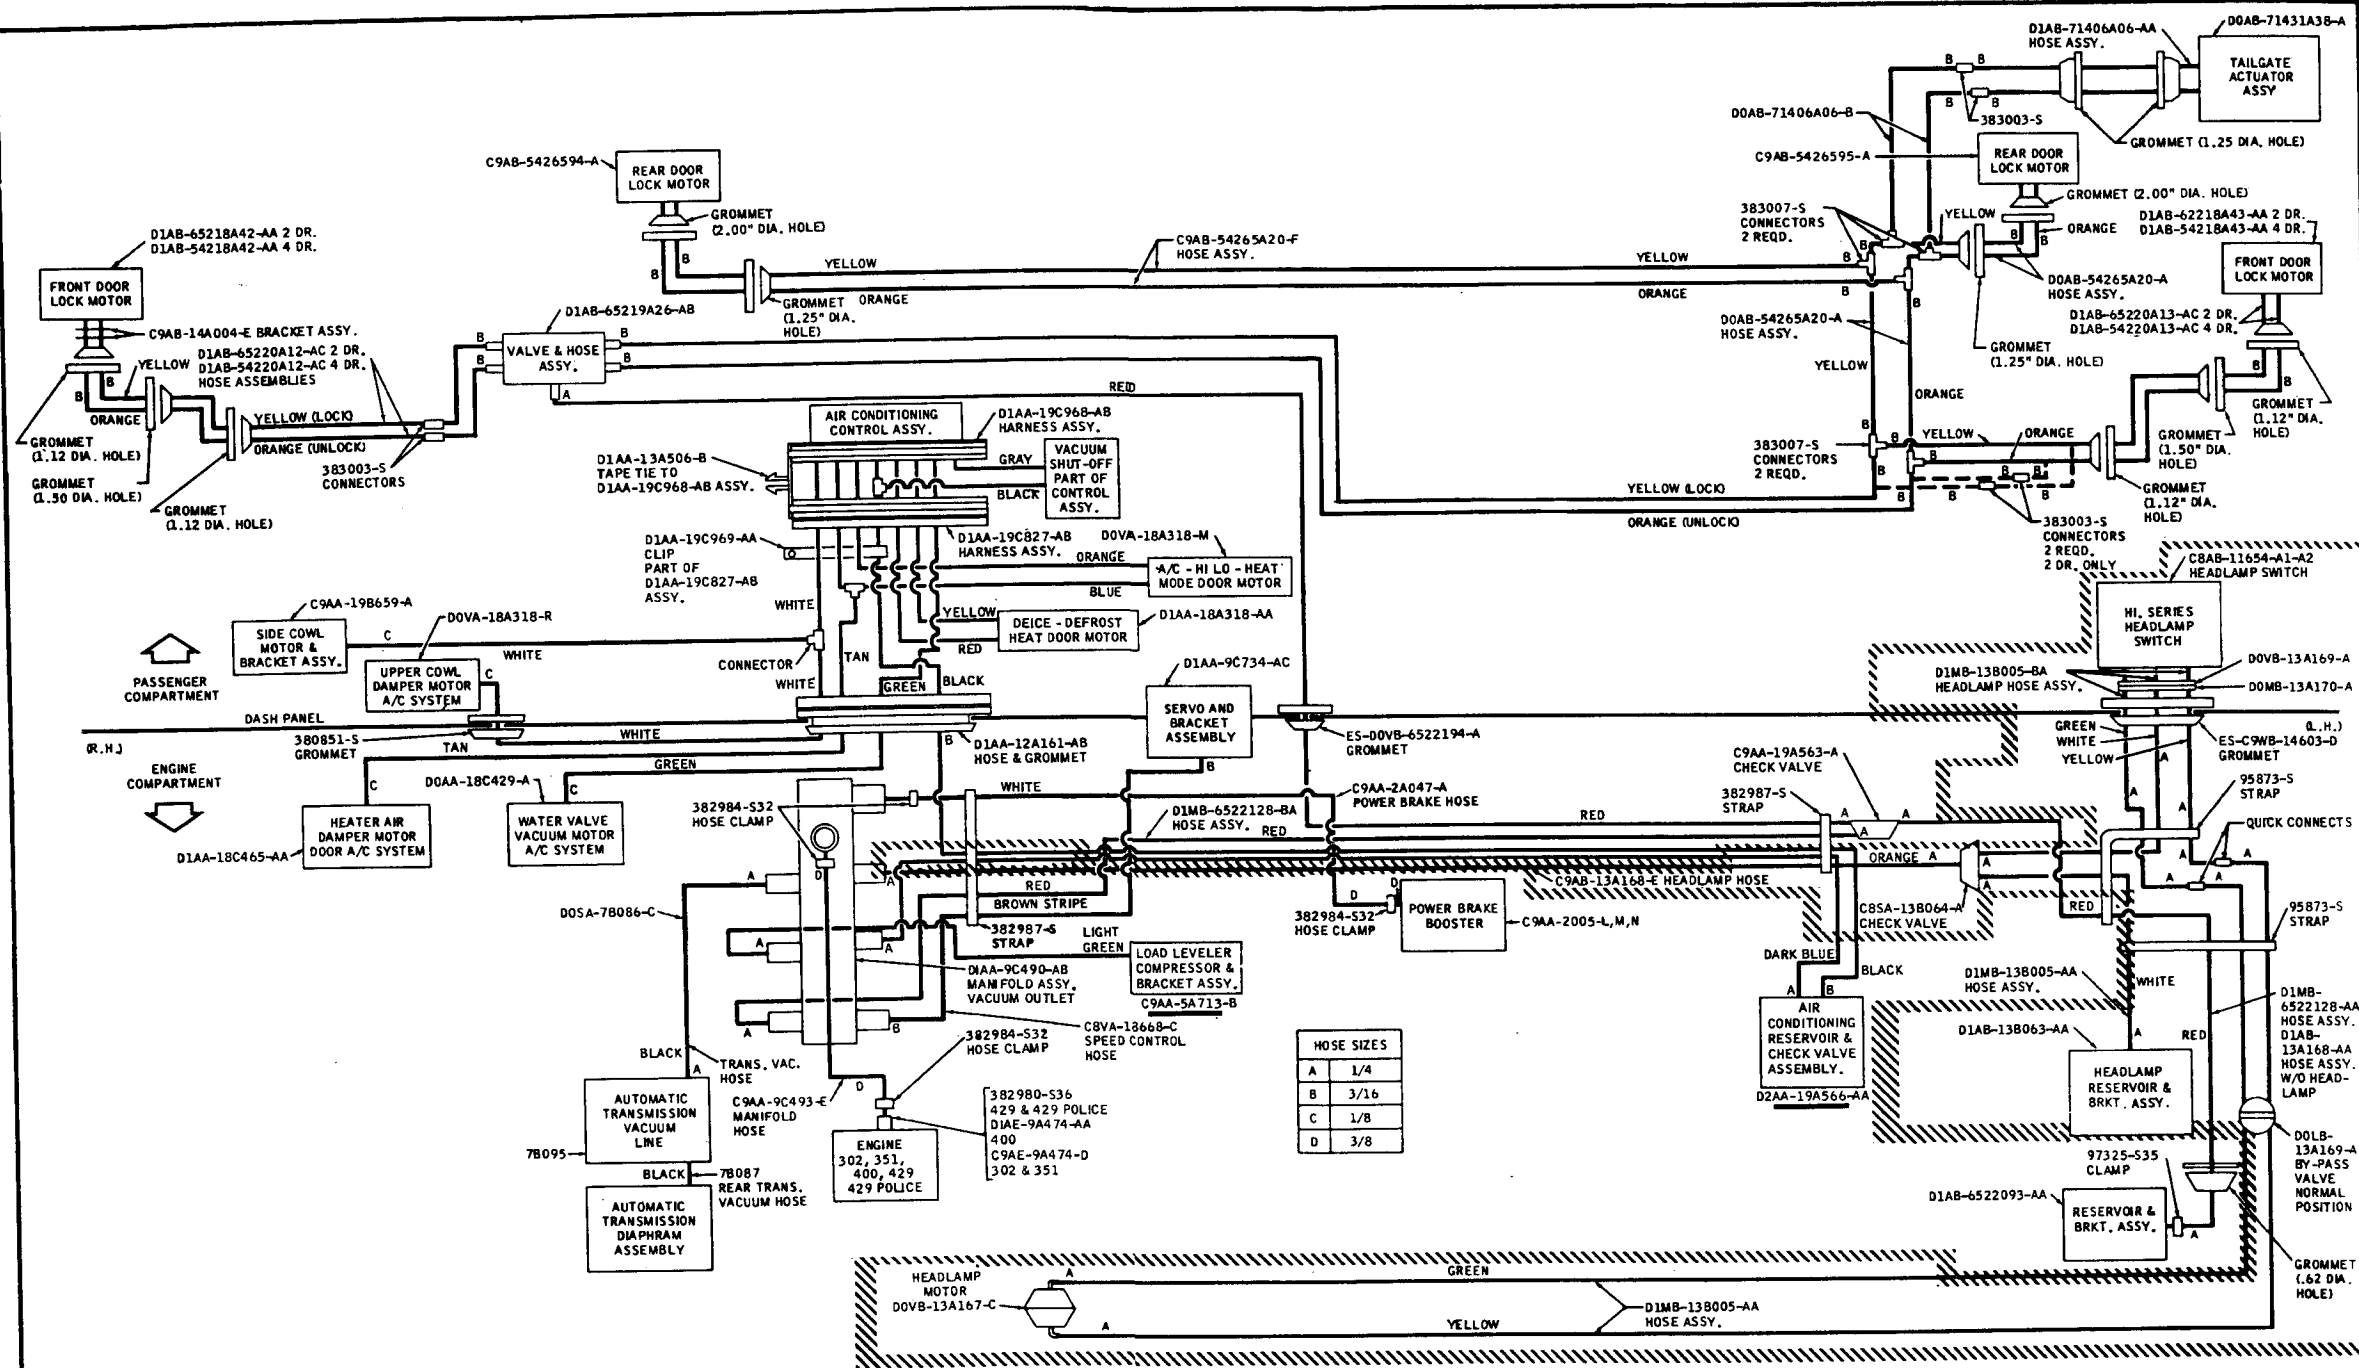

1972 FORD, MERCURY & METEOR  
AIR CONDITIONING

MERCURY HI-SERIES


VACUUM SCHEMATIC V-7  
6-4-71

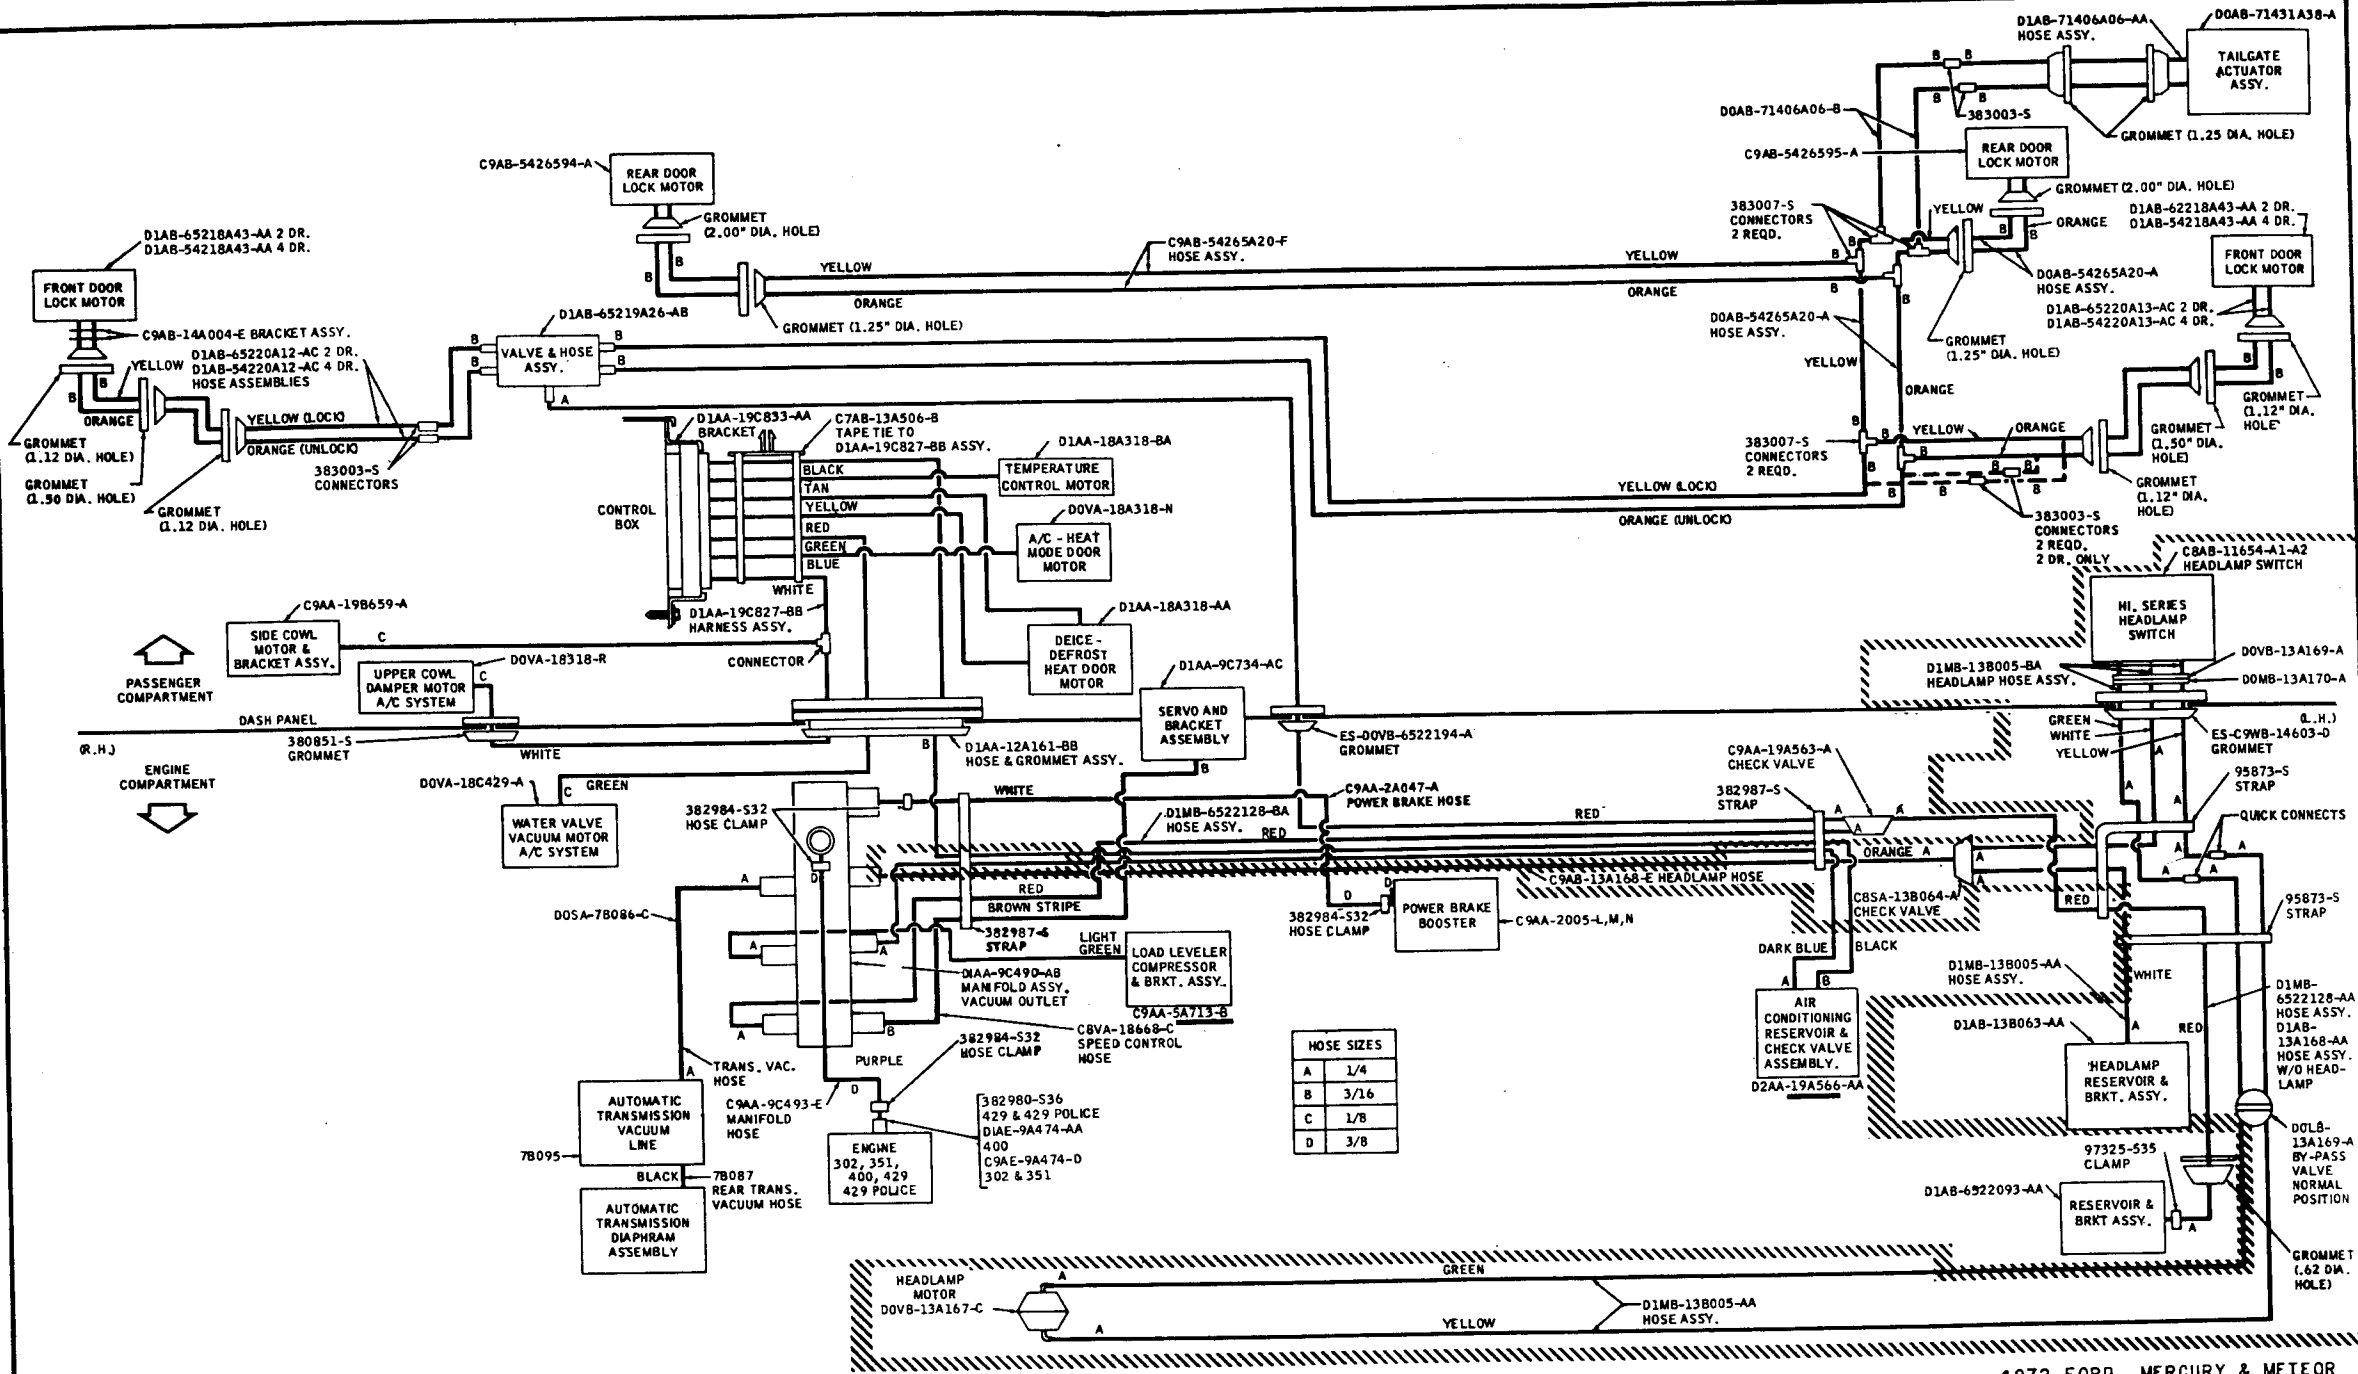

1972 FORD, MERCURY & METEOR  
AUTOMATIC TEMPERATURE CONTROL


MERCURY HI-SERIES

VACUUM SCHEMATIC V-8  
6-4-71

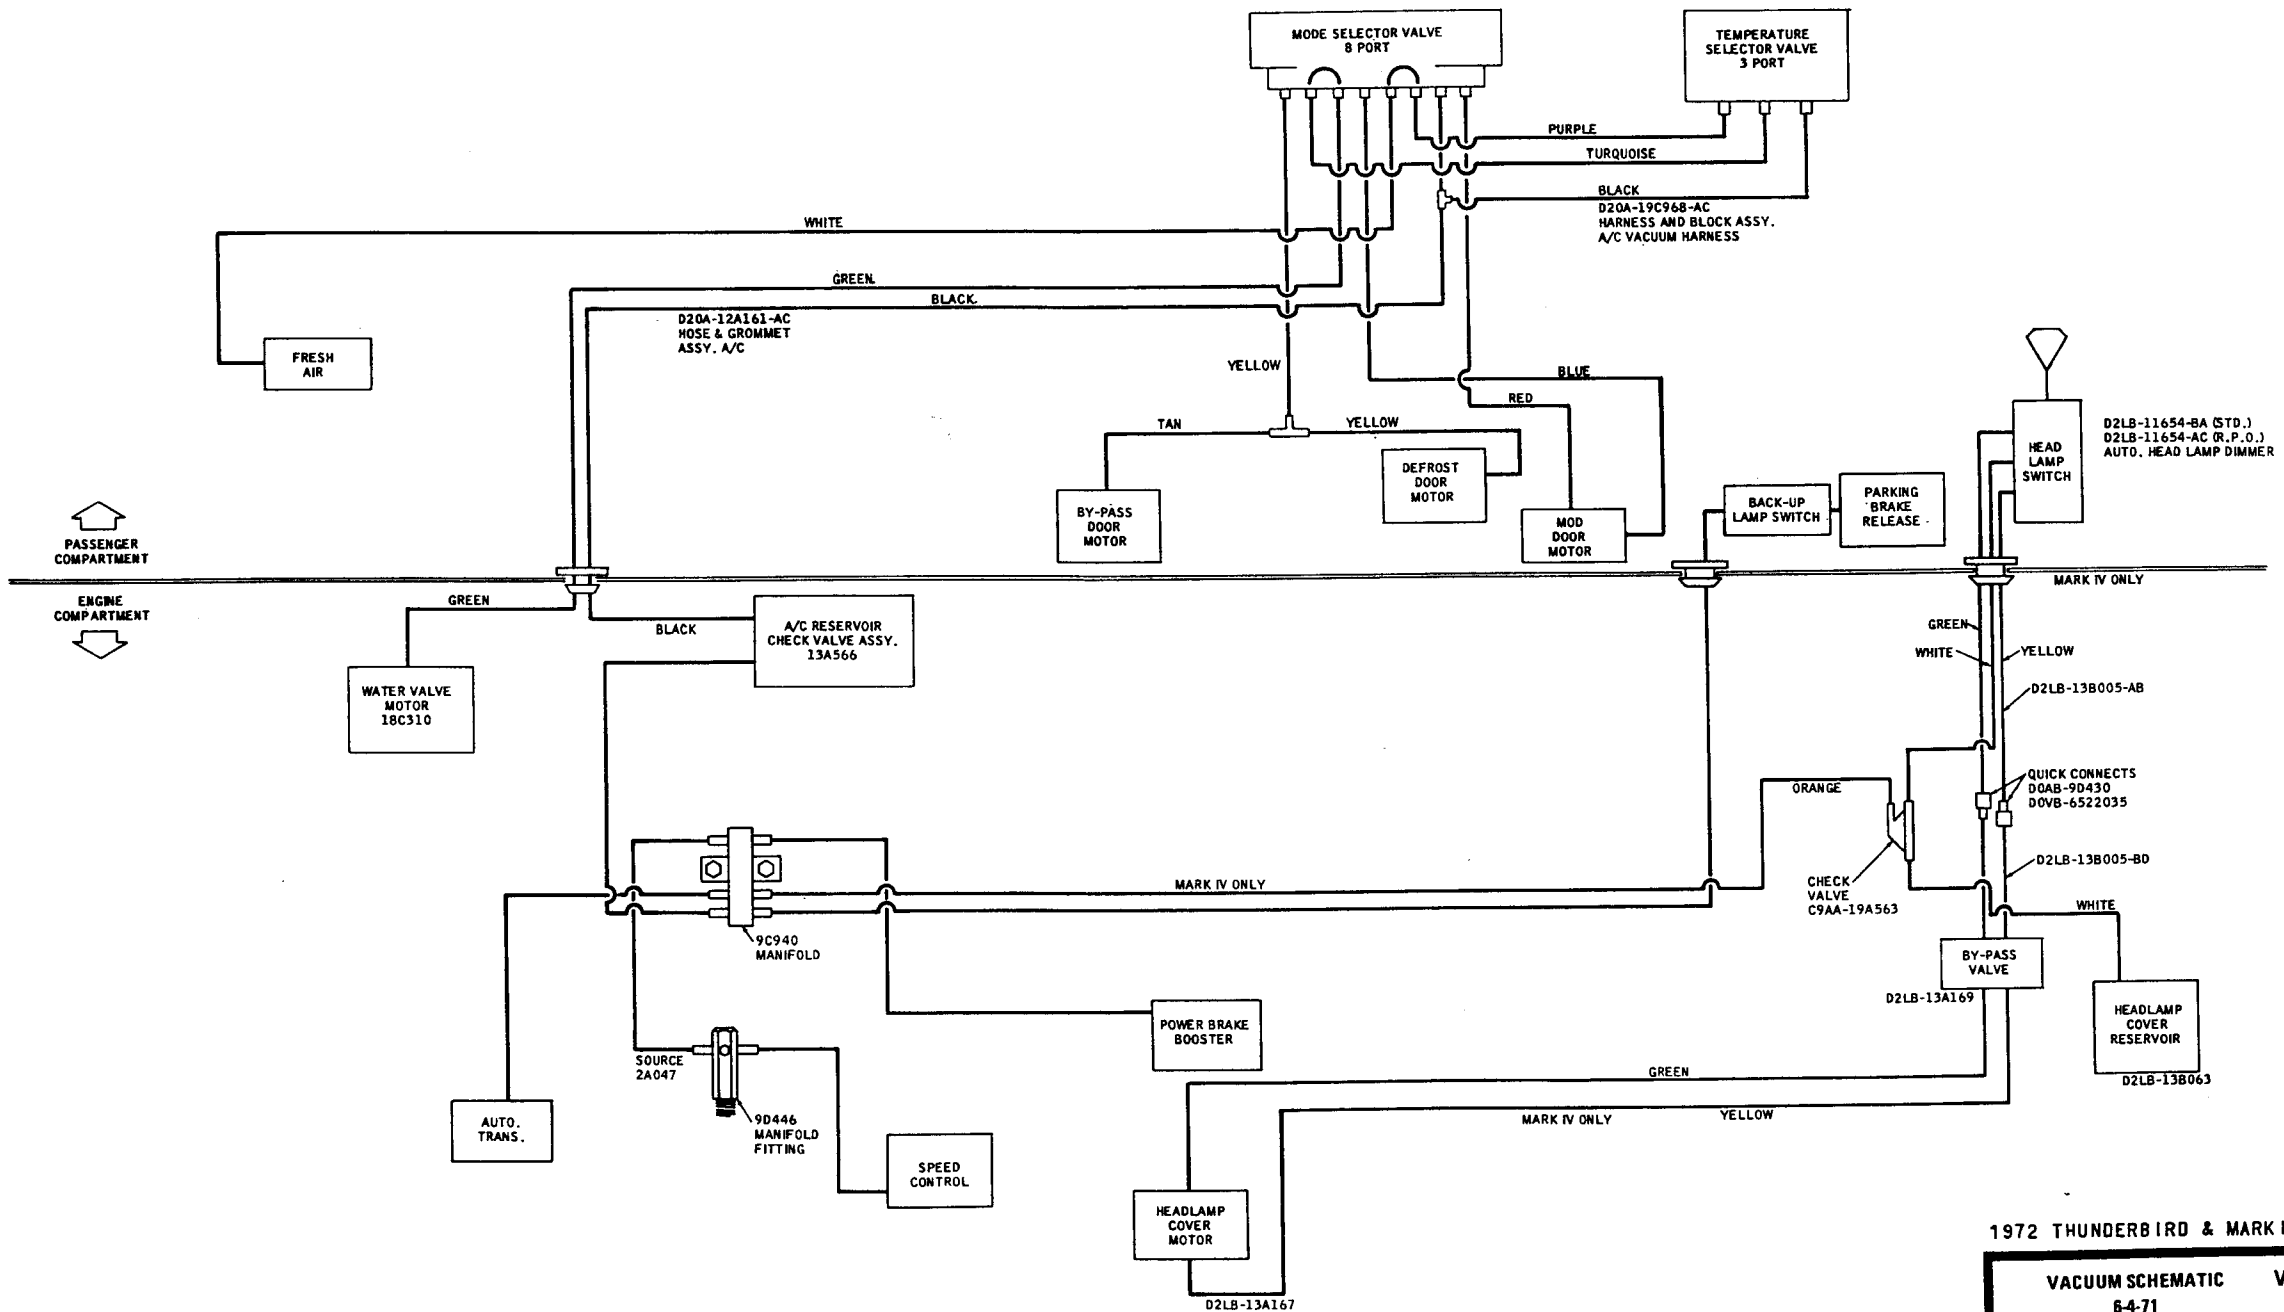

1972 THUNDERBIRD & MARK IV

VACUUM SCHEMATIC V-9  
6-4-71

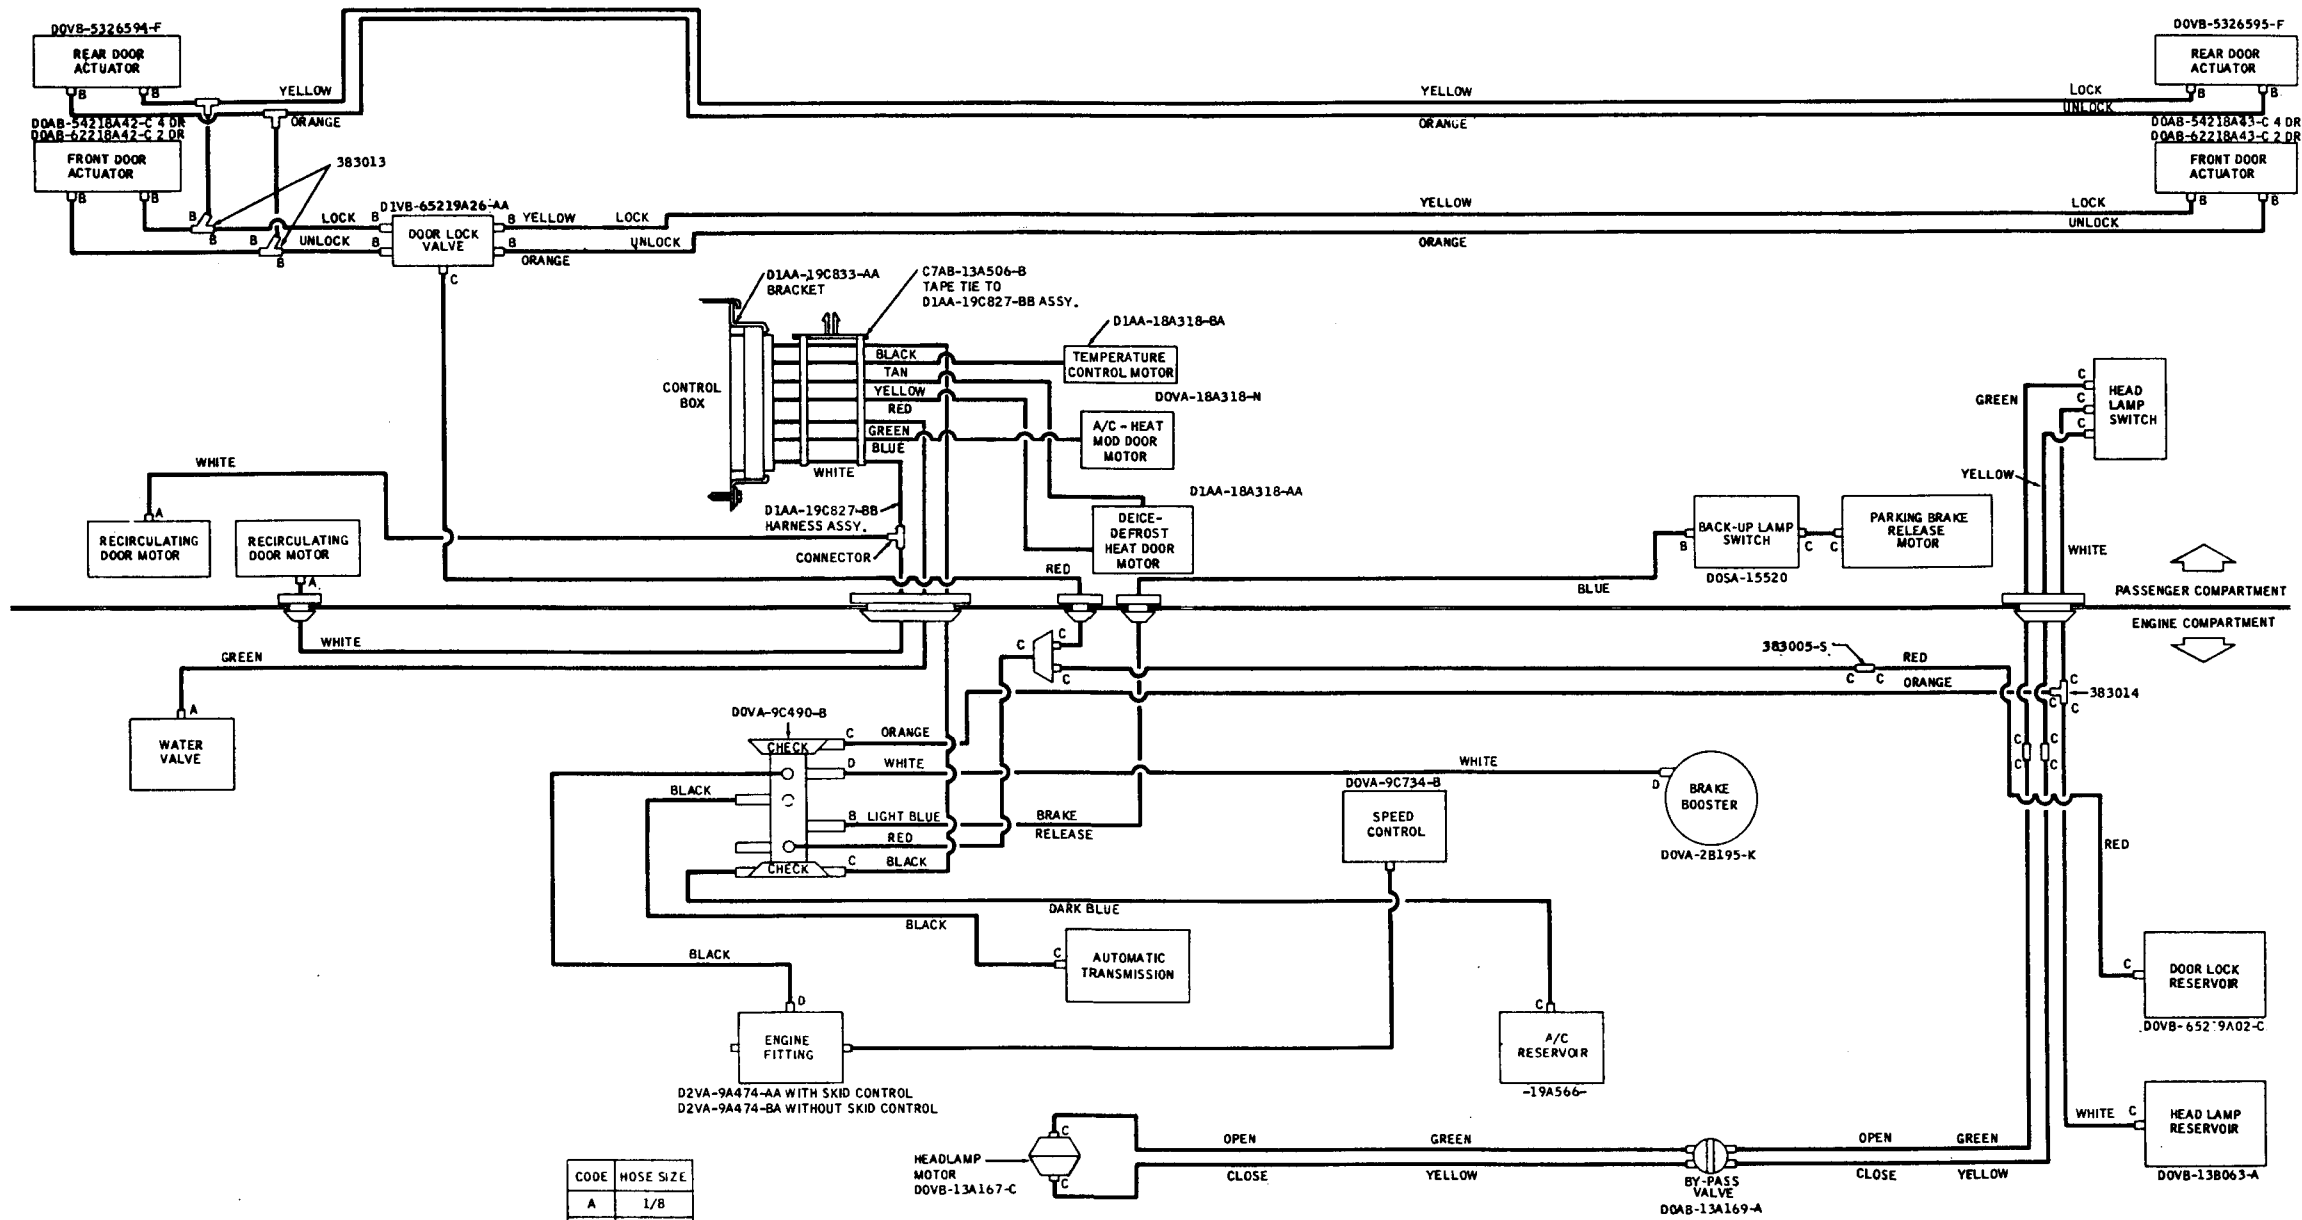


CODE	HOSE SIZE
A	1/8
B	3/16
C	1/4
D	3/8
E	15/32

1972 LINCOLN CONTINENTAL

VACUUM SCHEMATIC V-10  
8-4-71

## FUSE LOCATIONS

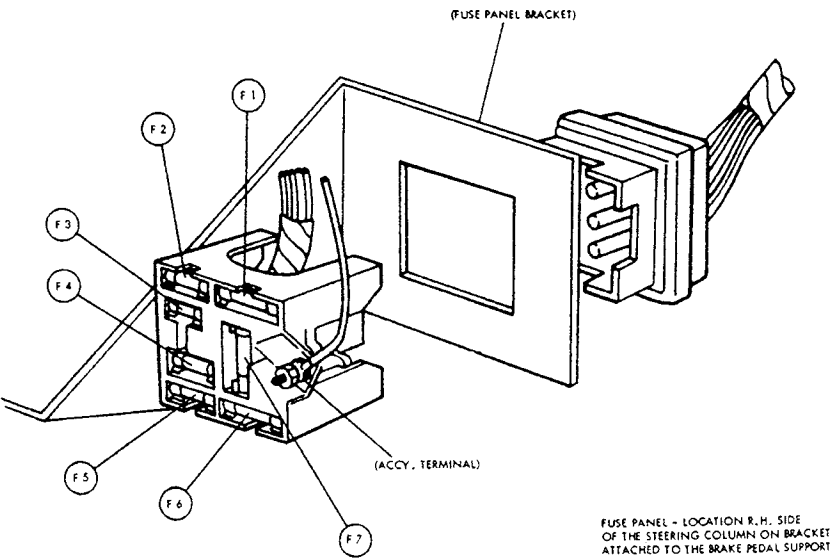

FUSE PANEL - LOCATION R.H. SIDE OF THE STEERING COLUMN ON BRACKET ATTACHED TO THE BRAKE PEDAL SUPPORT

- F-1 (20 AMP.) EMERGENCY WARNING, CIGAR LIGHTER, CLOCK FEED (CONSOLE ONLY)  
 F-2 (14 AMP.) COURTESY, DOME LAMP, IGNITION KEY WARNING, SPORT LAMPS, CARGO LAMP  
 F-3 (SPARE) NOT USED  
 F-4 (14 AMP.) WARNING LAMPS, EMISSION CONTROL AND/OR CARBURETOR SOLENOID, SEAT BELT WARNING.  
 F-5 (14 AMP.) HEATER-DEFROSTER  
 NOTE: (30 AMP. FUSE) REQUIRED FOR AIR CONDITIONER  
 F-6 (15 AMP.) BACK-UP LAMPS, RADIO, W'S WASHER & REAR WINDOW DEFOGGER  
 F-7 (SPARE) (ACCY.) NOT USED

### WIRING COLOR KEY

#### PRIMARY COLORS

BLACK	BK
BROWN	BR
TAN	T
RED	R
PINK	PK
ORANGE	O
YELLOW	Y
DK GREEN	DG
LT GREEN	LG
DK BLUE	DB
LT BLUE	LB
PURPLE	P
GRAY	GY
WHITE	W
STRIPE	(S)
HASH	(H)
DOT	(D)

### BULB CHART

LAMP DESCRIPTION	CANDLEPOWER or WATTAGE	TRADE NUMBER
STANDARD EQUIPMENT		
HEADLAMPS	40-50	6012
FRONT PARK/TURN SIGNAL	3-32	1157 NA
REAR TAIL/STOP/TURN	3-32	1157
BACK-UP LAMP	32	1156
LICENSE PLATE LAMP	6	631
DOME LAMP	6	212 & 1
FRONT & REAR SIDE MARKER LAMP	2	194

### INDEX

COMPONENT	LOCATION
ALTERNATOR	B-2
BATTERY	B-3
CIGAR LIGHTER	E-14
CLOCK	F-14
ALTERNATOR REGULATOR	E-2
DISTRIBUTOR	F-5
EMISSION CONTROL SOLENOID	J-5
ELECTRONIC SPARK CONTROL MODULATOR	K-8
FLASHERS:	
EMERGENCY WARNING	D-13
TURN SIGNAL	C-20
FUEL GAGE	D-12
FUEL SENDER	F-11
SPORT LAMP RELAY	H-37
HORNS	F-20
HEATED BACKLITE RELAY	E-10
IGNITION COIL	D-5
INDICATORS:	
HEATED BACKLITE	F-9
ALTERNATOR	F-3
DUAL BRAKE	G-2
ENGINE HOT	K-2
HIGH BEAM	K-17
OIL PRESSURE	G-2
TURN SIGNAL	J-18
SEAT BELT WARNING	K-12
KEY REMINDER BUZZER	E-20
SEAT BELT REMINDER BUZZER	H-11
LAMPS:	
BACK-UP	G-41
CARGO LAMP	C-19
DOME LAMP	D-18
SIDE MARKER LAMPS:	
LEFT FRONT	G-21
RIGHT FRONT	J-23
LEFT REAR	H-25
RIGHT REAR	H-24
HEADLAMPS	K-20
LICENSE PLATE LAMP	K-25
PARKING LAMPS	J-21
TAIL LAMPS	J-25
SPORT LAMPS	G-32
ILLUMINATIONS:	
CLOCK	K-16
AIR COND. BLOWER SWITCH	J-16
INSTRUMENT CLUSTER	J-17
PRNDL	J-24
MOTORS:	
DEFOGGER	H-38
HEATER BLOWER	G-43
STARTER	S-7
WINDSHIELD WIPER	E-24
RADIO	D-39
RADIO SUPP. CAPACITOR	C-3
STARTER MOTOR RELAY	B-5
SWITCHES:	
CLUTCH	E-44
BACK-UP LAMP	D-41
COURTESY LAMP:	
FRONT LEFT	D-18
FRONT RIGHT	D-16
CARGO LAMP	C-19
DE-ICING	G-45
DEFOGGER	G-38
DIMMER FOOT	G-20
DUAL BRAKE WARNING	K-3
ENGINE TEMP.	H-2
EMERGENCY WARNING	D-22
HEAD LIGHT	F-17
HEATED BACKLITE	C-10
HEATER BLOWER	D-43
HORN SWITCH	F-19
IGNITION	G-8
SEAT SENSOR	H-14
KEY REMINDER SWITCH	F-20
NEUTRAL SAFETY	E-7
OIL PRESSURE	H-1
SPORT LAMP	G-37
STOP LAMP	G-18
TURN SIGNAL	D-22
WINDSHIELD WIPER/WASH	E-26
WINDSHIELD WASHER PUMP	F-25

1972 PINTO

PAGE 1 OF 3  
INDEX












FUSE LOCATION

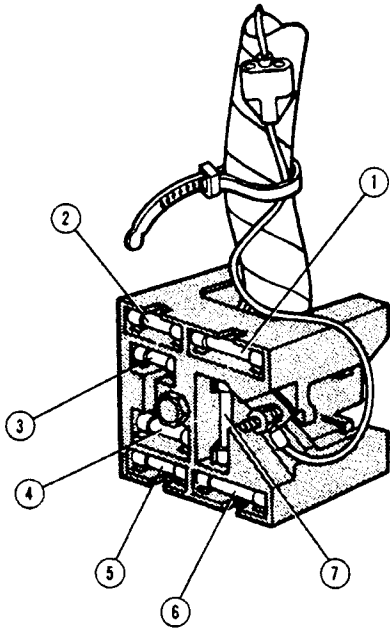

CIRCUIT BREAKER AND FUSE LOCATIONS

CIRCUIT	FUSE NO.	CIRCUIT PROTECTION		LOCATION
		RATING	TRADE NO.	
Headlamps	-	12 AMP C.B.		Integral with Lighting Switch
Horn, Stop, Front & Rear Marker, Front Parking, Rear and License	-	5 AMP C.B.		
Emergency Warning, Cigar Lighter, & Clock Feed (Console Only)	1	20 AMP Fuse	AGC or SFE 20	Fuse Panel-Located on dash panel above and left of brake pedal
Courtesy, Dome & Ignition Key Warning Buzzer, Grille Lamps	2	14 AMP Fuse	SFE 14	
Instrument & Cluster Lamps PRNDL, Ash Tray, Radio, Heater, A/C & Clock Illum.	3	4 AMP Fuse	SFE 14	
Warning Lamps, Emission Control and/or Carburetor Solenoid, Seat Belt Warning Buzzer	4	14 AMP Fuse	SFE 14	
Heater & Defroster		14 AMP Fuse	SFE 14	
NOTE: (30 AMP Fuse) Required for air conditioner	5	30 AMP Fuse	BAG or AGX 30	
Back-up Lamps, Radio and Windshield Washer	6	20 AMP Fuse	AGC or SFE 20	
Accessory Feed, Rear Window Defogger	7	20 AMP Fuse	AGC or SFE 20	
Windshield Wiper Circuit	-	6 AMP C.B.		Integral with W/S wiper Switch

WIRING COLOR KEY  
PRIMARY COLORS

BLACK	BK
BROWN	BR
TAN	T
RED	R
PINK	PK
ORANGE	O
YELLOW	Y
DK GREEN	DG
LT. GREEN	LG
DK. BLUE	DB
LT. BLUE	LB
PURPLE	P
GRAY	GY
WHITE	W
STRIPE	(S)
HASH	(H)
DOT	(D)

COMPONENT	LOCATION
ALTERNATOR	C-2
CIGAR LIGHTER	F-17
CLOCK	H-17
ALTERNATOR REGULATOR	E-7
DISTRIBUTOR	F-5
SOLENOID THROTTLE	B-5
FLASHERS:	
EMERGENCY WARNING	D-17
TURN SIGNAL	B-22
FUEL GAGE	F-14
FUEL SENDER	H-13
GRILLE LAMP RELAY	J-16
HEATER	H-23
HORN	C-22
IGNITION COIL	D-4
INDICATORS:	
ALTERNATOR	G-4
DUAL BRAKE	G-2
ENGINE HOT	G-3
HIGH BEAM	H-21
KEY REMINDER BUZZER	D-22
OIL PRESSURE	G-3
TURN SIGNAL	D-26
SEAT BELT REMINDER BUZZER	C-14
LAMPS:	
BACK-UP	D-37
DOME LAMP	C-19
SIDE MARKER LAMPS:	
FRONT	H-34
REAR	H-37
HEADLAMPS	J-25
LICENSE PLATE LAMP	K-37
PARKING LAMPS	J-33
SEAT BELT WARNING	B-11
TAIL LAMPS	J-35
ILLUMINATIONS:	
ASH TRAY	J-19
CLOCK	J-18
INSTRUMENT CLUSTER	H-22
PRNDL	H-22
MOTORS:	
DEFOGGER	E-41
HEATER BLOWER	F-43
STARTER	B-8
WINDSHIELD WIPER	D-28
RADIO	B-35
STARTER MOTOR RELAY	B-4
SWITCHES:	
A/C CLUTCH	D-45
BACK-UP LAMP	E-38
DEICING	E-45
DEFOGGER	B-41
DIMMER	F-21
DUAL BRAKE WARNING	K-2
EMERGENCY WARNING	C-12
ENGINE TEMPERATURE	K-1
GRILLE LAMP	H-29
HEAD LIGHT	F-19
HEATER BLOWER	C-43
HORN SWITCH	D-21
IGNITION	H-8
KEY REMINDER	E-23
NEUTRAL SAFETY	E-6
OIL PRESSURE SENDER	K-2
TURN SIGNAL	B-26
WINDSHIELD WIPER/WASHER	B-28
WINDSHIELD WASHER PUMP	E-34

1972 MAVERICK-COMET  
PAGE 1 OF 3  
INDEX  
Form 7795P-72M and N 7-1-71


BULB CHART

LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
HEADLAMPS - HI & LO BEAM	40-50W	6012
FRONT PARK & TURN SIGNAL	3-32C	1157
REAR TAIL, STOP & TURN SIGNAL	3-32	1157
FRONT AND REAR SIDE MARKER	1C	161
REAR SIDE MARKER	1C	161
LICENSE LAMP	4C	97
BACK-UP LAMPS	32C	1076
DOME LAMP	12C	105
(COMET ONLY) ASH TRAY LAMP (INST. PANEL)	.7C	1445
BRAKE WARNING	6C	194
SEAT BELT REMINDER	2C	1895
OIL WARNING	2C	194
ALTERNATOR WARNING	2C	194
TEMPERATURE WARNING	2C	194
HI-BEAM INDICATOR	2C	194
TURN SIGNAL INDICATOR	2C	194
RADIO DIAL LAMP (A4H)	1, 9C	1895
HEATER OR A/C CONTROLS	1C	1445
CLOCK	2C	1895
INSTRUMENTS	2C	194
AUTO. TRANS. INDICATOR	.7C	1445
GRILLE LAMPS	3-32C	1157


CONNECTOR CODE

CONNECTOR CODE

GROUND CODE

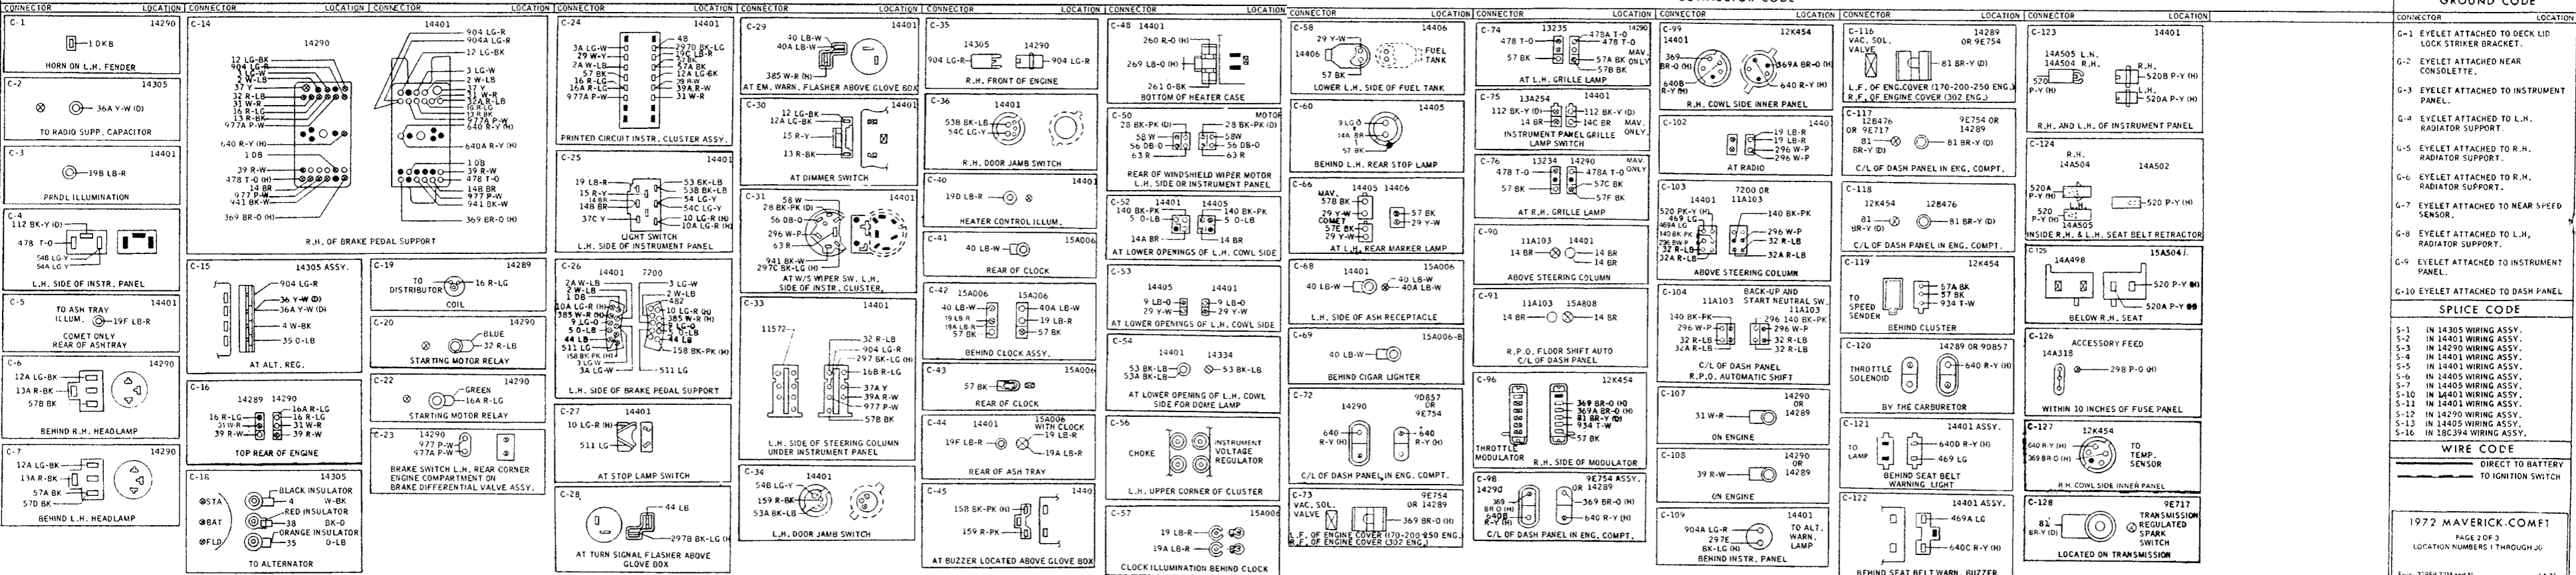


1972 MAVERICK-COMET  
PAGE 2 OF 3  
LOCATION NUMBERS 1 THROUGH 10

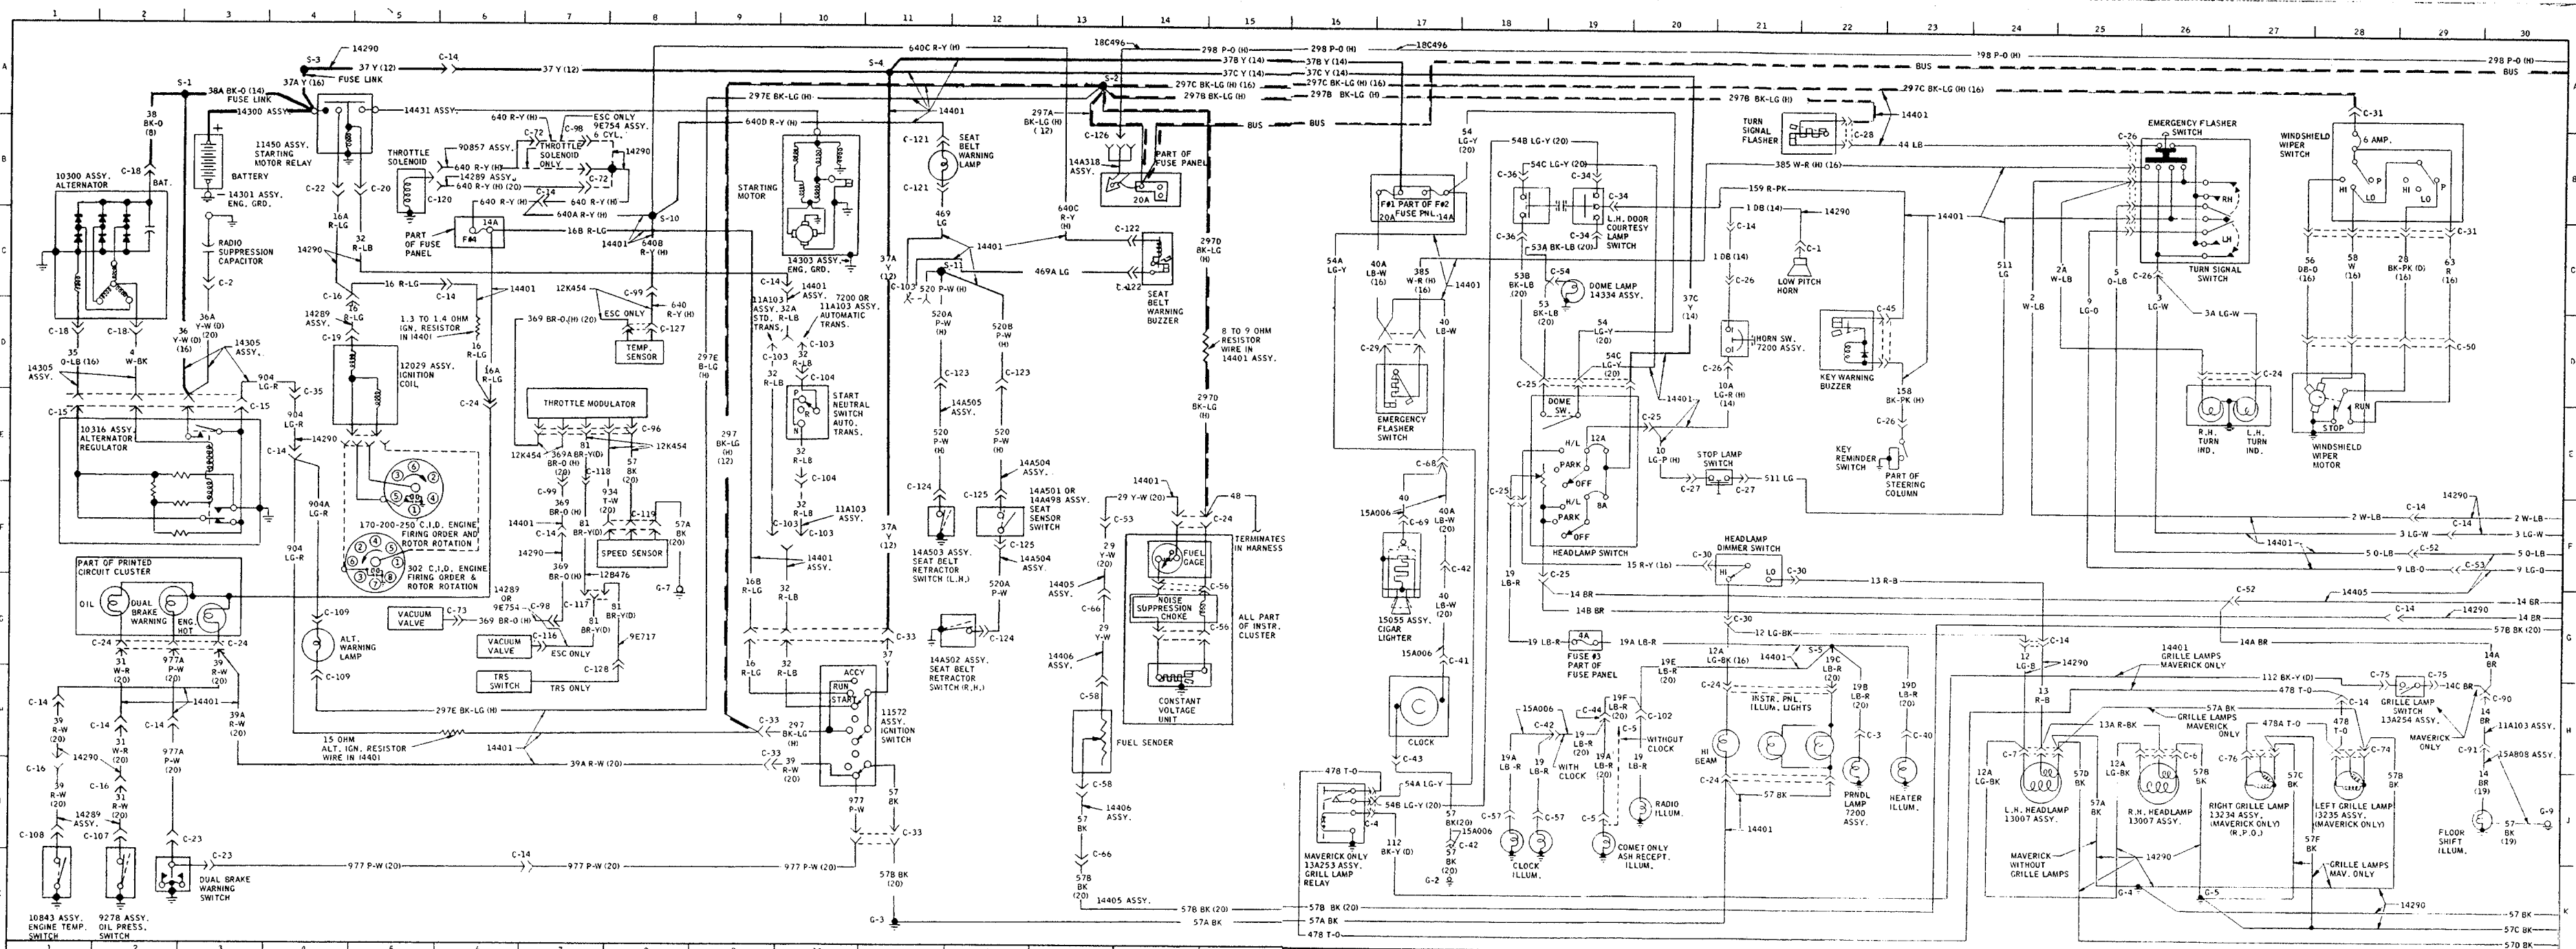


## CONNECTOR CODE

CONNECTOR		LOCATION		CONNECTOR		LOCATION		CONNECTOR		LOCATION		CONNECTOR		LOCATION		GROUND CODE	
C-8	13235																
<p>GRD AT SOCKET FOR MAV. ONLY 14A BR WIRE FOR COMET 57 BK COMET ONLY COMET, BEHIND R.H. FRONT GRILLE LAMP MAV., BEHIND R.H. FRONT PARK AND TURN SIGNAL LAMP</p>																	
C-9	13234																
<p>MAV. ONLY 140 BR 14C BR 2 W-LB 57 BK COMET ONLY COMET, BEHIND R.H. FRONT GRILLE LAMP MAV., BEHIND R.H. FRONT PARK AND TURN SIGNAL LAMP</p>																	
C-10	14290																
<p>BEHIND L.H. FRONT SIDE MARKER</p>																	
C-11	14290																
<p>BEHIND R.H. FRONT SIDE MARKER</p>																	
C-12	14290																
<p>AT W/S WASHER PUMP</p>																	
C-14	14290																
<p>R.H. OF BRAKE PEDAL SUPPORT</p>																	
C-1401	14401																
<p>R.H. OF BRAKE PEDAL SUPPORT</p>																	
C-52	14401	14405															
<p>AT LOWER OPENING OF L.H. COWL SIDE</p>		<p>140 BK-PK 5 O-LB 14 BR</p>															
C-84		DE-ICING SWITCH															
<p>ON EVAPORATOR CASE</p>		<p>347 BK-Y (H) 348 LG-P (H)</p>															
C-121		14401 ASSY.															
<p>BEHIND SEAT BELT WARNING LIGHT</p>		<p>TO LAMP 6400 R-Y (H) 469 LG</p>															
C-94		A/C COMPRESSOR															
<p>IN ENGINE COMPARTMENT</p>		<p>TO A/C CLUTCH SOLENOID 347 BK-Y (H)</p>															
C-129		MAVERICK ONLY	14405														
<p>BEHIND REAR BACK-UP LAMPS</p>		<p>140A BK-PK L.H. 140B BK-PK R.H.</p>															
C-59		14405															
<p>AT LICENSE LAMP</p>		<p>14C BR</p>															
C-60		14405															
<p>BEHIND L.H. REAR STOP LAMP</p>		<p>9 LG-O 14A BR 57D BK</p>															
C-100		4 SPD. 15525	3 SPD. 15546														
<p>3 SPEED OR R.P.O., 4 SPEED ON TRANS. EXTENSION</p>		<p>296 W-P 140 BK-PK</p>															
C-61		14405															
<p>BEHIND R.H. REAR STOP LAMP</p>		<p>5 O-LB 14B BR 57A BK</p>															
C-102		14401															
<p>AT RADIO</p>		<p>19F LB-R 19F LG-R 296 W-P 296B W-P</p>															
C-63		COMET ONLY	14405														
<p>BEHIND REAR BACK-UP LAMPS</p>		<p>R.H. 57B BK L.H. 57C BK L.H. 140A BK-PK R.H. 140B BK-PK</p>															
C-104		11A103	BACK-UP AND START NEUTRAL SW.														
<p>C/L OF DASH PANEL R.P.O., AUTOMATIC SHIFT</p>		<p>140 BK-PK 296 W-P 32 R-LB 32A R-LB</p>															
C-64		COMET 57C BK	14405														
<p>BEHIND L.H. REAR SIDE MARKER</p>		<p>COMET 57C BK MAV. 57C BK MAV. 14D BR COMET 14D BR</p>															
C-105		LIMIT SW.															
<p>IN A/C CONTROL HEAD</p>		<p>348 LG-P (H) 348 LG-P (H)</p>															
C-65		COMET 57F BK	14405														
<p>BEHIND R.H. REAR SIDE MARKER</p>		<p>COMET 57F BK MAV. 57A BK MAV. 14E BR COMET 14E BR</p>															
C-106		18C496	18C394														
<p>UNDER INSTRUMENT PANEL NEAR LEFT COWL</p>		<p>48 261 O-BK 260 R-O</p>															
C-48		14401															
<p>BELOW DEFOGGER MOTOR UNDER PACKAGE TRAY CENTER OF LUGGAGE COMPARTMENT</p>		<p>260 R-O (H)</p>															
C-49		14290															
<p>BEHIND HEATER OR A/C CONTROL HEAD</p>		<p>269 LB-O (H) 261 O-BK</p>															
C-46		18C496															
<p>TO DEFOGGER SW. R.H. SIDE OF STEERING COLUMN</p>		<p>261 O-BK 260 R-O (H)</p>															
C-47		18C394															
<p>BELOW DEFOGGER MOTOR UNDER PACKAGE TRAY CENTER OF LUGGAGE COMPARTMENT</p>		<p>261 O-BK</p>															
C-48		14401															
<p>BELOW DEFOGGER MOTOR UNDER PACKAGE TRAY CENTER OF LUGGAGE COMPARTMENT</p>		<p>260 R-O (H)</p>															
C-49		14290															
<p>BEHIND HEATER OR A/C CONTROL HEAD</p>		<p>269 LB-O (H) 261 O-BK</p>															
C-48		BOTTOM OF HEATER CASE L.H. SIDE OF BLOWER AND EVAPORATOR ASSY. (A/C ONLY)															
C-49		BOTTOM OF HEATER CASE L.H. SIDE OF BLOWER AND EVAPORATOR ASSY. (A/C ONLY)															
<b>GROUND CODE</b>																	
G-1		EYELET ATTACHED TO DECK LID LOCK STRIKER BRACKET.															
G-3		EYELET ATTACHED TO INSTRUMENT PANEL.															
G-2		EYELET ATTACHED NEAR CONSOLETTA.															
G-4		EYELET ATTACHED TO L.H. RADIATOR SUPPORT.															
G-5		EYELET ATTACHED TO R.H. RADIATOR SUPPORT.															
G-6		EYELET ATTACHED TO R.H. RADIATOR SUPPORT.															
G-7		EYELET ATTACHED TO NEAR SPEED SENSOR.															
G-8		EYELET ATTACHED TO L.H. RADIATOR SUPPORT.															
G-9		EYELET ATTACHED TO INSTRUMENT PANEL.															
G-10		EYELET ATTACHED TO DASH PANEL.															
<b>SPLICE CODE</b>																	
S-1		IN 14305 WIRING ASSY.															
S-2		IN 14401 WIRING ASSY.															
S-3		IN 14290 WIRING ASSY.															
S-4		IN 14401 WIRING ASSY.															
S-5		IN 14401 WIRING ASSY.															
S-6		IN 14405 WIRING ASSY.															
S-7		IN 14405 WIRING ASSY.															
S-10		IN 14401 WIRING ASSY.															
S-11		IN 14401 WIRING ASSY.															
S-12		IN 14290 WIRING ASSY.															
S-13		IN 14405 WIRING ASSY.															
S-16		IN 18C394 WIRING ASSY.															
<b>WIRE CODE</b>																	
---		DIRECT TO BATTERY															
---		TO IGNITION SWITCH (ACCV. TERMINAL).															
<b>SPLICE CODE</b>																	
<b>WIRE CODE</b>																	
1972 MAVERICK-COMET																	
PAGE 3 OF 3																	
LOCATION NUMBERS 31 THROUGH 45																	
Form 7795P-72M and N 7-1-71																	



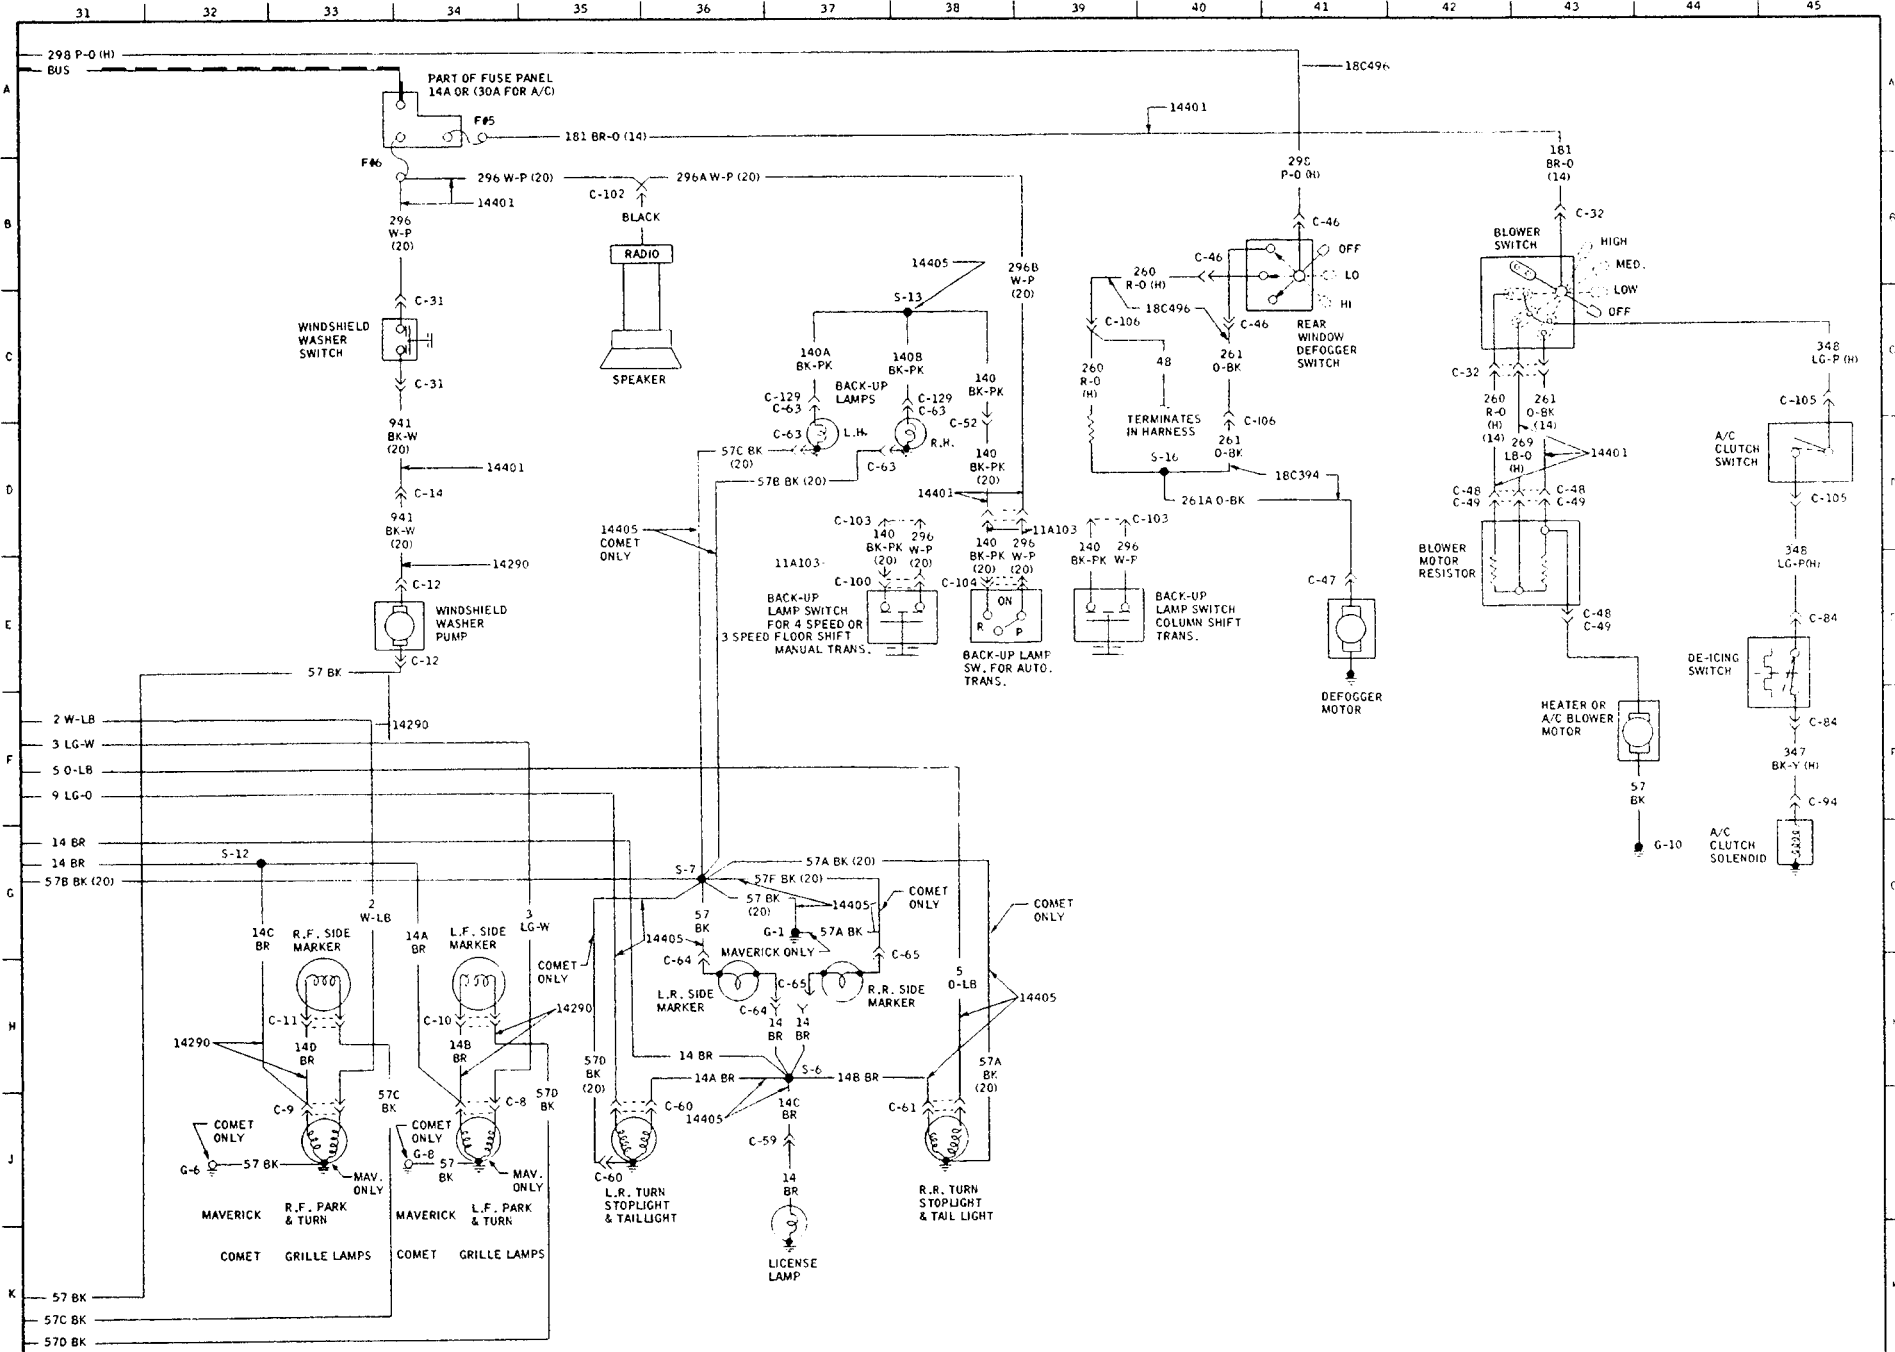

DESCRIPTION  
FUSE PANEL & FUNCTIONS

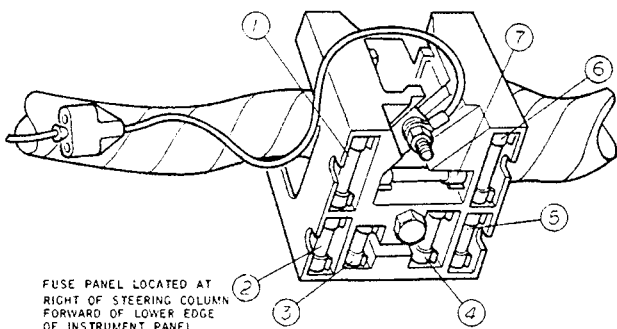

FUSE PANEL LOCATED AT  
RIGHT OF STEERING COLUMN  
FORWARD OF LOWER EDGE  
OF INSTRUMENT PANEL

- F-1 (20 AMP. FUSE) CIGAR LIGHTER, HORNS.
- F-2 (14 AMP. FUSE) COURTESY, DOME, MAP, LUGGAGE, GLOVE COMPARTMENT, CLOCK, AUTOMATIC SEAT BACK LATCH RELEASE (OPT.), IGNITION KEY WARNING, HEADLAMPS ON BUZZER & INSTR. PANEL COURTESY LAMPS.
- F-3 (4 AMP. FUSE) ILLUMINATION LAMPS: CLUSTER, PRND21, CONSOLE, RADIO, CIGAR LIGHTER, HEATER OR AIR CONDITIONER CONTROLS, HEADLAMP SWITCH, CLOCK, W/S WIPER-WASHER CONTROLS & GAGES (PERFORMANCE MODELS ONLY).
- F-4 (14 AMP. FUSE) WARNING LAMPS: SEAT BELT REMINDER, OIL, ENG. TEMP., ALTERNATOR, DUAL BRAKE WARNING, THROTTLE SOLENOID & CR EMISSION CONTROL.
- F-5 (14 AMP. FUSE) HEATER AND DEFROSTER.  
(30 AMP. FUSE) AIR CONDITIONER.
- F-6 (15 AMP. FUSE) BACK-UP LAMPS, RADIO FEED, W/S WIPER-WASHER & TURN SIGNALS.
- F-7 (20 AMP. FUSE) (ACCESSORY FEED) PARK BRAKE WARNING LIGHT (OPT.)  
POWER WINDOW SAFETY RELAY & HEATED BACK-LITE RELAY COIL FEEDS (OPT.)

LIGHTING CHART

LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
BACK-UP	32 C.P.	1156
FRONT & REAR MARKER	2 C.P.	194
FRONT PARK/TURN SIGNAL	3-32 C.P.	1157
HEADLAMPS		
HI & LO BEAM	50-40 C.P.	6012
LICENSE PLATE	4 C.P.	97
TAIL, STOP & TURN	3-32 C.P.	1157
GRILLE (SPORT LAMPS)	15 C.P.	94
CLUSTER ILLUM. (PRINTED CIRCUIT)	2 C.P.	194
ILLUM. HDLP. SW., W/S WIPER & CIGAR LTR.	2 C.P.	1895
HI-BEAM INDICATOR	2 C.P.	194
TURN INDICATOR	2 C.P.	194
HEATER & A/C CONTROLS	7 C.P.	1445
RADIO PILOT LIGHT	1.9 C.P.	1893
AUTO. TRANS. QUADRANT (CONSOLE)	.7 C.P.	1445
CIGAR LIGHTER ILLUM.	2 C.P.	1895
DUAL BRAKE WARNING	2 C.P.	194
ENGINE COMPARTMENT LIGHT	6 C.P.	631
LUGGAGE COMPARTMENT LIGHT	6 C.P.	631
MAP LAMP	6 C.P.	212
COURTESY LAMPS (INSTR. PANEL)	6 C.P.	631
SEAT BELT WARNING	7 C.P.	1445
DOME LAMP	12 C.P.	561
PARKING BRAKE WARNING	2 C.P.	256
GLOVE COMPARTMENT	2 C.P.	1895
CLOCK ILLUM. (CONSOLE)	2 C.P.	194
OIL PRESSURE WARNING	2 C.P.	194
WATER TEMP. WARNING	2 C.P.	194
ALTERNATOR WARNING	2 C.P.	194

INDEX

COMPONENT	LOCATION
AIR CONDITIONER CLUTCH	K-79
ALTERNATOR	F-3
ALTERNATOR REGULATOR	J-4
CLOCK	D-47
CIRCUIT BREAKERS	
POWER ASSIST	B-8
STOP LAMP	C-97
CAPACITOR (CONDENSER) NOISE SUPPRESSION	J-5
CHOKE-NOISE SUPPRESSION	D-28
BATTERY	B-2
BUZZER (HEADLAMP "ON") & KEY WARNING	F-53
CIGAR LIGHTER	D-73
DISTRIBUTOR	F-G-H-7
ENGINE GOVERNOR	F-10
FLASHERS	
EMERGENCY WARNING	D-96
TURN SIGNAL	B-91
GAUGES	
AMMETER	D-25
FUEL	E-28
INSTRUMENT VOLTAGE REGULATOR	C-28
OIL PRESSURE	D-24
TACHOMETER	C-22
TEMPERATURE	D-22
GOVERNOR (INTERMITTENT WIPER)	B-84, 85 & D-86, 87
HEATED BACK-LITE (HEATER ELEMENTS)	J-32, 33
HEATER, A/C BLOWER RESISTOR	G-78
HORNS	G, H-74
IGNITION COIL	F-12
ILLUMINATION LAMPS	
CIGAR LIGHTER	E-65
CLOCK (CONSOLE)	F-62
GAGE CLUSTER	F-69, 70
HEADLAMP SWITCH	F-64
HEATER CONTROLS	G-67
MAIN CLUSTER	E, F, G, H, J-71
RADIO	E-68
W/S WIPER-WASHER SWITCHES	F-66
INDICATOR LAMPS	
ALTERNATOR	D-26
DUAL BRAKE WARNING	D-20
HEATED BACK-LITE "ON"	J-34
HIGH BEAM	H-100
HI WATER TEMP.	D-21
LEFT TURN	F-91
LO OIL PRESSURE	D-21
PARKING BRAKE	F-25
RIGHT TURN	F-92
SEAT BELT	J-16
LIGHTS	
ENG. COMPT. (LIGHT & SWITCH)	E-7
BACK-UP L.H.	H-102
BACK-UP R.H.	H-104
GRILLE LAMPS (2 LAMPS)	J-97
GLOVE BOX	F-44
DOME	D-57
HEADLIGHTS	H-98, 99
PRND21	H-96
LICENSE PLATE	H-103
LUGGAGE COMPARTMENT (LIGHT & SWITCH)	D-59
MAP (LIGHT & SWITCH)	E-45
PARKING	H-92, 94
REAR (TAIL, STOP & TURN) (4 LAMPS)	H-101, 102, 105
SIDE MARKER - FRONT (2 LAMPS)	J-93, 95
- REAR (2 LAMPS)	J-103
INSTR. PANEL CTSY. (2 LAMPS)	D-44 & E-54
MOTORS	
AIR CONDITIONER OR HEATER BLOWER	H-78
CONVERTIBLE TOP	J-35
POWER WINDOWS	
L.H. FRONT DOOR	J-36
R.H. FRONT DOOR	J-37
R.H. REAR QUARTER	J-39
L.H. REAR QUARTER	J-38
STARTING	C-14
WINDSHIELD WASHER	H-86
WINDSHIELD WIPER	J-84
RADIOS	
AM	C-115
AM & STEREO TAPE UNIT	C-117
AM-FM MULTIPLEX	C-119
SENDERS	
FUEL GAGE	H-28
OIL PRESSURE GAGE	H-23
WATER TEMPERATURE GAGE	H-21
SOLENOIDS	
SEAT BACK LATCH	J-41, 42
THROTTLE POSITION	K-6
EMISSION VACUUM	K-8
RELAYS	
STARTING MOTOR	B-9
POWER WINDOW SAFETY	B-36
HEATED BACK-LITE	F-34
SEAT BACK LATCH	F-42
HEADLAMP ON	F-54
SPEAKERS	
FRONT	E-115
L.H. DOOR	J-116
R.H. DOOR	J-119
SPEED SENSOR (EMISSION CONTROL)	J-15
SPARK CONTROL UNIT (EMISSION CONTROL)	K-13
SWITCHES	
AMBIENT TEMP. SENSOR (EMISSION CONTROL)	G-15
AIR CONDITIONER CONTROL	E-81
AIR CONDITIONER ICING	F-81
AIR CONDITIONER BLOWER & CLUTCH	D-78
BACK-UP LIGHT	D-103, D-104
DOOR JAMB COURTESY LIGHT - FRONT R.H.	B, C-41
L.H.	D-56
DUAL BRAKE WARNING	H-19
EMERGENCY WARNING	C-95
GLOVE BOX LAMP	H-45
HEADLIGHT DIMMER	D-100
HEATED BACK-LITE	D-34
HEATER BLOWER	D-77
IGNITION	C, D, E-18
LIGHT (HEADLAMP)	C-52
LOW OIL PRESSURE	H-22
PARKING BRAKE	J-25
POWER WINDOW MASTER & L.H. FRONT	D-36, 37, 38, 39
R.H. FRONT DOOR	H-37
L.H. REAR QUARTER	H-38
R.H. REAR QUARTER	H-39
STOP LIGHT	D-98
HI WATER TEMP.	H-21
TURN SIGNAL	C-94
KEY REMINDER	G-51
WINDSHIELD WIPER 2-SPEED & WASHER	D-83
WINDSHIELD WIPER INTERMITTENT & WASHER	C-87
CONVERTIBLE TOP	F-35
"PARK" - "NEUTRAL" START (AUTO TRANS. ONLY)	F-14
ENG. COMPT. LAMP	E-7
SEAT BELT WARNING TIME DELAY SWITCH	H-16
MAP (SWITCH & LAMP)	E-44
LUGGAGE COMPT. (SWITCH & LAMP)	D-59
ENG. COMPT. (SWITCH & LAMP)	E-7
HORN	D-74
TRANSMISSION (EMISSION CONTROL)	K-11

**WIRE CONNECTOR CODES**

CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION																																																																																																																																																																																																																																				
C-1	14305 ASSY. R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR	C-6	14305 ASSY. R.H. FENDER APRON - FORWARD NEAR ALTERNATOR REGULATOR *RADIO SUPPRESSION CAPACITOR	C-10	14290 ASSY. R.H. FENDER APRON - FORWARD *JUNCTION BLOCK (VEHICLES WITH AMMETER)	C-17	14289 ASSY. "BATT" R.H. SIDE OF ENGINE - MIDDLE (6 CYL.) TOP OF ENGINE - FORWARD (8 CYL.) *IGNITION COIL	C-23	14289 ASSY. 640 R-Y (H) R.H. SIDE - TOP OF ENGINE - NEAR CARBURETOR (6 CYL.) L.H. SIDE - TOP OF ENGINE - NEAR CARBURETOR (8 CYL.) *CARBURETOR SOLENOID	C-28	14401 ASSY. 904 LG-R (WITH AMMETER) 16 R-LG (W/O TACH.) 1.3-1.4 16A R-LG 32 R-LB 37A Y 297 BK-LG (H) 39A R-W 297D BK-LG (H) 57C BK 977A P-W WITH ALTERNATOR WARNING LAMP WITH ENGINE TEMP. WARNING LAMP ONLY *IGNITION SWITCH	C-30	14290 ASSY. DUAL BRAKE VALVE L.H. FENDER APRON - NEAR L.H. HOOD HINGE	C-36	108923 ASSY. (YELLOW) 654 Y-LG STUD WITH YELLOW DOT - REAR OF AMMETER * AMMETER	C-44	14401 ASSY. WHITE 14A BR 140 BK-PK 29 Y-W 5 O-LB L.H. COWL-UNDER INSTR. PANEL	C-157	14401 ASSY. 469 LG 469 LG 469 LG 640B R-Y (H) 640C R-Y (H)	C-2	14305 ASSY. ORANGE 35 O-LB TERMINAL MARKED "FLD" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR	C-7	15A669 ASSY. 175A BK-Y (D) 14A200 ASSY. BK-Y (D) R.H. FENDER APRON - FORWARD ATTACHED TO STARTER MOTOR RELAY OR JUNCTION BLOCK	C-11	14431 ASSY. BK R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-18	12K454 ASSY. WIRE TO DIST. POINTS (ALL EXC. 351 "BOSS") PART OF 12405 (ENG. GOVERNOR) (351 "BOSS" ONLY)	C-24	12K454 ASSY. 369-BR-0 (H) 369-ABR-0 (H) 81 BK-Y (D) 934 T-W 57 BK R.H. COWL TOP ABOVE GLOVE BOX	C-29	14401 ASSY. 31 W-R 29 Y-W 297C BK-LG (H) 2A W-LB 48 (BLIND CKT) 3A LG-W 19G LB-R 57H BK 640C R-Y (H) 39 R-W 39A R-W 977 P-W WITH OIL PRESSURE WARNING LAMP BEHIND INSTRUMENT CLUSTER *PRINTED CIRCUIT BOARD NOTE: STANDARD CLUSTER	C-31	14289 ASSY. 39 R-W REAR - L.H. SIDE - JUST BELOW VALVE COVER ON ENGINE. (250 C.I.D. - 6 CYL. ENGINE) MIDDLE-TOP-FORWARD ON ENGINE - NEAR DISTRIBUTOR (302 C.I.D. - 8 CYL. ENGINE) BEHIND FAN BELT PULLEY - NEAR TOP OF ENGINE (351 C.I.D. - 8 CYL. ENGINE) *WATER TEMP. SWITCH (WARNING LAMP) *WATER TEMP. SENDER (TEMP. GAGE)	C-37	108923 ASSY. (RED) 655 R-O STUD WITH RED DOT - REAR OF AMMETER * AMMETER	C-45	14406 ASSY. 29 Y-W 57H BK INSIDE TRUNK - EXTREME L.H. SIDE	C-158	14401 ASSY. 520A P-W (H) 520A P-W (H)	C-3	14305 ASSY. BLACK 4 W-BK TERMINAL MARKED "S" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR NOTE: NOT USED ON VEHICLES WITH AMMETER	C-8	14300 ASSY. R (8) 20A. CKT. BRKR. & (POWER ASSISTS W/O AMMETER) 14300 ASSY. 38A BK-O 37C (18) 37B 14290 ASSY. (WITHOUT AMMETER) 15702 ASSY. (ENG. COMPT. LP.) 14290 ASSY. (WITH AMMETER) 14305 ASSY. (WITHOUT AMMETER) R.H. FENDER APRON - FWD. *STARTER MOTOR RELAY § WHEN VEHICLE HAS ALT. WRNG. LAMP WITH AMMETER - SEE C-10	C-12	14290 ASSY. 32A R-LB R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-19	14290 ASSY. WIRE TO DIST. POINTS BK TOP OF ENGINE - FORWARD 351 "BOSS" ONLY	C-25	12K454 ASSY. 934 T-W 57B BK 57A BK UNDER INSTRUMENT PANEL - NEAR SPEEDO CABLE - BELOW "Y" BRACE * SPEED SENSOR	C-32	14289 ASSY. 31 W-R REAR - L.H. SIDE OF ENGINE - NEAR BELL HOUSING. (250 C.I.D. - 6 CYL. ENGINE) FORWARD L.H. SIDE OF ENGINE - REARWARD OF FUEL PUMP (302 C.I.D. - 8 CYL. ENGINE) CENTER - REAR - TOP OF ENGINE (351 C.I.D. - 8 CYL. ENGINE) * OIL PRESSURE SWITCH (WARNING LAMP) * OIL PRESSURE SENDER (OIL PRES. GAGE)	C-38	108923 ASSY. 60A BK-LG (D) L.H. STUD OF WATER TEMPERATURE GAGE WATER TEMPERATURE GAGE	C-46	14406 ASSY. 57 BK 29 Y-W L.H. SIDE OF GAS TANK - UNDER CAR * FUEL TANK SENDER	C-159	14401 ASSY. 520A PU-W (H)	C-4	14305 ASSY. 35 O-LB 4 W-BK 36 Y-W (D) 36A Y-W (D) 904 LG-R WITH ALT. WARNING LAMP 35 O-LB 904 LG-R 36 Y-W (D) 36A Y-W (D) WITH AMMETER R.H. FENDER APRON - FORWARD *ALTERNATOR REGULATOR	C-13	14431 ASSY. BK R.H. SIDE OF ENGINE-LOW-REAR-NEAR DASH PANEL * STARTER MOTOR	C-20	14290 ASSY. 15525 ASSY. 32A R-LB 140 BK-PK 296 W-P 32 R-LB L.H. SIDE OF ENGINE - REAR - NEAR DASH PANEL * PARK-NEUTRAL START & BACKUP LAMP SWITCH & WIRE ASSY. (AUTOMATIC TRANS. ONLY)	C-26	12K454 ASSY. 640A R-Y (H) 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-33	14401 ASSY. 16B R-LG 16 R-LG BEHIND TACHOMETER IN CLUSTER * TACHOMETER	C-40	14401 ASSY. 60 BK-LG (D) 655 R-O 654 Y-LG 31 W-R 57K BK 19J LB-BK BEHIND MINI-CLUSTER GAGE PACK	C-47	9E717 ASSY. 81 BR-Y (D) 81 BR-Y (D) 12K454 ASSY. L.H. SIDE OF ENGINE-LOW-REARWARD	C-160	14401 ASSY. 520A PU-W (H)	C-5	14290 ASSY. 904 LG-R R.H. FENDER APRON - NEAR ALT. REGULATOR	C-9	14290 ASSY. 16A R-LG R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-14	14290 ASSY. 39 R-W 31 W-R 16 R-LG 347 BK-Y (H) L.H. SIDE OF ENGINE - REAR - NEAR DASH PANEL	C-21	12K454 ASSY. 640A R-Y (H) (WITH A/C ONLY) 347 BK-Y (H) 369A BR-0 (H) 14290 ASSY. ABOVE STEERING COLUMN	C-34	108923 ASSY. 31 W-R R.H. REAR STUD OF OIL PRESSURE GAGE * OIL PRESSURE GAGE	C-41	14401 ASSY. 14 B BR 158A BK-PK (H) 159A A-PK (S) 162 LG-R (D) TOP OF RELAY MTC. PANEL ABOVE GLOVE BOX	C-48	9E717 ASSY. 81 BR-Y (D)	C-161	14401 ASSY. 640C R-Y (H) 469 LG ADDVE GLOVE BOX * FASTEN SEAT BELT INDICATOR LP.	C-6	14305 ASSY. 38 BK-O TERMINAL MARKED "BATT" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR	C-15	14289 ASSY. YELLOW 16 R-LG R.H. FRONT WHEELHOUSE - FWD. *ENGINE GOVERNOR NOTE: 351 "BOSS" ONLY	C-27	14290 ASSY. 297D BK-LG (H) 297B W-P 140 BK-PK 977A P-W 15 R-Y 37 Y 2 W-LB 32 R-LB 31 W-R 14 BR 12 LG-BK 654 Y-LG 16 R-LG 14B BR 35 R-W 56 DB-O 655 R-O 162 LG-R (D) 977 P-W 58 W 941 BK-W 63 R 520 P-W (H) 28 BK-PK (D) 469 LG ON VEHICLES WITHOUT AMMETER ON VEHICLES WITH AMMETER NOT USED UNTIL AFTER DEC.-71 R.H. SIDE OF STEERING COLUMN - UNDER FUSE PANEL UNDER INSTRUMENT PANEL	C-35	108923 ASSY. 60 BK-LG (D) 60A BK-LG (D) L.H. REAR STUD OF OIL PRESSURE GAGE * OIL PRESSURE GAGE	C-42	14290 ASSY. 162 LG-R (D) ON PARK BRAKE ASSY. - L.H. FRONT COWL - BELOW INSTRUMENT PANEL * PARK BRAKE SWITCH	C-49	14401 ASSY. R.H. SIDE OF TRANSMISSION * TRS TRANSMISSION SWITCH	C-7	14305 ASSY. R.H. FENDER APRON - FORWARD NEAR ALTERNATOR REGULATOR *RADIO SUPPRESSION CAPACITOR	C-16	14290 ASSY. "BATT" (351 "BOSS" ONLY) PART OF GOVERNOR ASSEMBLY	C-22	12K454 ASSY. 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-39	108923 ASSY. 39 R-W R.H. STUD OF WATER TEMPERATURE GAGE * WATER TEMPERATURE GAGE	C-43	14401 ASSY. RADIO SUPPRESSION *CHOKE CONSTANT VOLTAGE UNIT BEHIND INSTRUMENT CLUSTER ATTACHED TO PRINTED CIRCUIT	C-8	14305 ASSY. 20A. CIRCUIT BRKR. R.H. FENDER APRON - FORWARD ATTACHED TO STARTER MOTOR RELAY OR JUNCTION BLOCK	C-17	14289 ASSY. 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-44	14401 ASSY. 655 R-O 654 Y-LG 31 W-R 57K BK 19J LB-BK BEHIND MINI-CLUSTER GAGE PACK	C-50	14401 ASSY. 640C R-Y (H) 469 LG ADDVE GLOVE BOX * FASTEN SEAT BELT INDICATOR LP.	C-9	14290 ASSY. 16A R-LG R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-18	12K454 ASSY. 369-BR-0 (H) 369-ABR-0 (H) 81 BK-Y (D) 934 T-W 57 BK R.H. COWL TOP ABOVE GLOVE BOX	C-45	9E717 ASSY. 81 BR-Y (D)	C-162	14401 ASSY. 520A PU-W (H)	C-10	14290 ASSY. R.H. FENDER APRON - FORWARD NEAR ALTERNATOR REGULATOR *RADIO SUPPRESSION CAPACITOR	C-19	14290 ASSY. WIRE TO DIST. POINTS BK TOP OF ENGINE - FORWARD 351 "BOSS" ONLY	C-28	14401 ASSY. 904 LG-R (WITH AMMETER) 16 R-LG (W/O TACH.) 1.3-1.4 16A R-LG 32 R-LB 37A Y 297 BK-LG (H) 39A R-W 297D BK-LG (H) 57C BK 977A P-W WITH ALTERNATOR WARNING LAMP WITH ENGINE TEMP. WARNING LAMP ONLY *IGNITION SWITCH	C-37	108923 ASSY. (RED) 655 R-O STUD WITH RED DOT - REAR OF AMMETER * AMMETER	C-46	14406 ASSY. 57 BK 29 Y-W L.H. SIDE OF GAS TANK - UNDER CAR * FUEL TANK SENDER	C-157	14401 ASSY. 469 LG 469 LG 469 LG 640B R-Y (H) 640C R-Y (H)	C-2	14305 ASSY. ORANGE 35 O-LB TERMINAL MARKED "FLD" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR	C-7	15A669 ASSY. 175A BK-Y (D) 14A200 ASSY. BK-Y (D) R.H. FENDER APRON - FORWARD ATTACHED TO STARTER MOTOR RELAY OR JUNCTION BLOCK	C-11	14431 ASSY. BK R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-18	12K454 ASSY. WIRE TO DIST. POINTS (ALL EXC. 351 "BOSS") PART OF 12405 (ENG. GOVERNOR) (351 "BOSS" ONLY)	C-24	12K454 ASSY. 369-BR-0 (H) 369-ABR-0 (H) 81 BK-Y (D) 934 T-W 57 BK R.H. COWL TOP ABOVE GLOVE BOX	C-29	14401 ASSY. 31 W-R 29 Y-W 297C BK-LG (H) 2A W-LB 48 (BLIND CKT) 3A LG-W 19G LB-R 57H BK 640C R-Y (H) 39 R-W 39A R-W 977 P-W WITH OIL PRESSURE WARNING LAMP BEHIND INSTRUMENT CLUSTER *PRINTED CIRCUIT BOARD NOTE: STANDARD CLUSTER	C-31	14289 ASSY. 39 R-W REAR - L.H. SIDE - JUST BELOW VALVE COVER ON ENGINE. (250 C.I.D. - 6 CYL. ENGINE) MIDDLE-TOP-FORWARD ON ENGINE - NEAR DISTRIBUTOR (302 C.I.D. - 8 CYL. ENGINE) BEHIND FAN BELT PULLEY - NEAR TOP OF ENGINE (351 C.I.D. - 8 CYL. ENGINE) *WATER TEMP. SWITCH (WARNING LAMP) *WATER TEMP. SENDER (TEMP. GAGE)	C-37	108923 ASSY. (RED) 655 R-O STUD WITH RED DOT - REAR OF AMMETER * AMMETER	C-45	14406 ASSY. 29 Y-W 57H BK INSIDE TRUNK - EXTREME L.H. SIDE	C-158	14401 ASSY. 520A P-W (H) 520A P-W (H)	C-3	14305 ASSY. BLACK 4 W-BK TERMINAL MARKED "S" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR NOTE: NOT USED ON VEHICLES WITH AMMETER	C-8	14300 ASSY. R (8) 20A. CKT. BRKR. & (POWER ASSISTS W/O AMMETER) 14300 ASSY. 38A BK-O 37C (18) 37B 14290 ASSY. (WITHOUT AMMETER) 15702 ASSY. (ENG. COMPT. LP.) 14290 ASSY. (WITH AMMETER) 14305 ASSY. (WITHOUT AMMETER) R.H. FENDER APRON - FWD. *STARTER MOTOR RELAY § WHEN VEHICLE HAS ALT. WRNG. LAMP WITH AMMETER - SEE C-10	C-12	14290 ASSY. 32A R-LB R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-19	14290 ASSY. WIRE TO DIST. POINTS BK TOP OF ENGINE - FORWARD 351 "BOSS" ONLY	C-25	12K454 ASSY. 934 T-W 57B BK 57A BK UNDER INSTRUMENT PANEL - NEAR SPEEDO CABLE - BELOW "Y" BRACE * SPEED SENSOR	C-32	14289 ASSY. 31 W-R REAR - L.H. SIDE OF ENGINE - NEAR BELL HOUSING. (250 C.I.D. - 6 CYL. ENGINE) FORWARD L.H. SIDE OF ENGINE - REARWARD OF FUEL PUMP (302 C.I.D. - 8 CYL. ENGINE) CENTER - REAR - TOP OF ENGINE (351 C.I.D. - 8 CYL. ENGINE) * OIL PRESSURE SWITCH (WARNING LAMP) * OIL PRESSURE SENDER (OIL PRES. GAGE)	C-38	108923 ASSY. 60A BK-LG (D) L.H. STUD OF WATER TEMPERATURE GAGE WATER TEMPERATURE GAGE	C-46	14406 ASSY. 57 BK 29 Y-W L.H. SIDE OF GAS TANK - UNDER CAR * FUEL TANK SENDER	C-159	14401 ASSY. 520A PU-W (H)	C-4	14305 ASSY. 35 O-LB 4 W-BK 36 Y-W (D) 36A Y-W (D) 904 LG-R WITH ALT. WARNING LAMP 35 O-LB 904 LG-R 36 Y-W (D) 36A Y-W (D) WITH AMMETER R.H. FENDER APRON - FORWARD *ALTERNATOR REGULATOR	C-13	14431 ASSY. BK R.H. SIDE OF ENGINE-LOW-REAR-NEAR DASH PANEL * STARTER MOTOR	C-20	14290 ASSY. 15525 ASSY. 32A R-LB 140 BK-PK 296 W-P 32 R-LB L.H. SIDE OF ENGINE - REAR - NEAR DASH PANEL * PARK-NEUTRAL START & BACKUP LAMP SWITCH & WIRE ASSY. (AUTOMATIC TRANS. ONLY)	C-26	12K454 ASSY. 640A R-Y (H) 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-33	14401 ASSY. 16B R-LG 16 R-LG BEHIND TACHOMETER IN CLUSTER * TACHOMETER	C-40	14401 ASSY. 60 BK-LG (D) 655 R-O 654 Y-LG 31 W-R 57K BK 19J LB-BK BEHIND MINI-CLUSTER GAGE PACK	C-47	9E717 ASSY. 81 BR-Y (D) 81 BR-Y (D) 12K454 ASSY. L.H. SIDE OF ENGINE-LOW-REARWARD	C-160	14401 ASSY. 640C R-Y (H) 469 LG ADDVE GLOVE BOX * FASTEN SEAT BELT INDICATOR LP.	C-5	14290 ASSY. 904 LG-R R.H. FENDER APRON - NEAR ALT. REGULATOR	C-9	14290 ASSY. 16A R-LG R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-14	14290 ASSY. 39 R-W 31 W-R 16 R-LG 347 BK-Y (H) L.H. SIDE OF ENGINE - REAR - NEAR DASH PANEL	C-21	12K454 ASSY. 640A R-Y (H) (WITH A/C ONLY) 347 BK-Y (H) 369A BR-0 (H) 14290 ASSY. ABOVE STEERING COLUMN	C-34	108923 ASSY. 31 W-R R.H. REAR STUD OF OIL PRESSURE GAGE * OIL PRESSURE GAGE	C-41	14401 ASSY. 14 B BR 158A BK-PK (H) 159A A-PK (S) 162 LG-R (D) TOP OF RELAY MTC. PANEL ABOVE GLOVE BOX	C-48	9E717 ASSY. 81 BR-Y (D)	C-161	14401 ASSY. 640C R-Y (H) 469 LG ADDVE GLOVE BOX * FASTEN SEAT BELT INDICATOR LP.	C-6	14305 ASSY. 38 BK-O TERMINAL MARKED "BATT" R.H. SIDE - FORWARD ON ENGINE *ALTERNATOR	C-15	14289 ASSY. YELLOW 16 R-LG R.H. FRONT WHEELHOUSE - FWD. *ENGINE GOVERNOR NOTE: 351 "BOSS" ONLY	C-27	14290 ASSY. 297D BK-LG (H) 297B W-P 140 BK-PK 977A P-W 15 R-Y 37 Y 2 W-LB 32 R-LB 31 W-R 14 BR 12 LG-BK 654 Y-LG 16 R-LG 14B BR 35 R-W 56 DB-O 655 R-O 162 LG-R (D) 977 P-W 58 W 941 BK-W 63 R 520 P-W (H) 28 BK-PK (D) 469 LG ON VEHICLES WITHOUT AMMETER ON VEHICLES WITH AMMETER NOT USED UNTIL AFTER DEC.-71 R.H. SIDE OF STEERING COLUMN - UNDER FUSE PANEL UNDER INSTRUMENT PANEL	C-35	108923 ASSY. 60 BK-LG (D) 60A BK-LG (D) L.H. REAR STUD OF OIL PRESSURE GAGE * OIL PRESSURE GAGE	C-42	14290 ASSY. 162 LG-R (D) ON PARK BRAKE ASSY. - L.H. FRONT COWL - BELOW INSTRUMENT PANEL * PARK BRAKE SWITCH	C-49	14401 ASSY. R.H. SIDE OF TRANSMISSION * TRS TRANSMISSION SWITCH	C-7	14305 ASSY. R.H. FENDER APRON - FORWARD NEAR ALTERNATOR REGULATOR *RADIO SUPPRESSION CAPACITOR	C-16	14290 ASSY. "BATT" (351 "BOSS" ONLY) PART OF GOVERNOR ASSEMBLY	C-22	12K454 ASSY. 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-39	108923 ASSY. 39 R-W R.H. STUD OF WATER TEMPERATURE GAGE * WATER TEMPERATURE GAGE	C-43	14401 ASSY. RADIO SUPPRESSION *CHOKE CONSTANT VOLTAGE UNIT BEHIND INSTRUMENT CLUSTER ATTACHED TO PRINTED CIRCUIT	C-8	14305 ASSY. 20A. CIRCUIT BRKR. R.H. FENDER APRON - FORWARD ATTACHED TO STARTER MOTOR RELAY OR JUNCTION BLOCK	C-17	14289 ASSY. 640 R-Y (H) 369 BR-0 (H) R.H. COWL TOP ABOVE GLOVE BOX	C-44	14401 ASSY. 655 R-O 654 Y-LG 31 W-R 57K BK 19J LB-BK BEHIND MINI-CLUSTER GAGE PACK	C-50	14401 ASSY. 640C R-Y (H) 469 LG ADDVE GLOVE BOX * FASTEN SEAT BELT INDICATOR LP.	C-9	14290 ASSY. 16A R-LG R.H. FENDER APRON - FORWARD *STARTER MOTOR RELAY	C-18	12K454 ASSY. 369-BR-0 (H) 369-ABR-0 (H) 81 BK-Y (D) 934 T-W 57 BK R.H. COWL TOP ABOVE GLOVE BOX	C-45	9E717 ASSY. 81 BR-Y (D)	C-162	14401 ASSY. 520A PU-W (H)

**GROUND CODE**

G-1 EYELET CENTER OF 14301 AT ALT. REGULATOR  
G-2 EYELET END OF 14301 AT R.H. ENGINE FRONT  
G-3 EYELET END OF GOVERNOR WIRING TOP ENGINE FRONT

**SPLICE CODE**

SP-1 IN 14305 NR. ALTERNATOR REGULATOR  
SP-2 IN 14290 NR. HORN WIRE TAKEOUT  
SP-3 IN 14290 NR. STARTER MOTOR RELAY  
SP-4 IN 14290 NR. STARTER MOTOR RELAY  
SP-5 IN 14290 NR. FUSE PANEL DISCONNECT  
SP-6 IN 14346 NR. STARTER MOTOR RELAY  
SP-7 IN 14401 NR. FUSE PANEL DISCONNECT  
SP-8 IN 14401 NR. FUSE PANEL DISCONNECT  
SP-9 IN 14401 NR. CIGAR LIGHTER TAKEOUT


**WIRE CODE**


— DIRECT TO BATTERY  
— TO IGNITION SWITCH


**1972 MUSTANG**

PAGE 2 OF 5  
LOCATION NUMBERS 1 THROUGH 30

Form 7705 72F

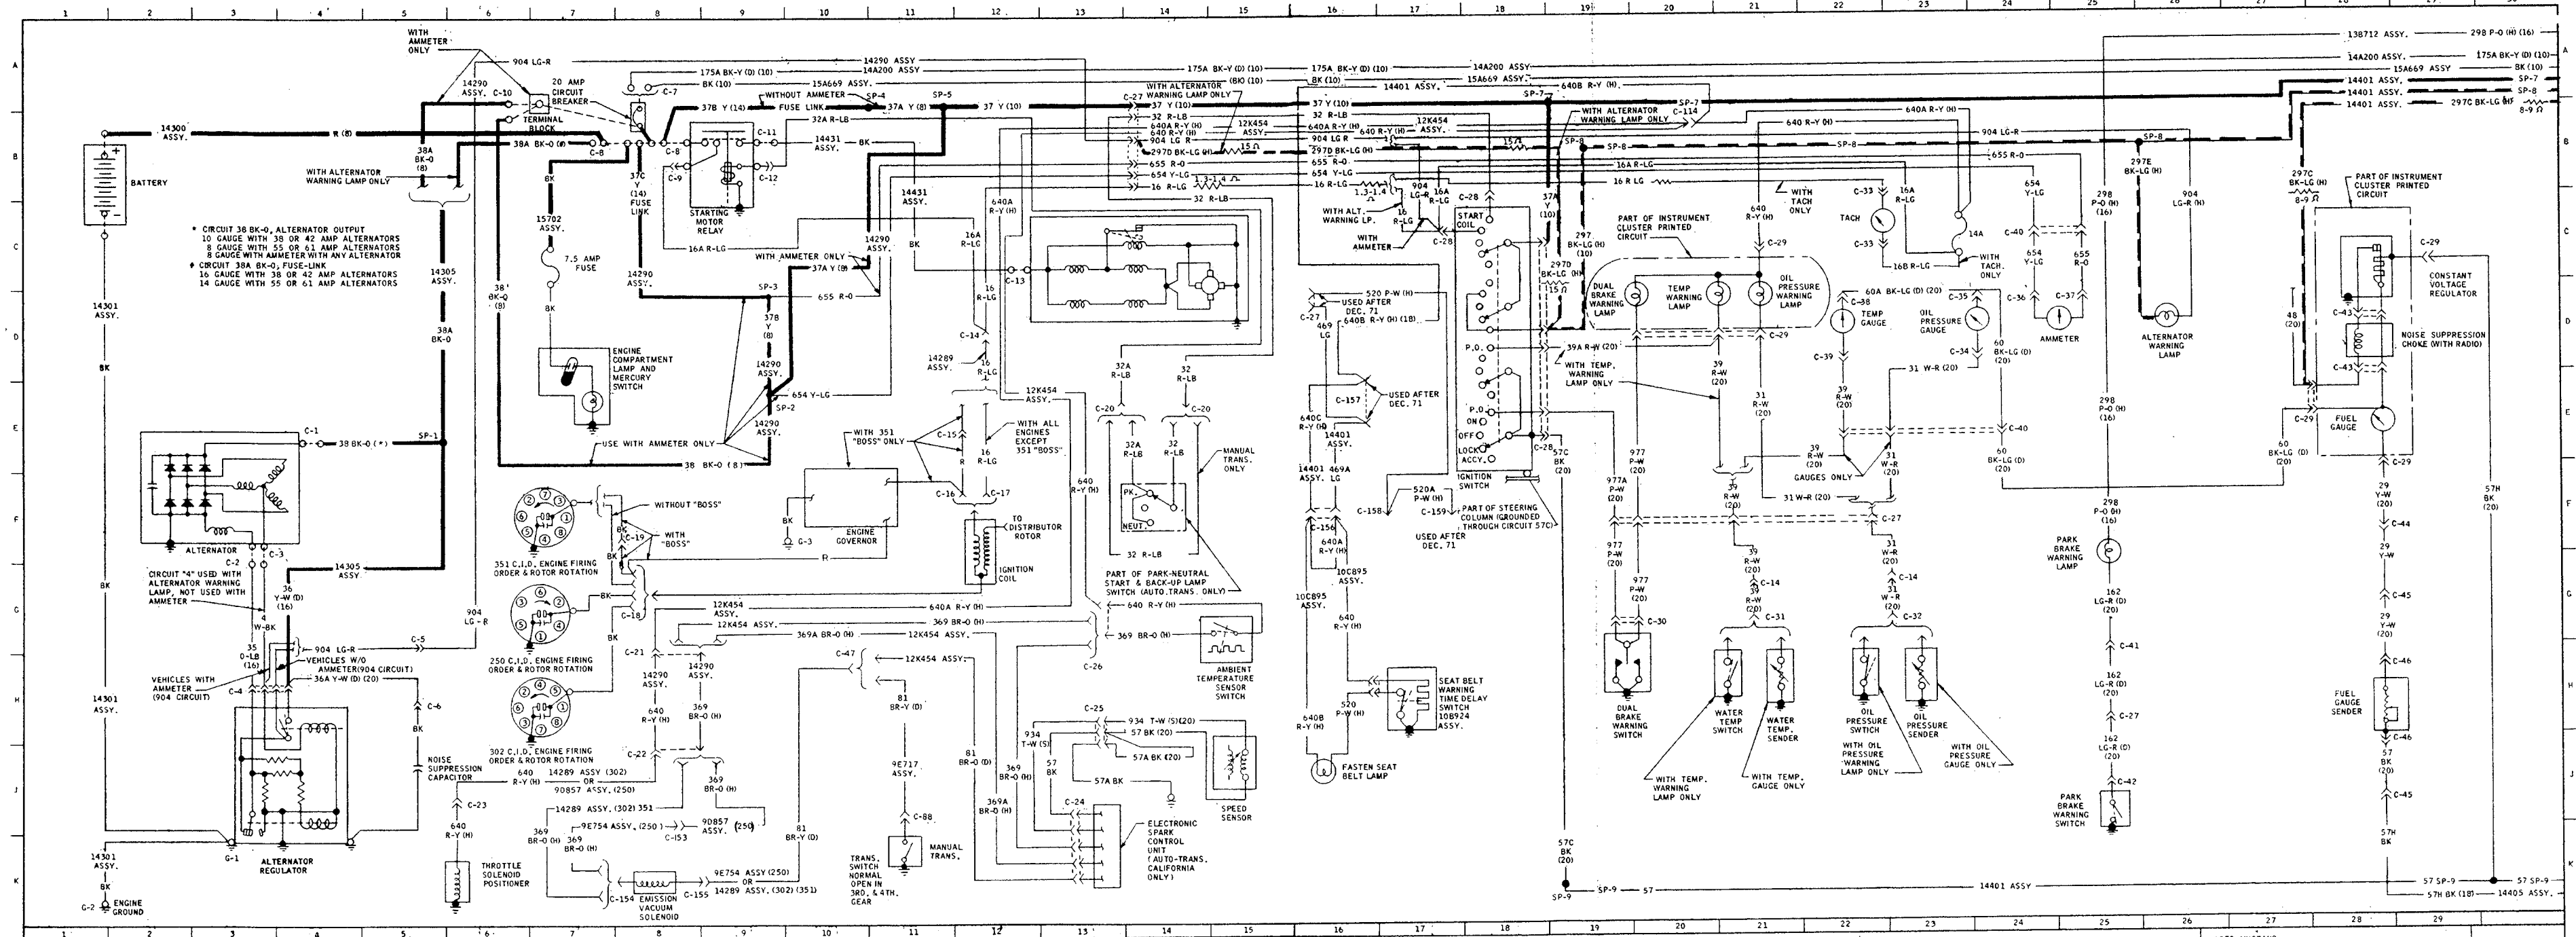

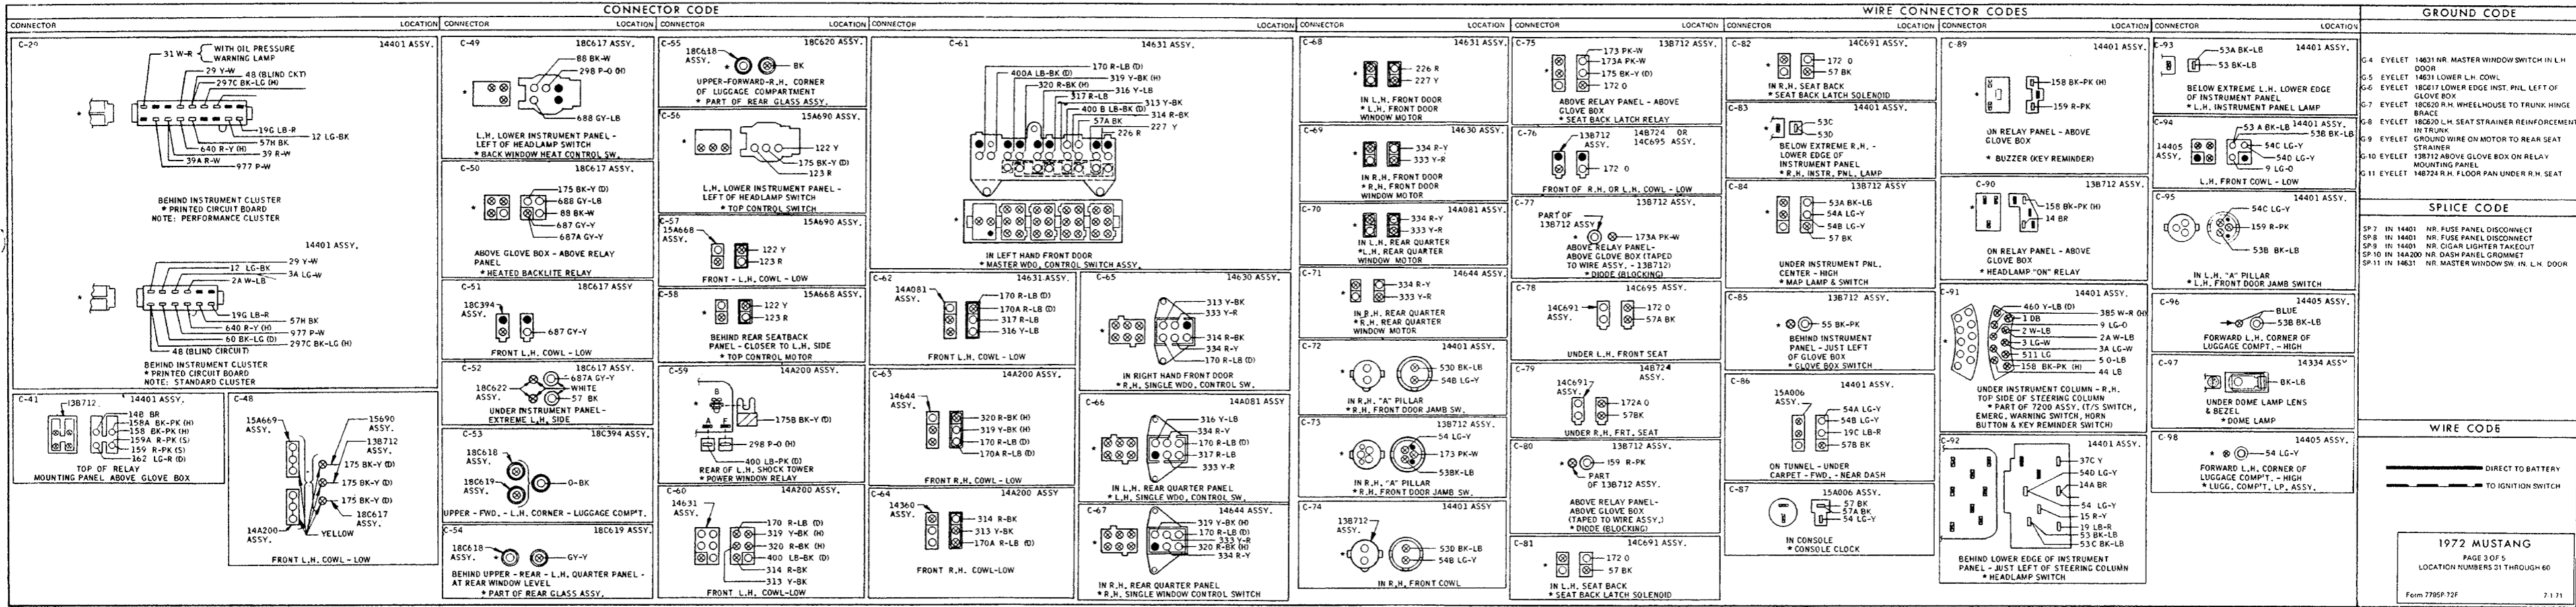

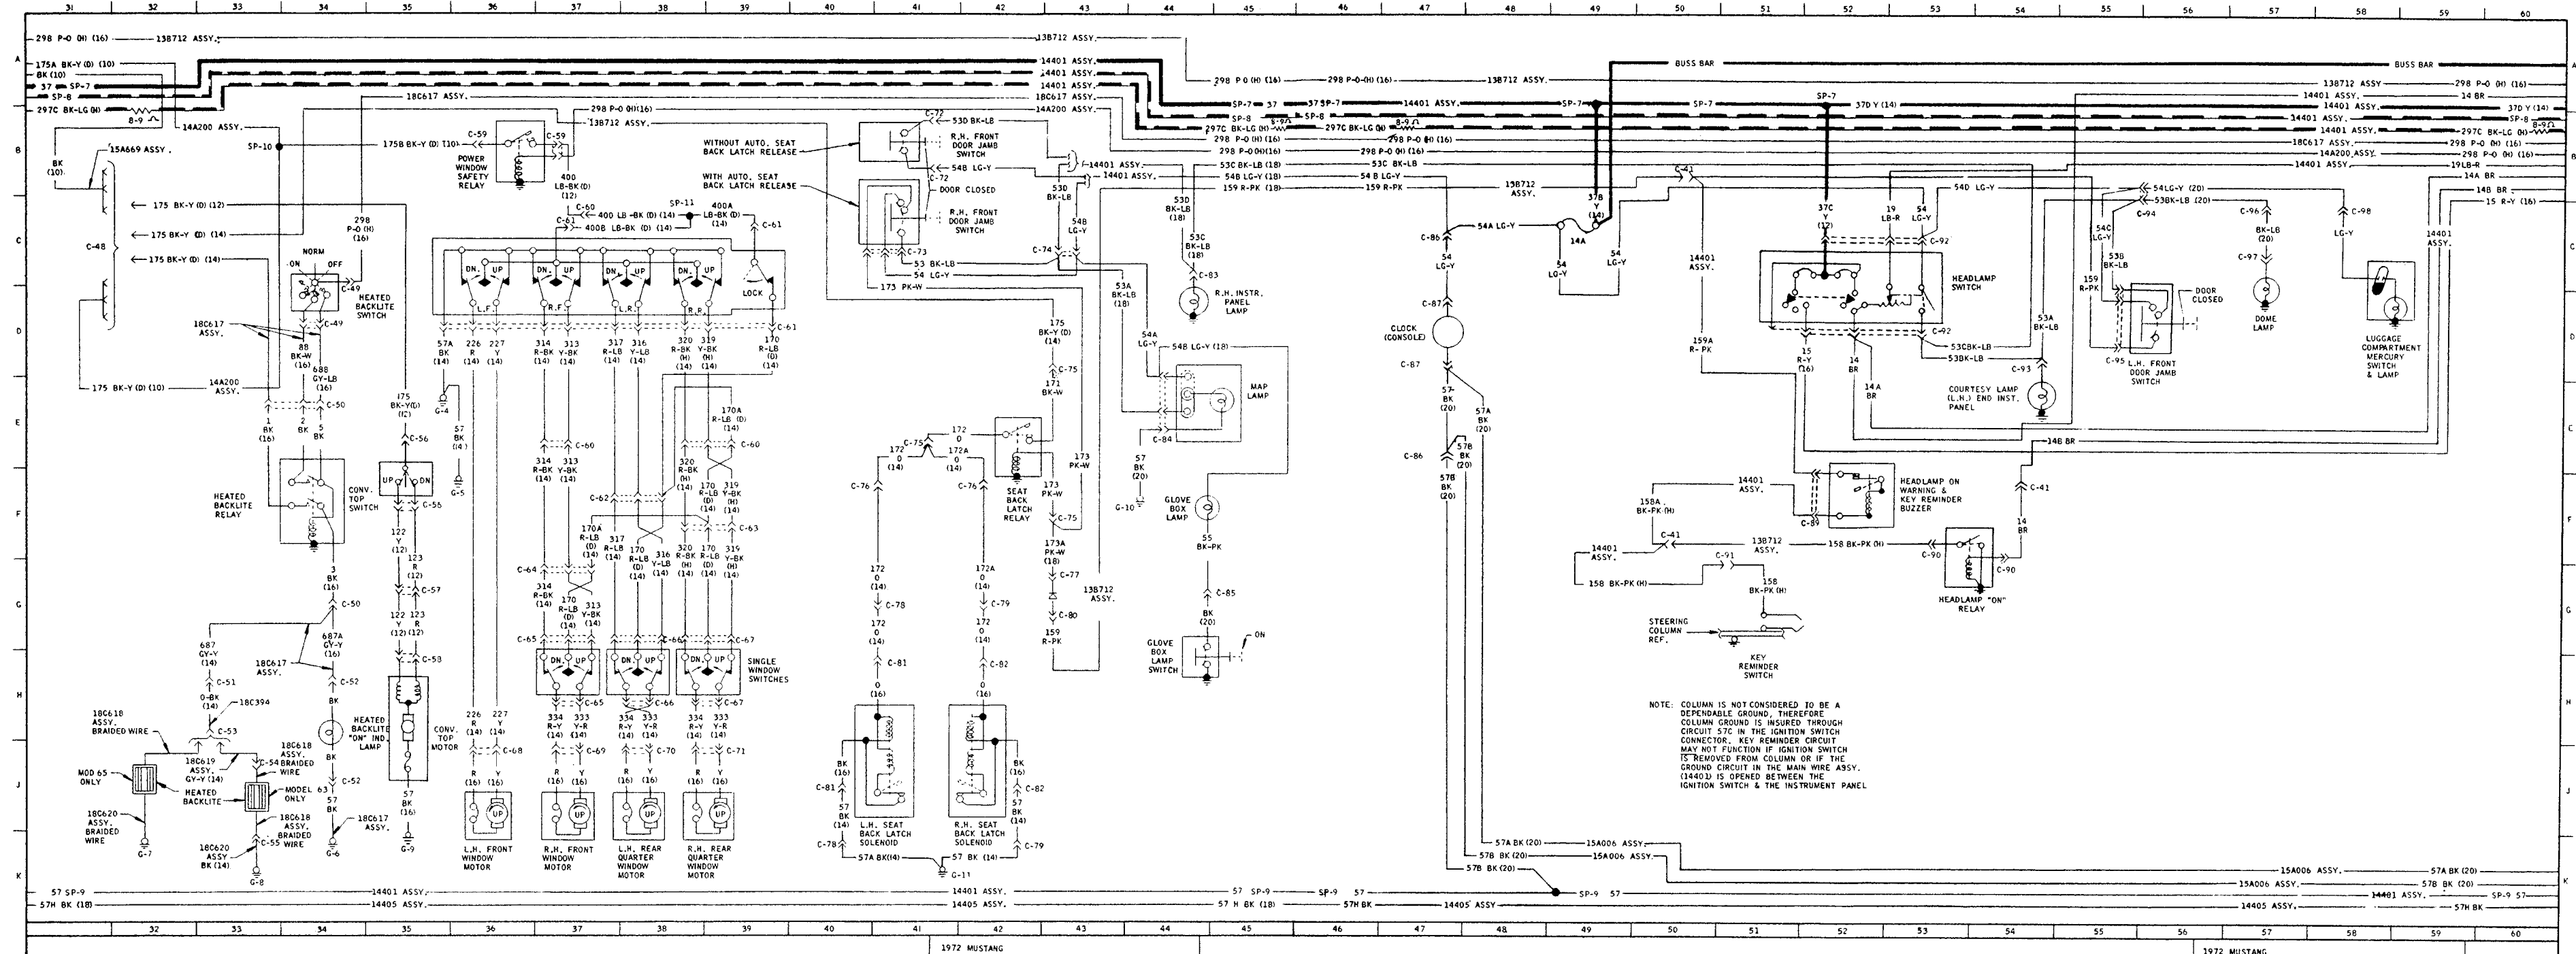

NOTE: COLUMN IS NOT CONSIDERED TO BE A DEPENDABLE GROUND, THEREFORE COLUMN GROUND IS INSURED THROUGH CIRCUIT 57C IN THE IGNITION SWITCH CONNECTOR. KEY REMINDER CIRCUIT MAY NOT FUNCTION IF IGNITION SWITCH IS REMOVED FROM COLUMN OR IF THE GROUND CIRCUIT IN THE MAIN WIRE ASSY. (14403) IS OPENED BETWEEN THE IGNITION SWITCH & THE INSTRUMENT PANEL.

WIRE CONNECTOR CODES

GROUND CODE


CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION																			
C-27	14290 ASSY.	14401 ASSY.	14290 ASSY.	C-102	14401 ASSY.	C-133	14290 ASSY.	C-138	14290 ASSY.	C-117 & C-118	12K454 ASSY.	C-121	14401 ASSY.	C-123	14290 ASSY.																			
<p>14290 ASSY. (Left side)                  14401 ASSY. (Right side)                  Wires: 297D BK-LG (H), 56B W-P, 140 BK-PK, 977A P-W, 3 LG-W, 15 R-Y, 7 W-LB, 32 R-LB, 31 W-R, 654 Y-LG, 12 LG-BK, 16 R-LG, 148 BR, 39 R-W, 56 DB-O, 655 R-O S, 162 LG-R (D), 58 W, 977 P-W, 941 BK-W, 63R, 28 BK-PK (D), 520 P-W (H), 469 LG, 28 BK-PK (D)                  NOT USED UNTIL DEC. 71                  R.H. SIDE OF STEERING COLUMN-UNDER FUSE PANEL UNDER INSTRUMENT PANEL</p>	<p>15525 ASSY.                  3A R-LB, 140 BK-PK, 296 W-P, 32 R-LB                  L.H. SIDE OF ENGINE-REAR-NEAR DASH PANEL                  *PARK-NEUTRAL START &amp; BACKUP LAMP SWITCH &amp; WIRE ASSY. (AUTOMATIC TRANS. ONLY)</p>	<p>190 LB-R, 296 A W-P, 296B W-P                  BEHIND INSTRUMENT PANEL-BEHIND RADIO                  * PART OF RADIO</p>	<p>14E BR                  IN ENGINE COMPARTMENT-L.H. SIDE-NEAR DASH PANEL-NEAR W/S WIPER MOTOR                  *PRNDL LAMP SOCKET &amp; W/A (15A80B ASSY.)</p>	<p>10C LG-BK, 13B R-BK, 57K BK                  REAR OF R.H. HEADLAMP R.H. HEADLAMP</p>	<p>269 LB-O (H), 260 R-O (H), 261 O-BK                  PART OF BLOWER MOTOR ASSY.                  BEHIND INSTRUMENT PANEL-LEFT AND ABOVE FLOOR REGISTER-ABOVE BLOWER MOTOR-ON BLOWER ASSY. (WITH A/C)                  * BLOWER MOTOR RESISTOR</p>	<p>297 B BK-LG (H), 297 C BK-LG (H), 941 BK-W, 296 W-P, 296A W-P, 63R, 56 DB-O, 28 BK-PK (D), 58 W                  NEAR DASH PANEL-L.H. SIDE OF ENGINE COMPARTMENT JUST BELOW W/S WIPER MOTOR                  * W/S WIPER MOTOR</p>	<p>63R, 56 DB-O, 28 BK-PK (D)                  NEAR DASH PANEL-L.H. SIDE OF ENGINE COMPARTMENT JUST BELOW W/S WIPER MOTOR                  * W/S WIPER MOTOR</p>	<p>941 BK-W, 57 BK                  IN ENGINE COMPARTMENT-L.H. FENDER APRON-FWD-ON W/S WASHER RESERVOIR                  * W/S WASHER PUMP MOTOR</p>	<p>57 BK, 57A BK                  BEHIND INSTRUMENT PANEL RIGHT OF STRG. COLUMN - JUST RIGHT OF W/S WIPER SWITCH (INTERMITTENT ONLY)                  * CIGAR LIGHTER</p>	<p>57A BK                  BEHIND INSTRUMENT PANEL - RIGHT OF STEERING COLUMN NEAR CIGAR LIGHTER</p>	<p>276C W-P, 44 LB                  ON RELAY PANEL-ABOVE GLOVE BOX                  *TURN SIGNAL FLASHER</p>	<p>10A LG-R (H), 385 W-R (H)                  BEHIND INSTRUMENT PANEL-RIGHT OF COLUMN-JUST LEFT OF FUSE PANEL                  *EMERGENCY WARNING FLASHER</p>	<p>10 LG-R (H), 376 Y                  ON RELAY PANEL-ABOVE GLOVE BOX                  *STOPLAMP CIRCUIT BREAKER</p>	<p>511 LG, 10A LG-R (H)                  ON BRAKE PEDAL SUPPORT-RIGHT &amp; ABOVE COLUMN                  *STOPLAMP SWITCH</p>	<p>53A BK-LB, 53B BK-LB, 54C LG-Y, 54C LG-Y, 9 LG-O                  L.H. FRONT COWL-LOW</p>	<p>13R-BK, 15 R-Y, 478 T-O, 12 LG-BK, 126 LG-BK                  TOEBOARD-EXTREME LEFT-UNDER CARPET                  *HEADLAMP DIMMER SW.</p>	<p>12A LG-BK, 13A R-BK, 57H BK                  REAR OF L.H. HEADLAMP *L.H. HEADLAMP</p>	<p>14B BR, 140 BR, 57A BK, 57C BK                  BEHIND FRONT BUMPER-L.H. SIDE-BELOW &amp; OUTBOARD OF L.H. HEADLAMP * L.H. PARKING LAMP</p>	<p>14 BR, 14A BR, 2 W-LB, 57E BK, 57J BK                  BEHIND FRONT BUMPER-R.H. SIDE-BELOW &amp; OUTBOARD OF R.H. HEADLAMP * R.H. PARKING LAMP</p>	<p>13 R-BK, 15 R-Y, 478 T-O, 12 LG-BK, 126 LG-BK                  TOEBOARD-EXTREME LEFT-UNDER CARPET                  *HEADLAMP DIMMER SW.</p>	<p>12A LG-BK, 13A R-BK, 57H BK                  REAR OF L.H. HEADLAMP *L.H. HEADLAMP</p>	<p>287 BK-W (H), 287A BK-W (H), 805 W-LG (H), 804 O-LG (H)                  ON TOP OF RADIO                  * AM-FM-MPX RADIO LEFT OF RADIO                  ** AM-TAPE STEREO RADIO</p>	<p>140A BK-PK, 140 BK-PK                  UNDER VEHICLE IN HURST SHIFTER BRACKET                  *BACKUP LAMP SWITCH</p>	<p>140 BR, 14E BR                  IN LUGGAGE COMPARTMENT-REAR-NEAR LATCH STRIKER                  *LICENSE LAMP</p>	<p>822 BK-LG (D), 287 BK-W (H)                  ON TOP OF RADIO (W/O A/C) ON AIR DUCT (WITH A/C)                  * SPEAKER ASSY.</p>	<p>140 BR, 14E BR                  IN LUGGAGE COMPARTMENT-REAR-NEAR LATCH STRIKER                  *LICENSE LAMP</p>	<p>287 BK-W (H), 287A BK-W (H), 805 W-LG (H), 804 O-LG (H)                  ON TOP OF RADIO                  * AM-FM-MPX RADIO LEFT OF RADIO                  ** AM-TAPE STEREO RADIO</p>	<p>347 BK-Y (H)                  L.H. SIDE OF ENGINE-REAR-NEAR DASH PANEL</p>	<p>90B57 ASSY. (6 CYL.)                  L.H. SIDE OF ENGINE-REAR-NEAR DASH PANEL</p>	<p>BK-Y (H), 90B57 ASSY. (6 CYL. ENGINE), 347 BK-Y (H)                  OF ENGINE - TOP - FORWARD                  * A/C COMPRESSOR CLUTCH</p>	<p>822 BK-LG (D), 287 BK-W (H)                  ON TOP OF RADIO (W/O A/C) ON AIR DUCT (WITH A/C)                  * SPEAKER ASSY.</p>	<p>287 BK-W (H), 287A BK-W (H), 805 W-LG (H), 804 O-LG (H)                  ON TOP OF RADIO                  * AM-FM-MPX RADIO LEFT OF RADIO                  ** AM-TAPE STEREO RADIO</p>	<p>17C476 ASSY. (W/S WIPER GOVERNOR)                  INSTRUMENT PANEL - JUST RIGHT OF STEERING COLUMN - LEFT OF CIGAR LIGHTER                  * WINDSHIELD WIPER SWITCH (2 SPEED)                  BEHIND INSTRUMENT PANEL - JUST RIGHT OF STEERING COLUMN - ABOVE CIGAR LIGHTER                  ** WINDSHIELD WIPER GOVERNOR (INTERMITTENT)</p>	<p>297 BK-LG (H), 941 BK-W, 296 W-P, 63R, 57 BK, 28 BK-PK (D)                  BEHIND INSTRUMENT PANEL - JUST RIGHT OF COLUMN                  * WINDSHIELD WIPER SWITCH (INTERMITTENT)</p>


G-13 EYELET GROUND WIRE HTR. MOTOR R.H. INSIDE DASH PANEL  
 G-14 GROUND STRAP ON WIPER MOTOR L.H. DASH PANEL OUTSIDE

SPLICE CODE

SP-7 IN 14401 NR. FUSE PANEL DISCONNECT  
 SP-8 IN 14401 NR. FUSE PANEL DISCONNECT  
 SP-9 IN 14401 NR. CIGAR LITER TAKEOUT  
 SP-12 IN 14401 NR. WINDSHIELD WIPER SW.

 
WIRE CODE



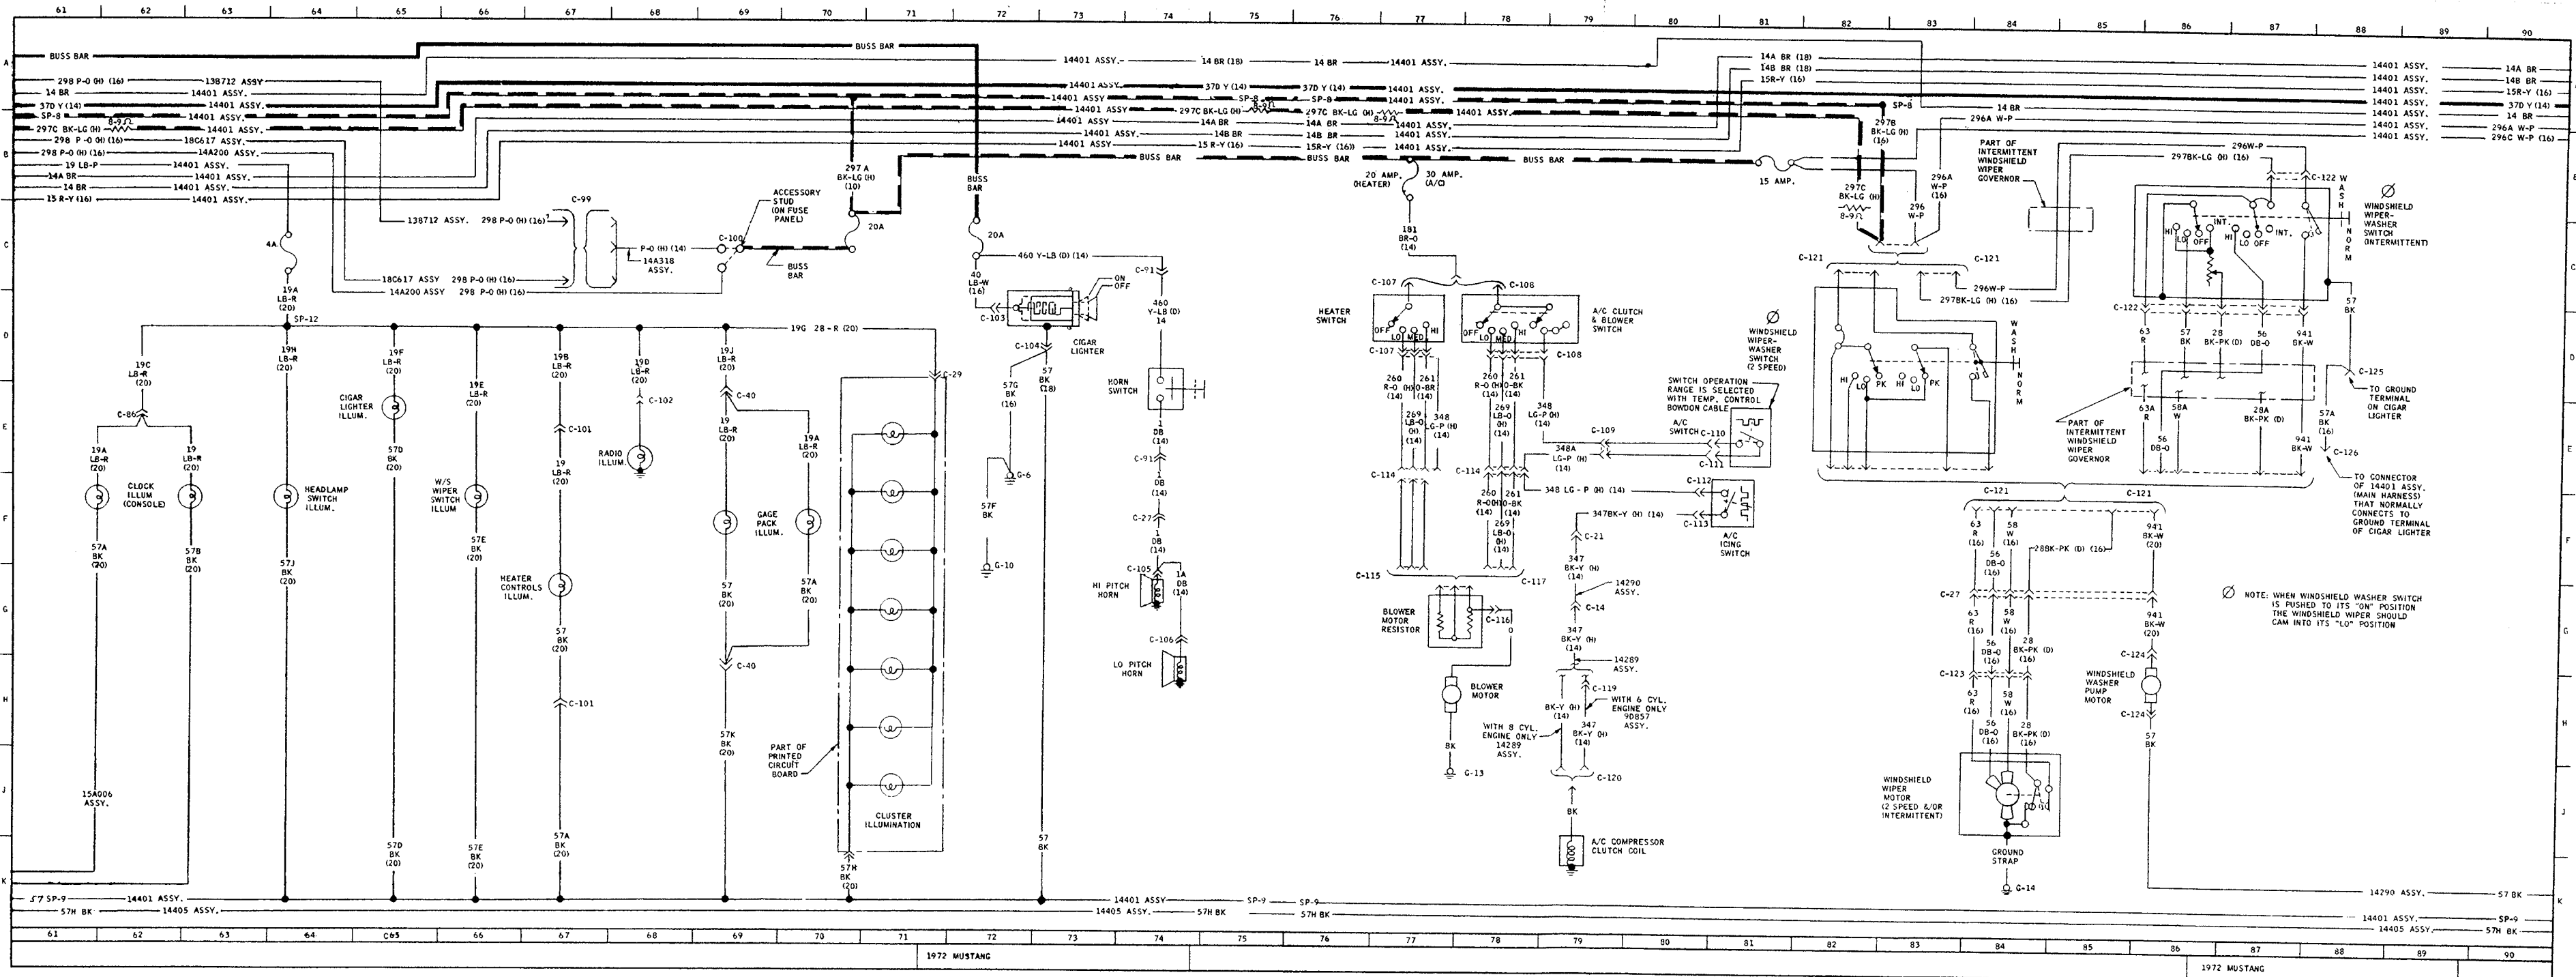



WIRE CONNECTOR CODES

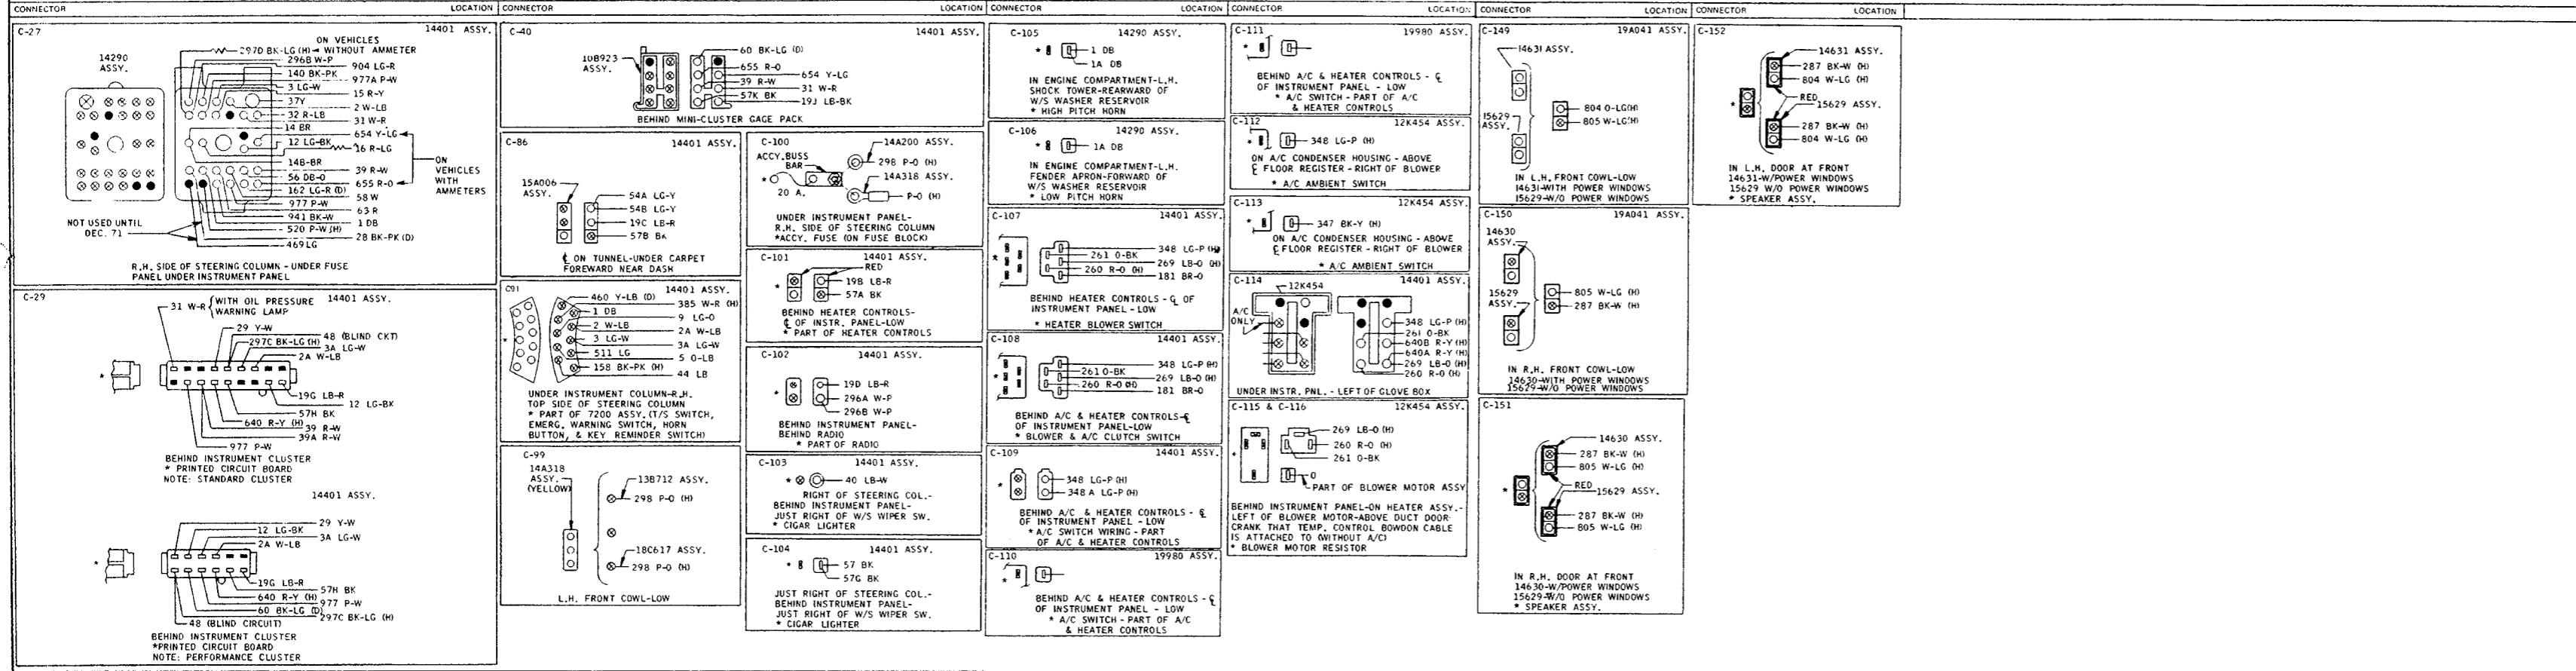


GROUND CODE

- G-15 EYELET 14290 TO FRONT L.H. SIDE RADIATOR SUPPORT
- G-16 EYELET 14290 TO FRONT R.H. SIDE RADIATOR SUPPORT
- G-17 EYELET 14405 TO TRUNK LOCK SUPPORT L.H. SIDE


SPLICE CODE


- SP-7 IN 14401 NR. FUSE PANEL DISCONNECT
- SP-9 IN 14401 NR. CIGAR LITER TAKEOUT
- SP-14 IN 14405 NR. L.H. SIDE MARKER LP. TAKEOUT
- SP-15 IN 14405 NR. L.H. BACKUP LP. TAKEOUT
- SP-16 IN 14405 NR. L.H. BACKUP LP. TAKEOUT
- SP-17 IN 14405 NR. L.H. BACKUP LP. TAKEOUT
- SP-18 IN 14405 NR. R.H. BACKUP LP. TAKEOUT
- SP-19 IN 14405 NR. R.H. BACKUP LP. TAKEOUT
- SP-20 IN 14290 NR. L.O. PITCH HORN TAKEOUT
- SP-21 IN 14290 NR. L.H. GRILLE LP. TAKEOUT (MACH. 1 ONLY)
- SP-22 IN 14290 NR. WINDSHIELD WASHER HOSE TAKEOUT
- SP-23 IN 14290 NR. WINDSHIELD WASHER PUMP TAKEOUT
- SP-24 IN 14290 NR. L.H. PARKING LAMP TAKEOUT
- SP-25 IN 14290 NR. R.H. PARKING LAMP TAKEOUT

 WIRE CODE



1972 MUSTANG  
PAGE 5 OF 5  
LOCATION NUMBERS 91 THROUGH 120

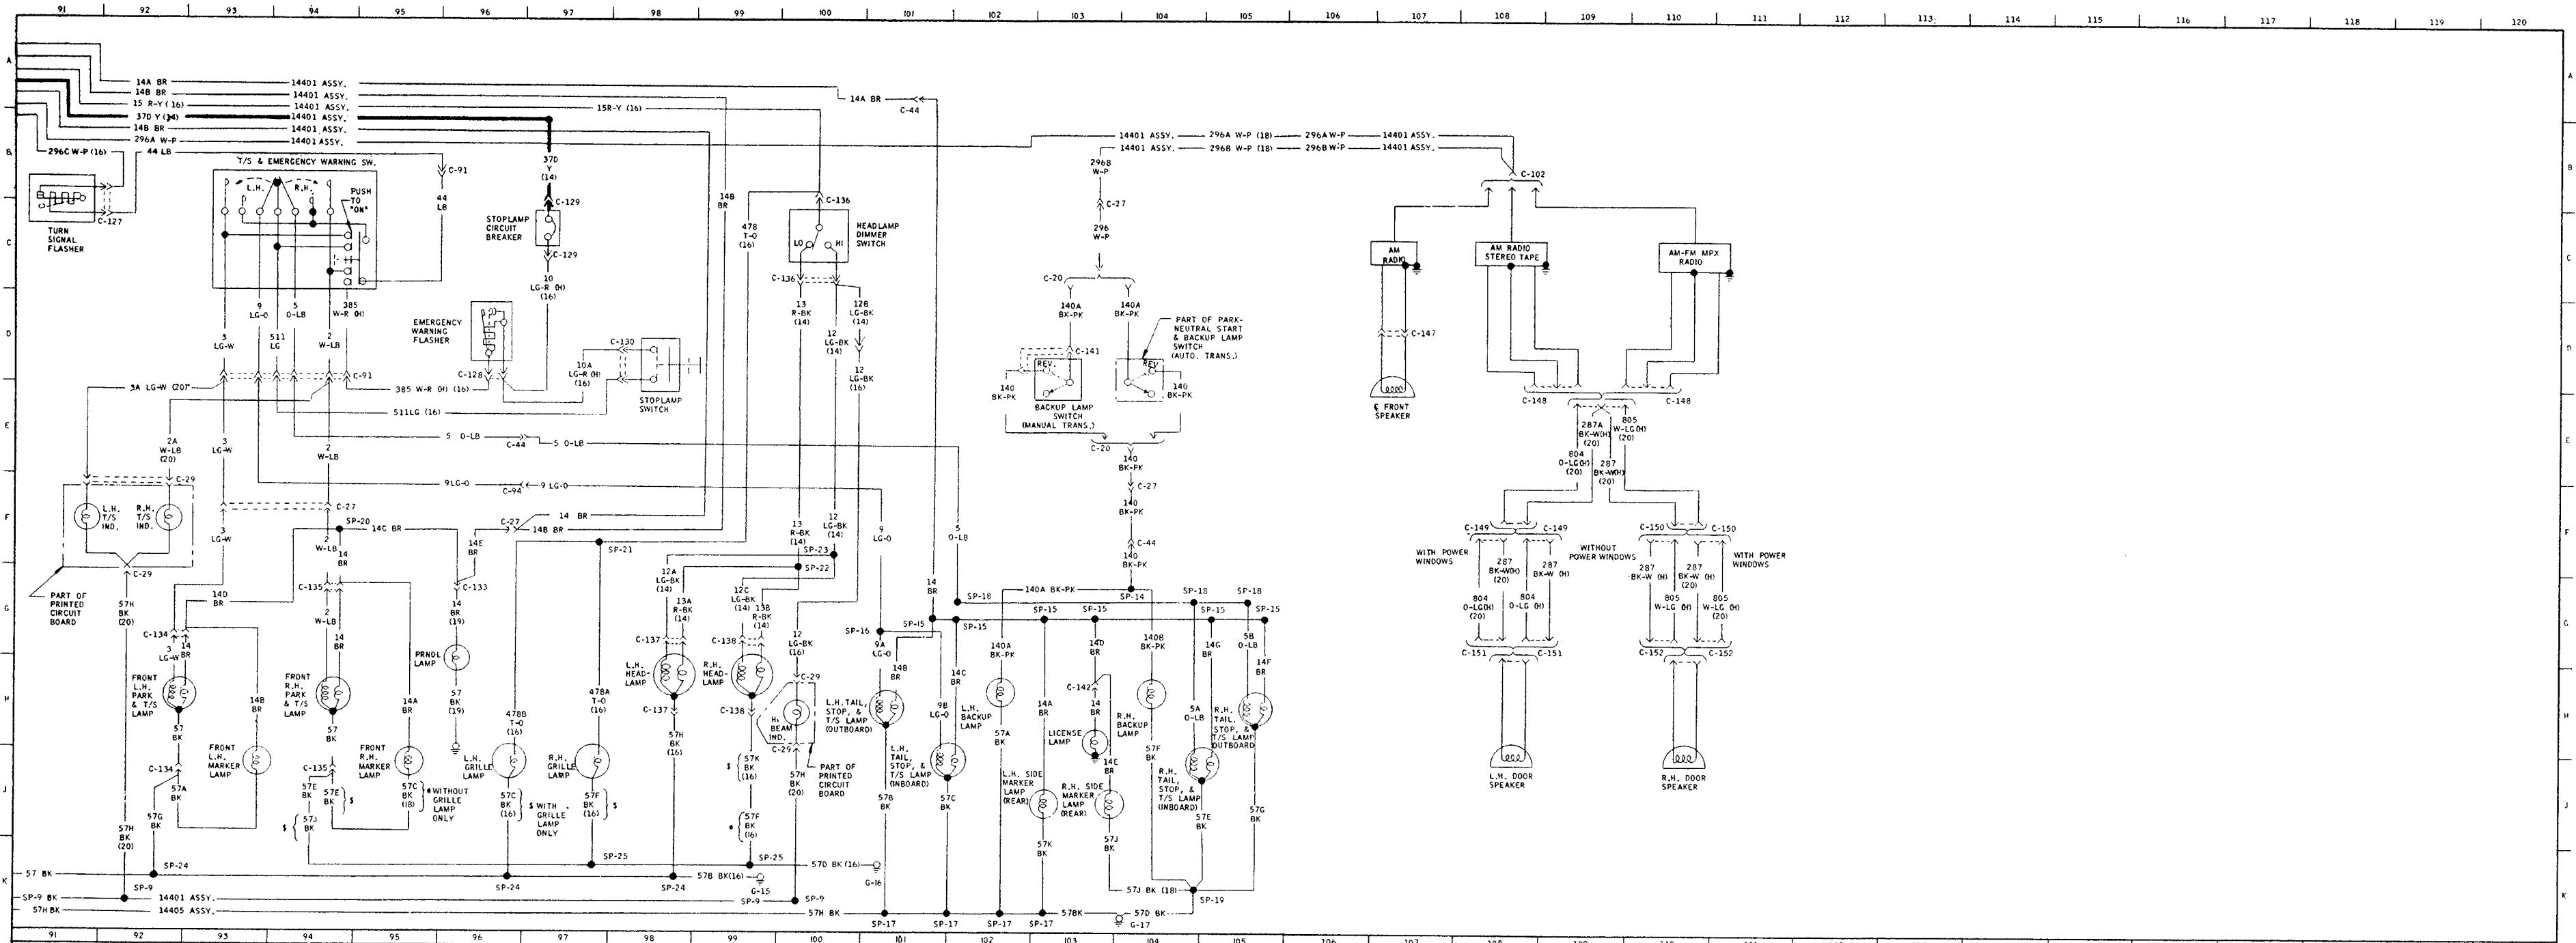

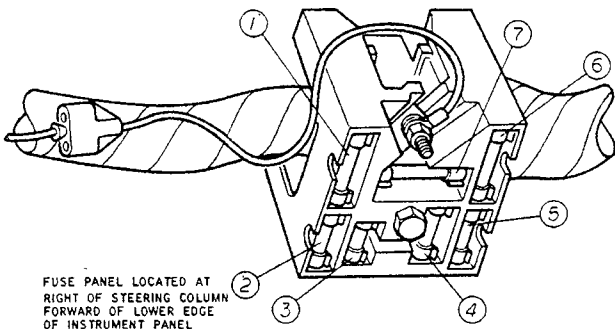

FUSE PANEL LOCATED AT RIGHT OF STEERING COLUMN FORWARD OF LOWER EDGE OF INSTRUMENT PANEL

### FUSE LOCATIONS

- F1 (20 AMP. FUSE) CIGAR LIGHTER, HORNS
- F2 (14 AMP. FUSE) COURTESY, DOME, MAP, LUGGAGE AND GLOVE COMPARTMENT LAMPS CONSOLE LAMP, AUTOMATIC SEAT BACK LATCH RELEASE (OPT.), IGNITION KEY WARNING & HEADLAMPS ON BUZZER & CLOCK
- F3 (4 AMP. FUSE) INSTRUMENT AND CLUSTER LAMPS, PRND21 ILLUM. (STD. & CONSOLE), RADIO ILLUM., CIGAR LIGHTER ILLUM., HEATER AND AIR CONDITIONER ILLUM., CLOCK ILLUM., & W/S WIPER-WASHER CONTROL ILLUM.
- F4 (14 AMP. FUSE) WARNING LAMPS, SEAT BELT REMINDER, OIL, ENGINE, DOOR AJAR WARNING, DUAL BRAKE WARNING, THROTTLE SOLENOID OR EMISSION CONTROL.
- F5 (14 AMP. FUSE) HEATER AND DEFROSTER.  
(30 AMP. FUSE) AIR CONDITIONER.
- F6 (15 AMP. FUSE) BACK-UP LAMPS, RADIO FEED, WINDSHIELD WIPER WASHER, TURN SIGNALS, LO FUEL WARNING.
- F7 (20 AMP. FUSE) (ACCESSORY FEED) CONVENIENCE CHECK (OPT.) POWER WINDOW AND BACK-LITE SAFETY RELAY COIL FEED (OPT.)

### BULB CHART

WIRING COLOR CODE PRIMARY COLOR	LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
	BACK-UP	32	1076
	REAR MARKER	2	194
	FRONT PARK/TURN SIGNAL & SIDE MARKER	32-3	1157
	HEADLAMPS HI BEAM	37.5	4001
	HI & LO BEAM	37.5-50	4002
	LICENSE PLATE	6	631
	TAIL, STOP & TURN	3-32	1157
	CLUSTER ILLUM.	2C.P.	1895
	CONTROL ILLUM.	2C.P.	1895
	HI-BEAM INDICATOR	2C.P.	194
	TURN INDICATOR	2C.P.	194
	HEATER & A/C CONTROLS	2C.P.	1895
	RADIO PILOT LIGHT	1.9C.P.	1893
	AUTO, TRANS, QUADRANT	.7C.P.	1445
	ASH TRAY ILLUM. (CONSOLE)	.75	1892
	DUAL BRAKE WARNING	2C.P.	1895
	ENGINE COMPARTMENT LIGHT	6C.P.	631
	LUGGAGE COMPARTMENT LIGHT	6C.P.	631
	MAP LAMP	6C.P.	212
	COURTESY LAMPS (INST. PANEL)	6C.P.	631
	SEAT BELT WARNING	7 C.P.	1445
	HEATED BACK LITE WARNING	2 C.P.	1893
	CLOCK ILLUMINATION	2 C.P.	194
	DOME LAMP (BASE MODELS)	12 C.P.	561
	"C" PILLAR COURTESY LAMPS (XR7)	12 C.P.	105

### INDEX

COMPONENT	LOCATION
AIR CONDITIONER CLUTCH	J-34
ALTERNATOR	J-1
CIGAR LIGHTER	D-43
DISTRIBUTOR	K-16
FLASHERS	
EMERGENCY WARNING	C-77
TURN SIGNAL	B-22
GAUGES	
FUEL	E-25
INSTRUMENT VOLTAGE REGULATOR	F-25
OIL PRESSURE	F-25
TACHOMETER	D-20
TEMPERATURE	F-24
HEATED BACK-LITE	J-35
HEATER, A/C BLOWER RESISTOR	G-31
HORNS	H-43
IGNITION COIL	H-16
KEY WARNING BUZZER	F-47
ILLUMINATORS	
CIGAR LIGHTER	E-67
GAGE CLUSTER	E-68
MAIN CLUSTER	E-62
HEATER	E-61
RADIO	E-66
INDICATORS	
AMMETER	G-1
DUAL BRAKE WARNING	F-18
HEATED BACK-LITE	H-35
HIGH BEAM	D-71
LEFT TURN	D-72
LO OIL PRESSURE	F-20
RIGHT TURN	D-70
SEAT BELT	E-23
LIGHTS	
BACK-UP LIGHT L.H. & R.H.	H-41
COURTESY LIGHT - FRONT R.H. & L.H.	F-49
PARKING BRAKE LIGHT	F-20
GLOVE BOX	G-54
DOME	G-50
HEADLIGHTS	H 73
PRND21 LIGHT	E-70
LICENSE PLATE LIGHT	G-79
LUGGAGE COMPARTMENT LIGHT	G-46
MAP LIGHT	F-53
PARKING LIGHT	G-72
REAR LIGHTS	G-81
SIDE MARKER LIGHTS - REAR	D-81
"C" PILLAR COURTESY	G-48
MOTORS	
HEATER BLOWER	J-31
AIR CONDITIONER BLOWER	H-23
CONVERTIBLE TOP	H-12
POWER WINDOWS	
L.H. FRONT DOOR	J-8
R.H. FRONT DOOR	J-9
R.H. REAR QUARTER	J-11
L.H. REAR QUARTER	J-10
STARTING	G-5
WINDSHIELD WASHER	H-29
WINDSHIELD WIPER	H-27
RADIOS	
AM	D-38
AM & STEREO TAPE UNIT OR	
AM-FM MULTIPLEX	E-38
SENDERS	
FUEL GAGE	J-25
OIL PRESSURE GAGE	J-22
WATER TEMPERATURE GAGE	J-24
SEAT BACK LATCH SOLENOIDS	F-55
RELAYS	
STARTING MOTOR	E-4
POWER WINDOW SAFETY	E-7
HEATED BACKLITE	F-36
SEAT BACK LATCH	D-57
HEADLAMP ON	G-58
REAR TN. SIG. SEQUENCER	C-87
REAR TN. SIG. RELAYS	D-86
TRAILER TOWING RELAYS	F-94
LOW FUEL LEVEL (XR7)	C-22
SWITCHES	
AIR CONDITIONER CONTROL	D-34
AIR CONDITIONER ICING	F-34
AIR CONDITIONER BLOWER & CLUTCH	D-34
BACK-UP LIGHT	D-41
DUAL BRAKE WARNING	J-18
EMERGENCY WARNING	E-77
GLOVE BOX LAMP	E-54
HEADLIGHT DIMMER	E-72
HEATED BACK-LITE	C-36
HEATER	D-31
IGNITION	D-18
LIGHT (HEADLAMP)	E-59
LOW OIL PRESSURE	J-21
PARKING BRAKE	J-20
POWER WINDOW MASTER & L.H. FRONT DOOR	B-8
R.H. FRONT DOOR	F-9
L.H. REAR QUARTER	F-10
R.H. REAR QUARTER	F-11
STOP LIGHT	C-78
TURN SIGNAL	F-77
KEY REMINDER	H-47
WINDSHIELD WIPER 2-SPEED & WASHER	D-26
WINDSHIELD WIPER INTERMITTENT & WASHER	C-29
CONVERTIBLE TOP	E-12
POWER SEAT	E-14


1972 COUGAR

PAGE 1 OF 4  
INDEX


Form 7795P-72G


7-1-71



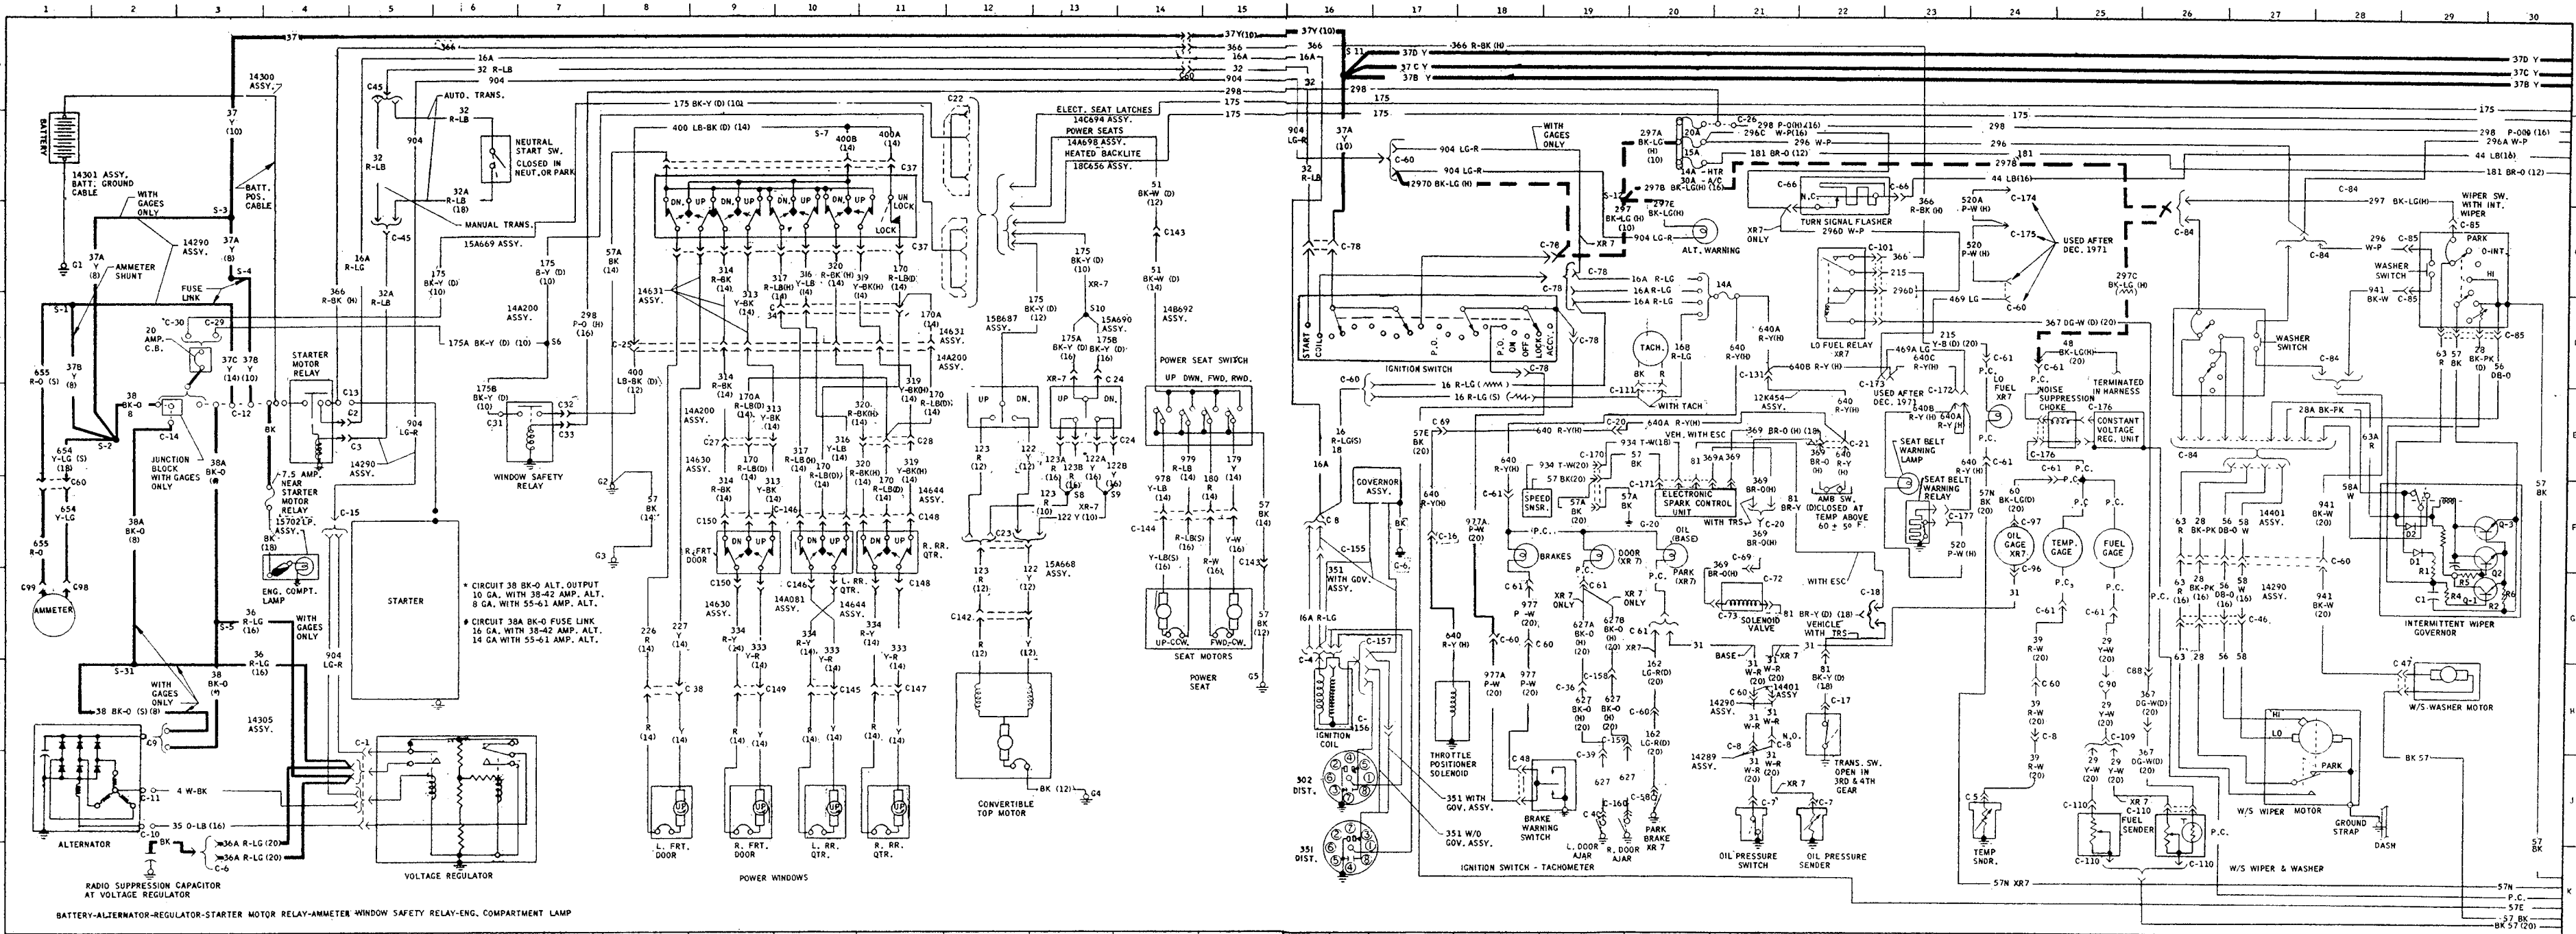




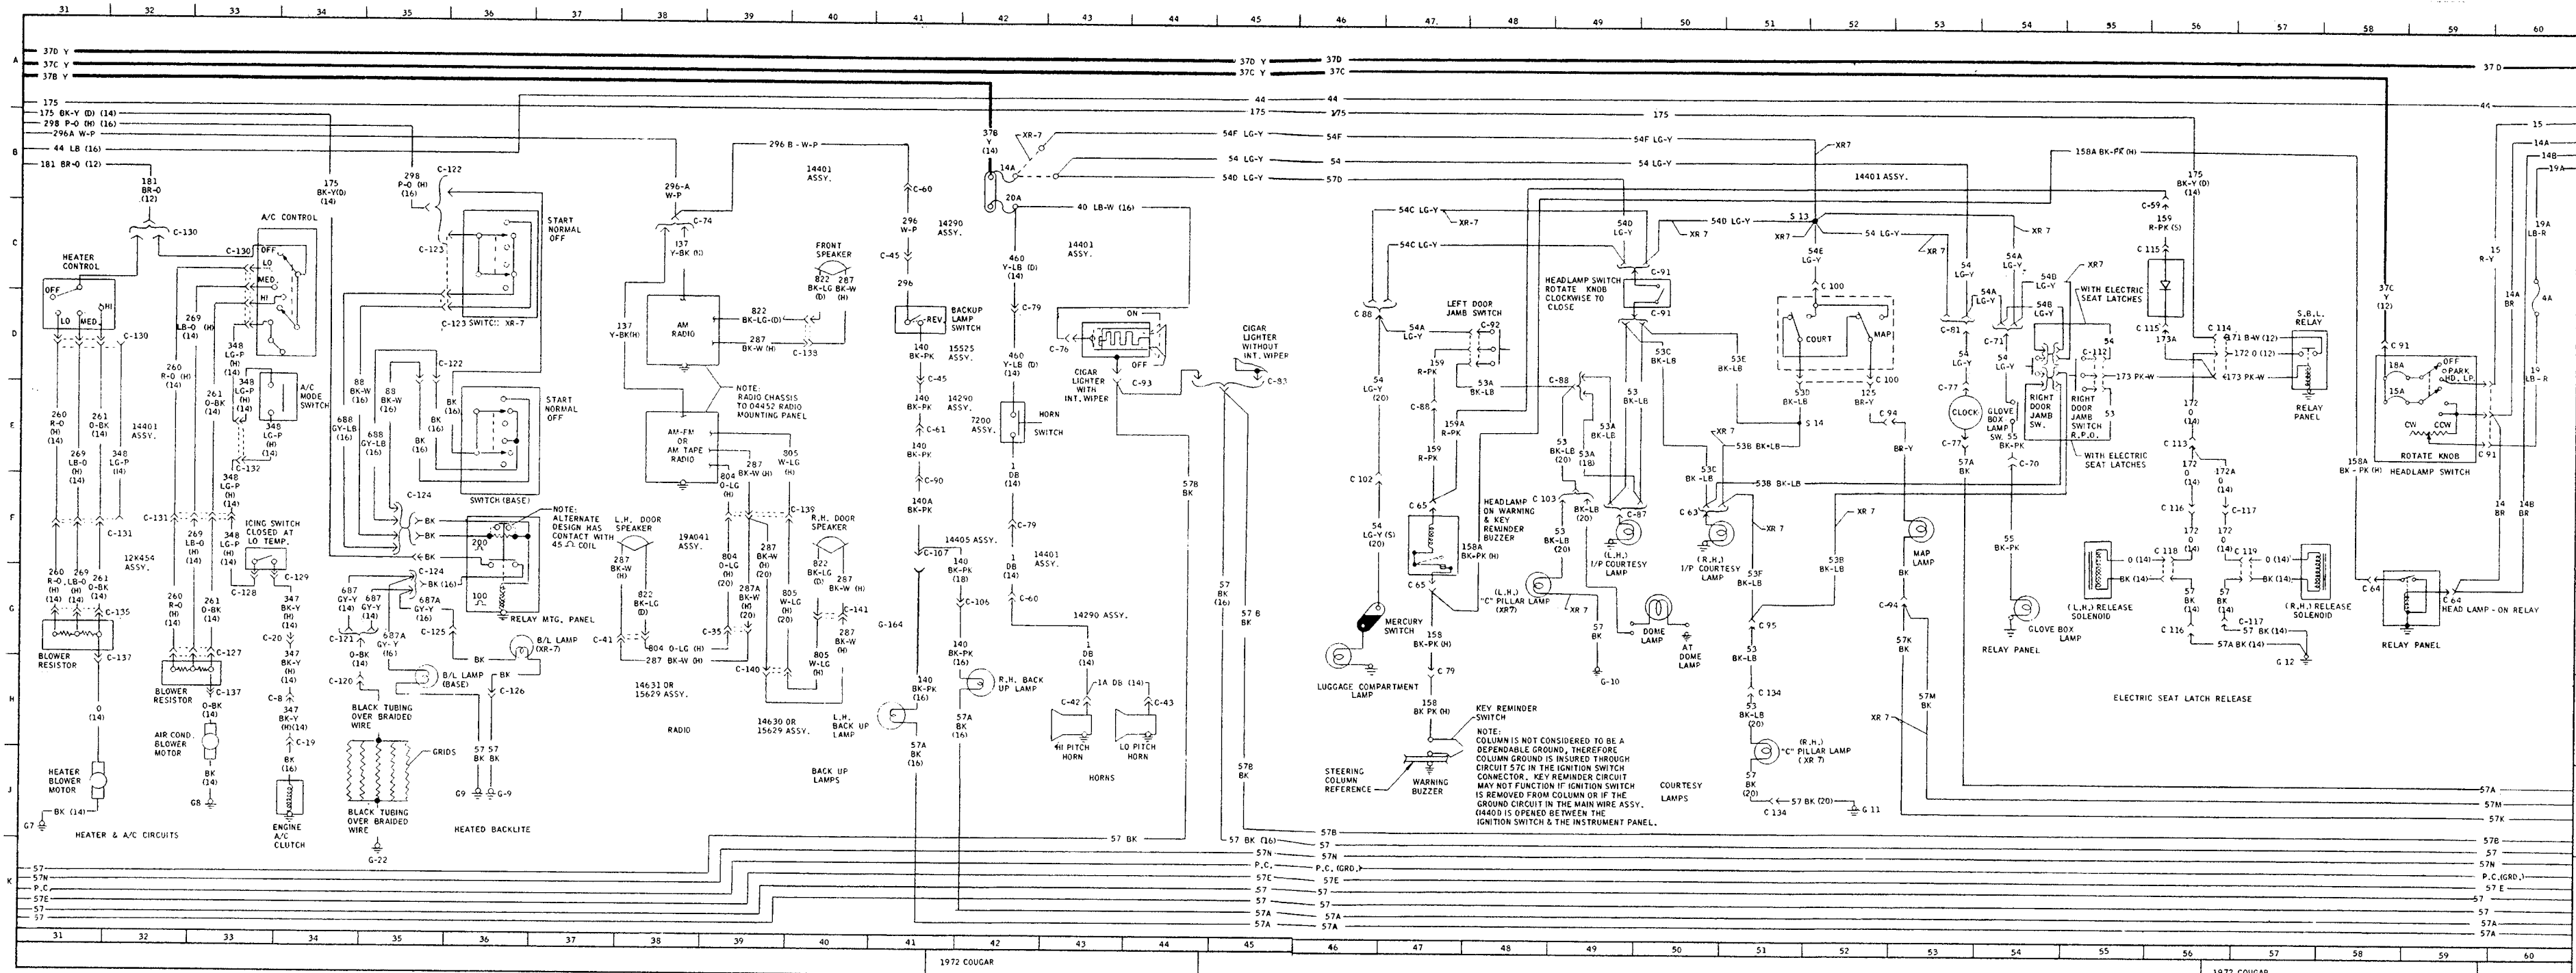

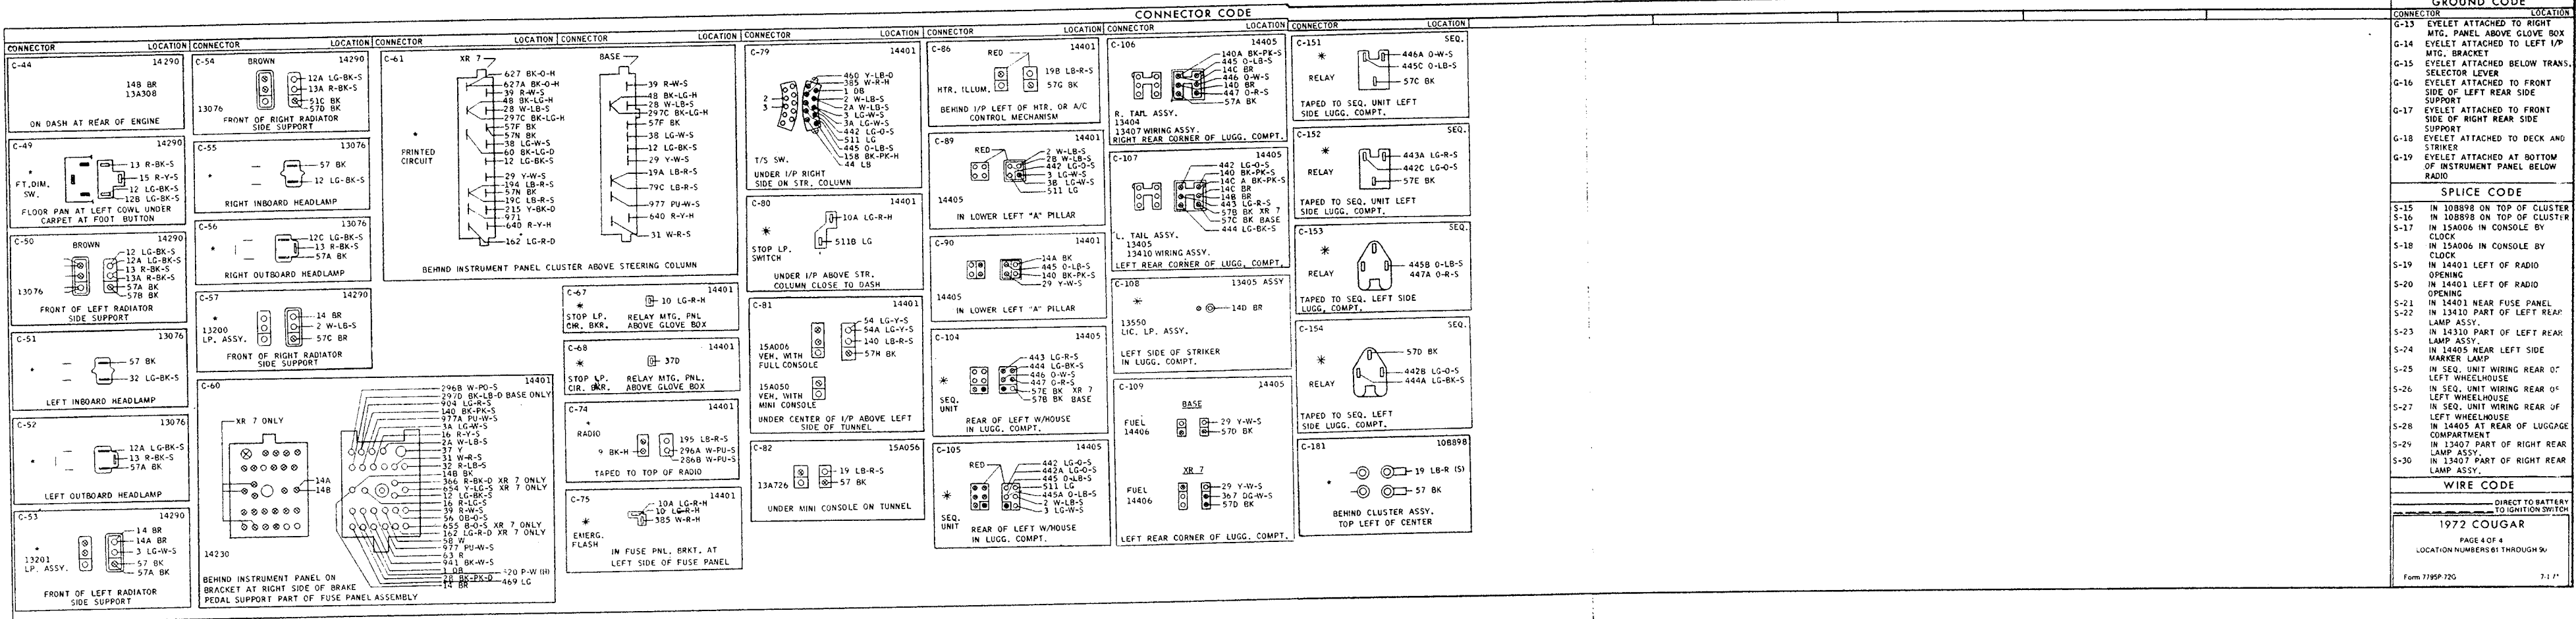


GROUND CODE	
CONNECTOR	LOCATION
G-13	EYELET ATTACHED TO RIGHT MTG. PANEL ABOVE GLOVE BOX
G-14	EYELET ATTACHED TO LEFT I/P MTG. BRACKET
G-15	EYELET ATTACHED BELOW TRANS. SELECTOR LEVER
G-16	EYELET ATTACHED TO FRONT SIDE OF LEFT REAR SIDE SUPPORT
G-17	EYELET ATTACHED TO FRONT SIDE OF RIGHT REAR SIDE SUPPORT
G-18	EYELET ATTACHED TO DECK AND STRIKER
G-19	EYELET ATTACHED AT BOTTOM OF INSTRUMENT PANEL BELOW RADIO
SPLICE CODE	
S-15	IN 108898 ON TOP OF CLUSTER
S-16	IN 108898 ON TOP OF CLUSTER
S-17	IN 15A006 IN CONSOLE BY CLOCK
S-18	IN 15A006 IN CONSOLE BY CLOCK
S-19	IN 14401 LEFT OF RADIO OPENING
S-20	IN 14401 LEFT OF RADIO OPENING
S-21	IN 14401 NEAR FUSE PANEL
S-22	IN 13410 PART OF LEFT REAR LAMP ASSY.
S-23	IN 14310 PART OF LEFT REAR LAMP ASSY.
S-24	IN 14405 NEAR LEFT SIDE MARKER LAMP
S-25	IN SEQ. UNIT WIRING REAR OF LEFT WHEELHOUSE
S-26	IN SEQ. UNIT WIRING REAR OF LEFT WHEELHOUSE
S-27	IN SEQ. UNIT WIRING REAR OF LEFT WHEELHOUSE
S-28	IN 14405 AT REAR OF LUGGAGE COMPARTMENT
S-29	IN 13407 PART OF RIGHT REAR LAMP ASSY.
S-30	IN 13407 PART OF RIGHT REAR LAMP ASSY.
WIRE CODE	
DIRECT TO BATTERY TO IGNITION SWITCH	
1972 COUGAR	
PAGE 4 OF 4	
LOCATION NUMBERS 61 THROUGH 90	
Form 7795P-72G	7-11



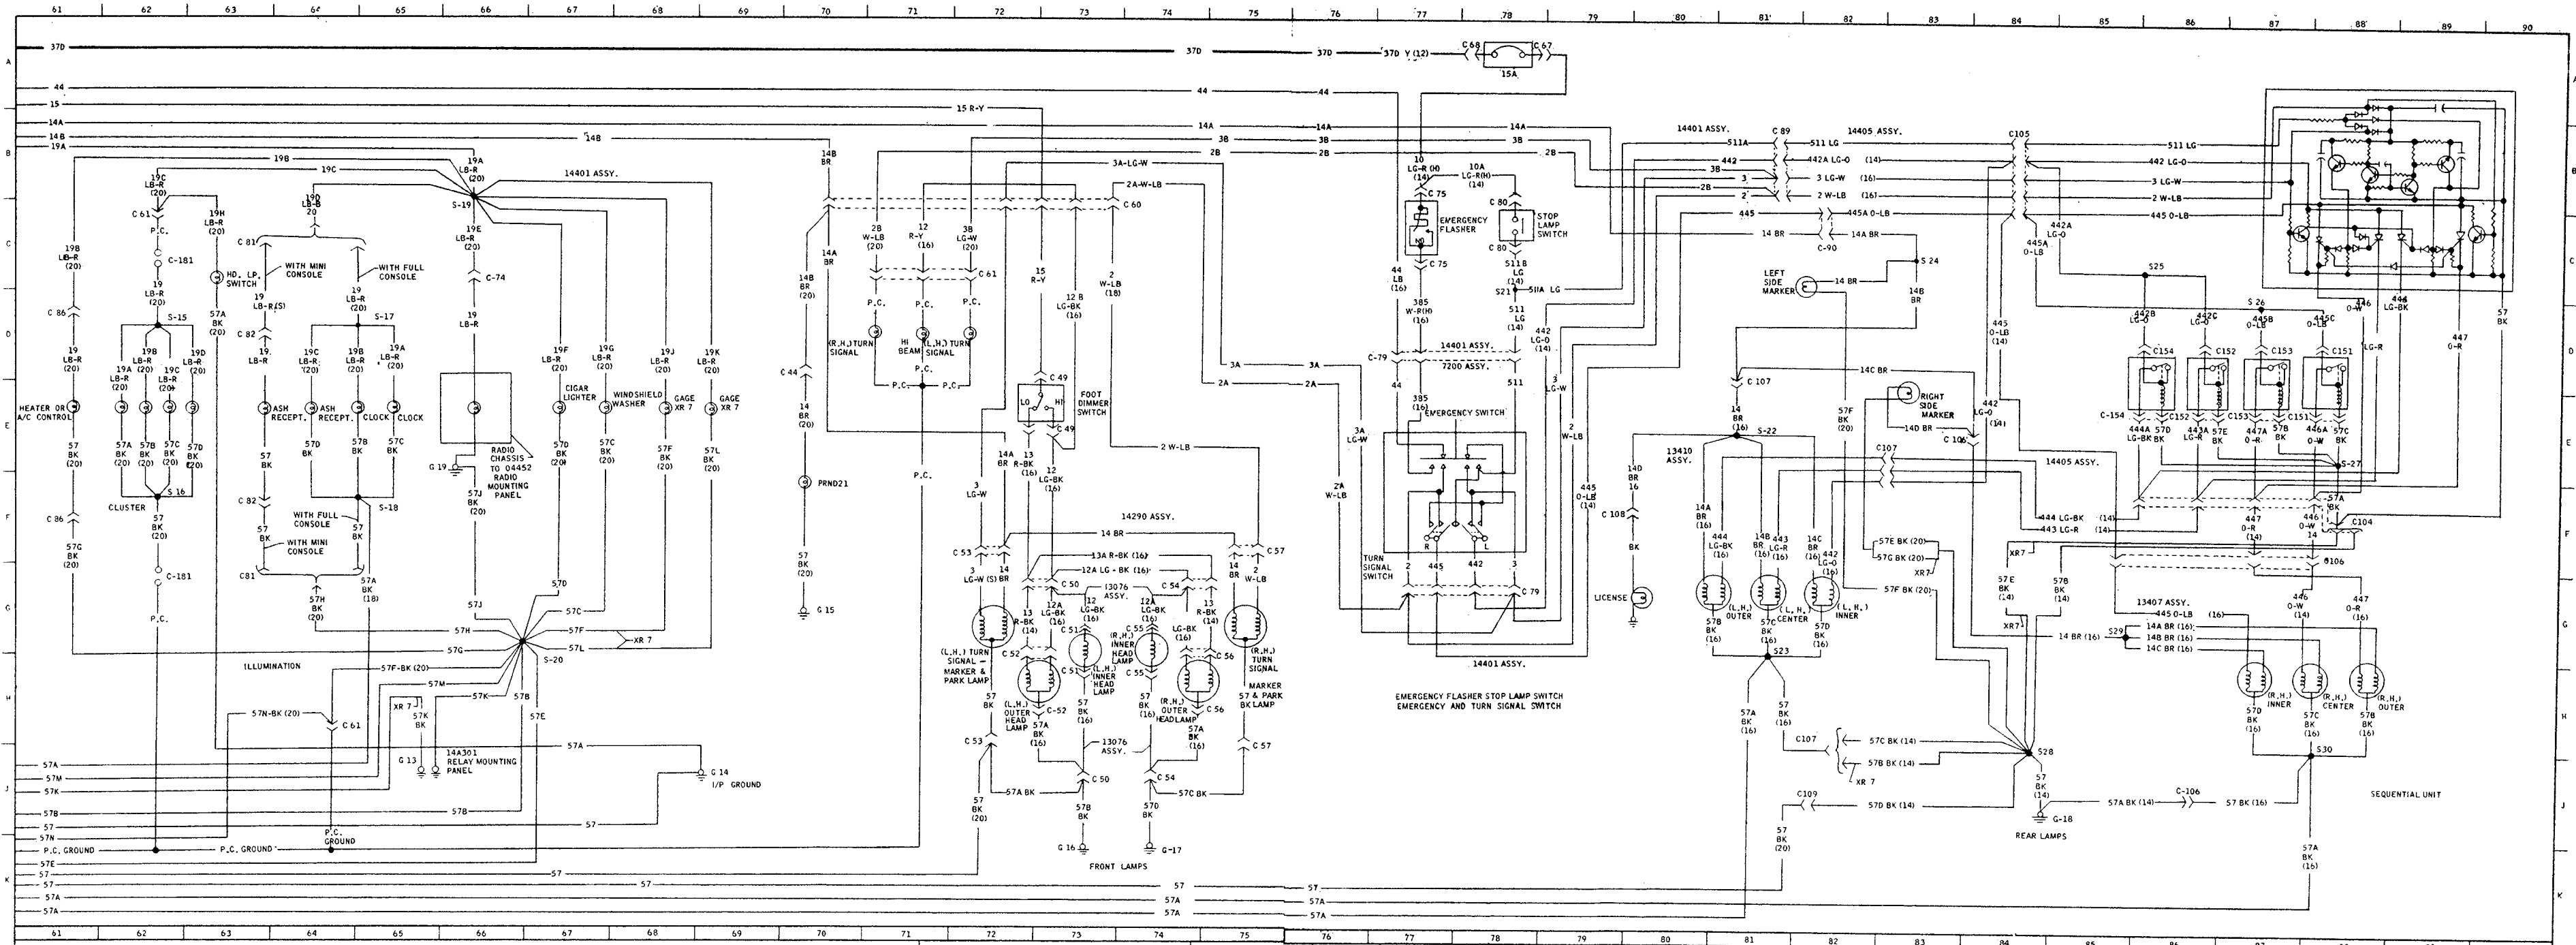

FUSE LOCATIONS

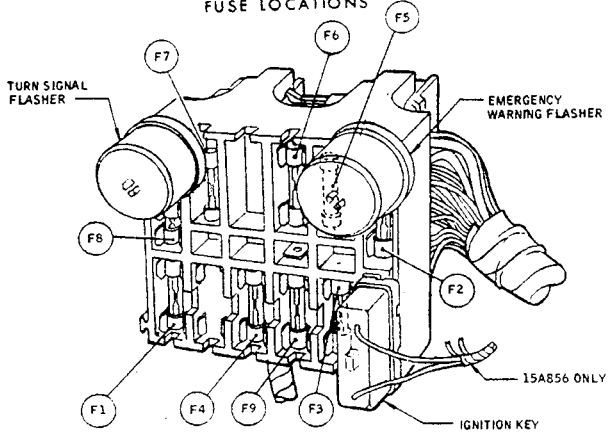

FUSE PANEL LOCATED AT LEFT OF STEERING COLUMN ON DASH PANEL

- F1 25 AMP. HEATER
- F1 30 AMP. AIR CONDITIONER
- F2 4 AMP. WARNING LAMPS - EMISSION SYST. - SEAT BELT WARNING BUZZER & LAMP
- F3 15 AMP. RADIO
- F4 15 AMP. BACKUP LAMPS
- F5 2.5 AMP. EMERGENCY FLASHER & STOP LAMPS
- F6 15 AMP. CIGAR LIGHTER
- F7 7.5 AMP. COURTESY LAMPS
- F8 4 AMP. INSTRUMENT LAMPS
- F9 7.5 AMP. WINDSHIELD WIPER & WASHER POWER WINDOWS

LIGHTING CHART

LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
BACK-UP (SEDAN)	32 C.P.	1076
BACK-UP (STATION WAGON & RANCHERO)	32 C.P.	1156
FRONT & REAR MARKER	2 C.P.	194
FRONT PARK/TURN SIGNAL	3-32 C.P.	1157
HEADLAMPS HI & LOW	50 & 37.5 WATTS	4002
HEADLAMPS HI BEAM	37.5 WATTS	4001
LICENSE PLATE	6 C.P.	631
TAIL, STOP & TURN	3-32 C.P.	1157
DUAL BRAKE WARNING	2 C.P.	1895
CONTROL ILLUMINATION	1.5 C.P.	1815
HIGH BEAM INDICATOR	2 C.P.	194
DOME LAMP	12 C.P.	561
TURN INDICATOR	2 C.P.	194
COURTESY LAMP (INSTR. PANEL)	6 C.P.	631
AUTOMATIC TRANSMISSION QUADRANT (PRNDL)	7 C.P.	1445
GLOVE BOX	3 C.P.	1816
COURTESY LAMP (INSTR PANEL) RANCHERO	6	562
CONSOLE LAMP	3 C.P.	1816
LUGGAGE COMPARTMENT	6 C.P.	631
ENGINE COMPARTMENT	6 C.P.	631
CARGO LAMP (STATION WAGON)	12 C.P.	105
ASH TRAY	1 C.P.	161
CLOCK	2 C.P.	194
MAP	12 C.P.	105
PARKING BRAKE	2 C.P.	194
SEAT BELT	2 C.P.	194
AIR COND. CONTROL ILLUMINATION	1.5 C.P.	1815


NOTE:

EMERGENCY FLASHERS INCLUDED IN FRONT & REAR TURN SIGNALS

INDEX

COMPONENT	LOCATION
AIR CONDITIONER CLUTCH	J-215
ALTERNATOR	G-2
ALTERNATOR REGULATOR	J-3
BUZZERS	
HEADLAMP ON	J-112
KEY WARNING	J-112
CIGAR LIGHTER	D-256
CLOCK	J-108
CIRCUIT BREAKER ON STARTING MOTOR RELAY	B-6
DISTRIBUTOR	K-6
ELECTRIC BRAKE CONTROLLER	G-75
ELECTRONIC SPARK CONTROL	H-202
ENGINE GOVERNOR	E-8
FLASHERS	
EMERGENCY WARNING	G-39
TURN SIGNAL	E-39
GAUGES	
AMMETER	F-12
FUEL	F-21
INSTRUMENT VOLTAGE REGULATOR & CHOKE	J-21
OIL PRESSURE	E-24
TACHOMETER	F-11
TEMPERATURE	F-19
HEATED BACKLITE	G-224
HEATER, A/C BLOWER RESISTOR	F-212
HORNS	E-31
IGNITION COIL	F-9
ILLUMINATORS	
CLOCK	J-107
HEADLAMP SWITCH	D-115
HEATER	F-106
INSTRUMENT CLUSTER	F-106
RADIO	C, F-111
WIPER SWITCH	E-107
INDICATORS	
ALTERNATOR	D-26
DUAL BRAKE WARNING	F-17
HEATED BACKLITE	F-223
HIGH BEAM	F-32
LEFT TURN	G-36
LOW OIL PRESSURE	E-25
RIGHT TURN	G-36
SEAT BELT WARNING	F-120
PARKING BRAKE WARNING	G-120
LAMPS	
ASH TRAY	E-115
GLOVE BOX	E-115
DOME	D-117
HEADLAMPS	J-31
GEARSHIFT SELECTOR	E-108, J-48, J-61
LUGGAGE COMPT.	H-112
READING	F-117
PARKING	J-34
REAR	
ALL SEDANS	J-51
BACK-UP L.H.	G-51
R.H.	E-51
LICENSE	F-51
SIDEMARKER L.H.	J-49
R.H.	D-49
TRAILER TOWING	J-71
ALL WAGONS	J-57
BACK-UP L.H.	G-57
R.H.	E-57
LICENSE	F-57
SIDE MARKER L.H.	J-54
R.H.	D-55
TRAILER TOWING	J-81
RANCHERO	J-65
BACK-UP L.H.	G-65
R.H.	E-65
LICENSE	F-65
SIDEMARKER L.H.	J-62
R.H.	D-63
TRAILER TOWING	J-97
SIDE MARKER FRONT	J-32
ENGINE COMPARTMENT	E-6
INSTRUMENT PANEL COURTESY	G-114
MOTORS	
AIR CONDITIONER BLOWER	J-218
HEATER BLOWER	G-213
POWER DOORLOCK	C-163
POWER WINDOW	J-194
STARTING	J-173
WINDSHIELD WASHER	D-14,
WINDSHIELD WIPER	H-138, 144
POWER SEAT	G-137
POWER BACKLITE	J-167
RADIOS	
AM	D-162
AM-FM MULTIPLEX	D-158
RELAYS	
DOOR LOCK	F-182
HEADLAMPS ON	J-110
HEATED BACKLITE	F-221
POWER WINDOW SAFETY	C-171
SEAT BACK LATCH	G-125
STARTING MOTOR	B-8
TRAILER TOWING	H-73
SENDERS	
FUEL GAUGE	H-22
OIL PRESSURE GAUGE	H-24
WATER TEMP. GAUGE	H-19
SENSORS	
AMBIENT TEMP.	D-198
SPEED	D-202
SOLENOIDS	
EMMISSION CONTROL	H-198
SEATBACK LATCH	H-130
SWITCHES	
AIR CONDITIONER CONTROL	C-217
AIR CONDITIONER AMBIENT TEMP.	D-215
AIR CONDITIONER BLOWER	F-217
BACK-UP	F-27
COURTESY LAMP (DOOR JAMB)	E-124
DOOR LOCK	D-182
DUAL BRAKE WARNING	G-16
EMERGENCY WARNING	D-37
HEADLAMP	D-33
HEADLAMP DIMMER	E-33
HEATED BACKLITE	D-220
HEATER BLOWER	D-214
HORN	C-31
IGNITION	D-19
KEY WARNING	J-119
OIL PRESSURE	H-25
PARKING BRAKE WARNING	H-119
POWER BACKLITE	F-172
POWER WINDOW MASTER	D-174
GLOVE BOX LAMP	E-115
STOP LAMP	C-39
TURN SIGNAL	D-37
WINDSHIELD WIPER & WASHER "A"	D-137
WINDSHIELD WIPER & WASHER "B"	D-145
WINDSHIELD WIPER INTERMITTENT "B"	D-140
SEAT BELT WARNING	E-120
POWER SEATS	E-167
READING LAMP	F-117
VALVES	
VACUUM SOLENOID	H-205
P.V.S.	F-197

**CONNECTOR CODE**

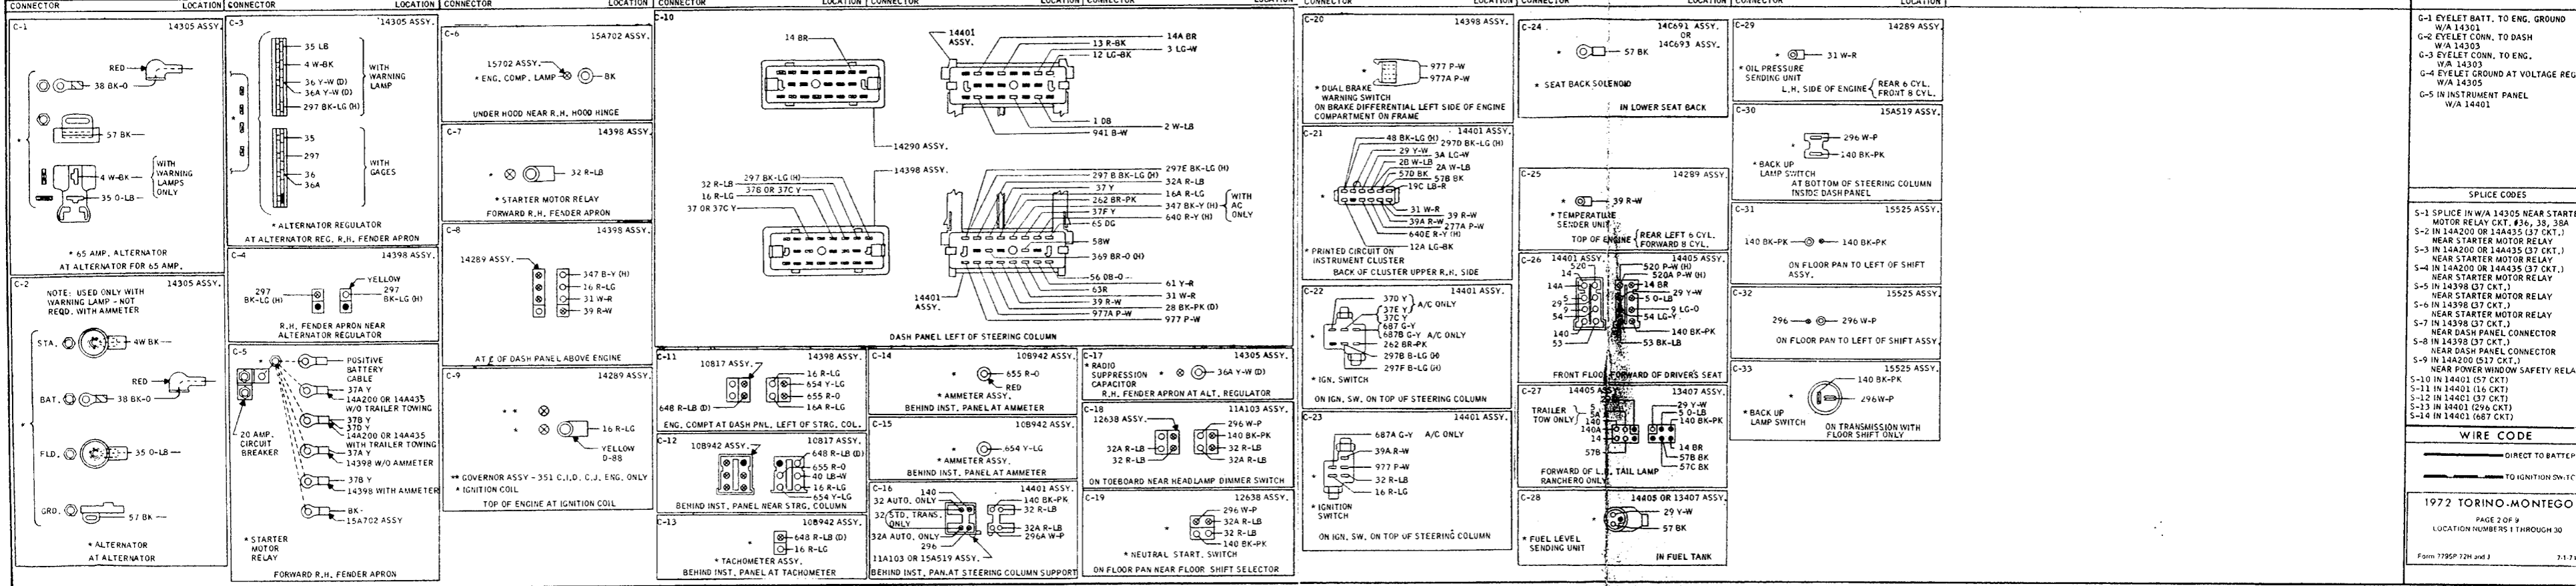

**GROUND CODES**

G-1 EYELET BATT. TO ENG. GROUND W/A 14301  
G-2 EYELET CONN. TO DASH W/A 14303  
G-3 EYELET CONN. TO ENG. W/A 14303  
G-4 EYELET GROUND AT VOLTAGE REG. W/A 14305  
G-5 IN INSTRUMENT PANEL W/A 14401


**SPLICE CODES**


S-1 SPLICE IN W/A 14305 NEAR STARTER MOTOR RELAY CKT. #36, 38, 38A  
S-2 IN 14A200 OR 14A435 (37 CKT.) NEAR STARTER MOTOR RELAY  
S-3 IN 14A200 OR 14A435 (37 CKT.) NEAR STARTER MOTOR RELAY  
S-4 IN 14A200 OR 14A435 (37 CKT.) NEAR STARTER MOTOR RELAY  
S-5 IN 14398 (37 CKT.) NEAR STARTER MOTOR RELAY  
S-6 IN 14398 (37 CKT.) NEAR STARTER MOTOR RELAY  
S-7 IN 14398 (37 CKT.) NEAR DASH PANEL CONNECTOR  
S-8 IN 14398 (37 CKT.) NEAR DASH PANEL CONNECTOR  
S-9 IN 14A200 (517 CKT.) NEAR POWER WINDOW SAFETY RELAY  
S-10 IN 14401 (57 CKT.)  
S-11 IN 14401 (16 CKT.)  
S-12 IN 144C1 (37 CKT.)  
S-13 IN 14401 (296 CKT.)  
S-14 IN 14401 (687 CKT.)

**WIRE CODE**

— DIRECT TO BATTERY  
— TO IGNITION SWITCH

**1972 TORINO-MONTEGO**  
PAGE 2 OF 9  
LOCATION NUMBERS 1 THROUGH 30  
Form 7795P 72H and J 7-1-71

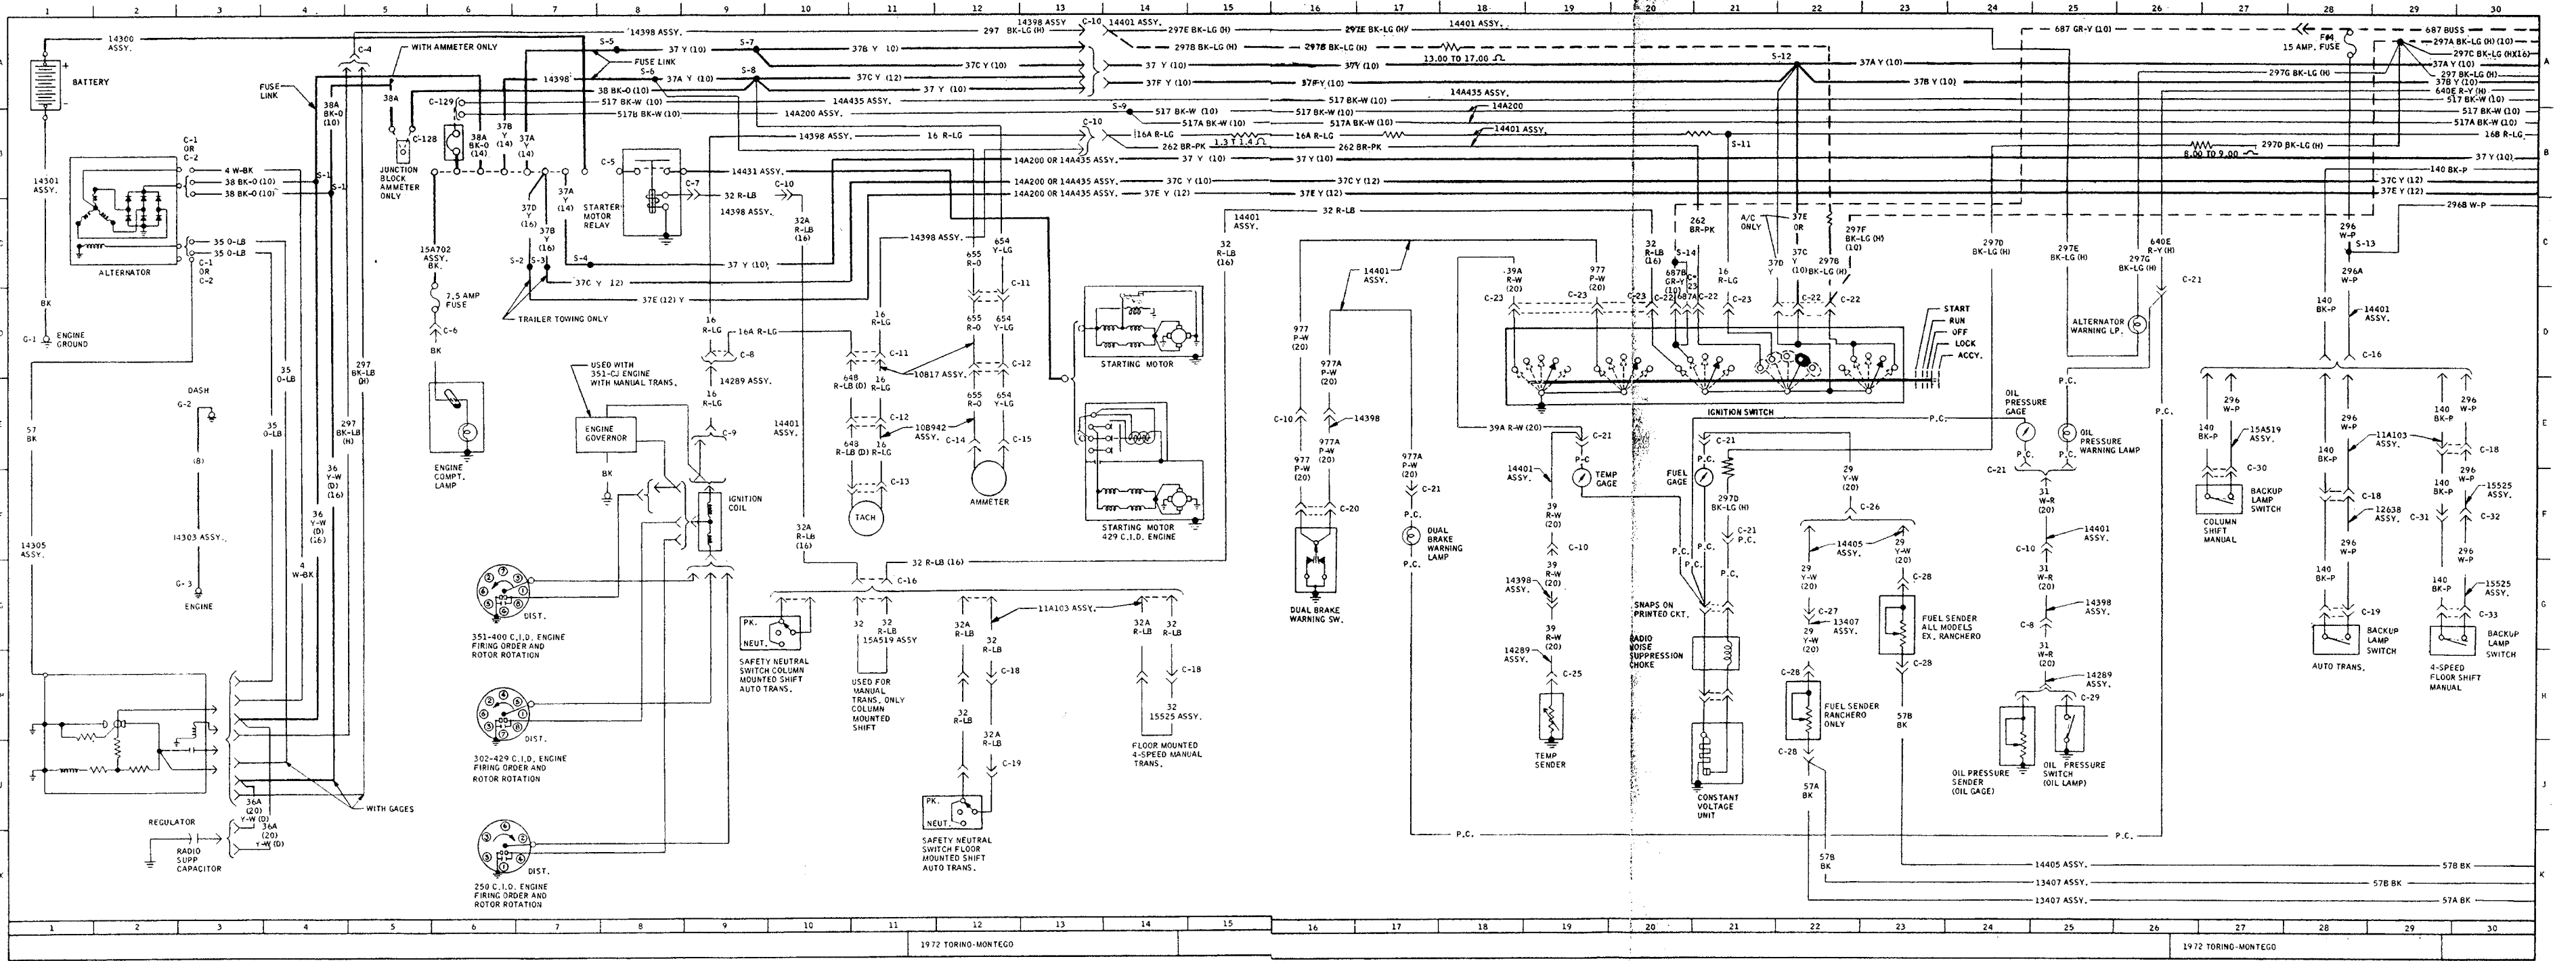

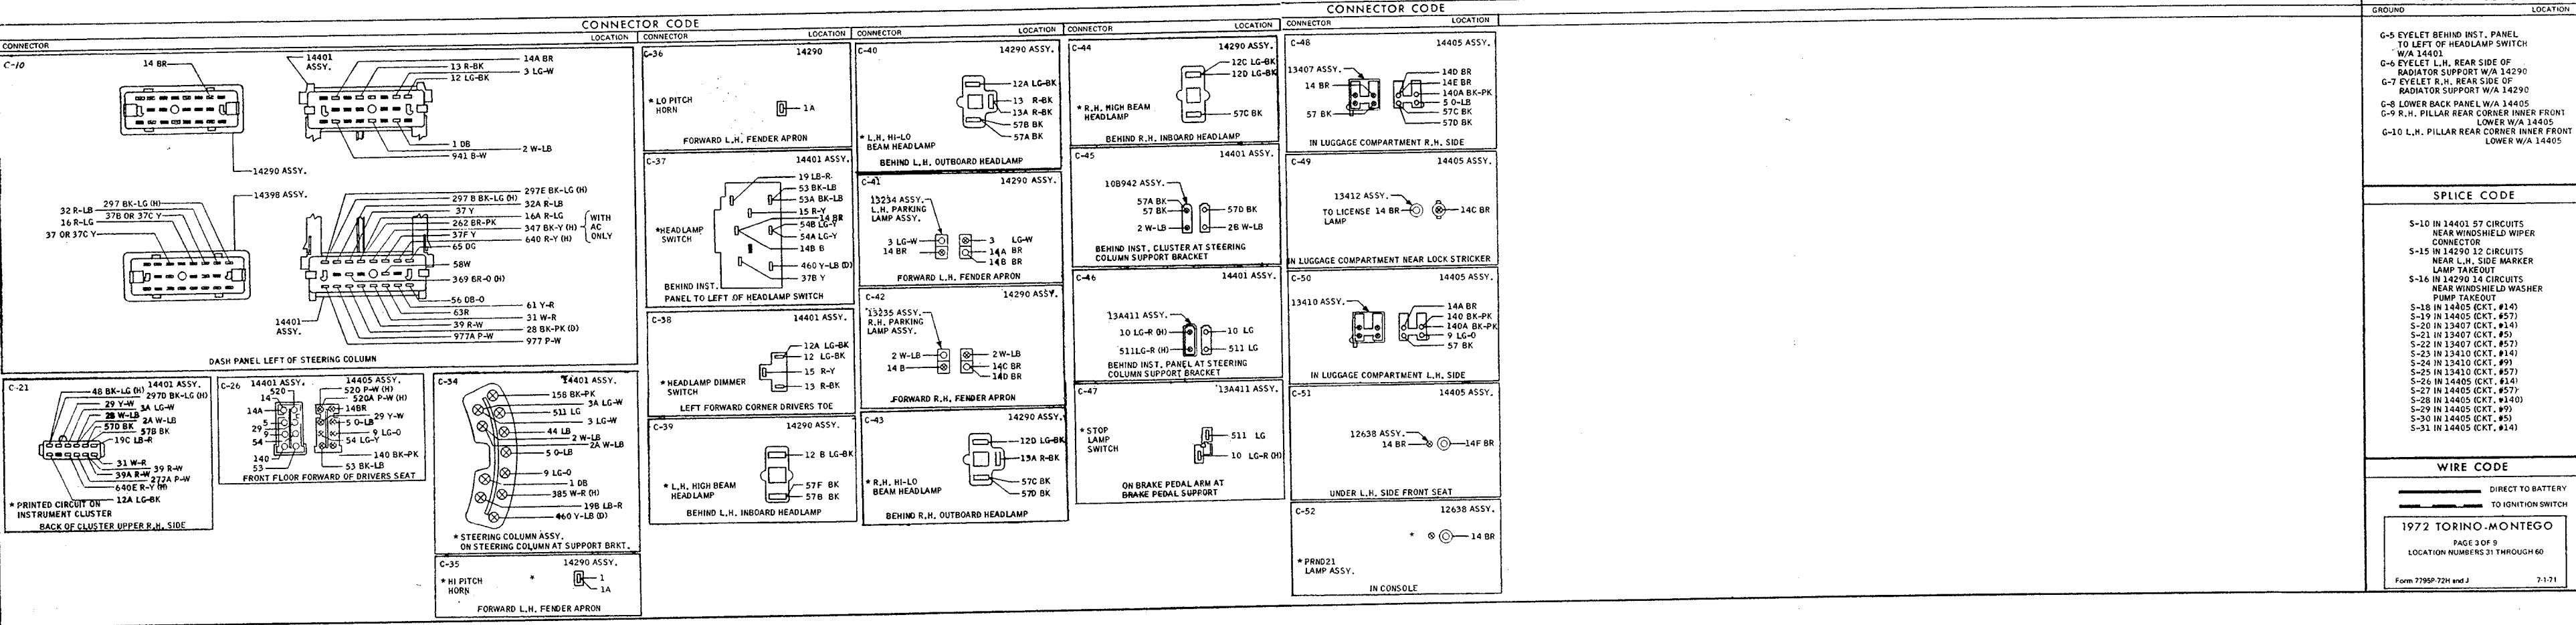

**SPLICE CODE**

- S-10 IN 14401 57 CIRCUITS NEAR WINDSHIELD WIPER CONNECTOR
- S-15 IN 14290 12 CIRCUITS NEAR L.H. SIDE MARKER LAMP TAKEOUT
- S-16 IN 14290 14 CIRCUITS NEAR WINDSHIELD WASHER PUMP TAKEOUT
- S-18 IN 14405 (CKT. #14)
- S-19 IN 14405 (CKT. #57)
- S-20 IN 13407 (CKT. #14)
- S-21 IN 13407 (CKT. #5)
- S-22 IN 13407 (CKT. #57)
- S-23 IN 13410 (CKT. #14)
- S-24 IN 13410 (CKT. #9)
- S-25 IN 13410 (CKT. #57)
- S-26 IN 14405 (CKT. #14)
- S-27 IN 14405 (CKT. #57)
- S-28 IN 14405 (CKT. #140)
- S-29 IN 14405 (CKT. #9)
- S-30 IN 14405 (CKT. #5)
- S-31 IN 14405 (CKT. #14)

**WIRE CODE**

- DIRECT TO BATTERY
- - - TO IGNITION SWITCH


1972 TORINO-MONTEGO  
PAGE 3 OF 9  
LOCATION NUMBERS 31 THROUGH 60



**CONNECTOR CODE**

CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION
C-27 14405 ASSY.	14307 ASSY.	C-52 12638 ASSY.		C-57 14405 ASSY.		C-62 14405 ASSY.	
	L.H. REAR QTR. PANEL AREA		* TO PRND21 LAMP CONSOLE		* L.H. STOP & TURN RELAY BEHIND DRIVER'S SEAT		* R.H. STOP & TURN RELAY INSIDE R.H. REAR QTR. PNL.
C-48 14405 ASSY.	13407 ASSY.	C-53 13412 ASSY.	14 BR	C-58 14A348 ASSY.	YELLOW		
	R.H. REAR QTR. PANEL AREA		TO LICENSE LAMP REAR OF CAR NEAR G		* TRAILER ELECT. BRAKE CONTROLLER		
C-49 14405 ASSY.		C-54 14A435 OR 14A200 ASSY.	14405 ASSY.	C-59 13A576 ASSY.	14405 ASSY.		
	REAR OF LUGGAGE COMPT. NEAR G OF CAR		L.H. TOE BOARD		* TRAILER WIRING HARNESS		
C-50 14405 ASSY.	13410 ASSY.	C-55 14405 ASSY.		C-60 14405 ASSY.			
	L.H. REAR QTR. PANEL AREA		L.H. SIDE OF LUGG. COMPT. ALL MOD. EXCEPT WAGON & RANCHERO R.H. FRONT OF TAIL LAMP ON WAGON BEHIND DRIVER'S SEAT ON RANCHERO		* L.H. STOP & TURN RELAY INSIDE R.H. REAR QTR. PNL.		
C-51 12638 ASSY.	14405 ASSY.	C-56 14405 ASSY.		C-61 14405 ASSY.			
	FRONT SEAT		* TAIL LAMP RELAY BEHIND DRIVER'S SEAT		* TAIL LAMP RELAY INSIDE R.H. REAR QTR. PNL.		

GROUND CODE
G-11 R.H. SIDE PNL. BODY SIDE INSIDE REAR W/A 13407
G-12 L.H. SIDE PNL. BODY SIDE INSIDE REAR W/A 14405
G-13 LOWER BACK PANEL W/A 14405
G-14 L.H. PILLAR REAR CORNER INNER FRONT LOWER W/A 14405
G-15 R.H. PILLAR REAR CORNER INNER FRONT LOWER W/A 14405
SPLICE CODE
S-32 IN 14405 (CKT. #14)
S-33 IN 14405 (CKT. #57)
S-34 IN 14405 (CKT. #9)
S-35 IN 13407 (CKT. #5)
S-36 IN 13407 (CKT. #14)
S-37 IN 14405 (CKT. #14)
S-38 IN 14405 (CKT. #57)
S-39 IN 13407 (CKT. #14)
S-40 IN 13407 (CKT. #5)
S-41 IN 13407 (CKT. #57)
S-42 IN 13410 (CKT. #9)
S-43 IN 13410 (CKT. #14)
S-44 IN 13410 (CKT. #57)
S-45 IN 14405 (CKT. #37)
S-46 IN 14405 (CKT. #14)
S-47 IN 14405 (CKT. #140)
S-48 IN 14405 (CKT. #57)
S-49 IN 14405 (CKT. #5)
S-50 IN 14405 (CKT. #57)
S-51 IN 14405 (CKT. #14)
S-52 IN 14405 (CKT. #37)
S-53 IN 14405 (CKT. #9)
WIRE CODE
DIRECT TO BATTERY
TO IGNITION SWITCH
<b>1972 TORINO-MONTEGO</b> PAGE 4 OF 8 LOCATION NUMBERS 61 THROUGH 90 Form 7795P-72H and J 7-1-71

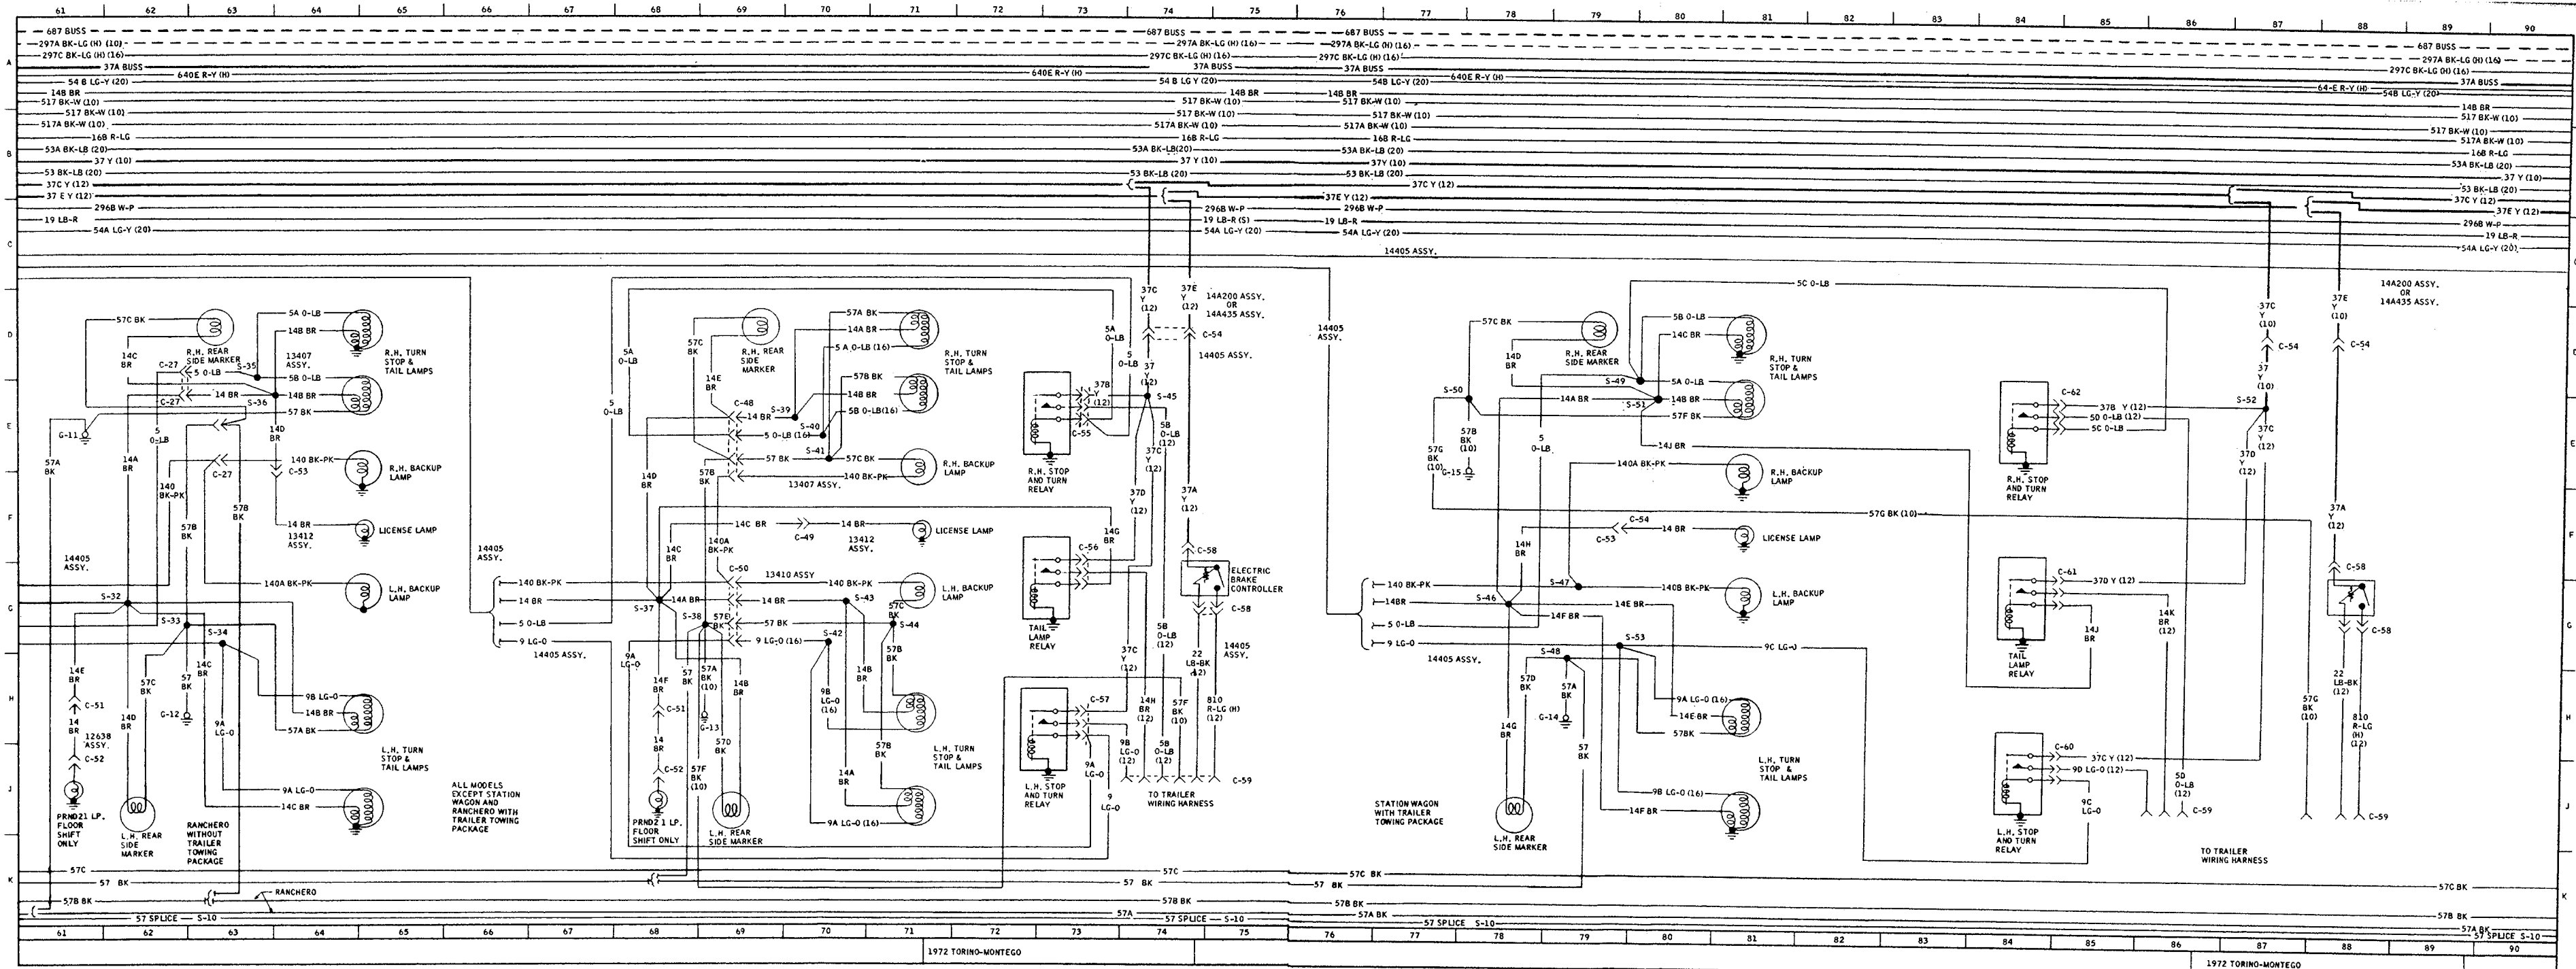




CONNECTOR CODE												GROUND CODE			
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION		
C-21	14401 ASSY. BACK OF CLUSTER	C-34	14401 ASSY. * TO 7200 ASSY, STEERING COLUMN WIRING AT STEERING COLUMN BEHIND INSTR. PANEL	C-54	14405 ASSY. L.H. TOE BOARD	C-66	14401 OR 15A856 ASSY. BEHIND INSTR. PNL NEAR CLOCK	C-73	14405 ASSY. L.H. SIDE OF CAR IN LUGGAGE COMP.	C-99	14398 ASSY. * WINDSHIELD WIPER MOTOR TYPE "B" L.H. SIDE DASH PANEL AT WIPER MOTOR IN ENG. COMPARTMENT	C-79	15A856 ASSY. * TO FUSE PANEL ON DASH PANEL	C-85	14401 ASSY. * TO INSTR. PNL, HANG ON COURT. LAMP UNDER INSTR. PNL, R.H. SIDE OF CAR
C-26	14401 ASSY. L.H. SIDE FRONT FLOOR	C-51	14405 ASSY. 12638 ASSY. 14 BR	C-59	14405 ASSY. * TO TRAILER WIRING HARNESS L.H. REAR OF CAR	C-67	15A006 ASSY. * TO CLOCK BEHIND CLOCK ON INSTR. PANEL	C-74	15A856 ASSY. 19B516 ASSY. 54 LG-Y	C-100	14398 ASSY. * WINDSHIELD WIPER MOTOR TYPE "B" L.H. SIDE DASH PANEL AT WIPER MOTOR IN ENGINE COMPARTMENT	C-80	14401 ASSY. * TO L.H. DOOR JAMB SW. IN L.H. "A" PILLAR	C-197	14405 ASSY. * R.H. STOP & TURN RELAY BEHIND DRIVERS SEAT
C-27	14405 ASSY. L.H. REAR QTR. PNL. AREA	C-52	12638 ASSY. * TO PRND21 LAMP	C-63	14401 ASSY. * TO RADIO AT RADIO	C-68	15A856 ASSY. * WIPER SW. ILLUMINATION BEHIND INSTR. PANEL AT WIPER SWITCH	C-75	14394 ASSY. 19B516 ASSY. 54 LG-Y	C-81	15A856 ASSY. * TO PARKING BRAKE SW. ON PARKING BRAKE ASSY.	C-198	14405 ASSY. * TAIL LAMP RELAY BEHIND DRIVERS SEAT	C-199	14405 ASSY. * L.H. STOP & TURN RELAY BEHIND DRIVERS SEAT
		C-53	13407 ASSY. 13412 ASSY. 14 BR	C-64	14401 ASSY. * TO HEATER SW. ILLUMINATION BACK OF HEATER CONTROLS	C-69	15A856 ASSY. * HEADLAMP SW. ILLUMINATION BEHIND INSTR. PANEL AT HEADLAMP SW.	C-76	19B516 ASSY. * TO LUGGAGE COMP. LAMP IN LUGGAGE COMPARTMENT	C-82	14401 ASSY. 15A856 ASSY. 296 W-P	C-83	15A856 ASSY. * TO 10B924 SWITCH UNDER INSTR. PANEL NEAR ASH TRAY		
				C-65	14401 OR 15A856 ASSY. * TO ASH TRAY ILLUM. BEHIND INSTR. PANEL ABOVE ASH RECEPTACLE	C-70	15A856 ASSY. * TO GLOVE BOX GROUND BEHIND INSTR. PANEL	C-77	15A856 ASSY. * TO LIGHTS ON RELAY ON RELAY PANEL NEAR RADIO	C-84	14401 ASSY. * TO INSTR. PNL, HANG ON COURT LAMP UNDER INSTR. PNL, L.H. SIDE OF CAR				
						C-71	15A856 ASSY. * TO GLOVE BOX LAMP BEHIND GLOVE BOX	C-78	15A856 ASSY. STD. BUZZER LOCATED ON FUSE PNL. WITH VISIBILITY GROUP BUZZER LOCATED ON RELAY PANEL * TO BUZZER ON FUSE PANEL						
						C-72	15A856 ASSY. * TO ASH TRAY ILLUM. BEHIND INSTR. PANEL ABOVE ASH RECEPTACLE								


G-16 L.H. SIDE PNL. BODY SIDE  
INNER REAR W/A 14405  
G-17 R.H. SIDE PNL. BODY SIDE  
INNER REAR W/A 14405  
G-18 AT RELAY PANEL IN INSTR. PNL.  
W/A 15A856

**SPLICE CODE**

 S-54 IN 14405 (CKT. #14)  
S-55 IN 14405 (CKT. #9)  
S-56 IN 14405 (CKT. #57)  
S-57 IN 13407 (CKT. #5)  
S-58 IN 13407 (CKT. #14)  
S-59 IN 14405 (CKT. #37)  
S-60 IN 14401 (CKT. #19)  
S-61 IN 14401 (CKT. #57)  
S-62 IN 15A006 (CKT. #19)  
S-63 IN 14401 (CKT. #54)  
S-64 IN 14401 (CKT. #53)  
S-65 IN 15A856 (CKT. #54)  
S-66 IN 15A856 (CKT. #296)


















**WIRE CODE**



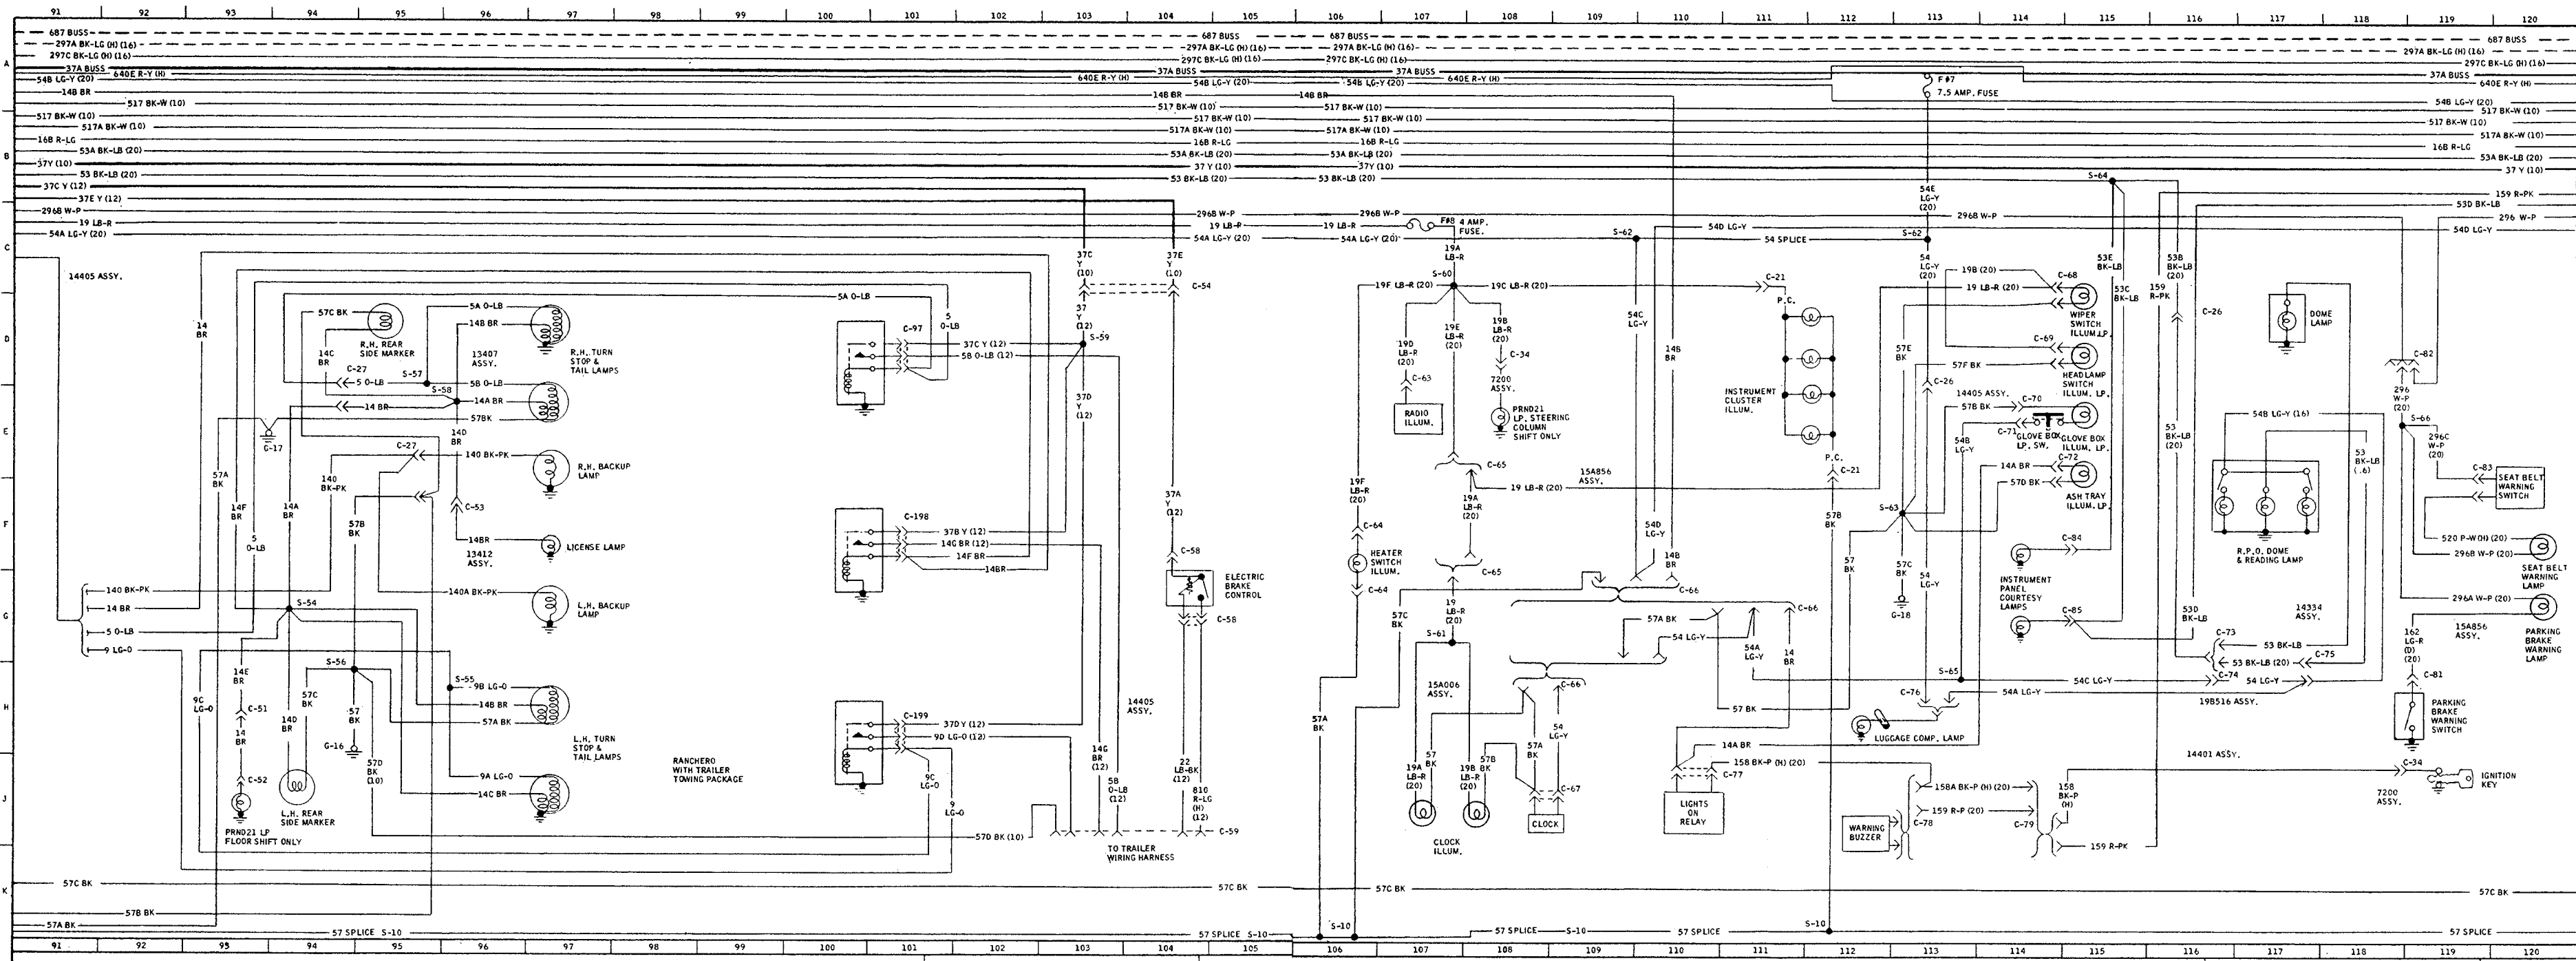

CONNECTOR CODE

 
SPLICE CODE

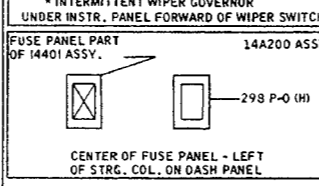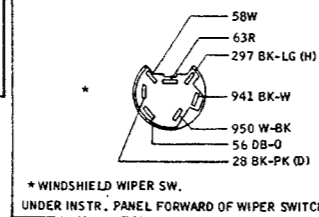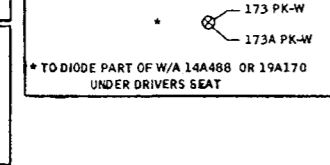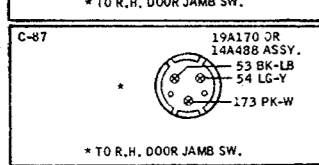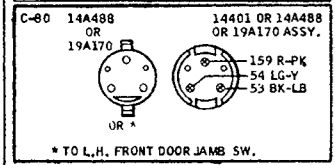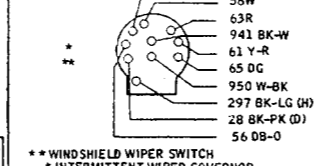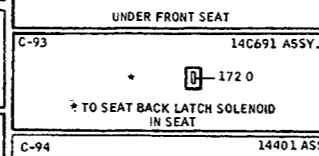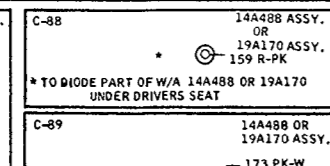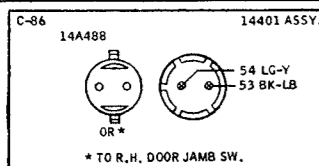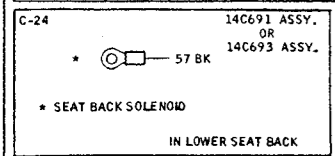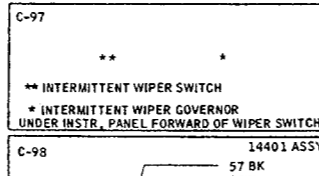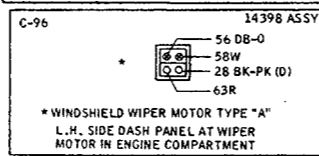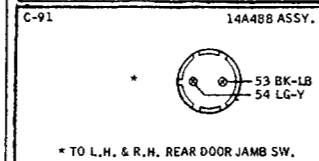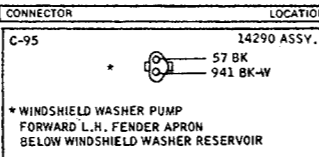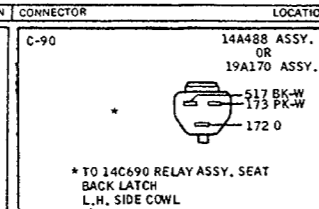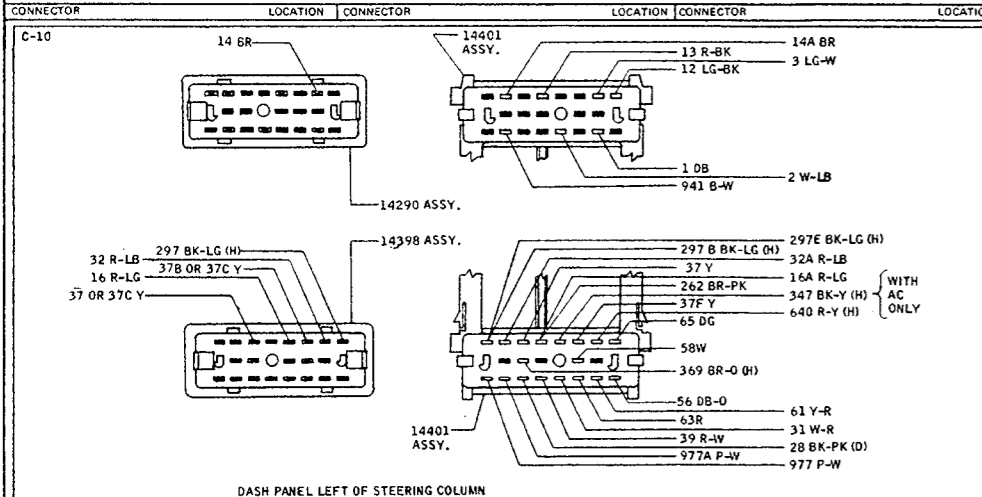


SPLICE CODE


S-10 IN 14401 CKT. 57  
S-67 IN 14A488 CKT. #172  
OR  
19A170  
S-68 IN 14A488 CKT. #57  
OR  
19A170

 WIRE CODE





1972 TORINO-MONTEGO  
PAGE 8 OF 9  
LOCATION NUMBERS 121 THROUGH 160  
Form 7795P-72H and J 7-1-71

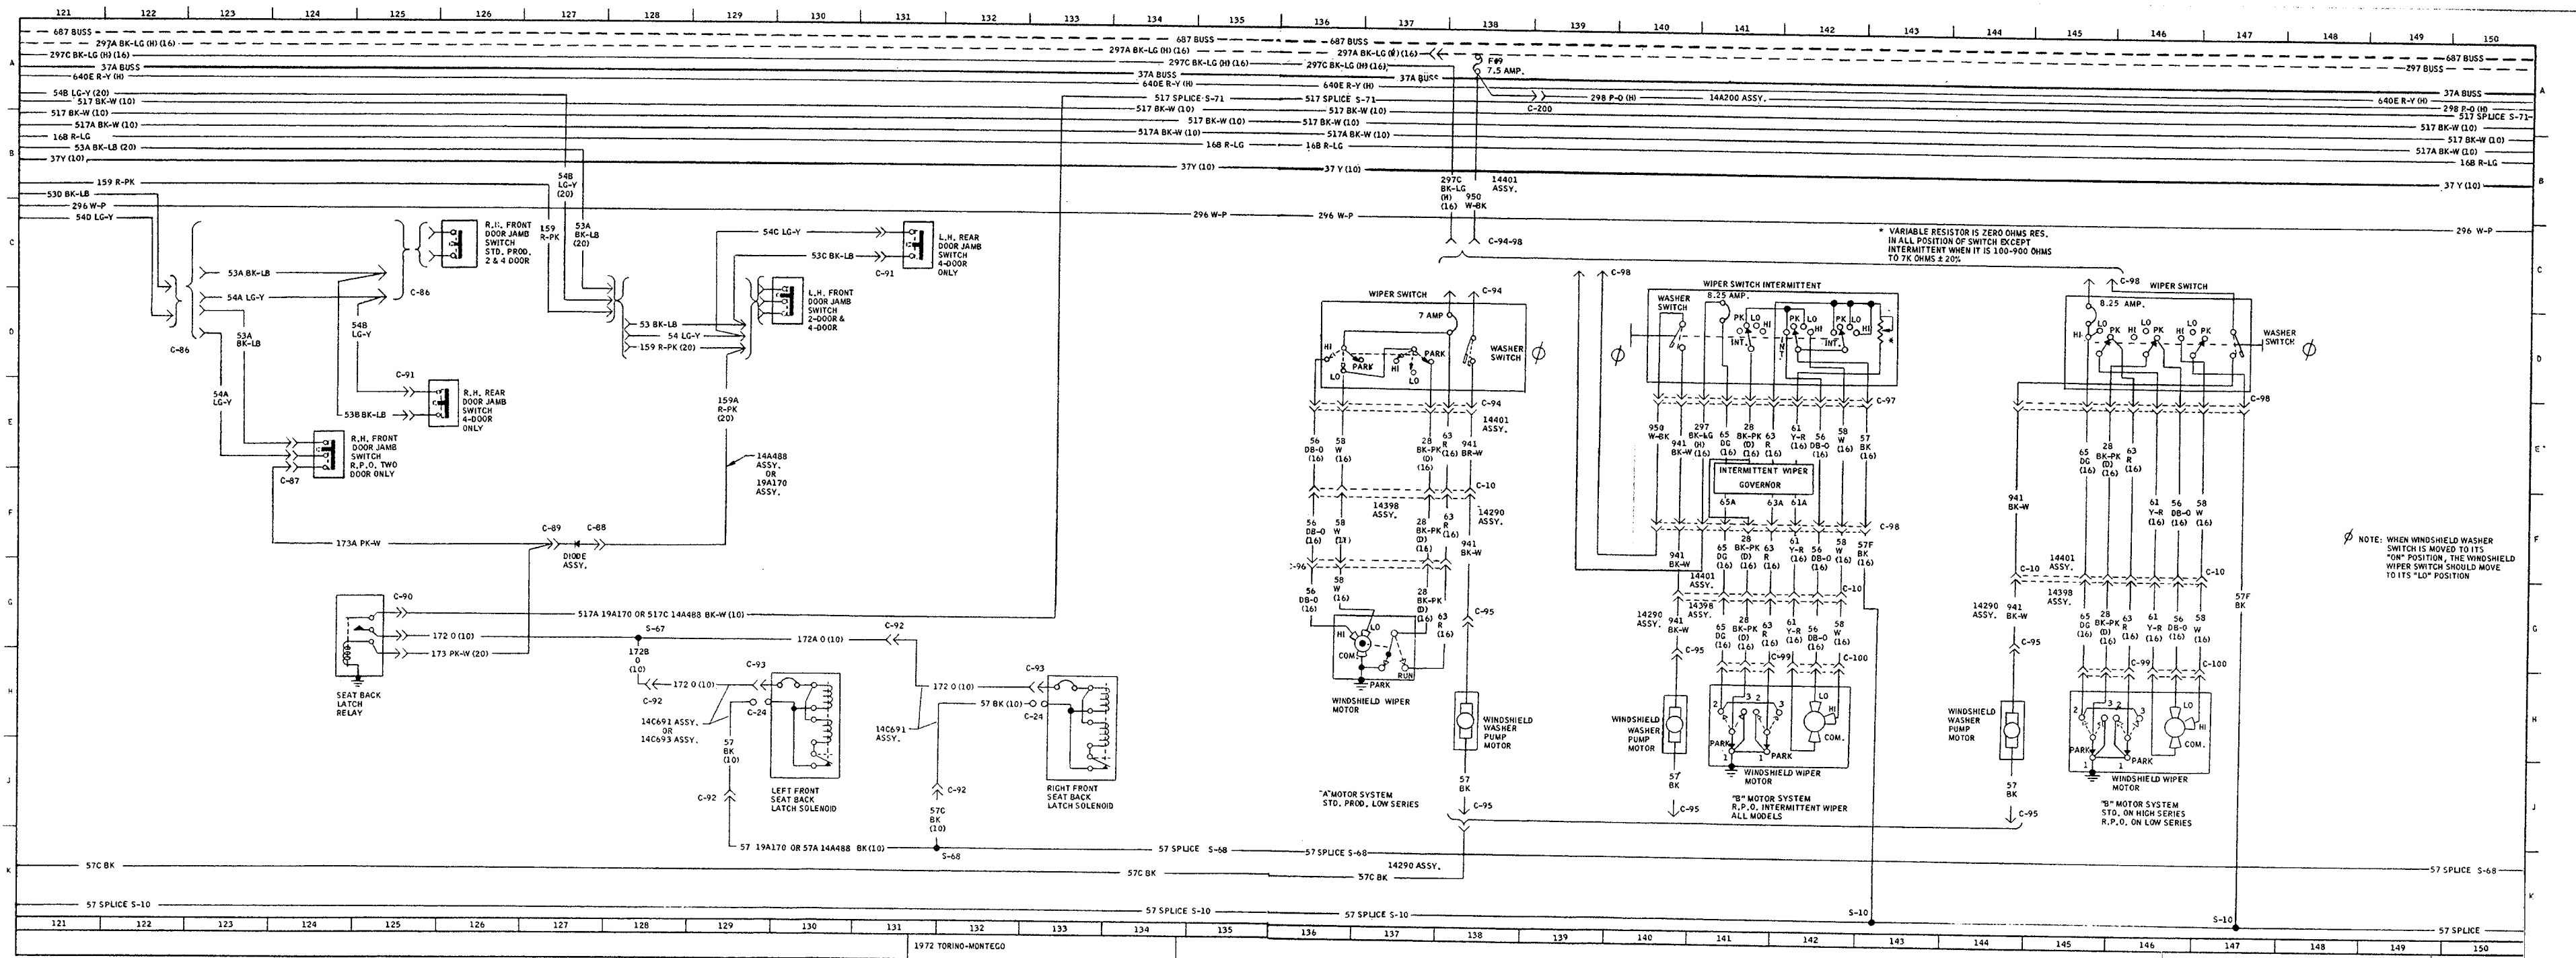


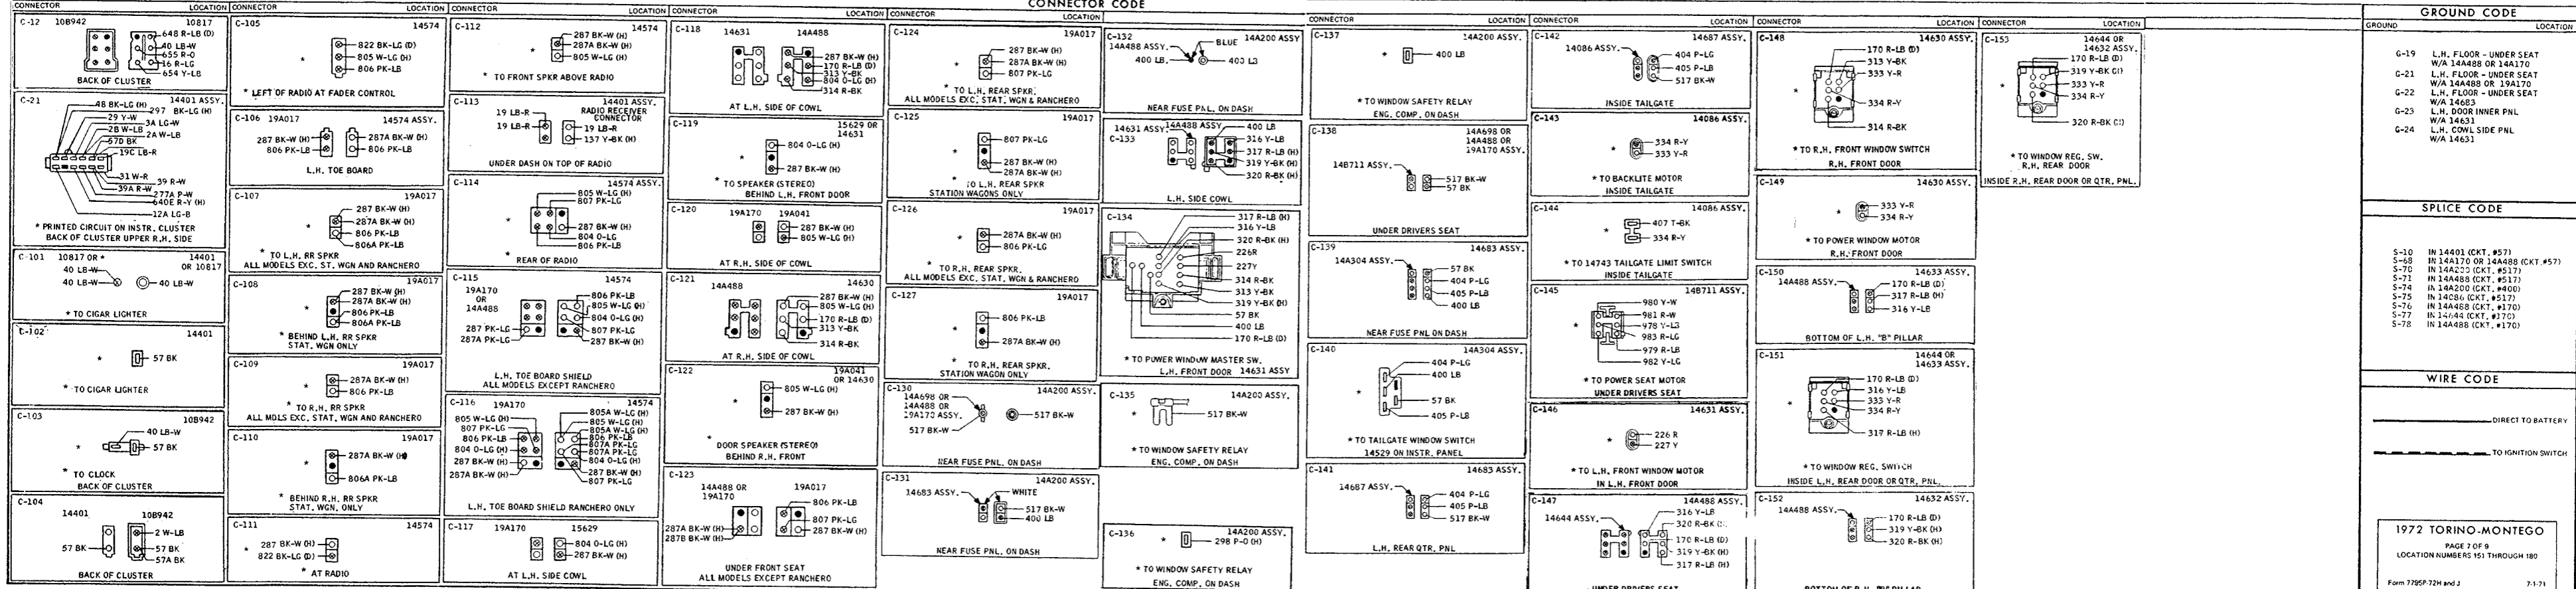


**GROUND CODE**

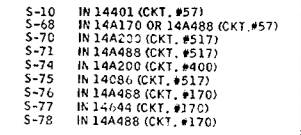 


**WIRE CODE**

 

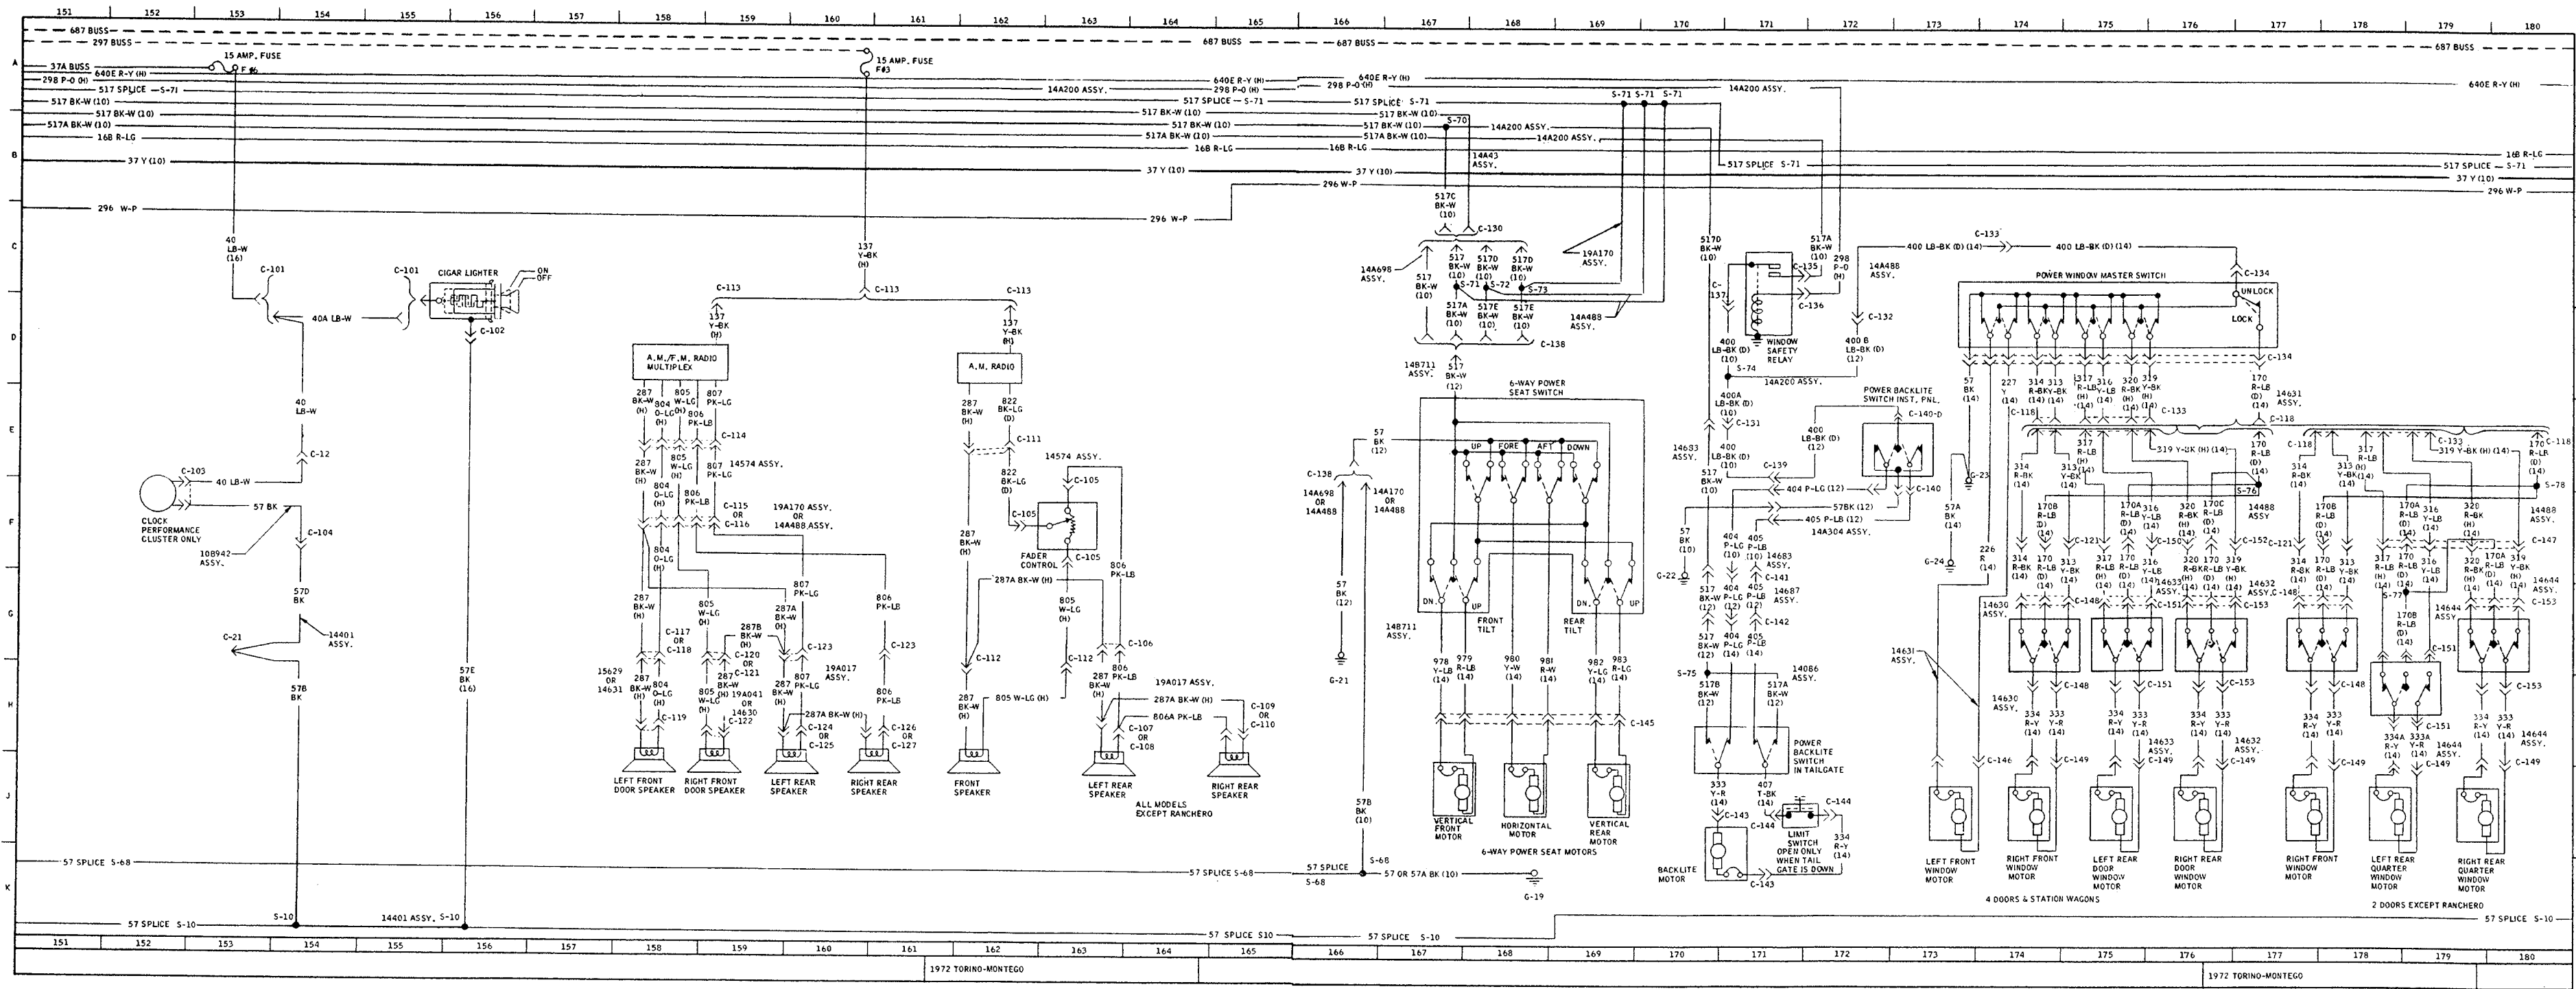


CONNECTOR CODE				SPLICE CODE		
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	
<b>C-10</b>		<b>C-159</b>		<b>C-165</b>		
<p>14 BR</p> <p>14398</p> <p>14290 ASSY.</p> <p>14290</p> <p>14398 ASSY.</p> <p>14401 ASSY.</p>	14401	<p>14A488 19A170</p> <p>* TO DOOR LOCK RELAY (UNLOCK) L.H. SIDE OF COWL</p>	14289	<p>* TO PVS VALVE OR EMISSION CONTROL SOLENOID ENGINE COMPARTMENT</p>	<b>C-174</b>	
		<b>C-160</b>		<b>C-166</b>		
		<p>14A488 19A170</p> <p>* TO DOOR LOCK RELAY L.H. SIDE OF COWL</p>		<p>ENGINE COMPARTMENT</p>	<b>C-175</b>	
		<b>C-161</b>		<b>C-167</b>		
		<p>14683</p> <p>UNDER L.H. FRONT SEAT</p>		<p>ENGINE COMPARTMENT</p>	<b>C-176</b>	
		<b>C-162</b>		<b>C-168</b>		
		<p>14683</p> <p>L.H. REAR QTR. PNL. AREA</p>		<p>* TO VACUUM SOLENOID VALVE ENGINE COMPARTMENT</p>	<b>C-177</b>	
		<b>C-163</b>		<b>C-169</b>		
		<p>14687</p> <p>* TO TAILGATE DOOR LOCK MINI MOTOR INSIDE TAILGATE</p>		<p>* TO VACUUM SOLENOID VALVE ENGINE COMPARTMENT</p>	<b>C-178</b>	
		<b>C-164</b>		<b>C-170</b>		
		<p>14398</p> <p>AT REAR OF ENGINE</p>		<p>* TO MODULATOR SW. ON TRANSMISSION</p>	<b>C-179</b>	
		<b>C-157</b>		<b>C-171</b>		
		<p>14A488, 14630, 14026, 14026 19A041, 14631, 14632, 14633 OR 15629</p> <p>LOCATED IN ALL 4 DOORS</p>		<p>* TO ELECTRONIC SPARK CONTROL BOX R.H. SIDE OF INSTR. PNL. ABOVE GLOVE BOX</p>	<b>C-180</b>	
		<b>C-158</b>		<b>C-172</b>		
		<p>14A488, 14630, 14631</p> <p>COWL SIDE INNER R.H. &amp; L.H.</p>		<p>* TO AMBIENT SENSOR NEAR FUSE PANEL</p>		
<b>C-26</b>		<b>C-155</b>		<b>C-156</b>		
<p>L.H. FRONT TOE BOARD</p>	<p>14024, 14026, 14632, 14632, OR 14633</p> <p>* TO DOOR LOCK MOTOR INSIDE ALL DOORS</p>	<p>14630, 19A041, 14631 OR 15629</p> <p>IN ALL FRT DOORS</p>		<b>C-173</b>		
<b>C-154</b>		<b>C-159</b>		<b>C-174</b>		
<p>* TO DOOR LOCK SW. INSIDE FRONT DOORS</p>	<p>* TO DOOR LOCK RELAY (UNLOCK) L.H. SIDE OF COWL</p>	<p>COWL SIDE INNER R.H. &amp; L.H.</p>		<p>* TO SPEED SENSOR INSTRUMENT PANEL</p>		
		<b>C-160</b>		<b>C-175</b>		
		<p>* TO DOOR LOCK RELAY L.H. SIDE OF COWL</p>		<p>* TO SEAT BELT BUZZER RELAY PANEL</p>		
		<b>C-161</b>		<b>C-176</b>		
		<p>UNDER L.H. FRONT SEAT</p>		<p>* TO SEAT BELT WARNING LIGHT</p>		
		<b>C-162</b>		<b>C-177</b>		
		<p>L.H. REAR QTR. PNL. AREA</p>		<p>* TO L.H. RETRACTOR SWITCH</p>		
		<b>C-163</b>		<b>C-178</b>		
		<p>* TO TAILGATE DOOR LOCK MINI MOTOR INSIDE TAILGATE</p>		<p>TO 14A488 OR 19A170 OR 14A504</p>		
		<b>C-164</b>		<b>C-179</b>		
		<p>AT REAR OF ENGINE</p>		<p>* TO SEAT SENSOR SW.</p>		
		<b>C-165</b>		<b>C-180</b>		
		<p>* TO PVS VALVE OR EMISSION CONTROL SOLENOID ENGINE COMPARTMENT</p>		<p>* TO R.H. RETRACTOR SW.</p>		

 - S-10 IN 14401 CKT. #57  
S-71 IN 14A488 CKT #517  
S-79 IN 14A488 OR 19A170 CKT #117  
S-80 IN 14A488 OR 19A170 CKT #119  
S-81 IN 14A488 OR 19A170 CKT #118  
S-82 IN 14A488 OR 19A170 CKT #117  
S-83 IN 14A488 CKT #120  
S-84 IN 14A488 CKT #119  
S-85 IN 14A488 CKT #118  
S-86 IN 14A488 CKT #117  
S-87 IN 14401 CKT #640




1972 TORINO-MONTEGO  
PAGE 8 OF 9  
LOCATION NUMBERS 181 THROUGH 210

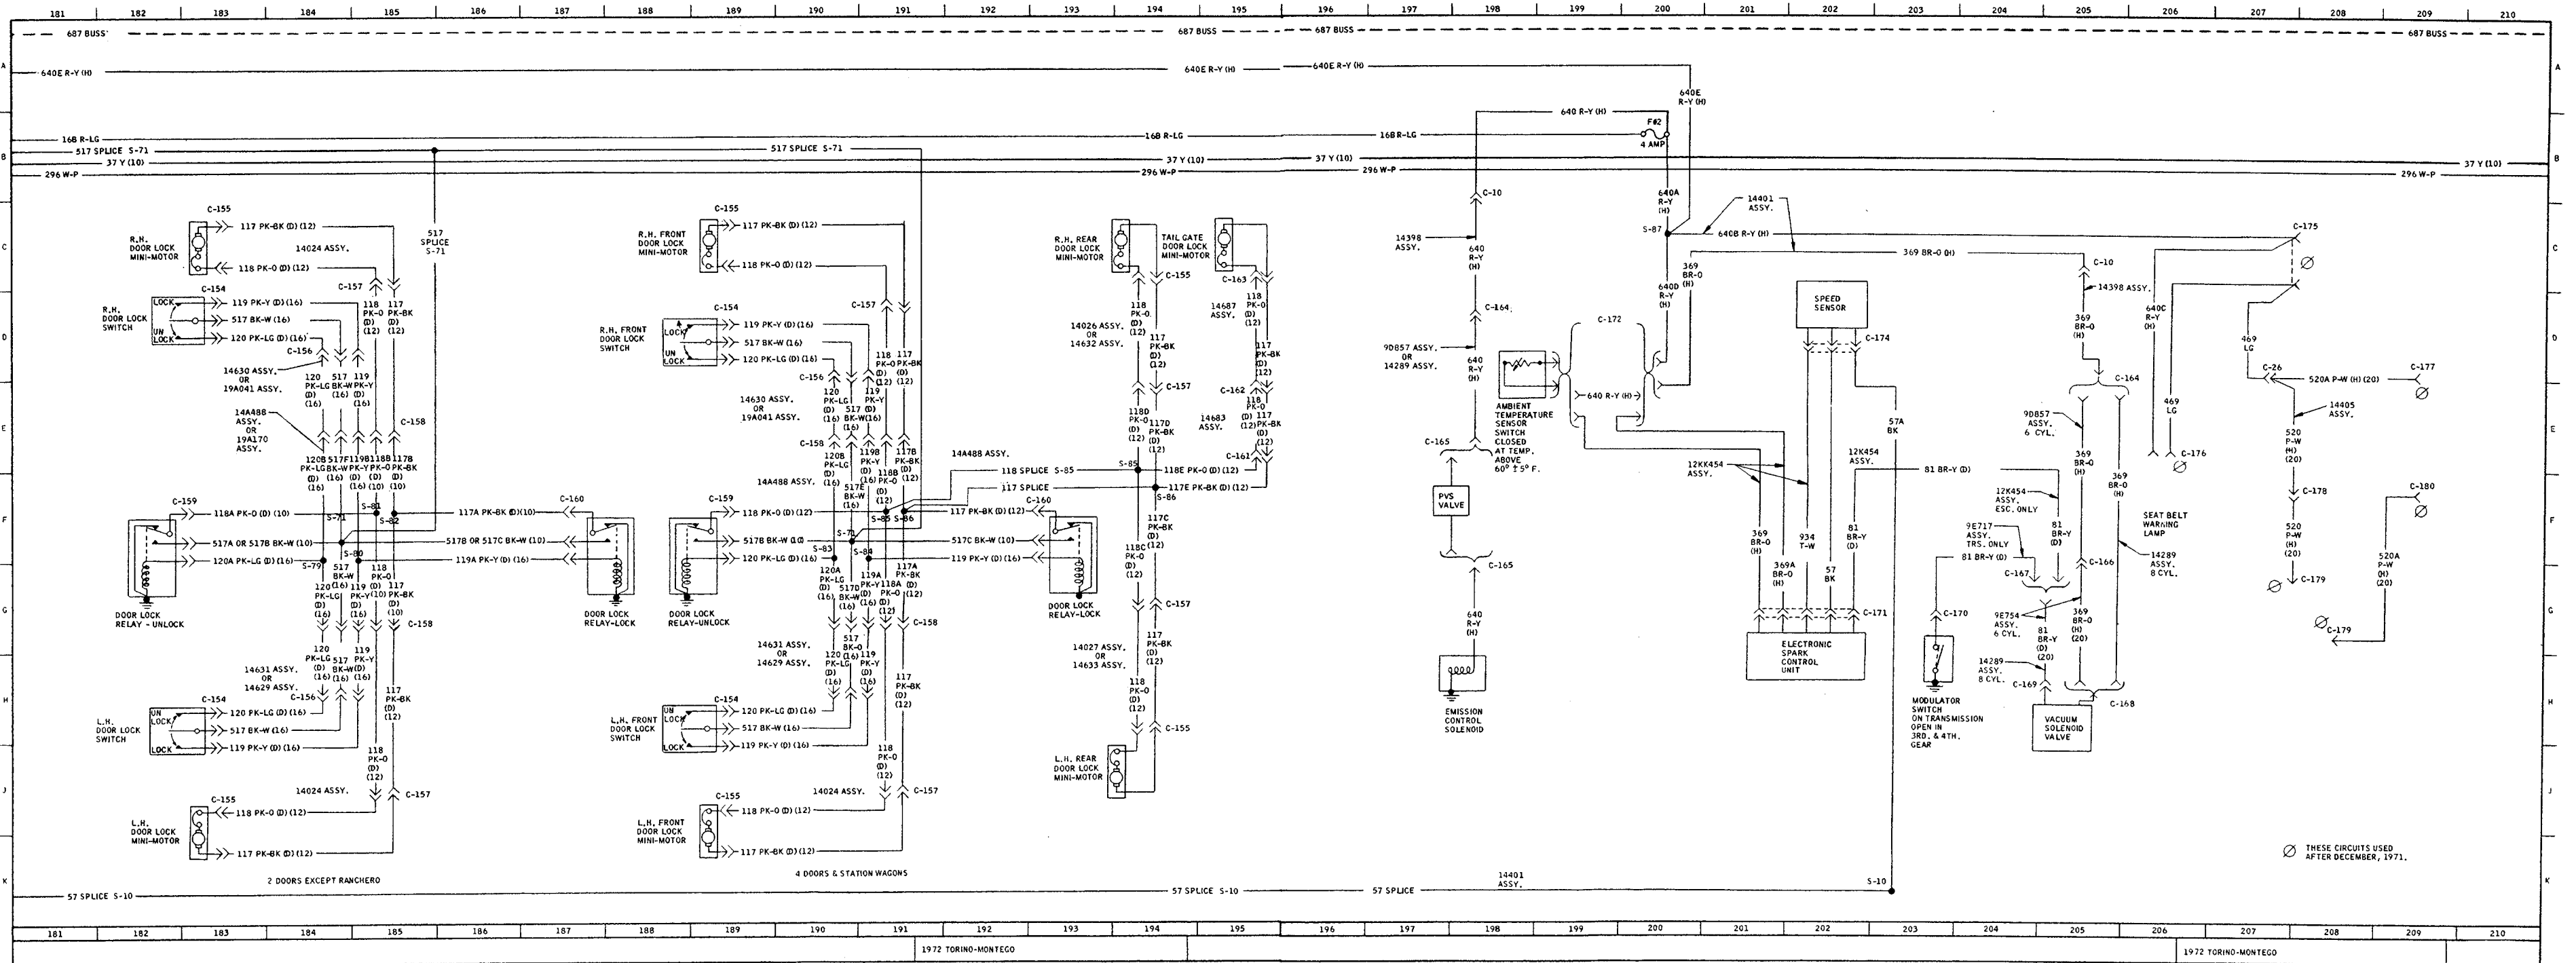

THESE CIRCUITS USED AFTER DECEMBER, 1971.



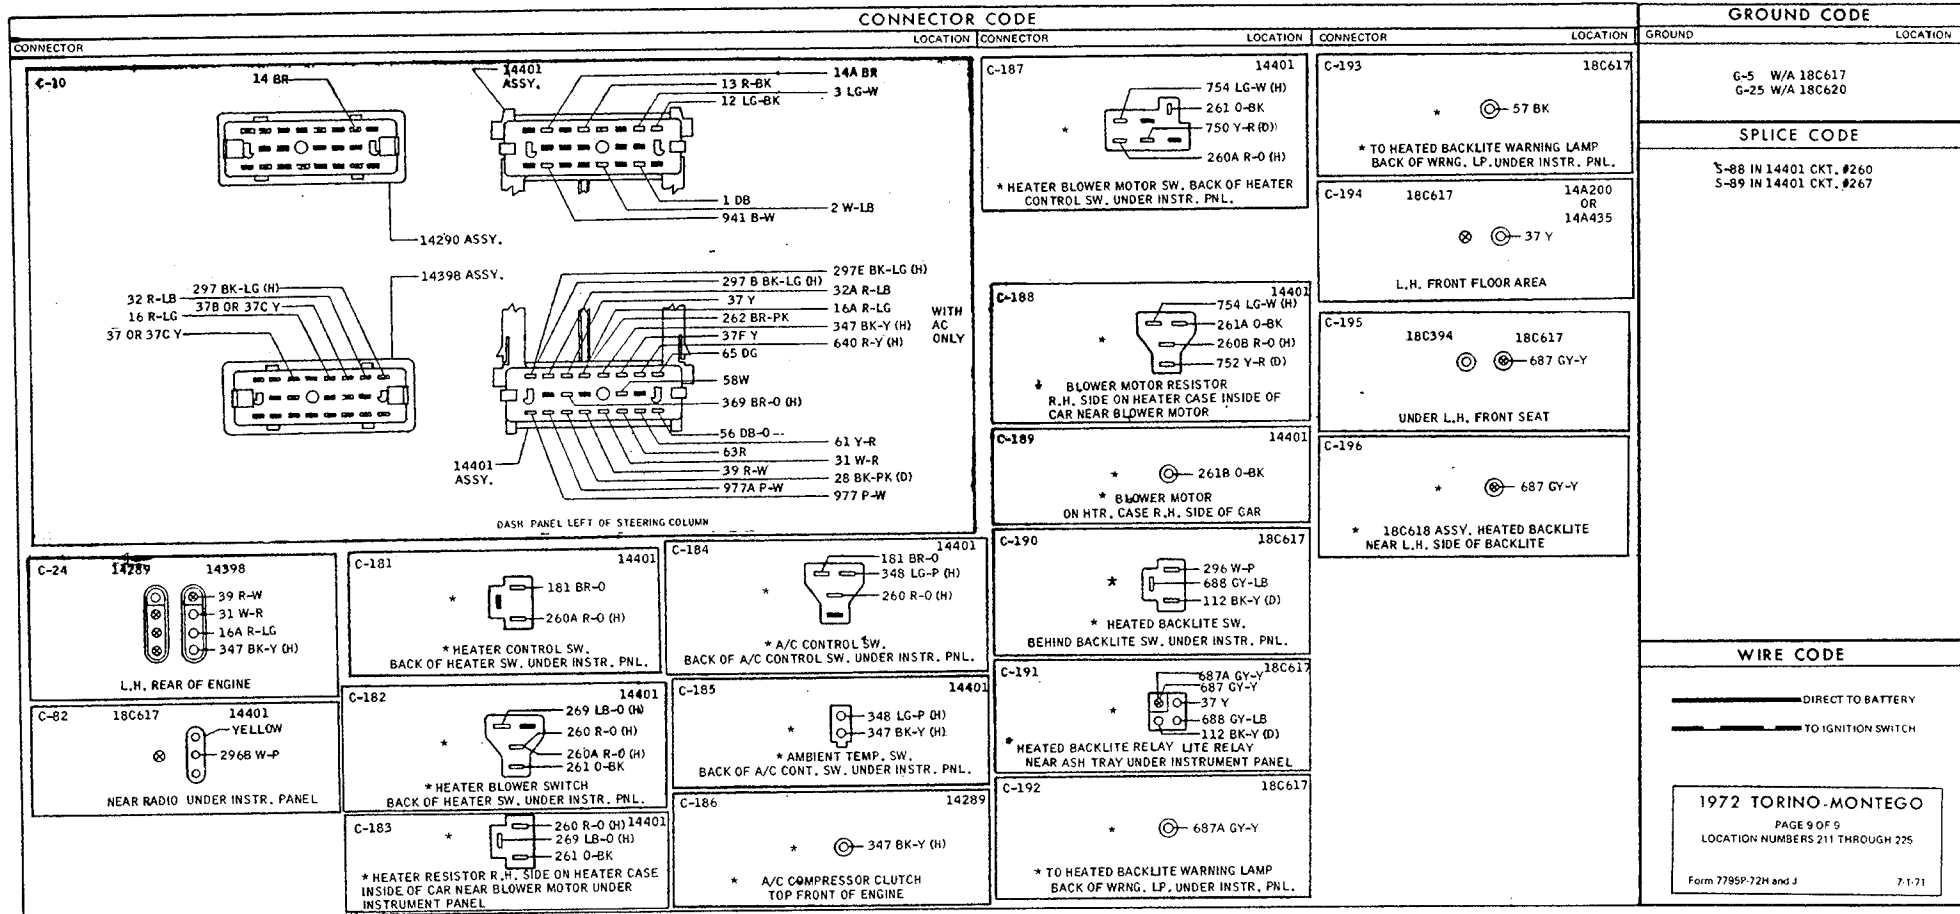


**SPICE CODE**

5-88 IN 14401 CKT. #260  
5-89 IN 14401 CKT. #267

**WIRE CODE**


— DIRECT TO BATTERY  
— TO IGNITION SWITCH

1972 TORINO-MONTEGO  
PAGE 9 OF 9  
LOCATION NUMBERS 211 THROUGH 225  
Form 7785P-72H and J 7-1-71

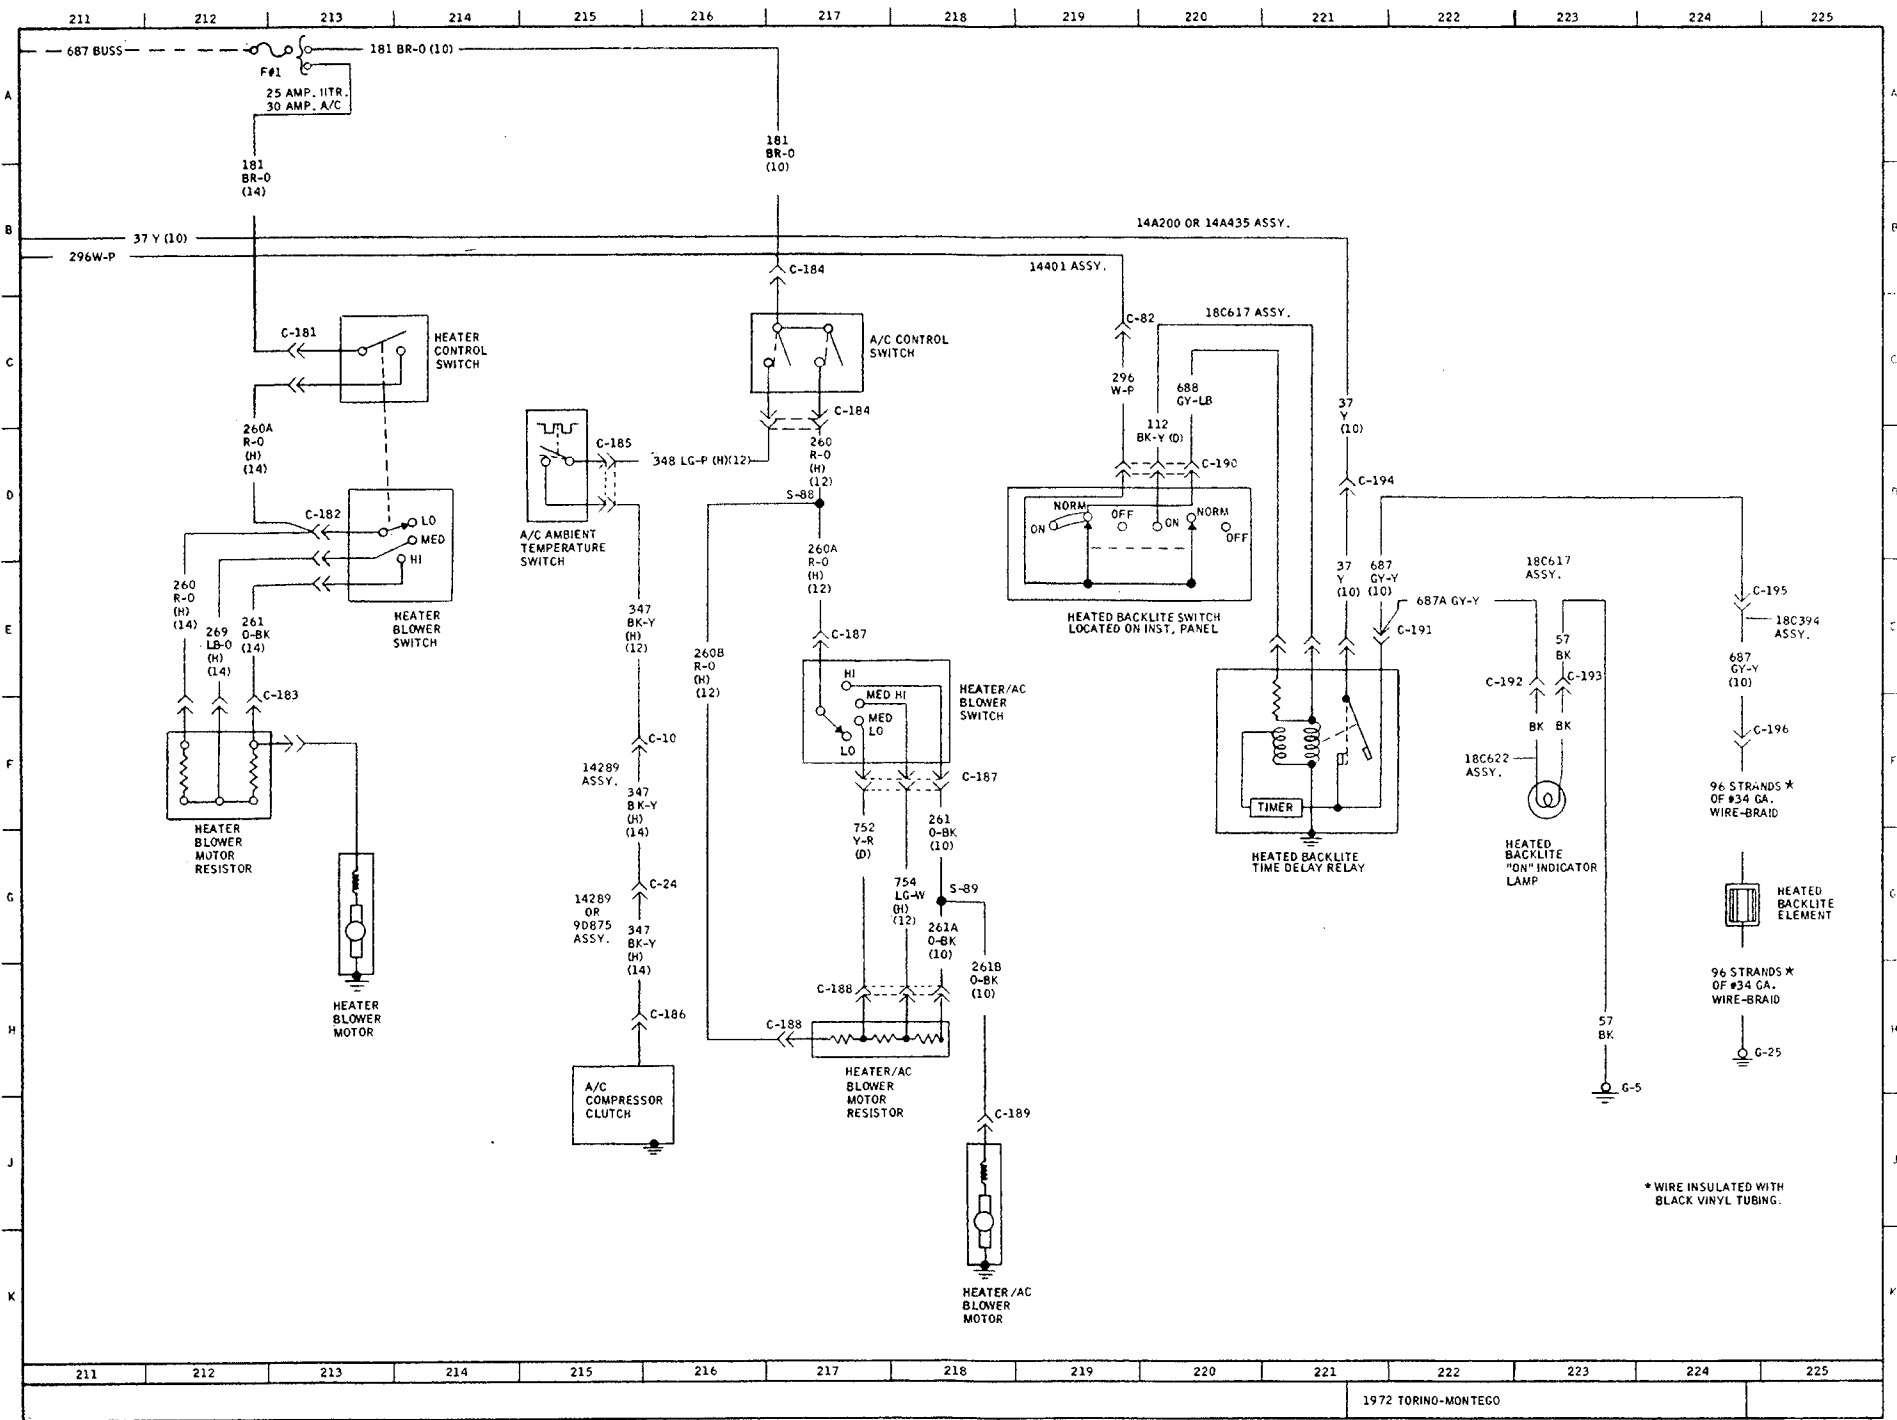

\* WIRE INSULATED WITH BLACK VINYL TUBING.

FUSE LOCATIONS

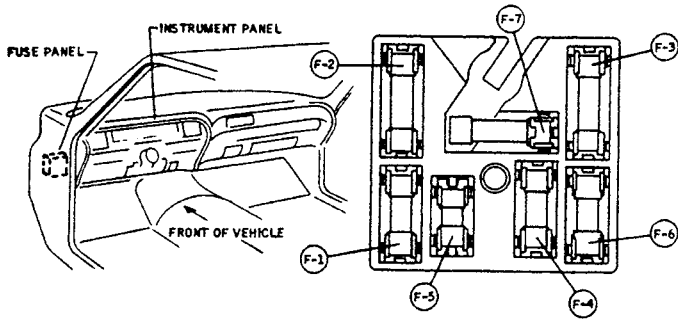

- F1. (14 AMP) COURTESY LAMPS, CLOCK AND ELECTROVAC DOOR LOCKS
  - F2. (20 AMP) EMERGENCY WARNING AND CIGAR LIGHTER
  - F3. (20 AMP) RADIO, BACK-UP LAMP AND WINDSHIELD WASHER
  - F4. (14 AMP) THROTTLE SOLENOID, DISTRIBUTOR MODULATOR AND WARNING LAMPS, SEAT BELT LIGHT, SEAT BELT WARNING BUZZER, FUEL PUMP
  - F5. (4 AMP) INSTRUMENT PANEL ILLUMINATION
  - F6. (14 AMP) HEATER BLOWER
  - F7. (20 AMP) R.P.O. ACCESSORY FUSE  
POWER WINDOWS  
POWER BACK LITE
- PARK BRAKE WARNING LAMP  
REAR WINDOW DEFOGGER  
HEATED BACK LITE  
CORNERING LAMP  
\* SPEED CONTROL

\* NOTE: HAS A (5-AMP) IN-LINE FUSE ALSO

FUSE LINKS LOCATION  
MAIN POWER FEED  
TRAILER TOWING FEED

FIRST 6" OF WIRE FROM STARTER SOLENOID  
FIRST 6" OF WIRE FROM STARTER SOLENOID

CIRCUIT BREAKER LOCATIONS

- 1. (15 AMP) TAIL AND PARKING LAMP PART OF LIGHT SWITCH
  - 2. (18 AMP) HEADLAMP PART OF LIGHT SWITCH
  - 3. (15 AMP) STOP LAMP MOUNTED ON 1/P RELAY PNL
  - 4. (30 AMP) A/C OR ATC MOUNTED ON 1/P RELAY PNL
  - 5. (20 AMP) POWER FEED MOUNTED ON STARTER SOLENOID
  - 6. (7-1/2 AMP) DECK LID RELEASE MOUNTED ON 1/P FLANGE
- FOR R.P.O.:  
POWER SEAT NEAR GLOVE BOX  
POWER WINDOWS  
POWER BACK LITE  
POWER TOP  
HEATED BACK LITE  
SEAT BACK LATCH

WIRING COLOR CODE KEY  
PRIMARY COLORS

BLACK	BK	DK BLUE	DB
BROWN	BR	LT BLUE	LB
TAN	T	PURPLE	P
RED	R	GRAY	GY
PINK	PK	WHITE	W
ORANGE	O		
YELLOW	Y	HASH	(H)
DK GREEN	DG	DOT	(D)
LT GREEN	LG		

BULB CHART

LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
BACK-UP	32	1076
DOOR COURTESY	6	232
FRONT CORNERING	50	1196
FRONT AND REAR MARKER	1	161
FRONT AND PARK/TURN SIGNAL	32-3	1157-A
HEADLAMP HI AND LO BEAM	50-37.5	4001
HEADLAMP LO BEAM	39.5	4002
LICENSE PLATE	4	97
TAIL, STOP AND TURN	32-3	1157
CLUSTER ILLUMINATION	2	194
HI BEAM INDICATOR	2	194
TURN INDICATOR	2	194
HEATER OR A/C ILLUMINATION	2	1895
HEATED BACKLITE INDICATOR	.50	DIAB-1806
RADIO PILOT LIGHT	1.9	1893
PRNDL LAMP	.7	1445
ASH TRAY ILLUMINATION	.7	1892
DUAL BRAKE WARNING	2	194
LUGGAGE COMPARTMENT LAMP	6	631
INSTRUMENT PANEL COURTESY LAMP	6	631
SEAT BELT WARNING	2	194
PARK BRAKE WARNING	2	194
DOME LAMP	12	105
CARGO LAMP	12	105
GLOVE BOX LAMP	3	1816

COMPONENT	LOCATION
AIR CONDITIONER - ATC	F-142
- MANUAL	C-131
ALTERNATOR	C-8
CIGAR LIGHTERS - FRONT	K-65
CLOCK	C-64
ELECTRONIC SPARK CONTROL	D-13
FLASHER - EMERGENCY WARNING	D-42
TURN SIGNAL	E-42
ELECTROVAC SOLENOID	J-87
TAILGATE WASHER TIMER	F-120
FUEL GAUGE	F-29
ALTERNATOR REGULATOR	G-9
HEATED BACKLITE	J-24
CARBURETOR SOLENOID	G-14
HORNS	J-31
IGNITION COIL	F-3
INSTRUMENT VOLTAGE REGULATOR	C-29
DISTRIBUTOR	K-2
ILLUMINATORS ASH TRAY	J-64
CLUSTER	G-64
HEATER - A/C - ATC	D-64
PRNDL	G-64
RADIO	H-64
GLOVE BOX	E-61
INDICATORS	
CHARGING	C-12
DUAL BRAKE WARNING	H-17
HEATED BACK LITE	J-27
HIGH BEAM	G-44
LEFT TURN	G-38
OIL PRESSURE	H-19
PARKING BRAKE WARNING	E-21
RIGHT TURN	G-39
TEMPERATURE	H-18
SEAT BELT WARNING SYSTEM	D-21
KEY WARNING BUZZER	H-77
LAMPS	
GLOVE BOX	E-61
BACK-UP	G-68
CARGO	J-79
CORNERING	K-36
DOOR COURTESY	D-85
DOME	J-80
FOOTWELL COURTESY	D-85
HEADLAMPS	K-41
LICENSE PLATE	K-51
LUGGAGE COMPARTMENT	J-76
PARKING	K-42
REAR (FORD)	F-46
REAR (METEOR)	K-46
SIDE MARKER-FRONT	K-43
REAR (FORD)	D-53
REAR (METEOR)	G-53
MOTORS	
AIR CONDITIONER	D-128
DEFOGGER - REAR WINDOW	J-23
HEATER BLOWER	J-104
POWER SEAT	K-107
POWER WINDOWS	K-155
FRONT DOORS	L-161
REAR DOORS	K-364
REAR QUARTERS	K-116
BACK LIGHT	F-95
WINDSHIELD WASHER	K-119
BACKLITE WASHER	J-110
TOP CONTROL	J-98
WINDSHIELD WIPER	F-100
WINDSHIELD WIPER & GOVERNOR	K-116
POWER TAILGATE	H-4
FUEL PUMP	H-4
RADIOS	
AM	C-75
AM & FADER	E-74
AM- & STEREO TAPE UNIT	C-71
AM-FM MULTIPLEX	C-69
AM STEREO FADER	E-72
AM & STEREO SPEAKERS	G-70, G-74, J-70, J-74
AM-FM MULTIPLEX WIRING (MODEL 76)	E-70
AM & STEREO TAPE WIRING (MODEL 76)	G-73
RELAYS	
BACKLITE WASHER	E-120
CORNERING LAMPS (R.H.)	J-34
CORNERING LAMPS (L.H.)	H-34
HORN	D-34
SEAT BACK LATCH	H-83
SEAT BELT WARNING	J-22
HEATED BACKLITE	G-26
WINDOW SAFETY	B-152
ATC	D-125
POLICE	E-8
STATION WAGON WASHER	E-120
SENDERS	
FUEL GAUGE	J-29
OIL PRESSURE	K-19
WATER TEMPERATURE	K-18
SENSORS	
AMBIENT ON ENGINE COMPT.J	G-132
AMBIENT ON CAR	G-128
SPEED CONTROL	G-36
SPEEDOMETER	G-12
SEAT BACK LATCH SYSTEM	J-85
SPEED CONTROL SYSTEM	E-37
STARTER SYSTEM	
STARTING MOTOR RELAY	C-6
STARTER MOTOR	H-5
DECK LID RELEASE SYSTEM	E-113
TRAILER TOWING PKG	F-57
DOOR LOCK SYSTEM	H-88
SWITCHES	
SEAT BELT	K-22
SEAT SENSOR	J-22
AIR CONDITIONER CONTROL - MANUAL	C-130
- ATC	K-124
BACKUP LAMP	C-68
BACK LITE WASHER	D-120
COURTESY LAMP-FRONT	E-78
-REAR	G-87
DEFOGGER	D-23
DE-ICER	E-132
DUAL BRAKE WARNING	K-17
GLOVE BOX	G-62
EMERGENCY WARNING	C-39
HEADLAMP DIMMER	G-43
HEATED BACK LITE	D-26
HEATER	F-103
IGNITION	E-18
LIGHT	D-44
KEY WARNING BUZZER	J-77
PARK BRAKE WARNING	F-21
POWER SEAT	F-108
POWER WINDOWS	
FRONT DOOR	G-155
REAR DOOR	G-161
REAR QUARTER	G-164
SPEED CONTROL	C-37
STOP LAMP	D-59
SEAT BACK LATCH	F-87
TAILGATE LIMIT	G-115
TAILGATE WDO SW (HST PNL MTD)	C-113
ELECTRIC FUEL PUMP	E-6
TOP CONTROL	E-110
TURN SIGNAL	C-39
WINDSHIELD WASHER	D-94
WINDSHIELD WIPER	C-93
WINDOW LOCK OUT	C-162
WATER TEMP. A.T.C.	K-132
ELECTROVAC DOOR LOCKS	J-89
HORNS	C-32
DECK LID RELEASE	E-113
VOLTAGE REGULATOR	G-10

1972 FORD-METEOR


PAGE 1 OF 7  
INDEX


Form 7795P-72C

7-1-71

WIRE CONNECTOR CODE				WIRE CONNECTOR CODE				GROUND CODES	
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION
C-1 14401 ASSY. * 262 BR-PK R.H. FENDER APRON STARTING MOTOR RELAY "IGN" TERM.	C-6 14289 ASSY. 14401 ASSY. 39 R-W 31 W-R 16 R-LG 262 BR-PK 247 B-Y (H) 39 R-W 31 W-R 16 R-LG 14401 ASSY. 262 BR-PK 244 Y-W (H) 347A B-Y (H) 14289 ASSY. CENTER OF DASH PANEL (ENGINE COMPARTMENT)	C-11 14401 ASSY. 977 P-W 640 R-Y (H) 39 R-W 31 W-R 2970-B-LG (H) 48 BLIND CIRCUIT 29 Y-W 57E-BK 34-LG-W 31G-W 57F-BK 12A-LG-BK 2-W-LB 19B-LB-R 19C-LB-R 640A R-Y (H) 2A W-LB REAR OF INSTRUMENT CLUSTER	C-18 15883 ASSY. 162 LG-R (D) LOWER L.H. COWL SIDE AT TOP OF PARKING BRAKE SWITCH	C-25 14401 ASSY. 53A-BK-LB 53 BK-LB 29 Y-W 14 BR 14A-BR 54A-LG-Y 54B-LG-R-Y 50-LB 520P-W (H) 14405 ASSY. UNDER CARPET, NEXT TO FOOT DIMMER SWITCH	C-164 18C617 ASSY. 57BK WARNING LIGHT BEHIND HEATER SWITCH	C-169 C808-14488-A TO BE USED WHEN (4) OR MORE OPTIONS ARE REQD. 14A200 298 P-O (H) 9A839 298 P-O (H) 18C617 298 P-O (H) 18C496 298 P-O (H) 15883 11A004 298 P-O (H) 14290 298 P-O (H) 14A318 298 P-O (H) 298 P-O (H) TO FUSE PANEL ACCY. STUD NEAR FUSE PANEL ACCY. STUD	C-201 14401 ELECTRIC SPARK SWITCH R.H. SIDE OF I/P BEHIND GLOVE BOX 369 BR-O (H) 81 BRN-Y (D) 934 TAN-W (H) 57-BK	C-207 9D866 * 640 R-Y (H) 640A R-Y (H) P.V.S. SWITCH FRONT OF ENGINE BY DISTRIBUTOR	C-213 14401 ASSY. SEAT BELT WARNING LAMP 469A LG 640CR-Y (H) 640D R-Y (H) BEHIND SEAT BELT WARNING LIGHT
C-2 14305 ASSY. 35 O-LB 4 W-BK 36 Y-W (D) 904 LG-R 36A Y-W (D) R.H. RADIATOR SUPPORT VOLTAGE REGULATOR	C-7 14289 ASSY. * 16 R-LG FRONT OF ENGINE (IGNITION COIL)	C-12 14401 ASSY. 57B-BK 977A-P-W 297 B-LG (H) 904 LG-R 32 R-LB 16A-R-LG 370-BK-O 39A-R-W UNDER STEERING COLUMN	C-20 18C496 ASSY. 298 P-O (H) 48 BLIND CIRCUIT 687B GY-Y 687 GY-Y LOWER L.H. INSTRUMENT PANEL REAR OF HEATER, A/C OR A.T.C. (CONTROL HEAD)	C-26 14405 ASSY. 57 BK CENTER OF FUEL TANK, FORWARD OF REAR AXLE	C-165 18C617 ASSY. 687 GY-Y 687A GY-Y 112 BK-Y (D) 37Y DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	C-202 14401 57A 57A BK 57 934 SPEED CABLE SENSOR CENTER OF DASH PANEL IN ENGINE COMPARTMENT 57A BK 934 TAN-W (H) 12K454 ASSY.	C-208 11A004 ASSY. POLICE ACC. FEED 687 GY-Y R.H. SIDE OF FUSE BOX	C-214 14405 ASSY. 9A350 787 57 787P-BK (H) 57 BK CENTER OF FUEL TANK NEAR SENDING UNIT	C-215 14405 ASSY. 11A004 9D866 640B R-Y (H)
C-3 14401 ASSY. * 32 R-LB R.H. FENDER APRON STARTING MOTOR RELAY "S" TERM.	C-8 14401 ASSY. * 977 P-W 977A P-W DUAL BRAKE VALVE L.H. FENDER APRON	C-14 9A350 ASSY. 787PK-BK (H) 57BK ELECTRIC FUEL PUMP CENTER TOP OF FUEL TANK	C-21 18C394 ASSY. 18C496 ASSY. OR 18C617 ASSY. 687 GY-Y CENTER OF INSTRUMENT PANEL CRASH PAD, BELOW RADIO SPEAKER OPENING	C-40 14401 ASSY. 14A BR 941 BK-W 1 DB 13 B-K 904A LG-R 12 LG-BK 3A LG-W 2A W-LG 904 LG-R 44290 ASSY. BEHIND FUSE PANEL	C-166 18C617 ASSY. * 688 GY-LB DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	C-203 14401 640B R-Y (H) 640R-Y (H) 369 BR-O (H) 9D857 OR 9D566 CENTER OF DASH PANEL IN ENGINE COMPARTMENT 9D857 OR 9D566	C-209 11A004 ASSY. 14431 ASSY. 596 596 B-O (D) LOCATED AT STARTER SOLENOID (R.H. FENDER APRON)	C-210 14405 ASSY. * RETRACTOR SWITCH 520 P-W (H) R.H. & L.H. SEAT BELT RETRACTOR FRONT	C-211 14405 SEAT SENSOR 520-A-P-WH 520-C-P-WH UNDER R.H. FRONT SEAT
C-4 14305 ASSY. 904 LG-R R.H. RADIATOR SUPPORT NEAR VOLTAGE REGULATOR	C-9 14289 ASSY. * 39 R-W ENGINE WATER TEMP. SENDER	C-15 11A004 ASSY. 787 P-BK (H) 640 R-Y (H) 596 BK-O (D) FUEL PUMP SAFETY SWITCH R.H. REAR OF ENGINE	C-22 18C619 ASSY. OR 18C436 ASSY. 687 GY-Y UNDER L.H. SIDE OF PACKAGE TRAY	C-71 14401 296A W-P 296 W-P 469 LG 520 P-W (H) 140 BK-PK UNDER STEERING COLUMN PASSENGER COMPARTMENT	C-168 18C617 ASSY. * 298 P-O (H) 688 GY-LB 112 BK-Y (D) BEHIND HEATER SWITCH	C-171 14305 ASSY. * 36A Y-W (D) NEAR ALTERNATOR REGULATOR	C-204 * VACUUM SOLENOID VALVE 369 BR-O (H) 81 BRN-Y (D) 9D857 OR 9D866 OR 9D866 OR 14289 ASSY. L.H. FRONT OF ENGINE 14289 ASSY.	C-210 14405 ASSY. * RETRACTOR SWITCH 520 P-W (H) R.H. & L.H. SEAT BELT RETRACTOR FRONT	C-211 14405 SEAT SENSOR 520-A-P-WH 520-C-P-WH UNDER R.H. FRONT SEAT
C-5 11A004 14405 ASSY. 787 11A004 ASSY. PK-BK (H) LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	C-10 14289 ASSY. * 31 W-R ENGINE OIL PRESSURE SENDER	C-17 11A004 ASSY. 298 P-000 687 O-BK (D) 38A BK-O CENTER OF DASH PANEL ENGINE COMPARTMENT	C-23 18C618 ASSY. 687 GY-Y UNDER L.H. REAR WINDOW GARNISH MOULDING	C-123 14A200 OR 15569 ASSY. 517 BK-W CENTER OF COWL UNDER CRASH PAD	C-163 18C617 ASSY. 687A GY-Y WARNING LIGHT BEHIND HEATER SWITCH	C-199 14401 OR 12K454 369 BR-O (H) 640R-Y (H) EMISSION CONTROL TEMPERATURE SENSOR R.H. SIDE OF I/P BEHIND GLOVE BOX	C-205 81-BRN-Y (D) 9D857 OR 9D866 OR 14289 ASSY. REAR OF ENGINE 81-BRN-Y (D) 12K454 OR 9E717	C-210 14405 ASSY. * RETRACTOR SWITCH 520 P-W (H) R.H. & L.H. SEAT BELT RETRACTOR FRONT	C-211 14405 SEAT SENSOR 520-A-P-WH 520-C-P-WH UNDER R.H. FRONT SEAT
			C-24 18C618 ASSY. 57 BK UNDER R.H. REAR WINDOW GARNISH MOULDING	C-200 14401 12K454 369A BR-O (H) 640 R-Y (H) R.H. SIDE OF I/P BEHIND GLOVE BOX		C-200 14401 12K454 369A BR-O (H) 640 R-Y (H) R.H. SIDE OF I/P BEHIND GLOVE BOX	C-206 * THROTTLE POSITIONER SOLENOID AT CARBURETOR BASE 640 R-Y (H) 640A R-Y (H) 9D866 9D857 14289	C-210 14405 ASSY. * RETRACTOR SWITCH 520 P-W (H) R.H. & L.H. SEAT BELT RETRACTOR FRONT	C-211 14405 SEAT SENSOR 520-A-P-WH 520-C-P-WH UNDER R.H. FRONT SEAT

GROUND CODES	
GROUND	LOCATION
G-1	EYELET ATTACHED TO ENGINE BLOCK.
G-3	EYELET ATTACHED TO QUARTER PANEL WHEELHOUSE BRACE.
G-5	EYELET ATTACHED TO REAR SEAT STRAINER L.H. SIDE.
G-18	EYELET ATTACHED TO PACKAGE TRAY.
G-19	EYELET ATTACHED TO PACKAGE TRAY ON SEDAN #3 CROSS MEMBER ON WAGON
G-24	EYELET ATTACHED ON ENGINE BLOCK
G-20	EYELET ATTACHED AT LOWER FLANGE OF I/P.
G-23	EYELET ATTACHED TO PACKAGE TRAY.
G-25	EYELET ATTACHED TO DASH PANEL
G-26	EYELET ATTACHED TO ALTERNATOR REGULATOR MOUNTING SCREW.
SPLICE CODES	
S-1	IN 14A346 ASSY. 6" FROM STARTER SOLENOID.
S-4	IN 14401 ASSY. 9" FROM STARTER MOTOR RELAY.
S-2	IN 14401 ASSY. 9" FROM STARTER MOTOR RELAY.
S-3	IN 14A305 9" FROM STARTER SOLENOID.
S-5	IN 14401 WIRING ASSY. NEAR CENTER OF INSTRUMENT CLUSTER.
S-6	IN 14401 WIRING ASSY. NEAR LIGHT SWITCH.
S-12	IN 14405 BY L.H. SEAT BELT RETRACTOR.
S-33	IN 14A200 WIRING ASSY. ENGINE COMPARTMENT NEAR POWER WINDOW RELAY.
WIRE CODE	
 ————— DIRECT TO BATTERY - - - - - TO IGNITION SWITCH	
MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION	
<b>1972 FORD-METEOR</b> PAGE 2 OF 7 LOCATION NUMBERS 1 THROUGH 35	

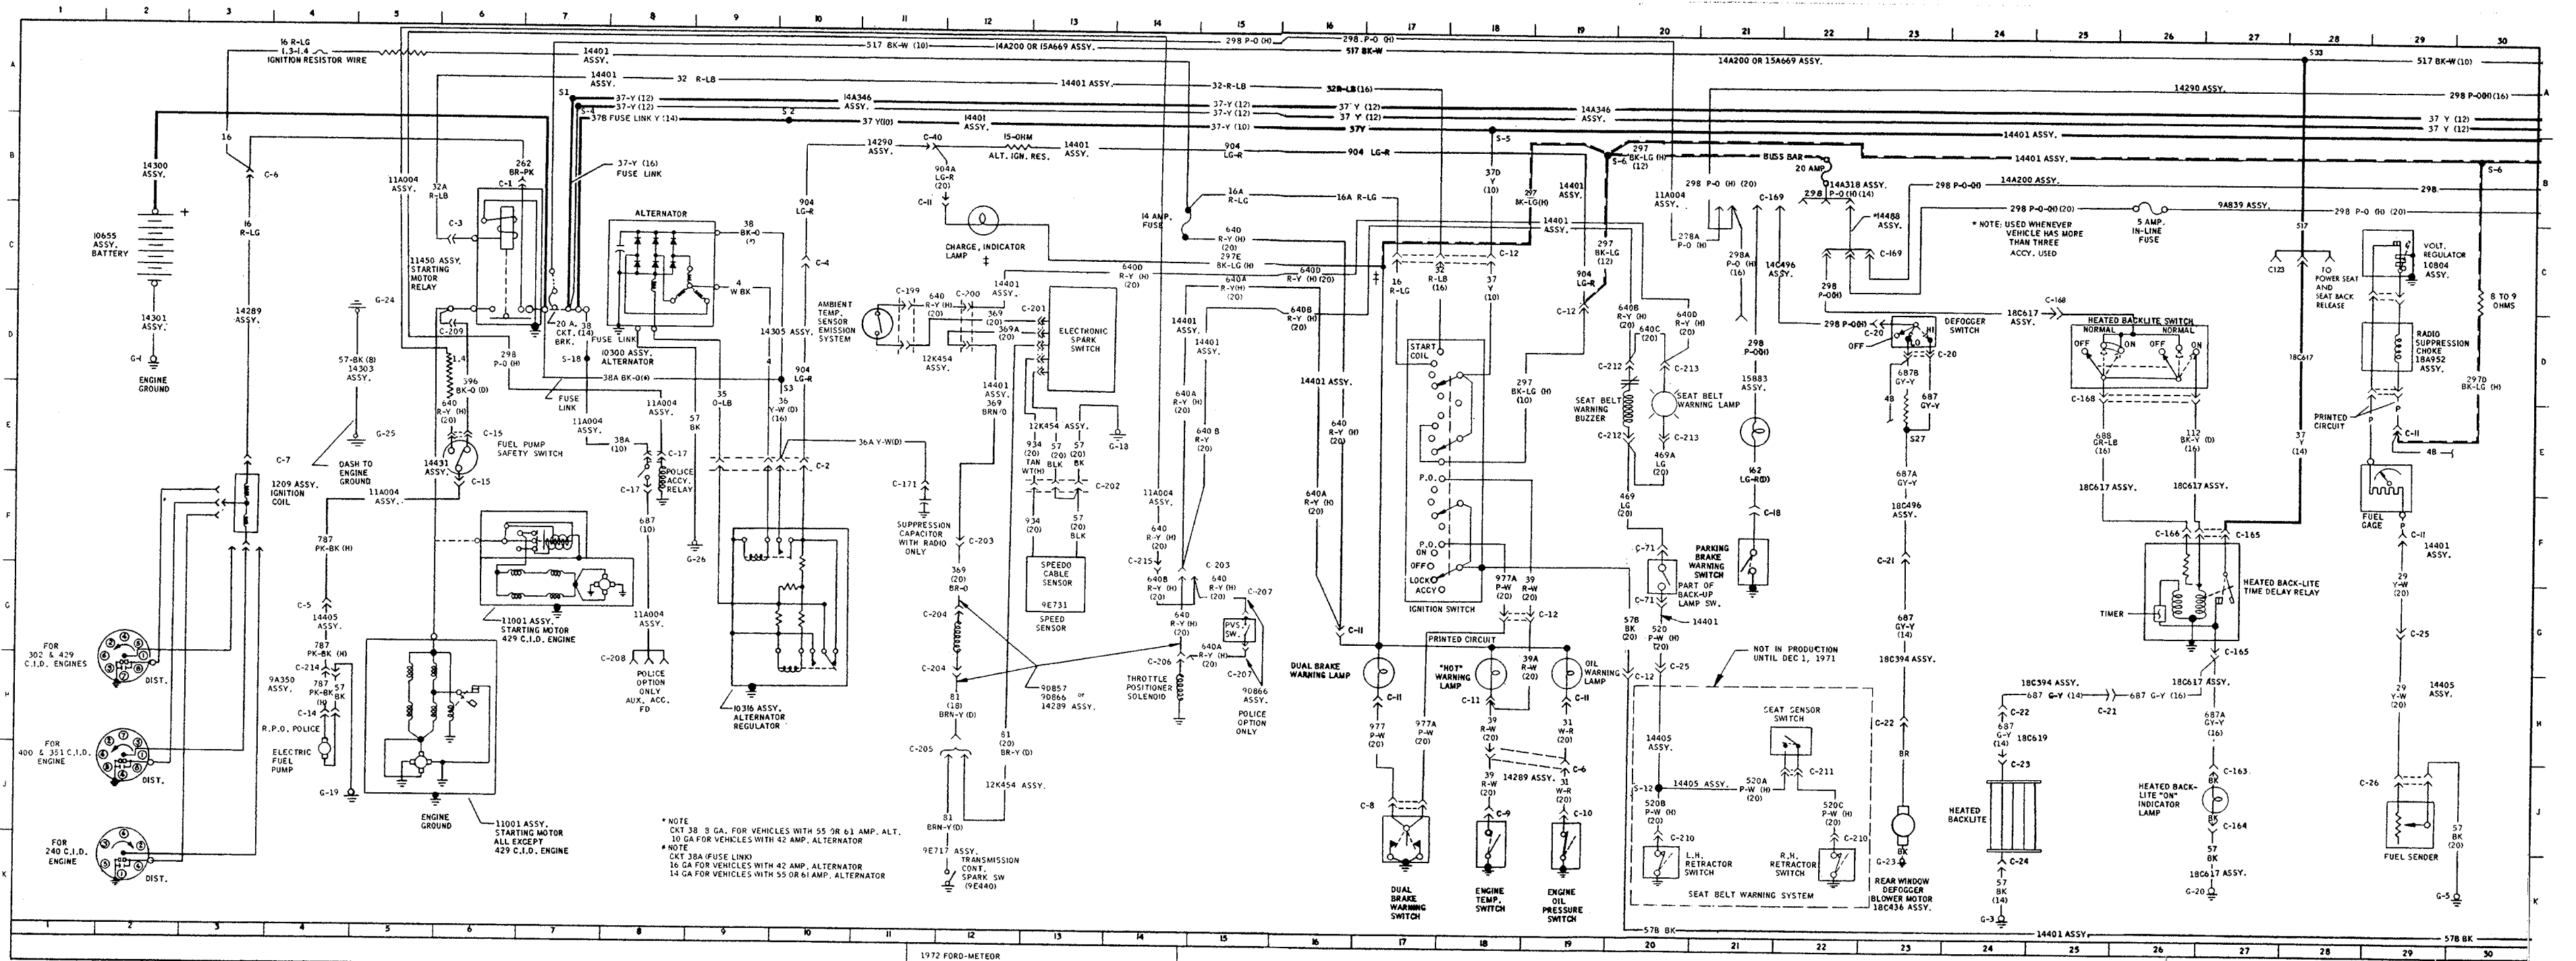

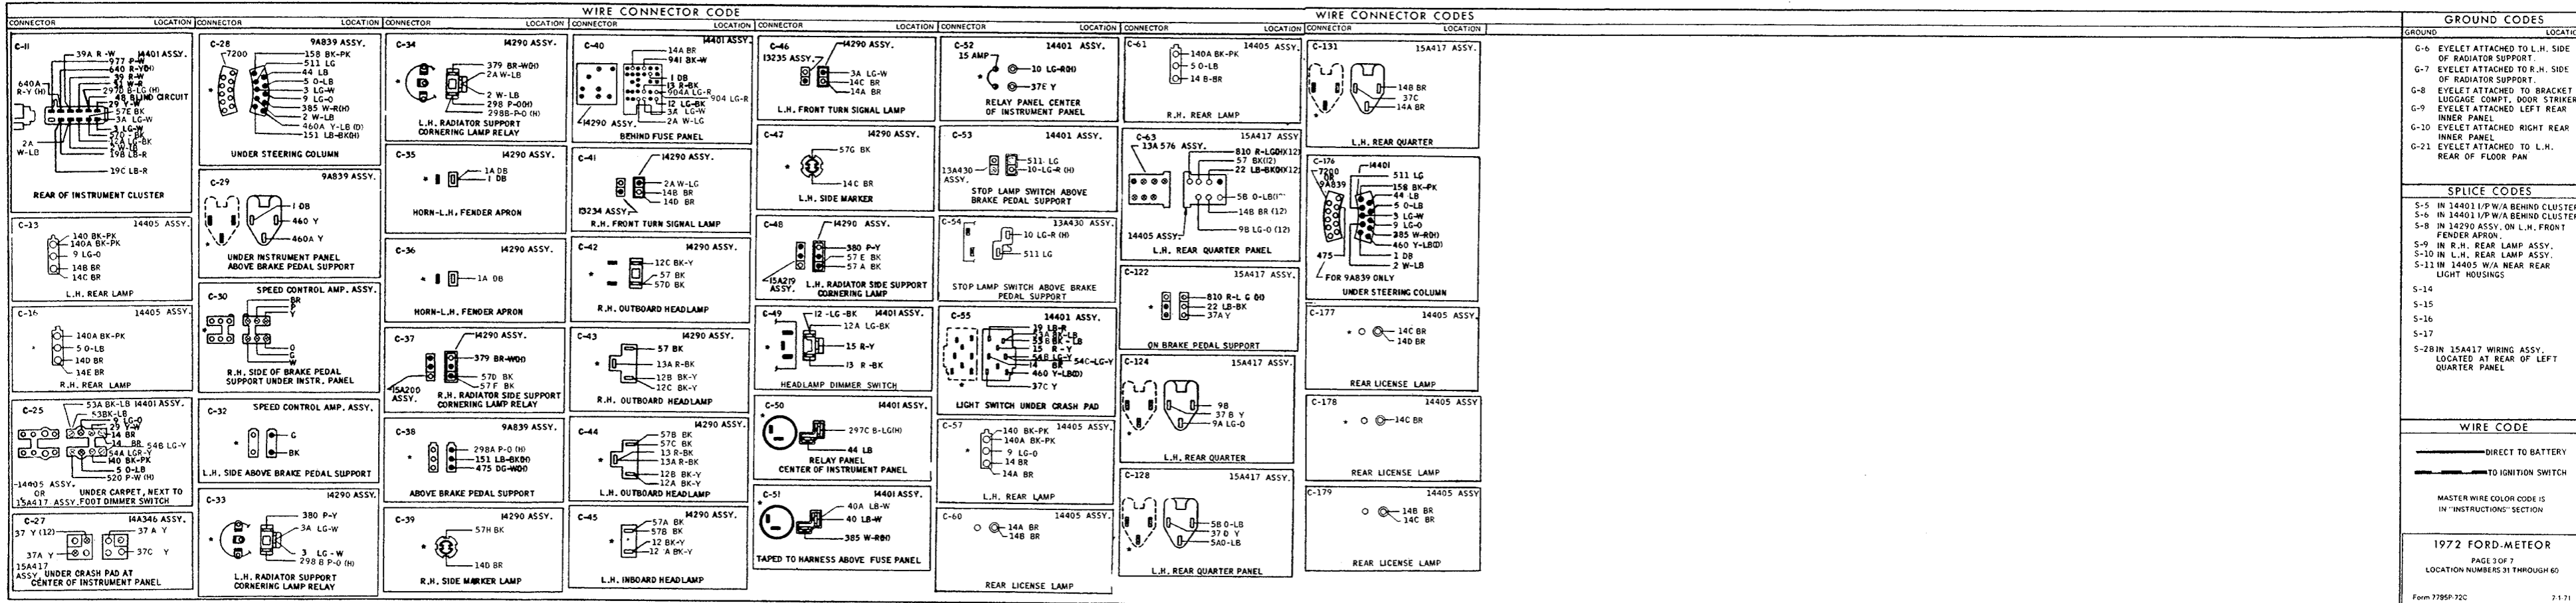


GROUND CODES	
GROUND	LOCATION
G-6	EYELET ATTACHED TO L.H. SIDE OF RADIATOR SUPPORT.
G-7	EYELET ATTACHED TO R.H. SIDE OF RADIATOR SUPPORT.
G-8	EYELET ATTACHED TO BRACKET LUGGAGE COMPT. DOOR STRIKER
G-9	EYELET ATTACHED LEFT REAR INNER PANEL
G-10	EYELET ATTACHED RIGHT REAR INNER PANEL
G-21	EYELET ATTACHED TO L.H. REAR OF FLOOR PAN

SPLICE CODES	
S-5	IN 14401 1/P/W/A BEHIND CLUSTER
S-6	IN 14401 1/P/W/A BEHIND CLUSTER
S-8	IN 14290 ASSY. ON L.H. FRONT FENDER APRON
S-9	IN R.H. REAR LAMP ASSY.
S-10	IN L.H. REAR LAMP ASSY.
S-11	IN 14405 W/A NEAR REAR LIGHT HOUSINGS
S-14	
S-15	
S-16	
S-17	
S-28	IN 15A417 WIRING ASSY. LOCATED AT REAR OF LEFT QUARTER PANEL

WIRE CODE	
	DIRECT TO BATTERY
	TO IGNITION SWITCH
MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION	

1972 FORD-METEOR  
 PAGE 3 OF 7  
 LOCATION NUMBERS 31 THROUGH 60  
 Form 7795P-72C 7-71

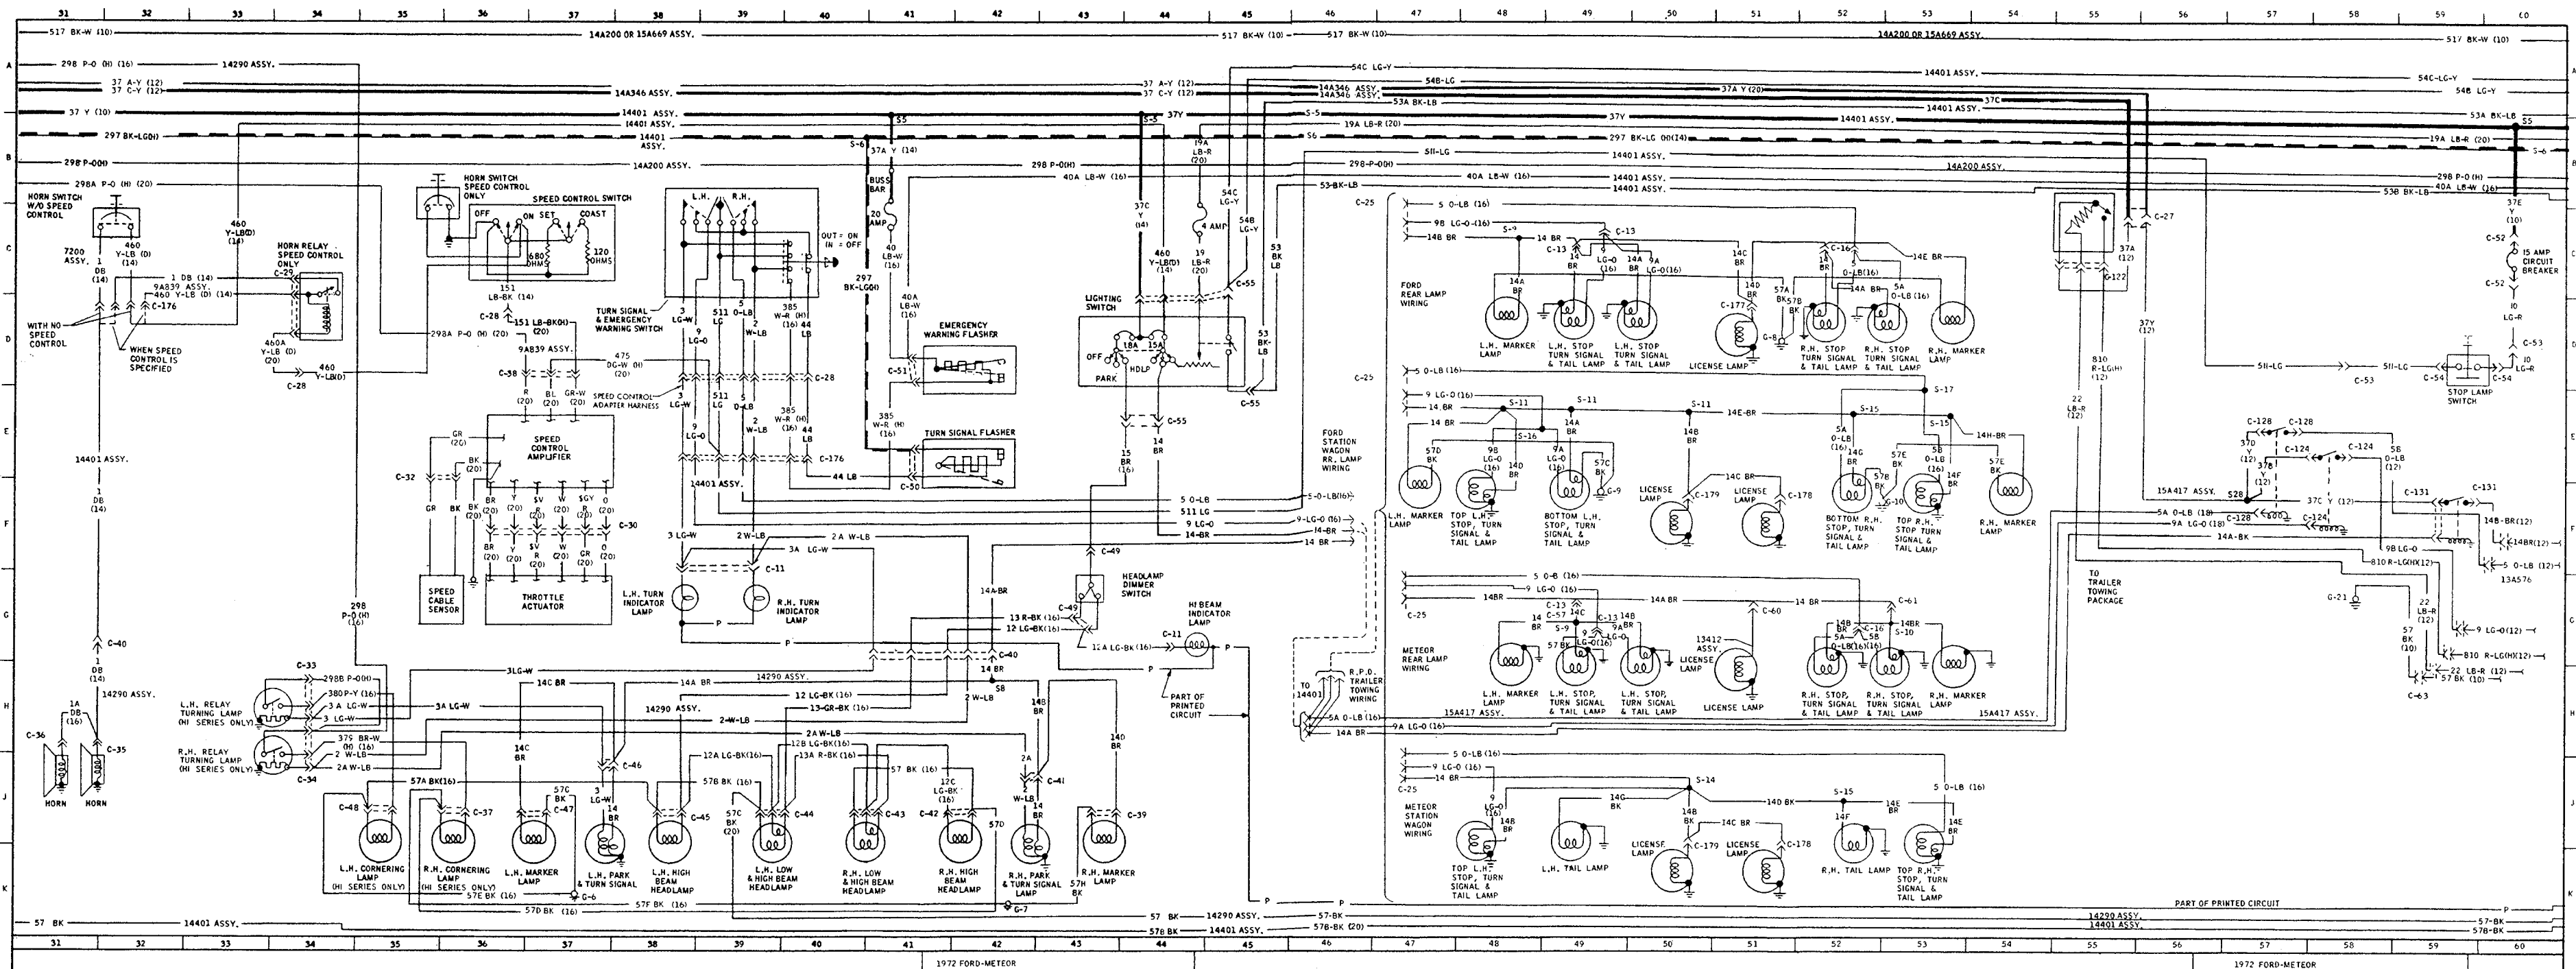

WIRE CONNECTOR CODES												GROUND CODES							
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION		
<b>C-II</b> 	14401 ASSY. 48 BLIND CIRCUIT REAR OF INSTRUMENT CLUSTER	<b>C-31</b> 	14401 BEHIND HEATER SWITCH	<b>C-66</b> 	14401 ASSY. UNDER INSTRUMENT PANEL AT CIGAR LIGHTER	<b>C-76</b> 	15A006 ASSY. ABOVE GLOVE BOX	<b>C-102</b> 	14401 ASSY. RELAY PANEL CENTER OF THE INST. PANEL	<b>C-108</b> 	14401 ASSY. ABOVE GLOVE BOX (R.H.) ABOVE FUSE BLOCK (L.H.)	<b>C-114</b> 	148724 ASSY. UNDER L.H. FRONT SEAT	<b>C-121</b> 	14405 ASSY. * LUGGAGE COMPT. LAMP	<b>C-181</b> 	138711 ASSY. R.H. & L.H. FRONT DOOR BEHIND CURT. LAMP	<b>C-198</b> 	65220A13 ASSY. OR 65220A12 ASSY. R.H. & L.H. FRONT DOOR BEHIND CURT. LAMP
<b>C-13</b> 	14405 ASSY. L.H. REAR LAMP	<b>C-56</b> 	14401 ASSY. R.H. SIDE OF INSTRUMENT PANEL, ABOVE GLOVE BOX	<b>C-67</b> 	14401 ASSY. UNDER INSTRUMENT PANEL AT CIGAR LIGHTER	<b>C-96</b> 	19A017 ASSY. UNDER PACKAGE TRAY R.H. SIDE	<b>C-103</b> 	19A017 ASSY. 19A123 ASSY. OR AM STEREO TAPE AT REAR OF RADIO CHASSIS	<b>C-109</b> 	14401 ASSY. ABOVE GLOVE BOX (R.H.) ABOVE FUSE BLOCK (L.H.)	<b>C-115</b> 	R.H. 14C691 ASSY. L.H. 14C693 ASSY. R.H. & L.H. SEAT CUSHIONS	<b>C-149</b> 	14631 ASSY. UNDER L.H. SIDE OF INST. PANEL	<b>C-182</b> 	148724 ASSY. 14401 ASSY. R.H. OR L.H. UPPER COWL SIDES	<b>C-194</b> 	19A123 ASSY. RADIO
<b>C-16</b> 	14405 ASSY. R.H. REAR LAMP	<b>C-58</b> 	14401 ASSY. R.H. SIDE OF INSTRUMENT PANEL, ABOVE GLOVE BOX	<b>C-68</b> 	14401 ASSY. UNDER INSTRUMENT PANEL AT REAR OF ASH TRAY	<b>C-97</b> 	19A017 ASSY. UNDER PACKAGE TRAY L.H. SIDE	<b>C104</b> 	19A017 ASSY. OR AM-FM MULTIPLEX INSTRUMENT PANEL AT L.H. REAR OF RADIO CHASSIS	<b>C-110</b> 	138711 ASSY. L.H. INSTRUMENT PANEL COURTESY LAMP	<b>C-116</b> 	13A724 ASSY. BEHIND "B" PILLAR TRIM PANEL	<b>C-159</b> 	14405 ASSY. UNDER L.H. INST. PANEL AT COWL	<b>C-184</b> 	65220A12 OR 65220A13 ASSY. R.H. & L.H. FRONT DOOR LOCK CONTROL ROD	<b>C-195</b> 	18972 ASSY. R.H. & L.H. FRONT DOOR LOCK CONTROL ROD
<b>C-25</b> 	14401 ASSY. UNDER CARPET NEXT TO HEADLAMP DIMMER SWITCH	<b>C-59</b> 	15A006 ASSY. L.H. SIDE OF INSTRUMENT PANEL, BEHIND CLOCK	<b>C-69</b> 	14401 ASSY. UNDER INSTRUMENT, REAR OF RADIO CHASSIS	<b>C-98</b> 	14574 ASSY. UNDER PACKAGE TRAY L.H. SIDE	<b>C-105</b> 	14574 ASSY. INSTRUMENT PANEL AT L.H. REAR OF RADIO CHASSIS	<b>C-111</b> 	14630 & 14631 ASSY. OR 13A769 OR 138768 UNDER FRONT DOOR TRIM PANELS	<b>C-117</b> 	14405 ASSY. OR 14334 L.H. SIDE UNDER PACKAGE TRAY OR L.H. QUARTER ON STATION WAGON MODEL	<b>C-176</b> 	14401 FOR 9A839 ONLY UNDER STEERING COLUMN	<b>C-185</b> 	65220A12 ASSY. R.H. DASH PANEL BEHIND GLOVE BOX	<b>C-196</b> 	19A041 ASSY. 14630 OR 15629 OR 13A769 ASSY.
<b>C-62</b> 	14401 ASSY. R.H. COWL SIDE	<b>C-70</b> 	14401 ASSY. REAR OF CLUSTER ASSY. BELOW SPEEDOMETER CABLE	<b>C-99</b> 	14547 ASSY. UNDER PACKAGE TRAY R.H. SIDE	<b>C-100</b> 	19A017 ASSY. OR 14A041 ASSY. OR 14630 OR 15629 OR 13A769 ASSY. UPPER COWL TOP INNER R.H. SIDE	<b>C-106</b> 	RADIO CHASSIS INSTRUMENT PANEL AT TOP REAR OF RADIO CHASSIS	<b>C-112</b> 	13A764 ASSY. R.H. & L.H. UPPER COWL SIDES	<b>C-118</b> 	148724 ASSY. UNDER R.H. & L.H. FRONT SEAT	<b>C-120</b> 	14405 ASSY. *STATION WAGON CARGO LAMP	<b>C-186</b> 	65220A12 ASSY. COWL TOP INNER UPPER R.H. BEHIND GLOVE BOX	<b>C-197</b> 	19A041 ASSY. 14630 OR 15629 OR 13A769 ASSY.
<b>C-64</b> 	148724 ASSY. DIODE IN 148724 ASSY.	<b>C-71</b> 	14401 UNDER STEERING COLUMN PASSENGER COMPARTMENT	<b>C-101</b> 	19A017 ASSY. OR 19A041 ASSY. OR 14631 OR 15629 OR 13A769 ASSY. UPPER COWL TOP INNER L.H. SIDE	<b>C-107</b> 	14630 OR 13A769 OR 15629 DOOR OR COWL SIDE SPKR.	<b>C-113</b> 	14630 OR 13A769 OR 15629 R.H. & L.H. UPPER COWL SIDES	<b>C-187</b> 	148724 ASSY. DIODE IN 148724 ASSY.	<b>C-188</b> 	14405 ASSY. *STATION WAGON CARGO LAMP	<b>C-189</b> 	148724 ASSY. DIODE IN 148724 ASSY.	<b>C-198</b> 	14405 ASSY. AT COWL L.H. & R.H.	<b>C-216</b> 	14405 ASSY. UNDER REAR BUMPER

**SPICE CODES**


- S-5 | IN 14401 ASSY. INSTR. PANEL BEHIND CLUSTER
- S-6 | IN 14401 ASSY. INSTR. PANEL BEHIND CLUSTER
- S-7 | IN 14401 ASSY. INSTR. PANEL BEHIND CLUSTER
- S-30 | IN 14405 ASSY. L.H. REAR QUARTER PANEL

**WIRE CODE**

- DIRECT TO BATTERY
- TO IGNITION SWITCH
- MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION

1972 FORD-METEOR  
PAGE 4 OF 7  
LOCATION NUMBERS 61 THROUGH 90



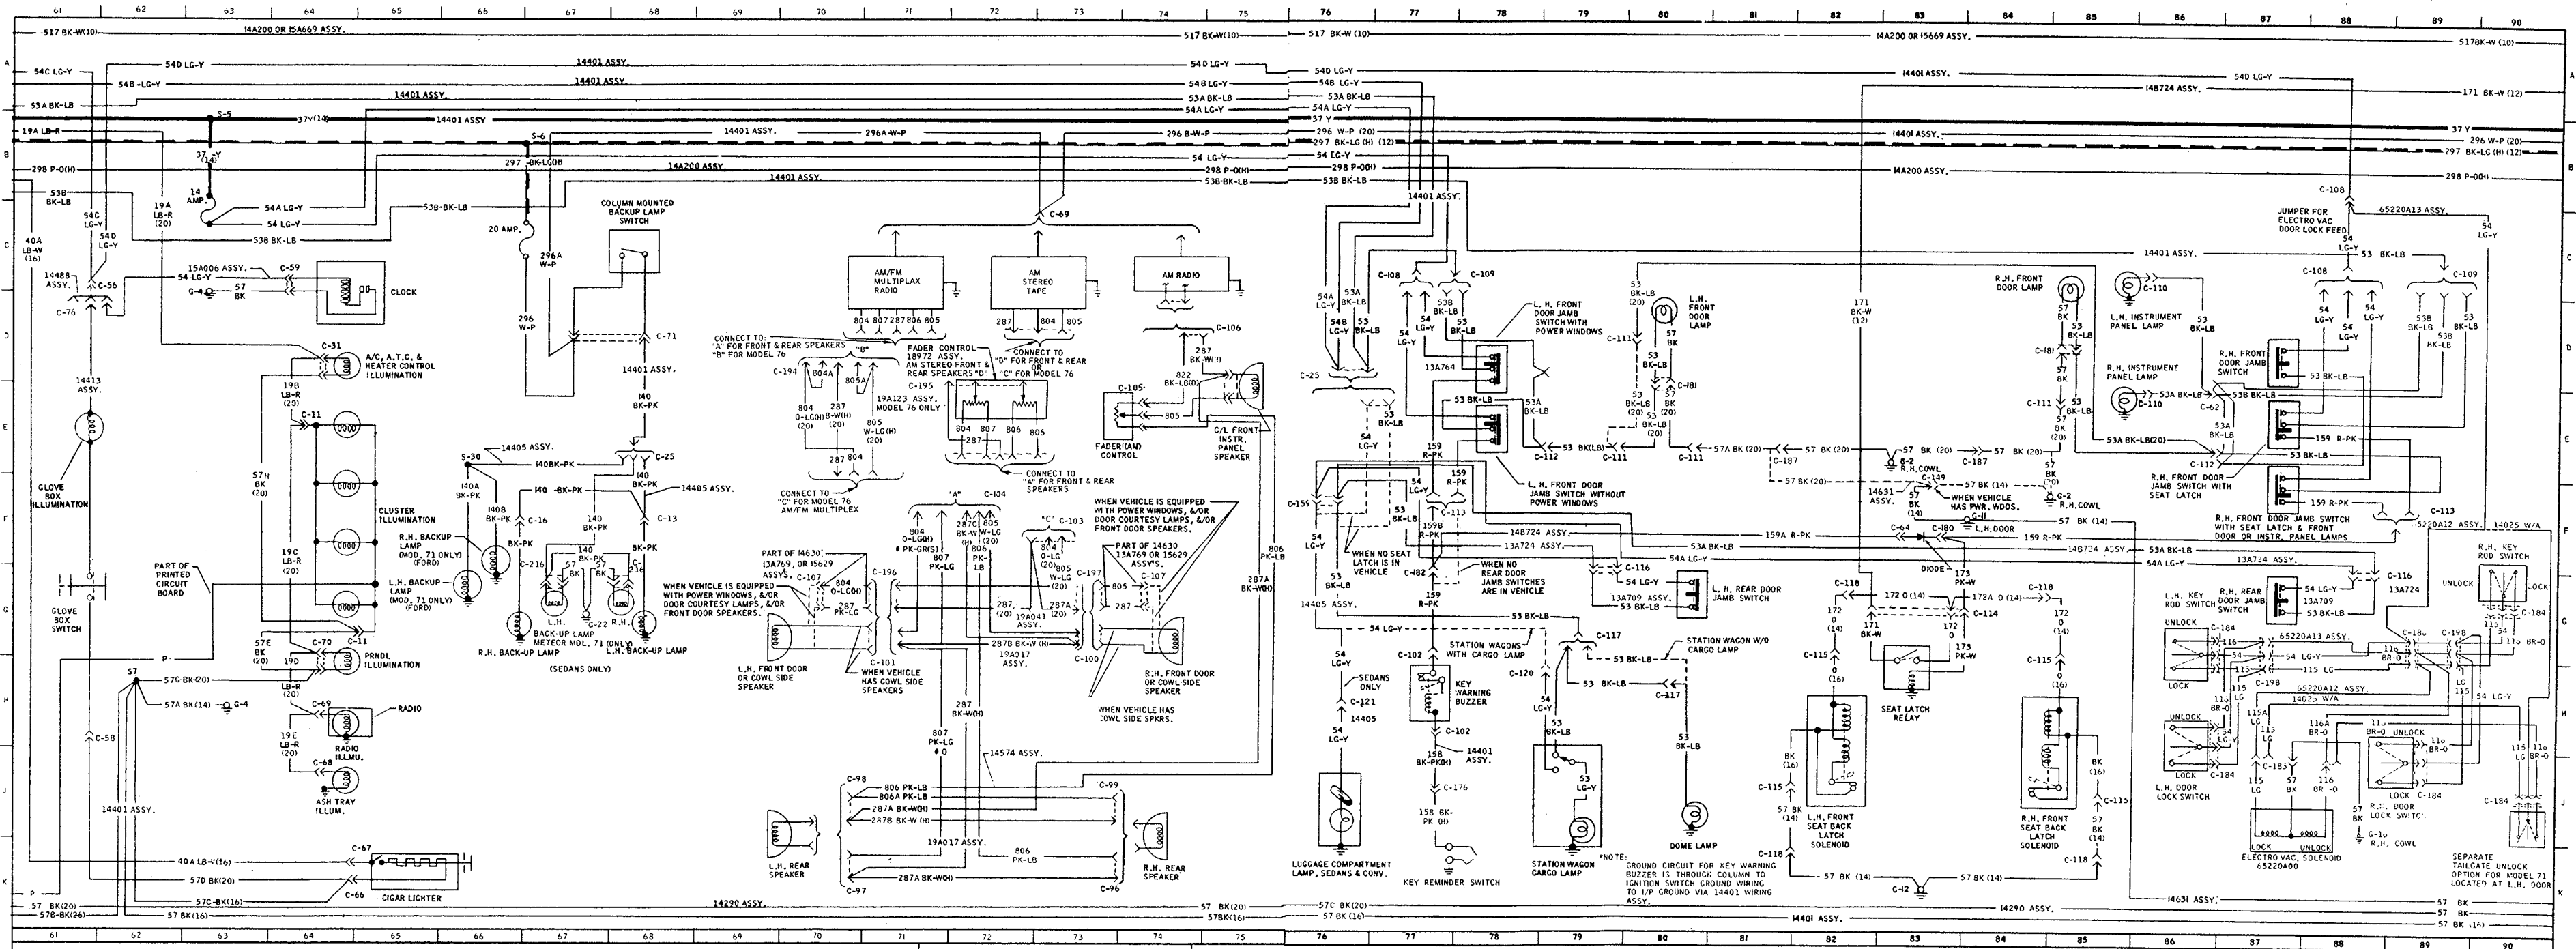

WIRE CONNECTOR CODES										GROUND CODES					
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION		
C-40	14401 ASSY. BEHIND FUSE PANEL	C-80	14401 ASSY.	C-133	17A409 ASSY. L.H. REAR QUARTER PANEL	C-142	14687 ASSY. BEHIND L.H. REAR QUARTER PANEL	C-154	14405 ASSY. L.H. REAR QUARTER	C-161	INTERMITTENT GOVERNOR WIPER SWITCH UNDER CRASH PAD, REAR OF WIPER SWITCH	C-189	19C542 ASSY. BEHIND GLOVE COMPARTMENT	G-4	EYELET ATTACHED TO INSTRUMENT PANEL REINFORCEMENT
C-72	14401 ASSY. L.H. INSTRUMENT PANEL, BEHIND HEATER CONTROL HEAD	C-93	14401 ASSY. L.H. INSTRUMENT PANEL, BEHIND HEATER CONTROL HEAD	C-134	15A690 ASSY. BEHIND HEATER OR A/C CONTROL HEAD	C-143	14A304 ASSY. BEHIND HEATER OR A/C CONTROL HEAD	C-155	14086 ASSY. INSIDE CENTER, TAILGATE	C-162	INTERMITTENT GOV. WIPER SWITCH UNDER CRASH PAD, REAR OF WIPER SWITCH	C-190	19C542 ASSY. BEHIND GLOVE COMPARTMENT	G-12	EYELET ATTACHED TO FRONT FLOOR #2 CROSSMEMBER
C-73	14401 ASSY. ENGINE COMPARTMENT, L.H. DASH PANEL WINDSHIELD WIPER MOTOR	C-94	14401 ASSY. R.H. SIDE OF ENGINE COMPARTMENT HEATER CASE	C-135	15A690 ASSY. UNDER CRASH PAD AT CENTER OF INSTRUMENT PANEL	C-144	14A304 ASSY. UNDER CRASH PAD AT CENTER OF INSTRUMENT PANEL	C-156	14086 ASSY. INSIDE TAILGATE, INNER PANEL, R.H. SIDE	C-191	19C542 ASSY. DECK LID RELEASE SWITCH IN GLOVE COMPARTMENT	C-192	19C542 ASSY. NEAR L.H. HINGE OF DECK LID	G-14	EYELET ATTACHED TO REAR SEAT STRAINER L.H. SIDE
C-74	14401 ASSY. ENGINE COMPARTMENT, L.H. DASH PANEL WINDSHIELD WIPER MOTOR	C-123	14A200 OR 15569 ASSY. CENTER OF COWL UNDER CRASH PAD	C-136	14086 ASSY. INSIDE TAILGATE INNER PANEL AT CENTER	C-145	14A304 ASSY. UNDER CRASH PAD AT CENTER OF INSTRUMENT PANEL	C-157	14A304 ASSY. BEHIND HEATER OR A/C CONT. HEAD	C-193	13A756 ASSY. NEAR LUGGAGE COMPARTMENT LAMP	C-188	19C542 ASSY. CENTER OF COWL UNDER CRASH PAD	G-13	EYELET ATTACHED TO UPPER RIGHT HAND SIDE OF DASH PANEL IN ENGINE COMPT.
C-75	14290 ASSY. L.H. FENDER APRON AT WASHER	C-129	14A698 ASSY. UNDER FRONT SEAT CUSHION	C-137	15A668 ASSY. UNDER REAR SEAT CUSHION	C-153	17A409 ASSY. L.H. REAR QUARTER	C-158	14687 ASSY. L.H. REAR QTR. PANEL	C-183	1487II ASSY. R.H. & L.H. SEAT SIDE SHIELD	C-160	17A409 ASSY. L.H. REAR QTR. PANEL	G-15	EYELET ATTACHED TO L.H. REAR "D" PILLAR
		C-130	14B692 OR 14B711 ASSY. UNDER FRONT SEAT CUSHIONS	C-141	14687 ASSY. INSIDE TAILGATE INNER PANEL LOWER CENTER OF TAILGATE								G-17	EYELET ATTACHED TO L.H. PACKAGE TRAY	

**SPLICE CODES**


- S-5 IN 14401 WIRING ASSY BEHIND INSTRUMENT CLUSTER
- S-6 IN 14401 WIRING ASSY NEAR LIGHT SWITCH
- S-33 IN 14A200 WIRING ASSY. ENGINE COMPARTMENT AT POWER WINDOW RELAY.
- S-35 IN 17A409 ASSY. NEAR CENTER OF INSTRUMENT PANEL

**WIRE CODE**

- DIRECT TO BATTERY
- TO IGNITION SWITCH

MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION


1972 FORD-METEOR  
PAGE 5 OF 7  
LOCATION NUMBERS 91 THROUGH 120

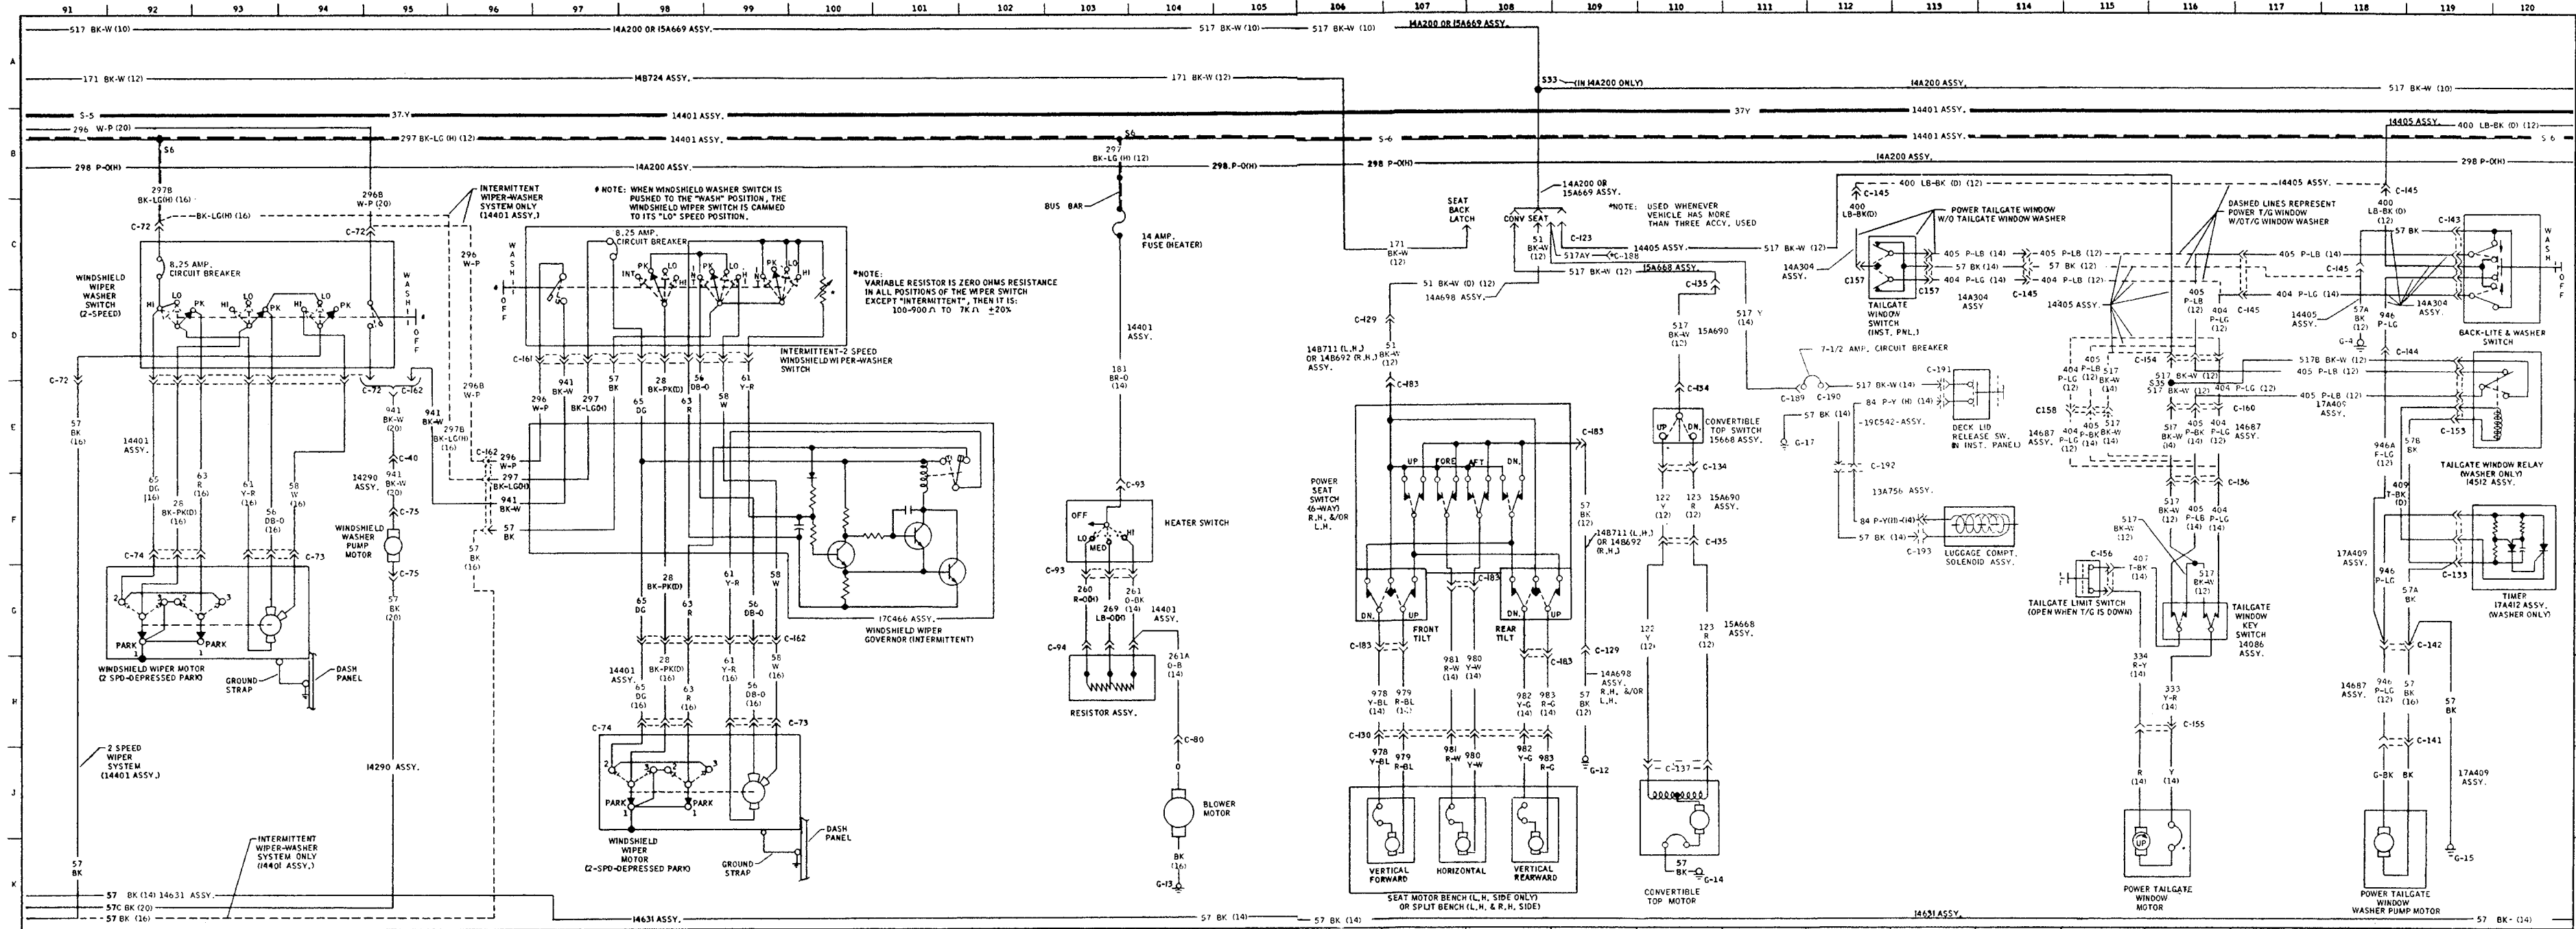

 


 
 
 
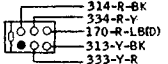

 
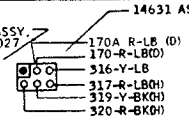
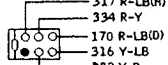
 
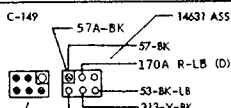
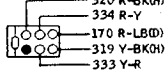
WIRE CONNECTOR CODE

CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION
C-6 14289 ASSY.	14401 ASSY.	C-79	14401 ASSY.	C-85	14401 ASSY.
39-R-W 31-W-R 16-R-LG 262-BR-PK 39-R-W 31-W-R 16-R-LG 262-BR-PK 14401 ASSY.	39-R-W 31-W-R 16-R-LG 262-BR-PK 14401 ASSY.	348-LG-P(H) 348A-LG-P(H)	REAR OF A/C CONTROL HEAD	917-PK-LG(H) 347-BK-Y(B) 768A-LG-Y(H)	L.H. INSTRUMENT PANEL BEHIND A.T.C. CONTROL
STD. ONLY A.T.C. ONLY 14289 ASSY. CENTER OF DASH PANEL (ENGINE COMPARTMENT)				C-91	14401 ASSY.
				767-LB-0 768-LG-Y(H)	ENGINE COMPARTMENT, R.H. SIDE OF A/C CASE AMBIENT TEMP.
				C-80	14401 ASSY.
				2610-BK	REAR A/C BLOWER MOTOR
				C-86	14401 ASSY.
				761-W-LG 248-Y-LB(H) 241-LB-Y	L.H. INSTRUMENT PANEL BEHIND A.T.C. CONTROL
				C-92	14401 ASSY.
				790-W-0 767-LB-0	R.H. SIDE OF INSTRUMENT PANEL ABOVE GLOVE BOX
				C-81	14401 ASSY.
				184-T-0(H) 752-Y-R(D) 752A-Y-R(D) 250-0 755-BR-W 755A-BR-W 536-BK-LG(D)	L.H. INSTRUMENT PANEL, BEHIND A.T.C. CONTROL HEAD
				C-87	14289 ASSY.
				39-R-W 244-Y-W(H)	ENGINE COMPARTMENT, WATER TEMPERATURE SENDER A.T.C.
				C-88	14401 ASSY.
				399-BR-Y 790-W-0 573-BK 57H-BK 249-DB-LG 766-R-LG(D)	L.H. INSTRUMENT PANEL, BEHIND A.T.C. CONTROL
				C-95	14289 ASSY.
				347-BK-Y (11)	NEAR A/C COMPRESSOR
				C-82	14401 ASSY.
				754 A-LG-W(H) 754-LG-W(H) 756A R-PK (D) 776-0-BK(D) 37-E-Y	ENGINE COMPARTMENT, CENTER OF DASH PANEL A.T.C. RELAY
				C-83	14401 ASSY.
				261B-0-BK 536-BK-LG(D) 756B-R-PK(D)	ENGINE COMPARTMENT, CENTER OF DASH PANEL A.T.C. RELAY
				C-89	14401 ASSY.
				184-T-0(H) 755A-BR-W 776-0-BK(D) 754A-LG-W(H) 752A-Y-R(D) 751-DB-W(H)	R.H. DASH PANEL, BEHIND GLOVE BOX
				C-90	14401 ASSY.
				241-LB-Y 244-Y-W(H) 248-Y-LB(H) 768-LG-Y(H) 768A-LG-Y(H) 761-W-LG 250-0 249-DB-LG 766-R-LG(D) 57F BK	R.H. DASH PANEL, BEHIND GLOVE BOX
				C-76	14401 ASSY.
				399 BK-Y	RELAY PANEL CENTER OF INSTRUMENT PANEL
				C-77	14401 ASSY.
				297B-BK-LG	RELAY PANEL CENTER OF INSTRUMENT PANEL
				C-78	14401 ASSY.
				260-R-0(D) 399-B-Y 752-Y-R(D) 754-LG-W(H) 261A R-0(H) 348-R-0(D)	REAR OF A/C CONTROL HEAD
				C-84	14401 ASSY.
				347A BK-Y (H) OR 148A LG-P(H) 347-BK-Y(H)	ENGINE COMPARTMENT, R.H. SIDE OF A/C CASE

GROUND	LOCATION
G-4	EYELET ATTACHED TO INSTRUMENT PANEL REINFORCEMENT.
SPLICE CODES	
S-6	IN 14401 WIRING ASSY. NEAR LIGHT SWITCH
S-36	IN 14401 ASSY. NEAR A.T.C. RELAY.
S-37	IN 14401 WIRING ASSY. IN ENGINE COMPARTMENT NEAR ATC RESISTOR.
S-38	IN 14401 WIRING ASSY. BEHIND CENTER OF INSTRUMENT CLUSTER.
<p>———— DIRECT TO BATTERY</p> <p>———— TO IGNITION SWITCH</p>	
<p>MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION</p>	
<p><b>1972 FORD METEOR</b></p> <p>PAGE 6 OF 7</p> <p>LOCATION NUMBERS 121 THROUGH 150</p>	
Form 7795P-72C	7-1-74

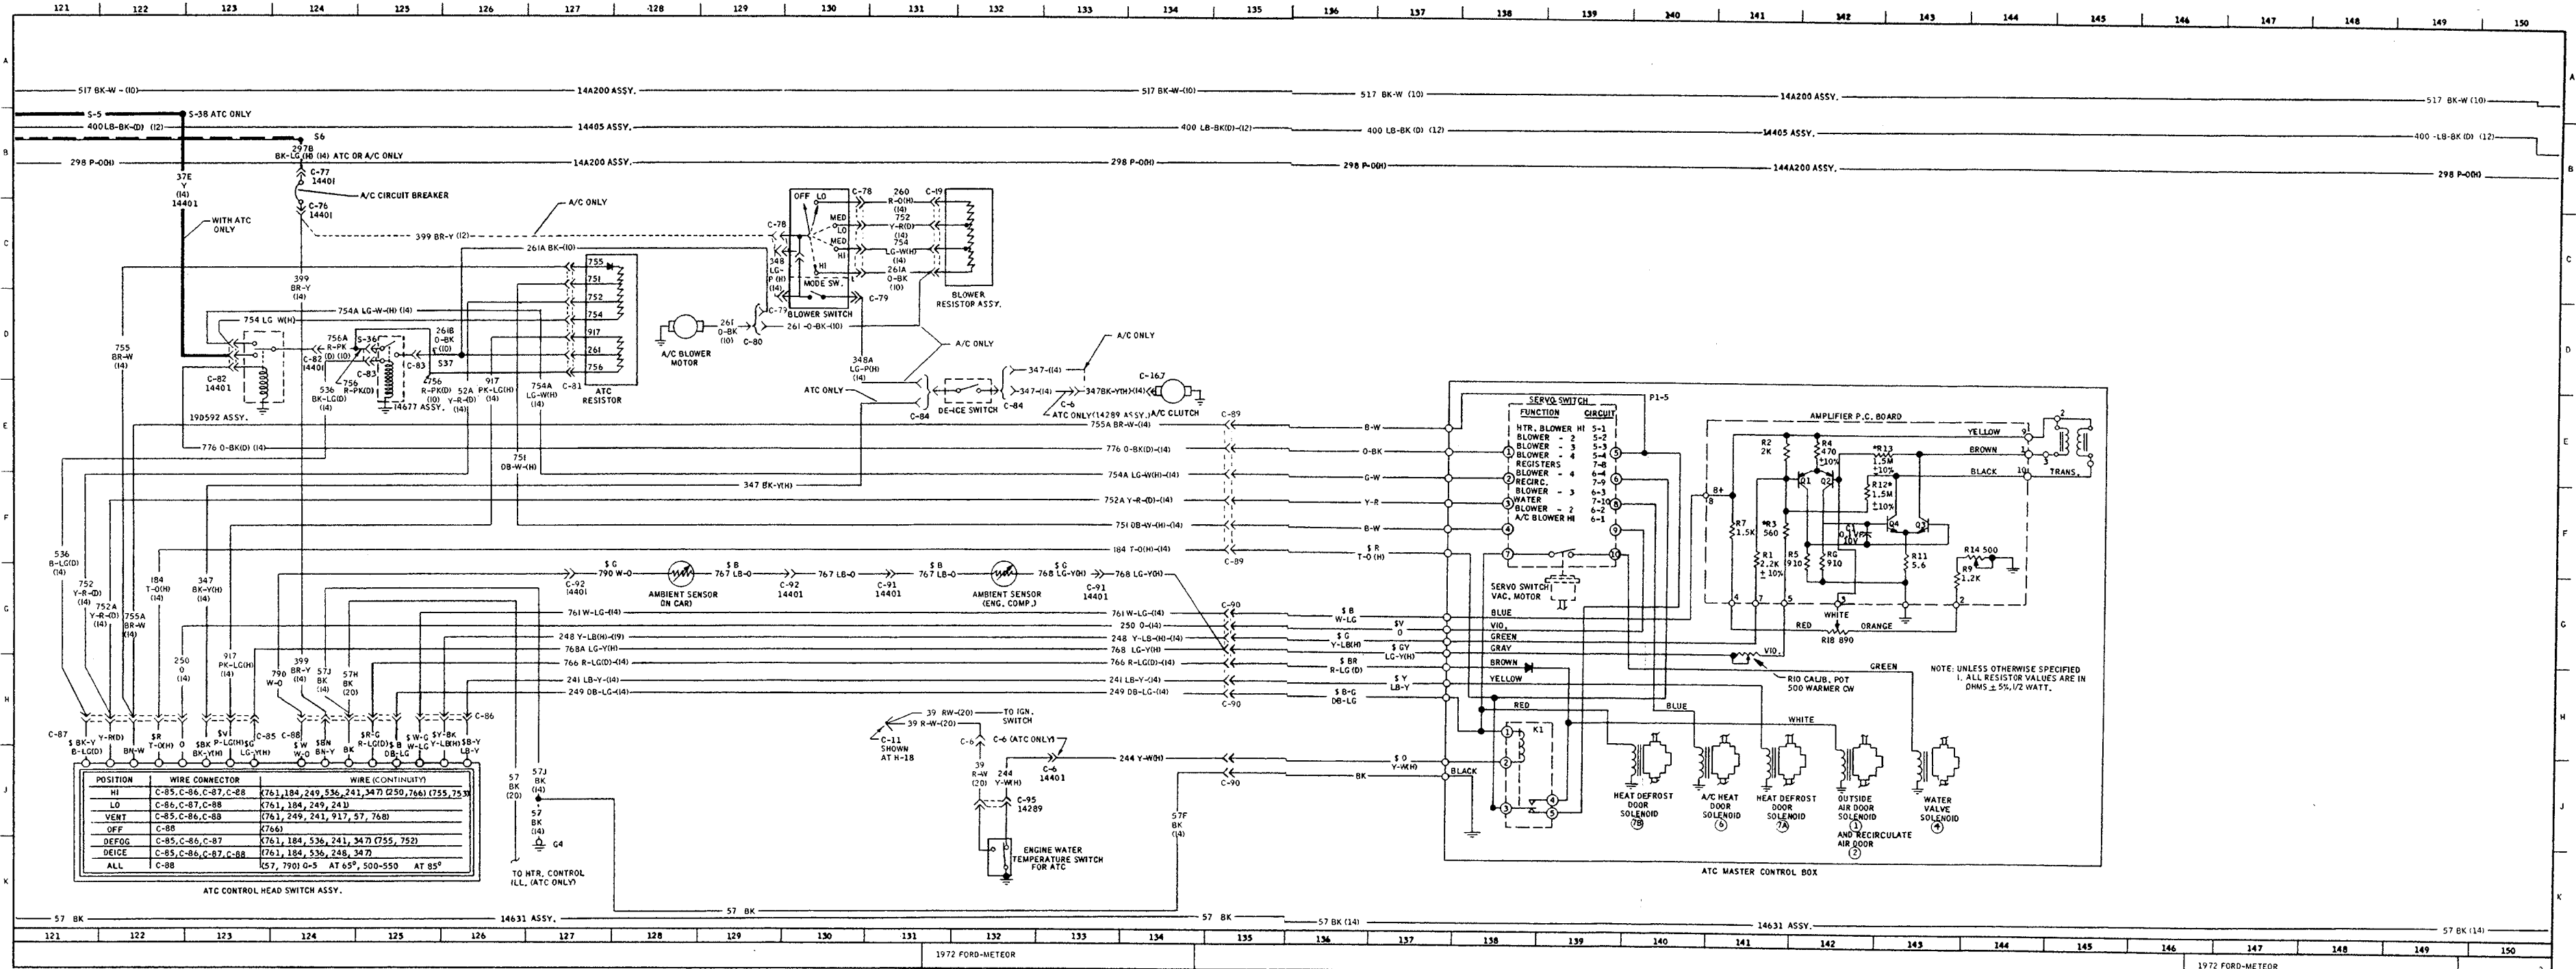

## WIRE CONNECTOR CODES

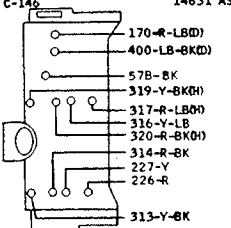CONNECTOR	LOCATION	CONNECTOR	LOCATION	
<p><b>C-125</b>      14A200 ASSY.</p>  <p>• 298-P-00H</p> <p>ENGINE COMPARTMENT CENTER OF DASH PANEL</p>	<p><b>C-146</b>      14631 ASSY.</p>  <p>BEHIND MASTER WINDOW SWITCH</p>	<p><b>C-151</b>      14A027 ASSY.</p>  <p>14633 ASSY.</p> <p>UNDER CARPET AT L.H. "B" PILLAR</p>		
<p><b>C-126</b>      14A200 ASSY.</p>  <p>• 400-LB-BKD</p> <p>ENGINE COMPARTMENT CENTER OF DASH PANEL</p>	<p><b>C-152</b>      14A027 ASSY.</p>  <p>14641 ASSY.</p> <p>UNDER CARPET AT R.H. "B" PILLAR</p>	<p><b>C-127</b>      14631 OR 14405      14A200 ASSY.</p>  <p>UNDER CRASH PAD CENTER OF INSTRUMENT PANEL</p>	<p><b>C-147</b>      14630 ASSY.</p>  <p>* R.H. FRT. DOOR WINDOW SWITCH</p>	<p><b>C-173</b></p>  <p>14405</p> <p>UNDER CRASH PAD, CENTER OF INSTRUMENT PANEL</p>
<p><b>C-132</b></p>  <p>* 14630 ASSY.</p> <p>L.H. FRONT DOOR AT POWER MOTOR LEAD</p>	<p><b>C-148</b>      14631 ASSY.</p>  <p>14644 ASSY. OR 14A027</p> <p>* UNDER CRASH PAD CENTER OF INSTRUMENT PANEL</p>	<p><b>C-174</b>      14633 OR 14644 ASSY.</p>  <p>* L.H. RR DOOR WINDOW SW. &amp; QTR.</p>		
<p><b>C-138</b>      14630, 14644, 14632, 14633 ASSY.</p>  <p>* R.H. FRONT DOOR AT POWER WINDOW MOTOR LEAD</p>	<p><b>C-149</b>      14631 ASSY.</p>  <p>14630 ASSY.</p> <p>UNDER L.H. SIDE OF INSTRUMENT PANEL</p>	<p><b>C-175</b>      14632 OR 14644 ASSY.</p>  <p>* R.H. REAR DOOR WINDOW SW. &amp; QTR</p>		

### SPLICE CODES

S-39 IN 14644 WIRING ASSY UNDER REAR SEAT NEAR CENTER OF FLOOR PAN  
 S-40 IN 14631 WIRING ASSY NEAR CENTER OF INSTRUMENT PANEL  
 S-41 IN 14A027 ASSY. AT R.H. "B" PILLAR


### WIRE CODE

———— DIRECT TO BATTERY  
 - - - - - TO IGNITION SWITCH

MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION

1972 FORD-METEOR


PAGE 7 OF 7  
 LOCATION NUMBERS 151 THROUGH 185

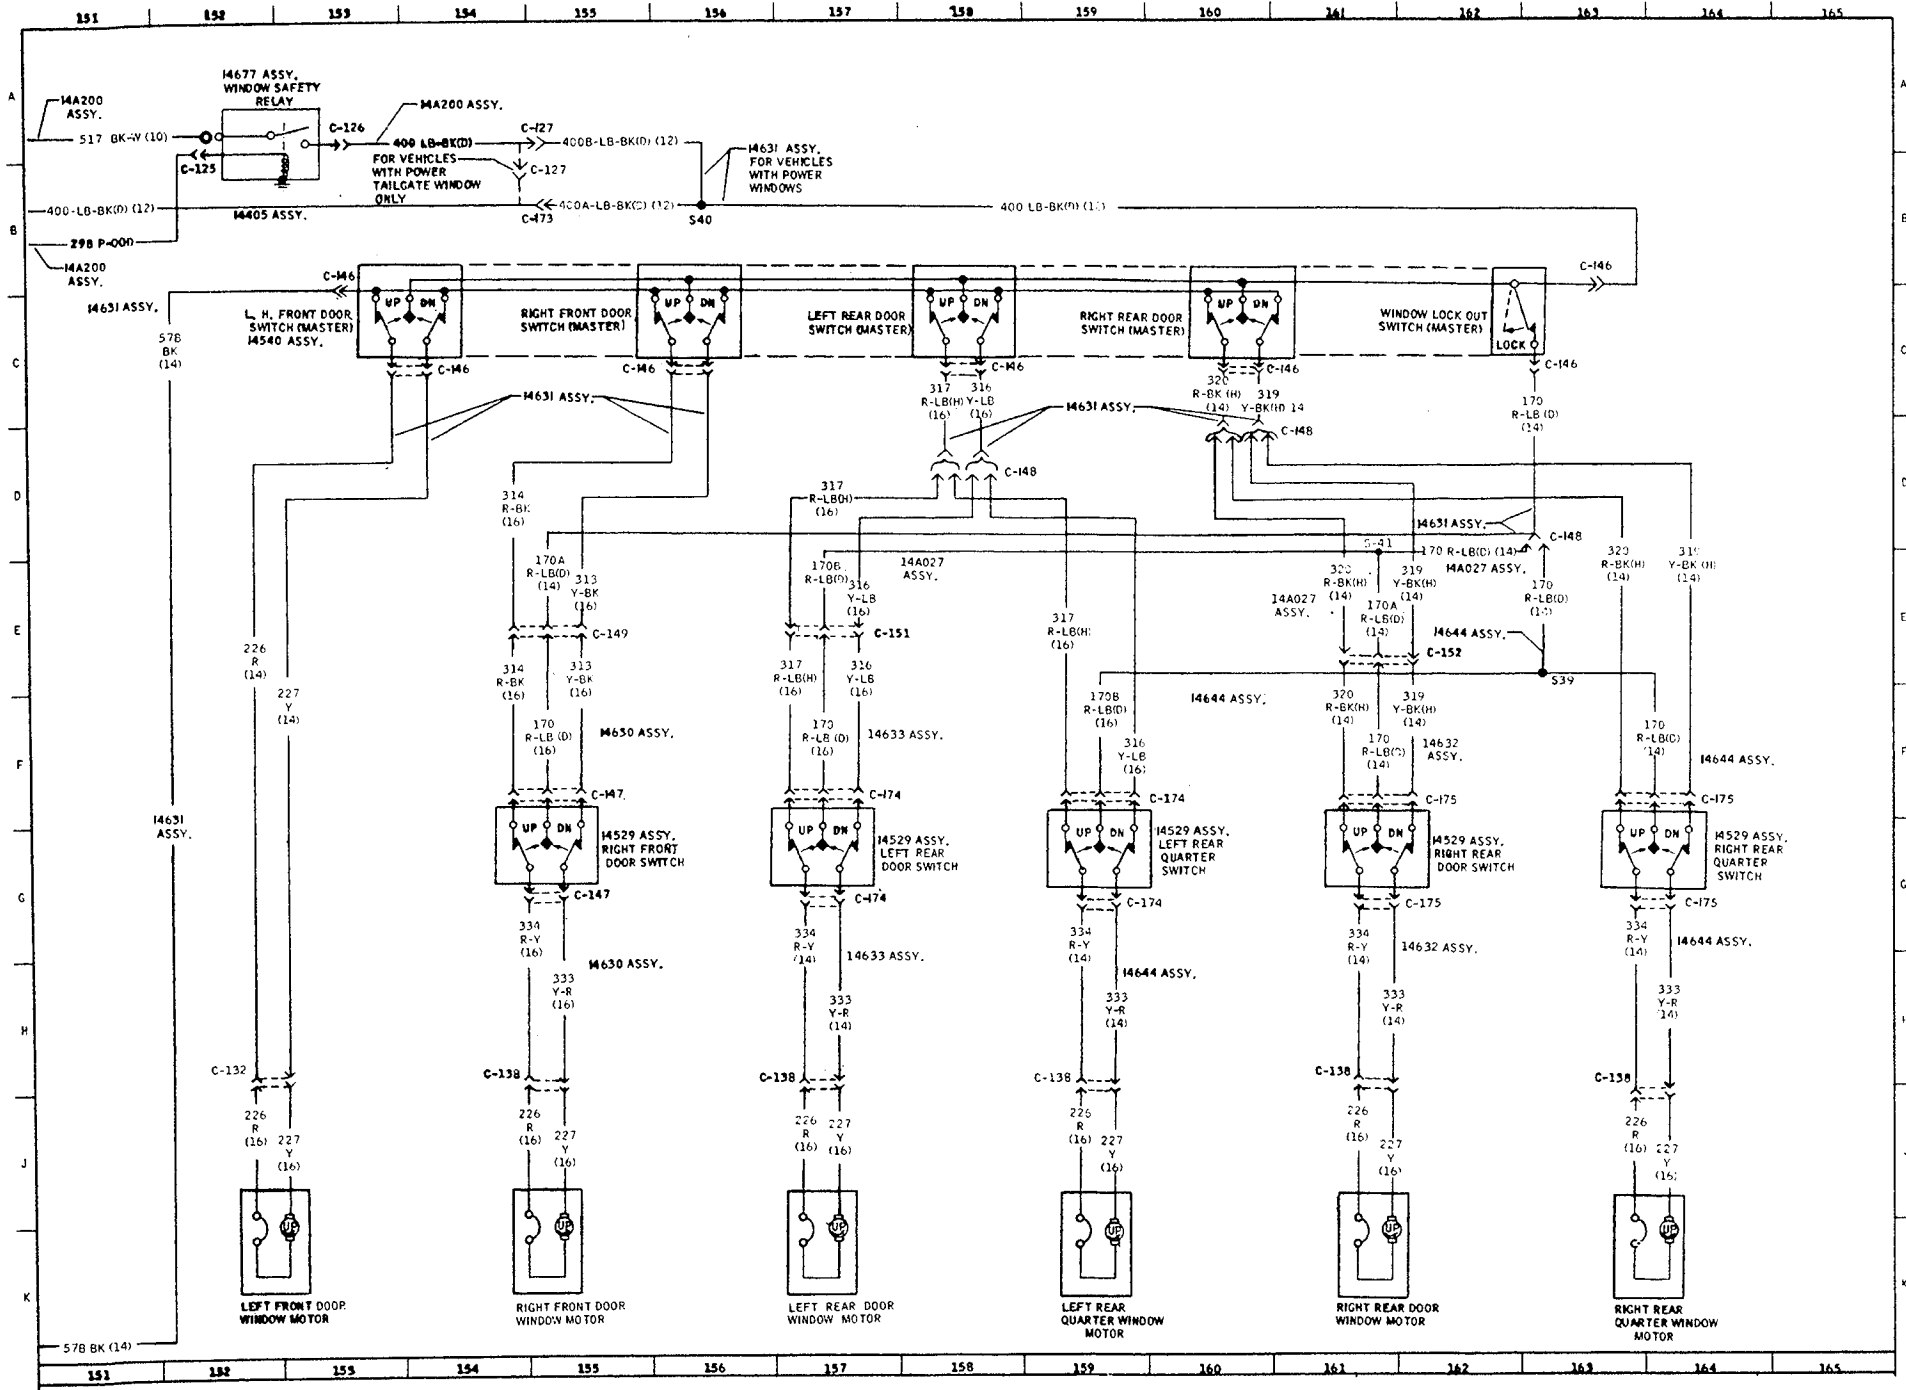

INDEX

COMPONENT	LOCATION
SURE TRACK ACTUATOR	H-28
SURE TRACK MODULE	F-28
AIR CONDITIONER-A/C	F-142
AIR CONDITIONER-MANUAL	C-131
ALTERNATOR	C-8
CIGAR LIGHTER	K-65
CLOCK	C-64
RADIO SUPPRESSION CHOKE	D-29
FLASHER - EMERGENCY WARNING	D-42
TURN SIGNAL	E-42
ELECTROVAC SOLENOID	J-87
IGNITION COIL	F-3
FUEL GAUGE	F-30
CARBURETOR SOLENOID	G-14
HEATED BACKLITE	J-24
ELECTRONIC SPARK CONTROL	D-13
HORNS	J-31
INSTRUMENT VOLTAGE REGULATOR	C-29
TAIL GATE WASHER TIMER	F-120
ILLUMINATORS	
ASH TRAY	J-64
CLUSTER	F-63
HEATER-A/C-ATC	D-64
LIGHT SWITCH	E-64
PRNDL	C-64
RADIO	E-64
WIPER SWITCH	H-64
INDICATORS	
CHARGING	C-12
DUAL BRAKE WARNING & SURE TRACK	H-17
HEATED BACKLITE	J-27
HIGH BEAM	G-38
LEFT TURN	G-38
OIL PRESSURE	H-19
SEAT BELT WARNING	C-20
RIGHT TURN	G-39
SEAT BELT WARNING BUZZER	G-20
TEMPERATURE	H-18
KEY WARNING BUZZER	H-77
LAMPS	
GLOVE BOX	E-61
BACKUP	F-68
CARGO	J-79
CORNERING	J-36
DOOR COURTESY	D-86
DOME	J-80
FOOTWELL COURTESY	C-86
HEADLAMPS	J-42
LICENSE PLATE	G-51
LUGGAGE COMPARTMENT	K-76
PARKING	K-42
REAR	J-51
SIDE MARKER - FRONT	K-43
- REAR	J-47
MAP	C-67
MOTORS	
AIR CONDITIONER	D-129
HEATER BLOWER	J-104
POWER SEAT	K-108
POWER WINDOWS	
FRONT DOORS	K-155
REAR DOORS	K-161
REAR QUARTERS	K-164
TAIL GATE	K-116
WINDSHIELD WASHER	F-95
BACK LITE WASHER PUMP	K-119
WINDSHIELD WIPER	J-98
WINDSHIELD WIPER & GOVERNOR	F-100
FUEL PUMP	H-4
RADIOS	
AM	C-75
AM FADER CONTROL	E-74
AM & STEREO TAPE UNIT	C-71
AM-FM MULTIPLEX	C-73
AM STEREO FADER CONTROL	E-70
AM & STEREO SPEAKERS	K-74
RELAYS	
TAILGATE WINDOW WASHER	E-120
CORNERING LAMP (L.H.)	H-34
CORNERING LAMP (R.H.)	J-34
HORN	D-34
SEAT BACK LATCH	H-83
ATC	D-123
HEATED BACKLITE	G-26
WINDOW SAFETY	B-152
POLICE SAFETY	E-8
SENDERS	
FUEL GAUGE	J-30
OIL PRESSURE	K-19
WATER TEMPERATURE	K-18
SENSORS	
SEAT	F-24
SPARK CONTROL	D-10
AMBIENT ON ENGINE COMPT.)	G-132
AMBIENT ON CARD	G-128
SPEED CONTROL	F-36
SURE TRACK	K-29
SEAT BACK LATCH SYSTEM	H-85
SPEED CONTROL SYSTEM	E-37
STARTER SYSTEM	
STARTING MOTOR RELAY	C-6
STARTER MOTOR	H-5
DECK LID RELEASE SYSTEM	E-113
SURE TRACK SYSTEM	F-28
TRAILER TOWING PKG	K-58
DOOR LOCK SYSTEM	H-90
SWITCHES	
FUEL PUMP SAFETY	E-6
AIR CONDITIONER CONTROL - MANUAL	C-130
- ATC	K-124
BACKUP LAMP	C-69
BACK LITE WASHER	D-120
COURTESY LAMP-FRONT	E-78
-REAR	G-87
DE-ICER	E-132
DUAL BRAKE WARNING	K-17
GLOVE BOX	G-62
EMERGENCY WARNING	C-39
HEADLAMP DIMMER	G-43
HEATED BACK LITE	D-26
HEATER	F-103
IGNITION	E-18
LIGHT	D-44
KEY WARNING BUZZER	J-77
POWER SEAT	F-107
POWER WINDOWS	
FRONT DOOR	G-155
REAR DOOR	C-161
REAR QUARTER	G-164
TAILGATE WINDOW (INSTRUMENT PANEL MOUNTED)	C-113
TAILGATE WINDOW (TAILGATE MOUNTED)	G-116
SPEED CONTROL	C-37
STOP LAMP	C-49
SEAT BACK LATCH	F-87
TAILGATE LIMIT	G-115
TURN SIGNAL	C-39
WINDSHIELD WASHER	D-93
WINDOW LOCK OUT	C-163
WATER TEMP. A.T.C.	K-132
ELECTROVAC DOOR LOCKS	J-89
SEAT BELT RETRACTOR	F-24
VOLTAGE REGULATOR	G-10



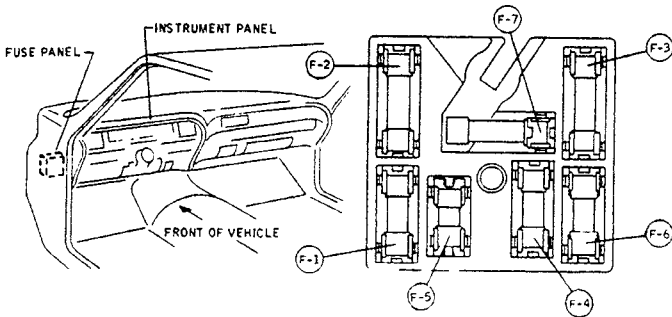

- F1. (14-AMP.) COURTESY LAMPS, CLOCK AND ELECTROVAC DOOR LOCKS
- F2. (20-AMP.) EMERGENCY WARNING AND CIGAR LIGHTER
- F3. (20-AMP.) RADIO, BACK-UP LAMP AND WINDSHIELD WASHER
- F4. (14-AMP.) THROTTLE SOLENOID, WARNING LAMPS, SPARK CONTROL, SEAT BELT WARNING, SURE TRACK, AND ELECTRIC FUEL PUMP
- F5. (4-AMP.) INSTRUMENT PANEL ILLUMINATION
- F6. (14-AMP.) HEATER BLOWER
- F7. (20-AMP.) R.P.O. ACCESSORIES POWER WINDOWS

HEATED BACK-LITE  
 CORNERING LAMP  
 \*SPEED CONTROL  
 REAR SEAT CIGAR LIGHTER

\*NOTE: HAS A (5-AMP.) IN-LINE FUSE ALSO  
 \*NOTE: HAS A (3-AMP.) IN-LINE FUSE.

FIRST 6" OF WIRE FROM STARTER SOLENOID.  
 FIRST 6" OF WIRE FROM STARTER SOLENOID.

FUSE LINKS LOCATION  
 MAIN ROUTE FEED  
 TRAILER TOWING FEED

### CIRCUIT BREAKER LOCATIONS

- 1. (15 AMP) TAIL AND PARKING LAMP PART OF LIGHT SWITCH.
  - 2. (18 AMP) HEADLAMP PART OF LIGHT SWITCH.
  - 3. (15 AMP) STOP LAMP MOUNTED ON I/P RELAY PANEL.
  - 4. (30 AMP) A/C OR ATC MOUNTED ON I/P RELAY PANEL.
  - 5. (20 AMP) POWER FEED MOUNTED ON STARTER SOLENOID.
  - 6. (7-1/2-AMP.) DECK LID RELEASE MOUNTED ON I/P FLANGE NEAR GLOVE BOX.
- FOR R.P.O.:
- POWER SEAT
  - POWER WINDOWS
  - POWER BACK LITE
  - POWER TOP
  - HEATED BACK LITE
  - SEAT BACK LATCH


### WIRING COLOR CODE KEY PRIMARY COLORS

BLACK	BK	DK BLUE	DB
BROWN	BR	LT BLUE	LB
TAN	T	PURPLE	P
RED	R	GRAY	GY
PINK	PK	WHITE	W
ORANGE	O		
YELLOW	Y	HASH	(H)
DK GREEN	DC	DOT	(D)
LT GREEN	LG		

### BULB CHART

LAMP DESCRIPTION	CANDLE POWER OF WATTAGE	TRADE NUMBER
BACK-UP	32	1156
DOOR COURTESY	6	212 & 1
FRONT CORNERING	50	1196
FRONT MARKER	2	194
REAR MARKER	4	97
FRONT AND PARK TURN SIGNAL	32-3	1157-A
HEADLAMP HI AND LO BEAM	50-37.5	4002
HEADLAMP BEAM	37.5	4001
LICENSE PLATE SEDAN	6	631
LICENSE PLATE WAGON	4	97
TAIL, STOP AND TURN	32-3	1157
CLUSTER ILLUMINATION	2	194
HI BEAM INDICATOR	2	194
TURN INDICATOR	2	194
HEATER OR A/C ILLUMINATION	2	1895
HEATED BACKLITE INDICATOR	.50	D1AB-18C622
RADIO PILOT LIGHT	1.9	1893
PRNDL LAMP	.7	1445
ASH TRAY ILLUMINATION	.7	1892
DUAL BRAKE WARNING	2	194
LUGGAGE COMPARTMENT LAMP	6	631
INSTRUMENT PANEL COURTESY LAMP	6	631
SEAT BELT WARNING	2	194
PARK BRAKE WARNING	2	194
DOVE LAMP	12	561
CARGO LAMP	12	105
GLOVE BOX LAMP	3	1816

CONNECTOR CODE										CONNECTOR CODE										GROUND CODE		
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION			
C-2	14305 ASSY.	C-6	14289 ASSY.	C-11	14401 ASSY.	C-22	18C619 ASSY.	C-123	14A200 OR 15569 ASSY.	C-169	C808-14488-A TO BE USED WHEN (A) OR MORE OPTIONS ARE REQD.	C-196	14644 OR 14633 OR 14632	C-203	14401	C-209	11A004 ASSY.	C-215	11A004 ASSY.	C-220	28392	
35-0-LB 4-W-BK 36-Y-W(D) 36-A-Y-W(D) 904-LG-R	R.H. RADIATOR SUPPORT VOLTAGE REGULATOR	39 R-W 31 W-R 16 R-LG 262 BR-PK 347 BK-Y (H) (A/C ONLY) 39-R-W 31-W-R 16-R-LG 262 BR-PK 17H BK 3A LG-W 3 LG-W 19G LB-R 39A R-W 39 R-W	14401 ASSY.	640A R-Y (H) 640B R-Y (H) 977 P-W 31 W-R 297D BK-LG (H) 48-BK 2A W-LB 12A LG-BK 17H BK 3A LG-W 3 LG-W 19G LB-R 39A R-W 39 R-W	REAR OF INSTRUMENT CLUSTER	18C619 ASSY. 687-GY-Y	UNDER L.H. SIDE OF PACKAGE TRAY	517-BK-W	CENTER OF COWL UNDER CRASH PAD	C808-14488-A TO BE USED WHEN (A) OR MORE OPTIONS ARE REQD. 14A200 9A839 298 P-O (H) 298 P-O (H) 298 P-O (H) 14A027 298 P-O (H) 11A004 298 P-O (H)	CIGAR LIGHTER REAR ARM REST	14644 OR 14633 OR 14632	57 BK	14401 640 R-Y (H) 640 369 BR-O (D)	CENTER OF DASH PANEL ENGINE COMPARTMENT	11A004 ASSY. 596 596 BK-O (D)	LOCATED AT STARTER SOLENOID R.H. FENDER APRON	11A004 ASSY. 787 PK-BKH 57 BK (20)	CENTER TOP OF FUEL TANK	57 BK (20) 605 R (20) 603 DG (20) 600 DB (20) 57 BK (20)	57 BK (20) 604 O-R (H) (20) 604A O-R (H) (20) 977 P-W (20) 601 LB-P (20)	28392
C-3	14401 ASSY.	C-7	14289 ASSY.	C-12	14401 ASSY.	C-24	18C618 ASSY.	C-163	18C617 ASSY.	C-197	14A027 ASSY.	C-204	90857 OR 90866 OR 14289 ASSY.	C-210	POST DEC. 1, 1971 14405 ASSY. DESIGN	C-216	11A004 ASSY.	C-215	11A004 ASSY.	C-221	28392 ASSY.	
32 R-LB	R.H. FENDER APRON STARTING MOTOR RELAY "S" TERM	16-R-LG	FRONT OF ENGINE (IGNITION COIL)	57E BK 977A P-W 297 BK-LG (H) 904-LG-R 16A R-LG 170 BK-O 39A R-W	UNDER STEERING COLUMN	18C618 ASSY. 57-BK	UNDER R.H. REAR WINDOW GARNISH MOLDING	18C617 ASSY. 57-BK	WARNING LIGHT BEHIND HEATER SWITCH	14A027 ASSY. 14632 OR 14633 ASSY. 297A BK-LG (H) 57 BK	BOTTOM OF L.H. & R.H. "B" PILLAR	90857 OR 90866 OR 14289 ASSY. 369 BR-O (D) 81 BR-Y (D)	L.H. FRONT OF ENGINE	POST DEC. 1, 1971 14405 ASSY. DESIGN	R.H. & L.H. FRONT SEAT BELT RETRACTORS	11A004 ASSY. 298 P-O (H) 38A BK-O 687 O-BK (D)	CENTER OF DASH PANEL ENGINE COMPARTMENT	11A004 ASSY. 787 PK-BKH 57 BK (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-4	14290 ASSY.	C-8	14401 ASSY.	C-13	11A004 ASSY.	C-25	14401 ASSY.	C-164	18C617 ASSY.	C-199	14401 OR 12K454	C-205	90857 OR 90866 OR 14289	C-211	POST DEC. 1, 1971 14405 ASSY. DESIGN	C-217	14401 ASSY.	C-215	11A004 ASSY.	C-221	28392 ASSY.	
14305 ASSY. 904-LG-R	R.H. RADIATOR SUPPORT NEAR VOLTAGE REGULATOR	977A P-W 977B P-W	DUAL BRAKE VALVE L.H. FENDER APRON	11A004 ASSY. 787 PK-BK (H) 640 R-Y (H) 596 BK-O (D)	FUEL PUMP SAFETY SWITCH	14401 ASSY. 53 BK-LB 53A BK-LB 9 LG-O 29 Y-W 14 BR 14A BR 54A LG-Y 54B LG-Y 140 BK-PK 5 O-LB	UNDER CARPET, NEXT TO HEADLAMP DIMMER SWITCH	18C617 ASSY. 687 GY-Y 112-BK-Y(D) 37-Y	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14401 OR 12K454 369 BR-O 640E R-Y (H) OR 640 R-Y (H)	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866 OR 14289	81 BR-Y (D)	SEAT SENSOR SWITCH	POST DEC. 1, 1971 14405 ASSY. DESIGN	14401 ASSY. 469 LG 469A LG	UNDER R.H. FRONT SEAT	14401 ASSY. 787 PK-BKH 57 BK (20)	CENTER OF DASH PANEL ENGINE COMPARTMENT	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-4	14290	C-9	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-165	18C617 ASSY.	C-200	14401	C-206	90857 OR 90866 OR 14289	C-212	14401 ASSY.	C-218	28430 ASSY.	C-215	11A004 ASSY.	C-221	28392 ASSY.	
14305 904 LG-R	R.H. RADIATOR SUPPORT NEAR VOLTAGE REGULATOR	39-R-W	ENGINE WATER TEMP. SENDER	14401 ASSY. 787 PK-BK (H) 640 R-Y (H) 596 BK-O (D)	FUEL PUMP SAFETY SWITCH	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 687 GY-Y 112-BK-Y(D) 37-Y	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14401 12K454 369A BR-O (D) 640 R-Y (H) 640 R-Y (H)	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866 OR 14289	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	CENTER OF I/P ON RELAY PANEL	28430 ASSY. 604 O-RH (19) 604 O-R (19)	AT REAR AXLE PINION	11A004 ASSY. 787 PK-BKH 57 BK (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P BEHIND GLOVE BOX	90857 OR 90866	640 R-Y (H)	14401 ASSY. 469 LG 469A LG	BEHIND SEAT BELT WARNING LIGHT	28392 ASSY. 604 O-RH (20) 604 O-R (20) 604A O-R (H) (20)	CENTER TOP OF FUEL TANK	28392 ASSY. 600 DB (20) 57 BK (20) 603 DG (20)	28392 ASSY.	
C-5	11A004 ASSY.	C-10	14289 ASSY.	C-14	14401 ASSY.	C-26	14405 ASSY.	C-166	18C617 ASSY.	C-194	14644 ASSY. OR 14A027 ASSY.	C-201	12K454 ASSY.	C-207	90857 OR 90866	C-213	14401 ASSY.	C-219	28392 ASSY.	C-221	28392 ASSY.	
14405 787 PK-BK (H) ASSY.	LOCATED UNDER METAL SHIELD AT DIMMER SWITCH	31-W-R	ENGINE OIL PRESSURE SENDER	14401 ASSY. 262 BR-PK	R.H. FENDER APRON STARTING MOTOR RELAY IGN. TERM.	14405 ASSY. 57-BK	CENTER OF FUEL TANK, FORWARD OF REAR AXLE	18C617 ASSY. 688 GY-LB	DASH PANEL UNDER INSTRUMENT PANEL R.H. SIDE OF STEERING COLUMN	14644 ASSY. OR 14A027 ASSY. 14A318 ASSY. 297 BK-LG (H)	NEAR ALTERNATOR REGULATOR	12K454 ASSY. 12K454 369A BR-O (D) 81 BR-Y (D) 934 T-W (H) 57 BK	R.H. SIDE OF I/P									

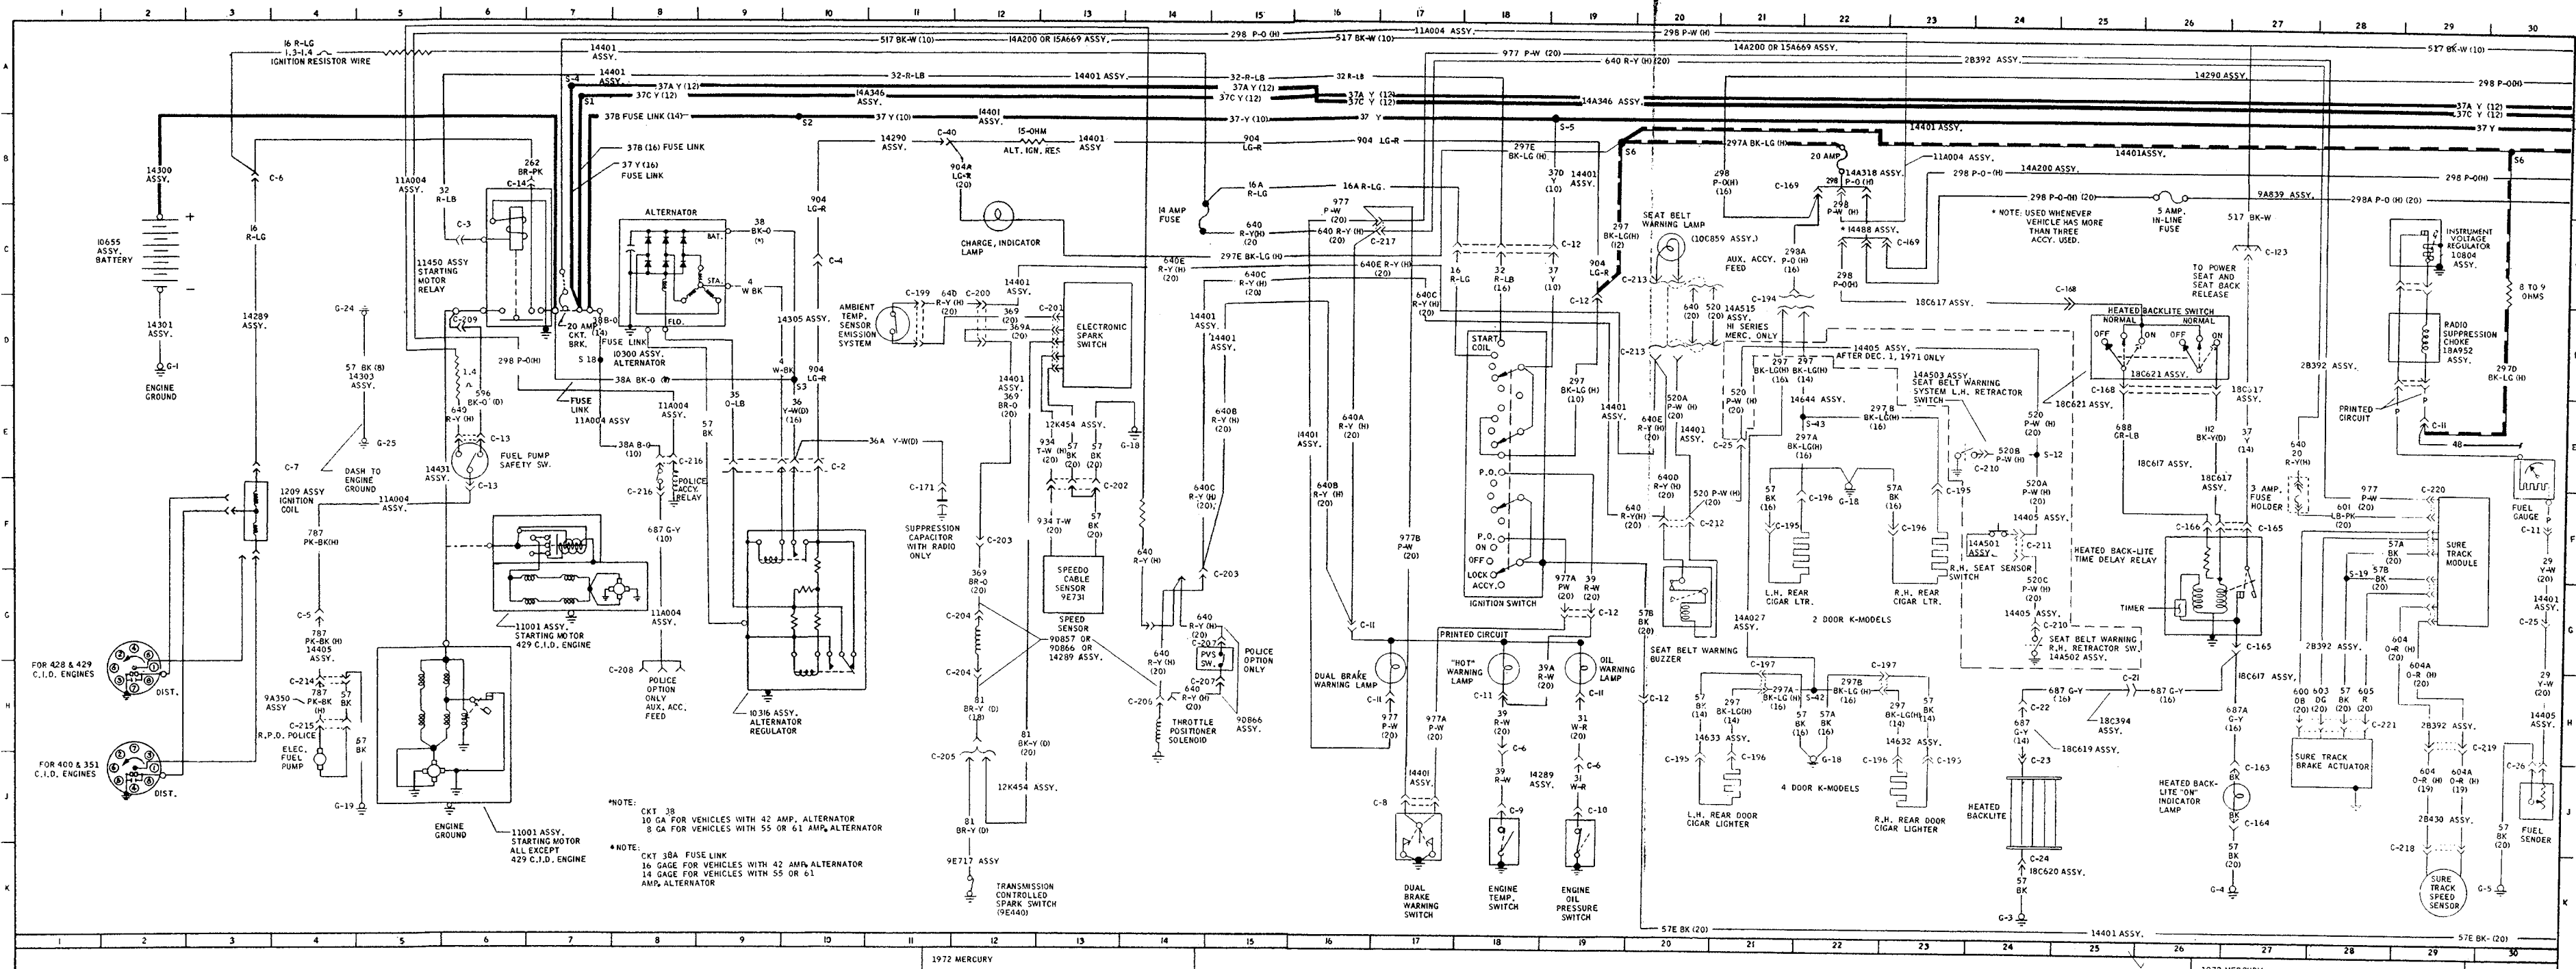

NOTE:  
 CKT 38  
 10 GA FOR VEHICLES WITH 42 AMP. ALTERNATOR  
 8 GA FOR VEHICLES WITH 55 OR 61 AMP. ALTERNATOR

NOTE:  
 CKT 38A FUSE LINK  
 16 GAGE FOR VEHICLES WITH 42 AMP. ALTERNATOR  
 14 GAGE FOR VEHICLES WITH 55 OR 61 AMP. ALTERNATOR

FOR 428 & 429  
 C.I.D. ENGINES

FOR 400 & 351  
 C.I.D. ENGINES

\* NOTE: USED WHENEVER  
 VEHICLE HAS MORE  
 THAN THREE  
 ACCY. USED.

CONNECTOR CODE										GROUND CODE					
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION				
C-11	14401 ASSY. REAR OF INSTRUMENT CLUSTER	C-29	9A839 ASSY. UNDER INSTRUMENT PANEL ABOVE BRAKE PEDAL SUPPORT	C-35	14290 ASSY. HORN-L.H. FENDER APRON	C-41	14290 ASSY. R.H. FRONT TURN SIGNAL LAMP	C-47	14290 ASSY. L.H. SIDE MARKER	C-53	14401 ASSY. STOP LAMP SWITCH ABOVE BRAKE PEDAL SUPPORT	C-65	14405 AT L.H. REAR LAMPS	C-132	13A576 ASSY. TO DEALER INSTALLED TRAILER PLUG
C-25	14401 ASSY. 14405 OR 15A417 ASSY.	C-30	SPEED CONTROL AMP. ASSY. R.H. SIDE OF BRAKE PEDAL SUPPORT UNDER INSTR. PANEL	C-36	14290 ASSY. HORN-L.H. FENDER APRON	C-42	14290 ASSY. R.H. OUTBOARD HEADLAMP	C-48	14290 ASSY. L.H. RADIATOR SIDE SUPPORT CORNERING LAMP	C-54	13A430 ASSY. STOP LAMP SWITCH ABOVE BRAKE PEDAL SUPPORT	C-122	15A417 ASSY. ON BRAKE PEDAL SUPPORT	C-176	14401 ASSY. UNDER STEERING COLUMN
C-27	14A346 ASSY. 15A417 ASSY.	C-32	SPEED CONTROL AMP. ASSY. L.H. SIDE ABOVE BRAKE PEDAL SUPPORT	C-37	14290 ASSY. R.H. RADIATOR SIDE SUPPORT CORNERING LAMP	C-43	14290 ASSY. R.H. OUTBOARD HEADLAMP	C-49	14401 ASSY. HEADLAMP DIMMER SWITCH	C-55	14401 ASSY. LIGHT SWITCH UNDER CRASH PAD	C-124	15A417 ASSY. L.H. REAR QUARTER	C-177	14405 ASSY. CENTER OF LOWER BACK PANEL
C-28	9A839 ASSY. USED WITH SPEED CONTROL UNDER STEERING COLUMN	C-33	14290 ASSY. L.H. RADIATOR SUPPORT CORNERING LAMP RELAY	C-38	9A839 ASSY. SPEED CONTROL AMPLIFIER ABOVE BRAKE PEDAL SUPPORT	C-44	14290 ASSY. L.H. OUTBOARD HEADLAMP	C-50	14401 ASSY. RELAY PANEL CENTER OF INSTRUMENT PANEL	C-63	15A417 13A576 ASSY. LIGHT SWITCH UNDER CRASH PAD	C-128	15A417 ASSY. L.H. REAR QUARTER PANEL	C-178	14405 ASSY. LICENSE LAMP
		C-34	14290 ASSY. L.H. RADIATOR SUPPORT CORNERING LAMP RELAY	C-39	14290 ASSY. R.H. SIDE MARKER LAMP	C-45	14290 ASSY. L.H. INBOARD HEADLAMP	C-51	14401 ASSY. TAPED TO HARNESS ABOVE FUSE PANEL	C-64	14405 AT R.H. REAR LAMPS	C-131	15A417 ASSY. L.H. REAR QUARTER		
		C-40	14401 ASSY. BEHIND FUSE PANEL	C-46	14290 ASSY. L.H. FRONT PARK & TURN SIGNAL LAMP	C-52	14401 ASSY. RELAY PANEL CENTER OF INSTRUMENT PANEL								

G-6 EYELET ATTACHED TO L.H. SIDE OF RADIATOR SUPPORT  
G-7 EYELET ATTACHED TO R.H. SIDE OF RADIATOR SUPPORT  
G-20 EYELET LOCATED AT L.H. REAR QUARTER PANEL AREA


**SPLICE CODE**

S-5 5, 6 IN 14401 ASSY. BEHIND CLUSTER  
S-8 IN 14290 ASSY. LOCATED ON L.H. FRONT FENDER APRON BY RADIATOR SUPPORT LOCATED IN 14405 ASSY. NEAR L.H. REAR LAMPS  
S-9 LOCATED IN 14405 ASSY. NEAR R.H. REAR LAMPS  
S-10 LOCATED IN 14405 ASSY. NEAR R.H. REAR LAMPS  
S-11 LOCATED IN 14405 ASSY. NEAR R.H. REAR LAMPS  
S-12 LOCATED NEAR REAR LAMP HOUSINGS  
S-20 IN 14290 ASSY. LOCATED NEAR L.H. HEADLAMPS  
S-21 IN 14290 ASSY. LOCATED NEAR R.H. HEADLAMPS  
S-28 IN 13A576 WIRING ASSY. LOCATED AT REAR OF LEFT QUARTER PANEL

**WIRE CODE**


— DIRECT TO BATTERY  
— TO IGNITION SWITCH


1972 MERCURY  
PAGE 3 OF 7  
LOCATION NUMBERS 31 THROUGH 60

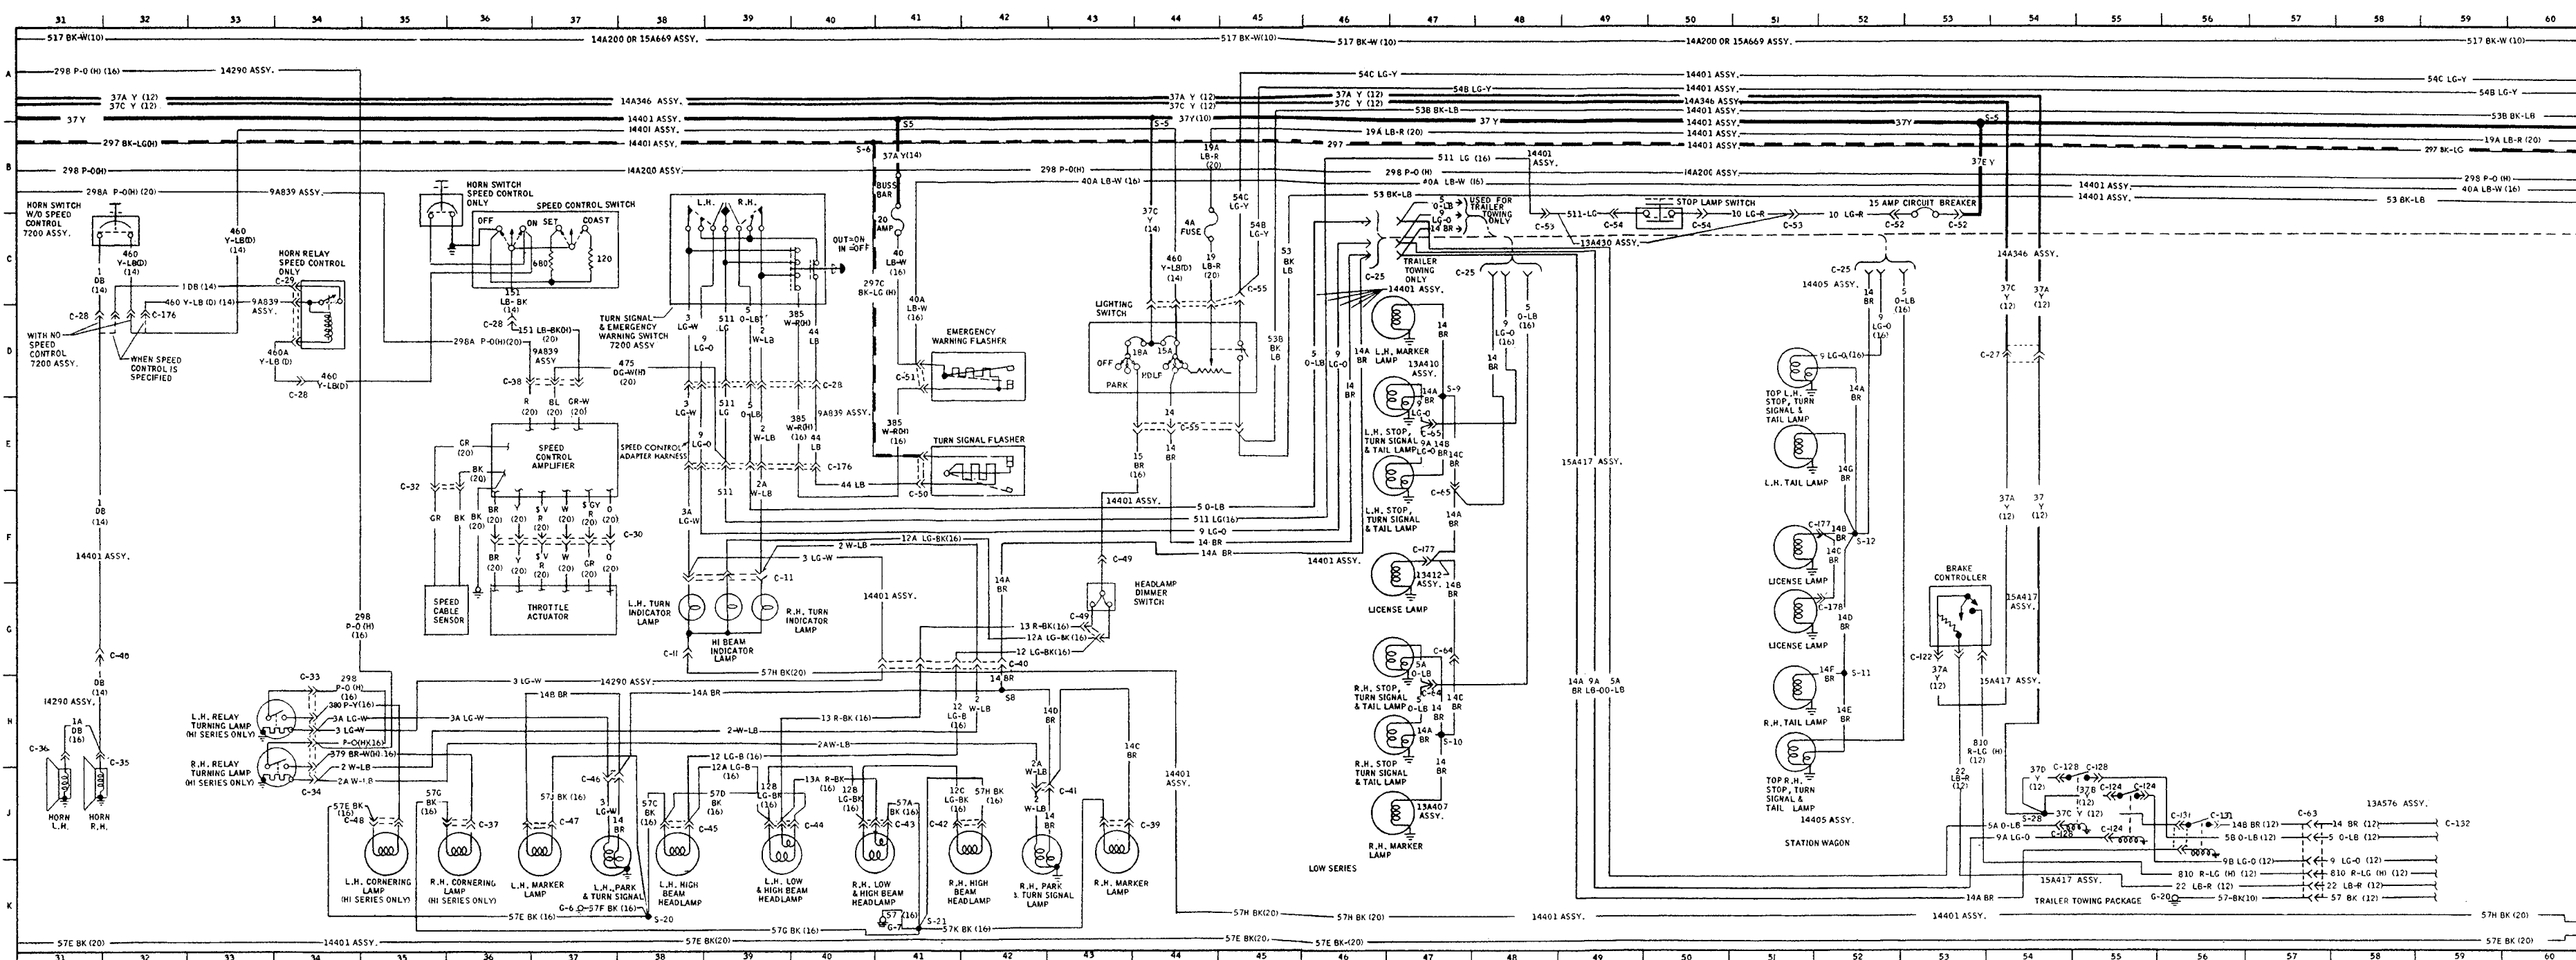

CONNECTOR CODE										CONNECTOR CODE										GROUND CODE									
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION				
C-11	14401 ASSY. REAR OF INSTRUMENT CLUSTER	C-28	14401 ASSY. UNDER STEERING COLUMN	C-59	14401 ASSY. L.H. SIDE OF INSTRUMENT PANEL, BEHIND CLOCK	C-68	14401 ASSY. UNDER INSTRUMENT PANEL AT REAR OF ASH TRAY	C-98	14574 ASSY. UNDER PACKAGE TRAY L.H. SIDE	C104	19A017 ASSY. INSTRUMENT PANEL AT L.H. REAR OF RADIO CHASSIS	C-112	13A764 ASSY. R.H. & L.H. UPPER COWL SIDES	C-118	148724 ASSY. UNDER R.H. & L.H. FRONT SEAT	C-159	14405 ASSY. UNDER L.H. INST. PANEL AT COWL	C-185	65220A12 OR 14025 ASSY. R.H. DASH PNL. BEHIND GLOVE BOX	G-2	EYELET ATTACHED TO R.H. COWL UPPER.	G-4	EYELET ATTACHED TO INSTRUMENT PANEL REINFORCEMENT	G-11	EYELET ATTACHED TO L.H. FRONT DOOR PANEL	G-15	EYELET ATTACHED TO PILLAR REAR CORNER INNER FRONT LOWER	G-16	EYELET ATTACHED TO R.H. COWL UPPER
C-14	14405 ASSY. BEHIND R.H. BACK UP LAMP ON STATION WAGON	C-31	14401 ASSY. BEHIND HEATER SWITCH	C-64	14405 ASSY. AT R.H. REAR LAMPS	C-69	14401 ASSY. UNDER INSTRUMENT, REAR OF RADIO CHASSIS	C-99	14547 ASSY. UNDER PACKAGE TRAY R.H. SIDE	C-105	14574 ASSY. INSTRUMENT PANEL AT L.H. REAR OF RADIO CHASSIS	C-113	13A764 ASSY. R.H. & L.H. UPPER COWL SIDES	C-119	14401 ASSY. IN INSTRUMENT PANEL NEAR ASH RECEPTACLE	C-179	148724 ASSY. ABOVE FUSE PANEL	C-186	65220A12 ASSY. COWL TOP INNER UPPER R.H. BEHIND GLOVE BOX	S-5	IN 14401 WIRING ASSY. NEAR CENTER OF CLUSTER	S-6	IN 14401 ASSY. NEAR LIGHT SWITCH	S-7	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER	S-41	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER		
C-15	14405 ASSY. BEHIND L.H. BACK UP LAMP ON STATION WAGON	C-36	14401 ASSY. R.H. SIDE OF INSTRUMENT PANEL, ABOVE GLOVE BOX	C-65	14405 ASSY. AT REAR LAMPS	C-70	14401 ASSY. REAR OF CLUSTER ASSY. BELOW SPEEDOMETER CABLE	C-100	19A017 ASSY. UPPER COWL TOP INNER R.H. SIDE	C-106	14574 ASSY. INSTRUMENT PANEL AT TOP REAR OF RADIO CHASSIS	C-114	148724 ASSY. UNDER L.H. FRONT SEAT	C-120	13752 ASSY. L.H. REAR QUARTER	C-180	148724 ASSY. ABOVE FUSE PANEL	C-198	65220A13 ASSY. COWL TOP INNER UPPER R.H. BEHIND GLOVE BOX	S-5	IN 14401 WIRING ASSY. NEAR CENTER OF CLUSTER	S-6	IN 14401 ASSY. NEAR LIGHT SWITCH	S-7	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER	S-41	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER		
C-18	14401 ASSY. R.H. INSTRUMENT PANEL COURTESY LAMP	C-57	14401 ASSY. IN INSTRUMENT CLUSTER	C-66	14401 ASSY. UNDER INSTRUMENT PANEL AT CIGAR LIGHTER	C-96	19A017 ASSY. UNDER PACKAGE TRAY R.H. SIDE	C-101	19A017 ASSY. UPPER COWL TOP INNER L.H. SIDE	C-108	13A764 OR 220A13 ABOVE GLOVE BOX R.H. ABOVE FUSE BLOCK L.H.	C-115	R.H. 14C691 ASSY. L.H. 14C693 ASSY. R.H. & L.H. SEAT CUSHIONS	C-121	14405 ASSY. L.H. UNDER SIDE OF PACKAGE TRAY	C-181	138711 ASSY. R.H. & L.H. FRONT DOOR BEHIND CURT. LAMP	C-482	14401 ASSY. 148724 ASSY. R.H. OR L.H. UPPER COWL SIDES	C-184	65220A12 OR 14025 ASSY. R.H. & L.H. FRONT DOOR LOCK CONTROL ROD & KEY ROD SW.	S-5	IN 14401 WIRING ASSY. NEAR CENTER OF CLUSTER	S-6	IN 14401 ASSY. NEAR LIGHT SWITCH	S-7	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER	S-41	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER
C-25	14401 ASSY. UNDER CARPET, NEXT TO HEADLAMP DIMMER SWITCH	C-58	14401 ASSY. R.H. SIDE OF INSTRUMENT PANEL, ABOVE GLOVE BOX	C-67	14401 ASSY. UNDER INSTRUMENT PANEL AT CIGAR LIGHTER	C-97	19A017 ASSY. UNDER PACKAGE TRAY L.H. SIDE	C-102	14401 ASSY. RELAY PANEL CENTER OF THE INSTR. PANEL	C-109	13A764 ASSY. ABOVE GLOVE BOX R.H. ABOVE FUSE BLOCK L.H.	C-116	13A724 ASSY. BEHIND "B" PILLAR TRIM PANEL	C-149	14631 ASSY. UNDER L.H. SIDE OF INSTRUMENT PANEL	C-150	13A768 OR 13A769 R.H. & L.H. UPPER COWL SIDES	C-184	65220A12 OR 14025 ASSY. R.H. & L.H. FRONT DOOR LOCK CONTROL ROD & KEY ROD SW.	C-198	65220A13 ASSY. COWL TOP INNER UPPER R.H. BEHIND GLOVE BOX	S-5	IN 14401 WIRING ASSY. NEAR CENTER OF CLUSTER	S-6	IN 14401 ASSY. NEAR LIGHT SWITCH	S-7	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER	S-41	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER
C-25	14401 ASSY. UNDER CARPET, NEXT TO HEADLAMP DIMMER SWITCH	C-58	14401 ASSY. R.H. SIDE OF INSTRUMENT PANEL, ABOVE GLOVE BOX	C-67	14401 ASSY. UNDER INSTRUMENT PANEL AT CIGAR LIGHTER	C-97	19A017 ASSY. UNDER PACKAGE TRAY L.H. SIDE	C-102	14401 ASSY. RELAY PANEL CENTER OF THE INSTR. PANEL	C-109	13A764 ASSY. ABOVE GLOVE BOX R.H. ABOVE FUSE BLOCK L.H.	C-116	13A724 ASSY. BEHIND "B" PILLAR TRIM PANEL	C-149	14631 ASSY. UNDER L.H. SIDE OF INSTRUMENT PANEL	C-150	13A768 OR 13A769 R.H. & L.H. UPPER COWL SIDES	C-184	65220A12 OR 14025 ASSY. R.H. & L.H. FRONT DOOR LOCK CONTROL ROD & KEY ROD SW.	C-198	65220A13 ASSY. COWL TOP INNER UPPER R.H. BEHIND GLOVE BOX	S-5	IN 14401 WIRING ASSY. NEAR CENTER OF CLUSTER	S-6	IN 14401 ASSY. NEAR LIGHT SWITCH	S-7	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER	S-41	IN 14401 ASSY. BEHIND INSTRUMENT CLUSTER

WIRE CODE	
—	DIRECT TO BATTERY
—	TO IGNITION SWITCH

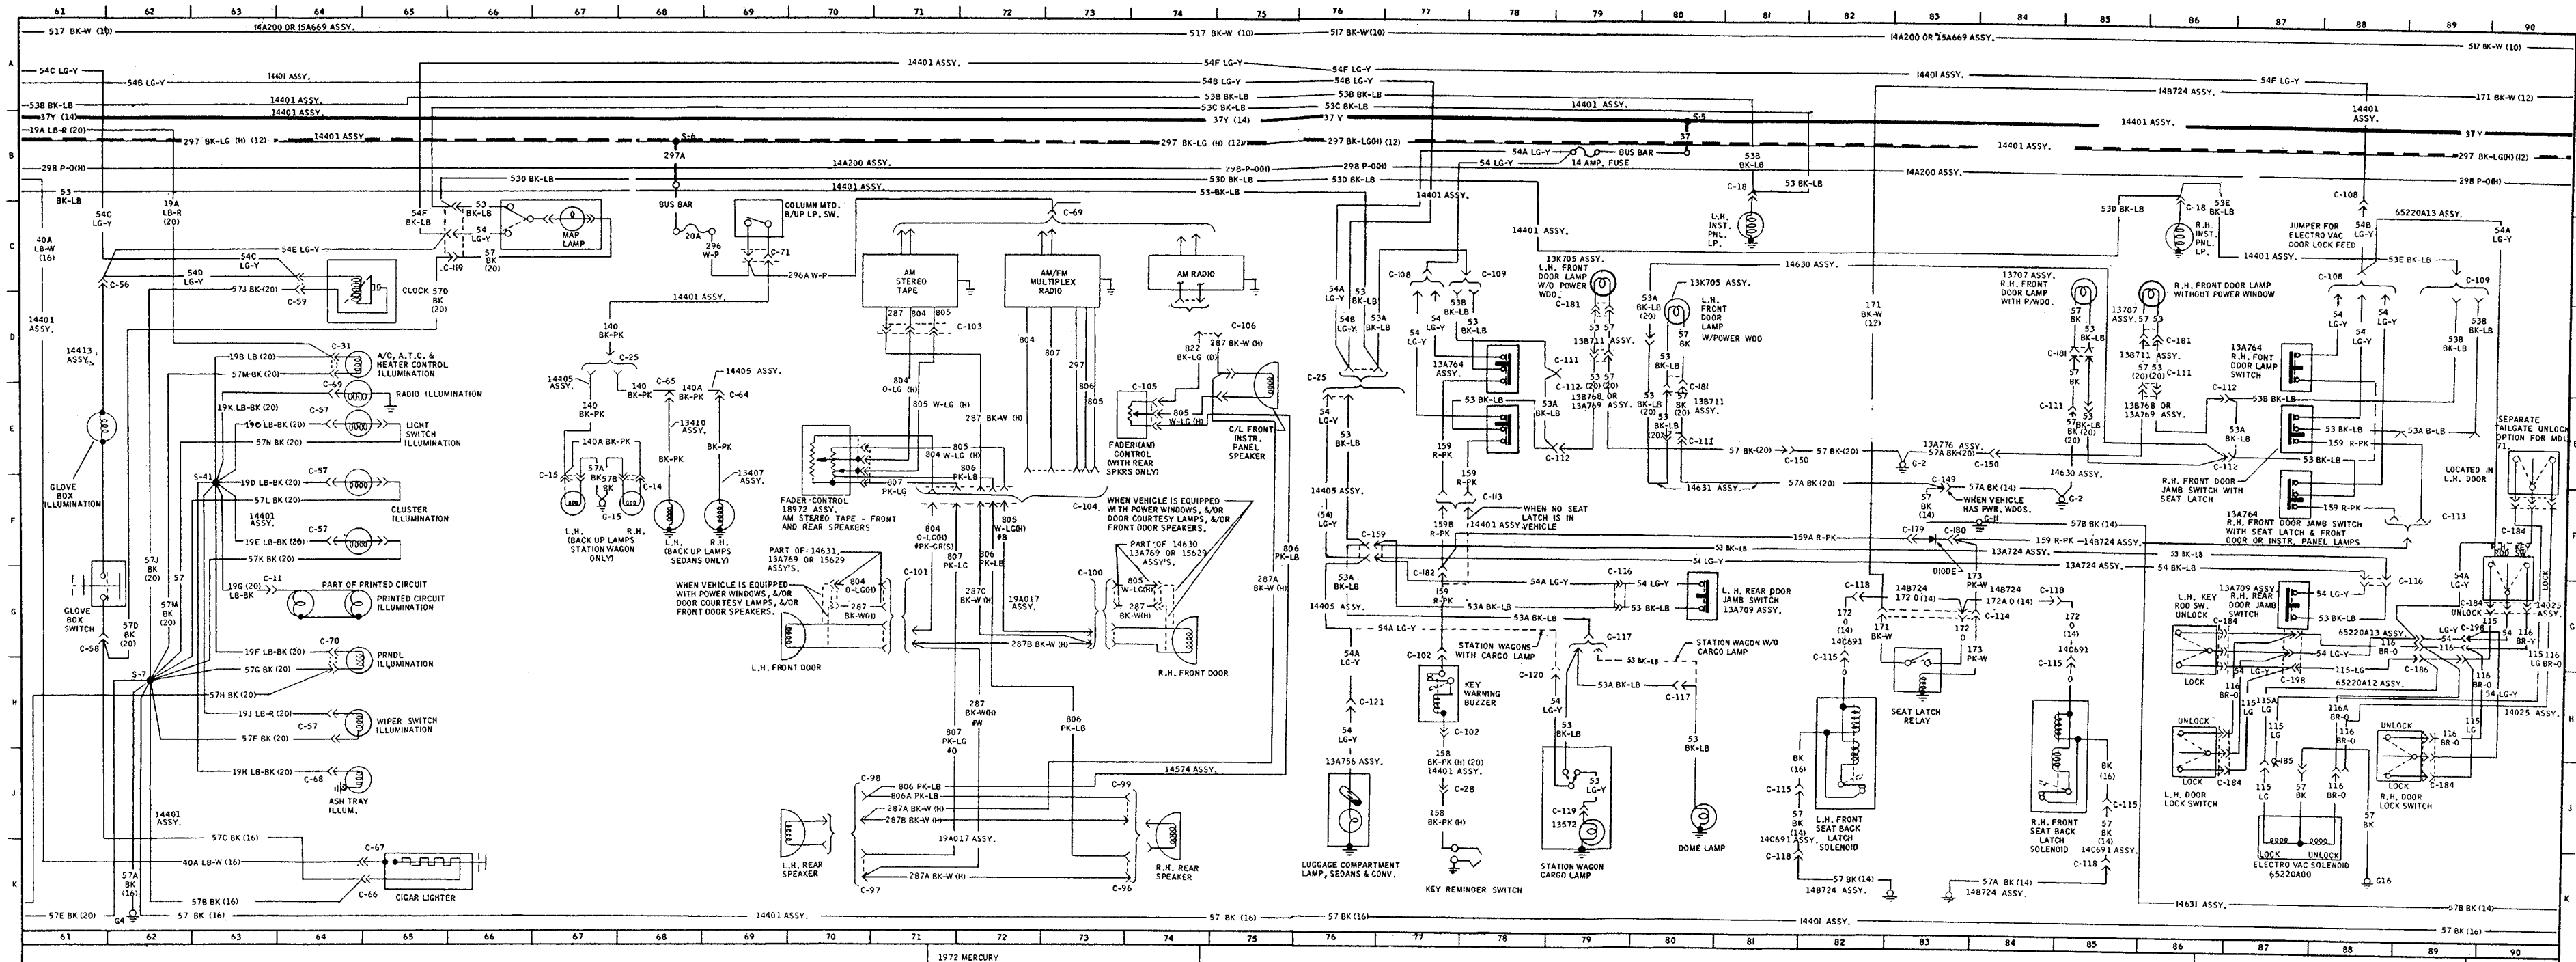

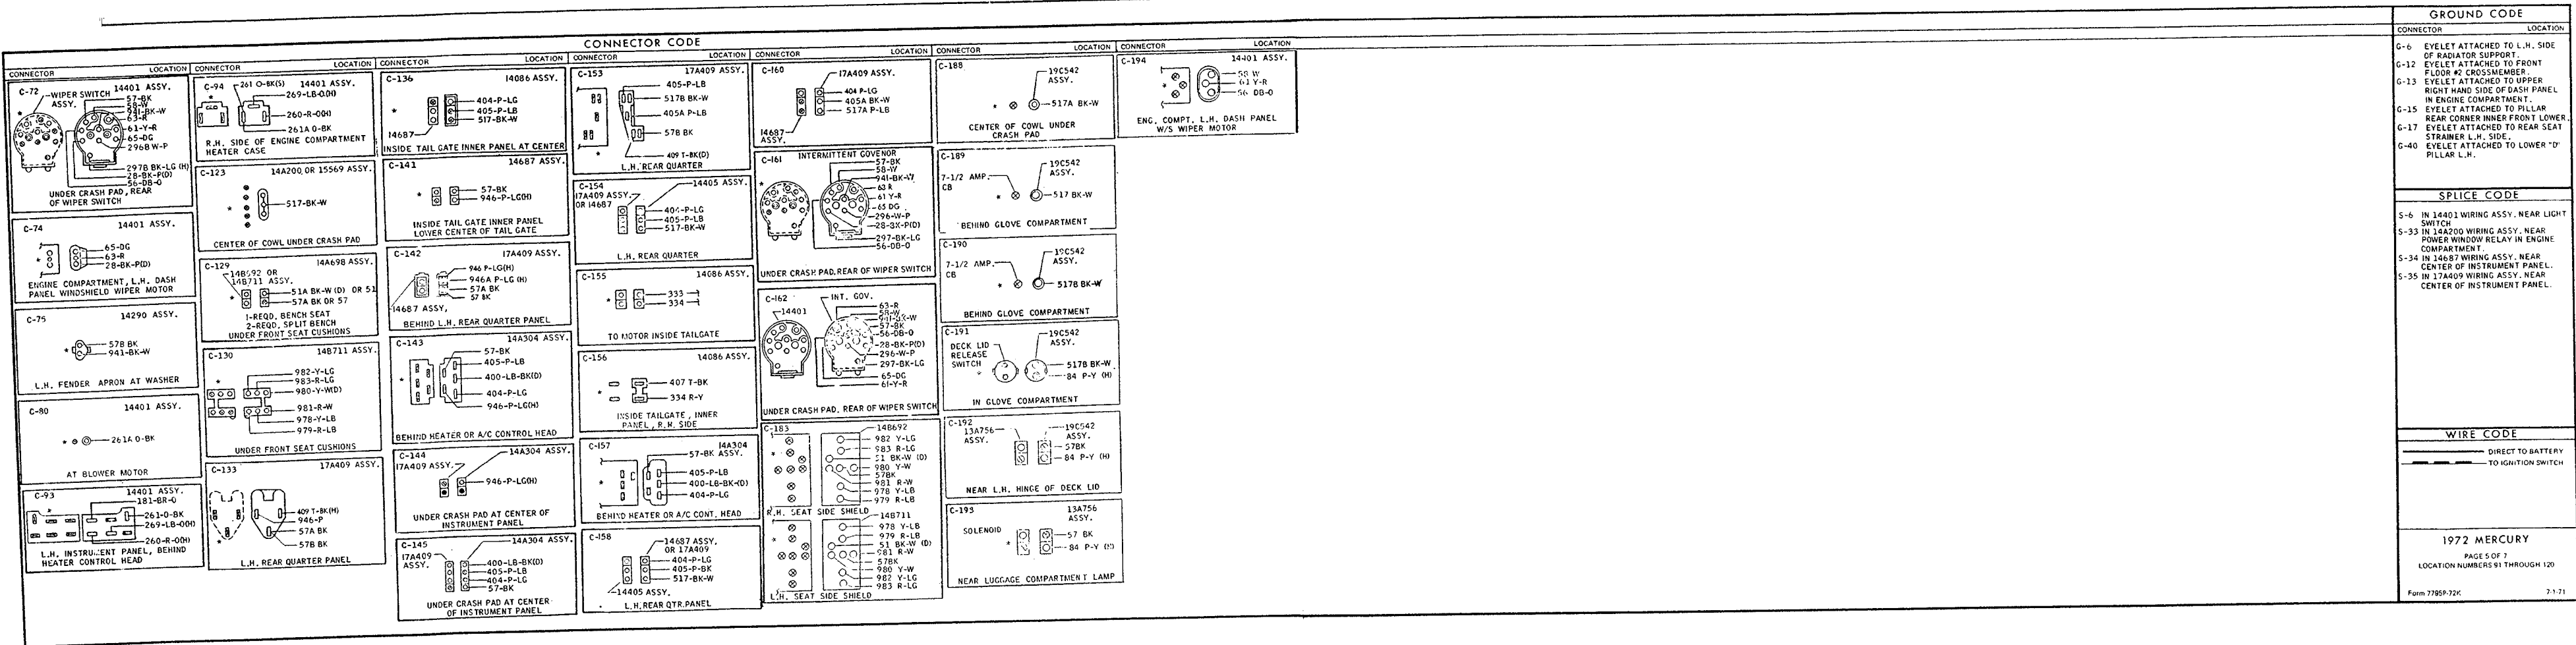


GROUND CODE	
CONNECTOR	LOCATION
G-6	EYELET ATTACHED TO L.H. SIDE OF RADIATOR SUPPORT.
G-12	EYELET ATTACHED TO FRONT FLOOR #2 CROSSMEMBER.
G-13	EYELET ATTACHED TO UPPER RIGHT HAND SIDE OF DASH PANEL IN ENGINE COMPARTMENT.
G-15	EYELET ATTACHED TO PILLAR REAR CORNER INNER FRONT LOWER STRAINER L.H. SIDE.
G-17	EYELET ATTACHED TO REAR SEAT STRAINER L.H. SIDE.
G-40	EYELET ATTACHED TO LOWER "D" PILLAR L.H.


 



 




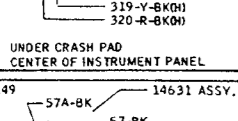
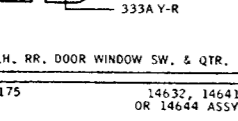
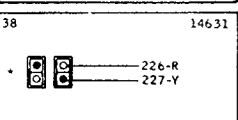

 
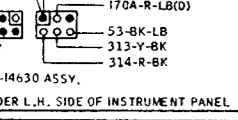
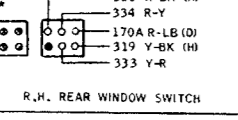
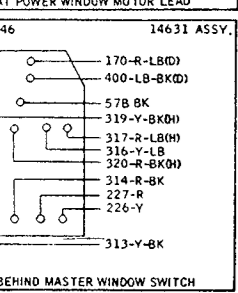
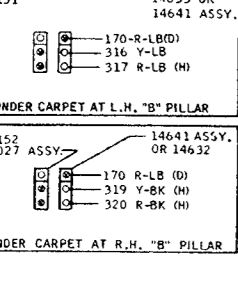
SPLICE CODE	
S-6	IN 14401 WIRING ASSY. NEAR LIGHT SWITCH
S-33	IN 14A200 WIRING ASSY. NEAR POWER WINDOW RELAY IN ENGINE COMPARTMENT.
S-34	IN 14687 WIRING ASSY. NEAR CENTER OF INSTRUMENT PANEL.
S-35	IN 17A409 WIRING ASSY. NEAR CENTER OF INSTRUMENT PANEL.

WIRE CODE	
---	DIRECT TO BATTERY
---	TO IGNITION SWITCH

1972 MERCURY  
PAGE 5 OF 7  
LOCATION NUMBERS 91 THROUGH 120  
Form 7795P-72K 7-1-71




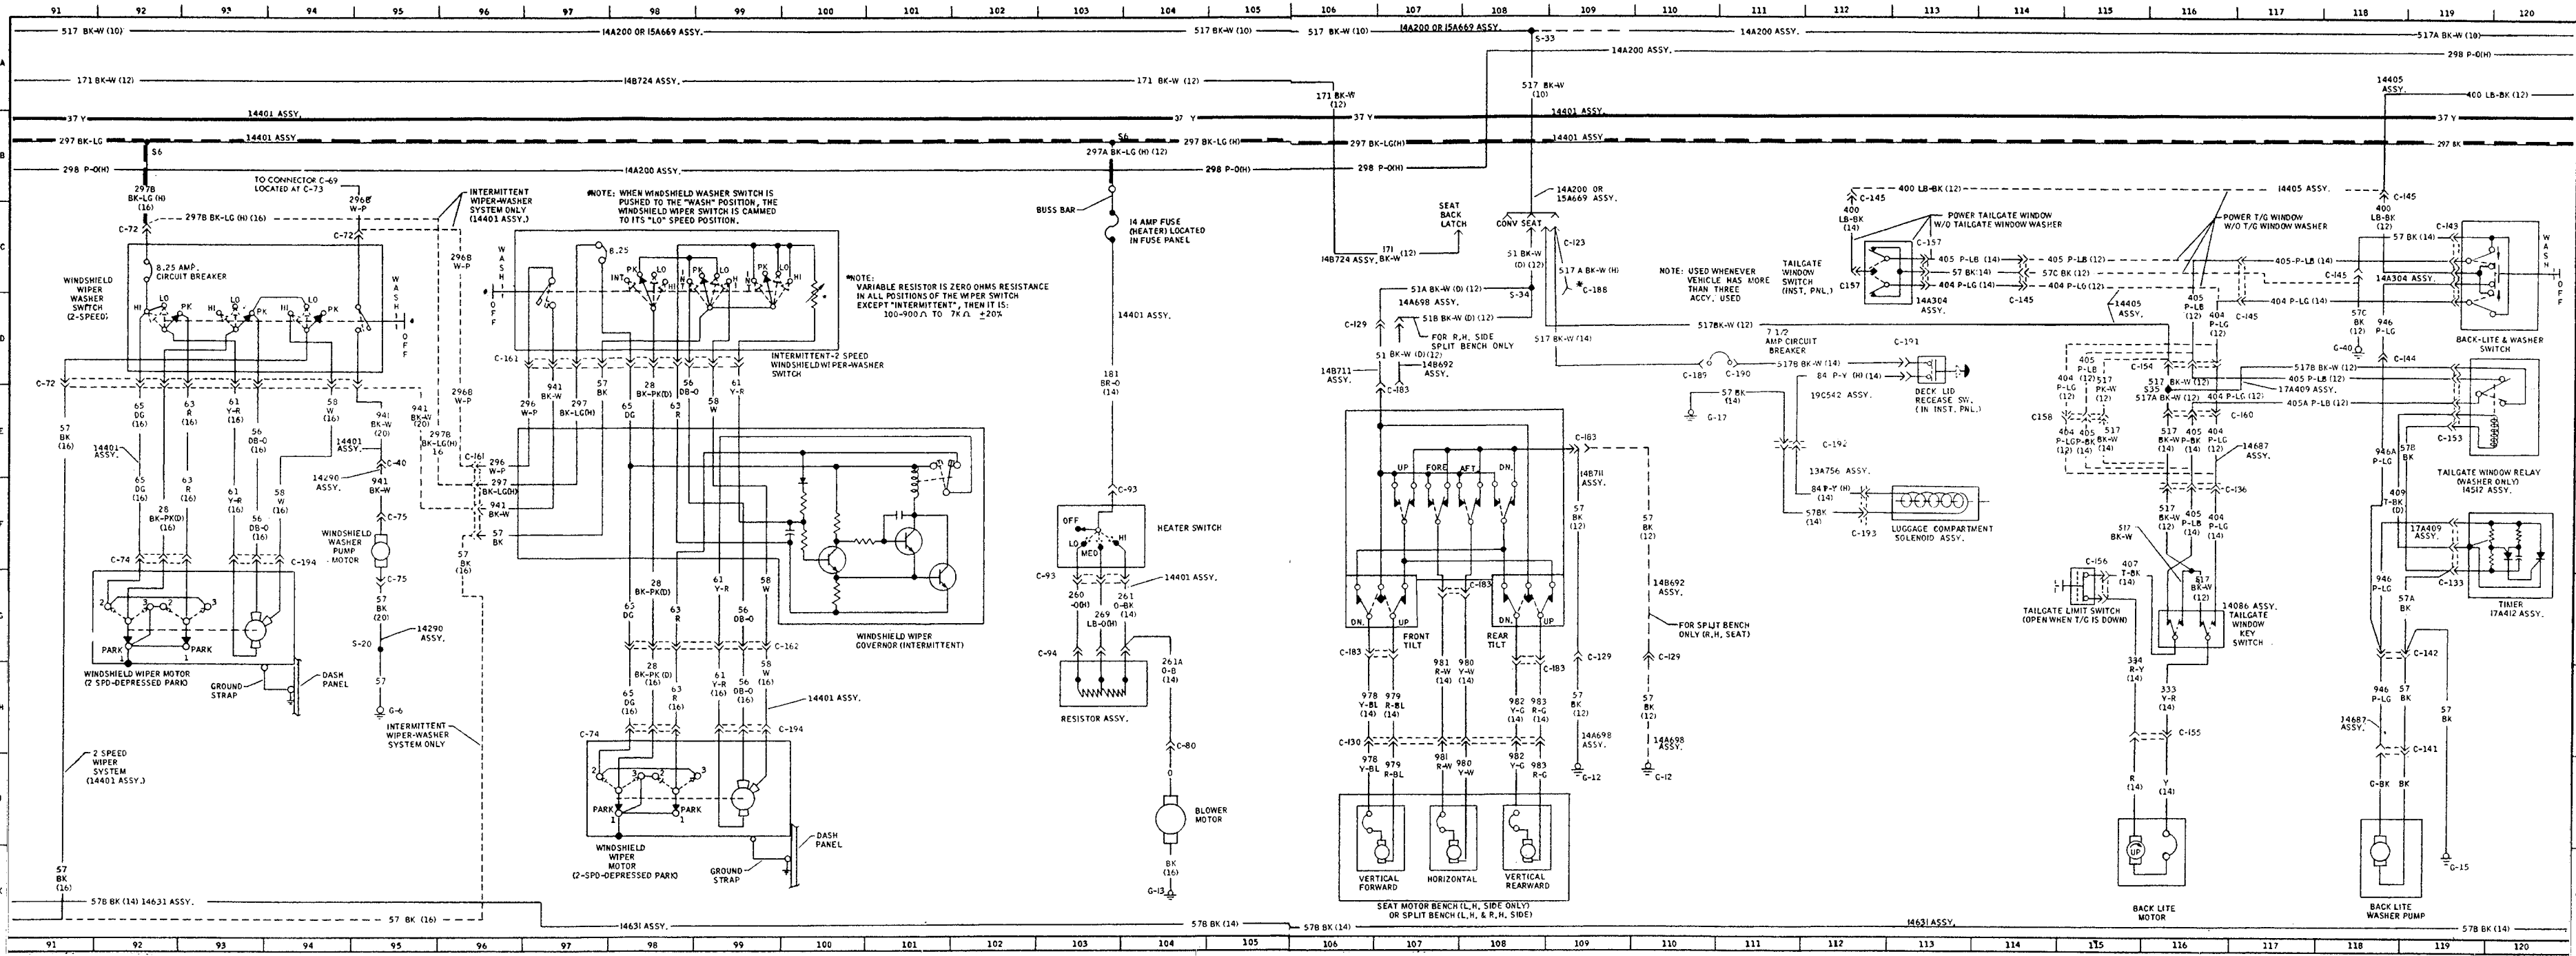

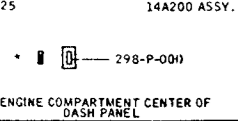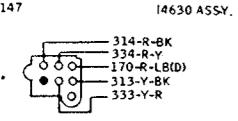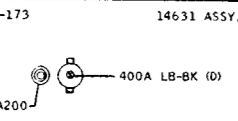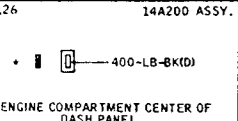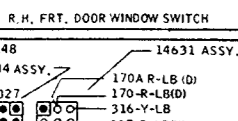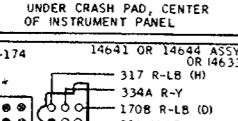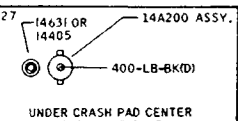
CONNECTOR CODE				SPLICE CODE
CONNECTOR	LOCATION	CONNECTOR	LOCATION	
C-125	14A200 ASSY.	C-147	14630 ASSY.	<b>SPLICE CODE</b> S-18 IN 14644 WIRING ASSY. UNDER CENTER OF REAR SEAT S-40 IN 14631 WIRING ASSY. (400 CIR.) NEAR CENTER OF INSTRUMENT PANEL.
 <p>*  — 298-P-00H</p> <p>ENGINE COMPARTMENT CENTER OF DASH PANEL</p>	 <p>314-R-BK 334-R-Y 170-R-LB(D) 313-Y-BK 333-Y-R</p> <p>R. H. FRT. DOOR WINDOW SWITCH</p>	 <p>14A200 — 400A LB-BK (D)</p> <p>UNDER CRASH PAD, CENTER OF INSTRUMENT PANEL</p>		
C-126	14A200 ASSY.	C-148	14631 ASSY.	
 <p>*  — 400-LB-BK(D)</p> <p>ENGINE COMPARTMENT CENTER OF DASH PANEL</p>	 <p>14644 ASSY. OR 14A027</p> <p>170A R-LB (D) 170-R-LB(D) 316-Y-LB 317-R-LB(H) 319-Y-BK(H) 320-R-BK(H)</p> <p>UNDER CRASH PAD CENTER OF INSTRUMENT PANEL</p>	 <p>14641 OR 14644 ASSY. OR 14633</p> <p>317 R-LB (H) 334A R-Y 170B R-LB (D) 316 Y-LB 333A Y-R</p> <p>L.H. RR. DOOR WINDOW SW. &amp; QTR.</p>		
C-127	14631 OR 14405	C-149	14631 ASSY.	
 <p>*  — 400-LB-BK(D)</p> <p>UNDER CRASH PAD CENTER OF INSTRUMENT PANEL</p>	 <p>57A-BK 57-BK 170A-R-LB(D) 53-BK-LB 313-Y-BK 314-R-BK</p> <p>14630 ASSY.</p> <p>UNDER L.H. SIDE OF INSTRUMENT PANEL</p>	 <p>14632, 14641 OR 14644 ASSY.</p> <p>320 R-BK (H) 334 R-Y 170A R-LB (D) 319 Y-BK (H) 333 Y-R</p> <p>R.H. REAR WINDOW SWITCH</p>		
C-138	14631	C-151	14633 OR 14641 ASSY.	
 <p>*  — 226-R  — 227-Y</p> <p>AT POWER WINDOW MOTOR LEAD</p>	 <p>170-R-LB(D) 316 Y-LB 317 R-LB (H)</p> <p>UNDER CARPET AT L.H. "B" PILLAR</p>	 <p>334 R-Y 333 Y-R</p> <p>AT POWER WINDOW MOTOR LEAD</p>		
C-146	14631 ASSY.	C-152	14641 ASSY. OR 14632	
 <p>170-R-LB(D) 400-LB-BK(D) 57B BK 319-Y-BK(H) 317-R-LB(H) 316-Y-LB 320-R-BK(H) 314-R-BK 227-R 226-Y 313-Y-BK</p> <p>BEHIND MASTER WINDOW SWITCH</p>	 <p>170 R-LB (D) 319 Y-BK (H) 320 R-BK (H)</p> <p>UNDER CARPET AT R.H. "B" PILLAR</p>			

**WIRE CODE**  
 DIRECT TO BATTERY  
 TO IGNITION SWITCH

1972 MERCURY  
 PAGE 6 OF 7  
 LOCATION NUMBERS 121 THROUGH 150

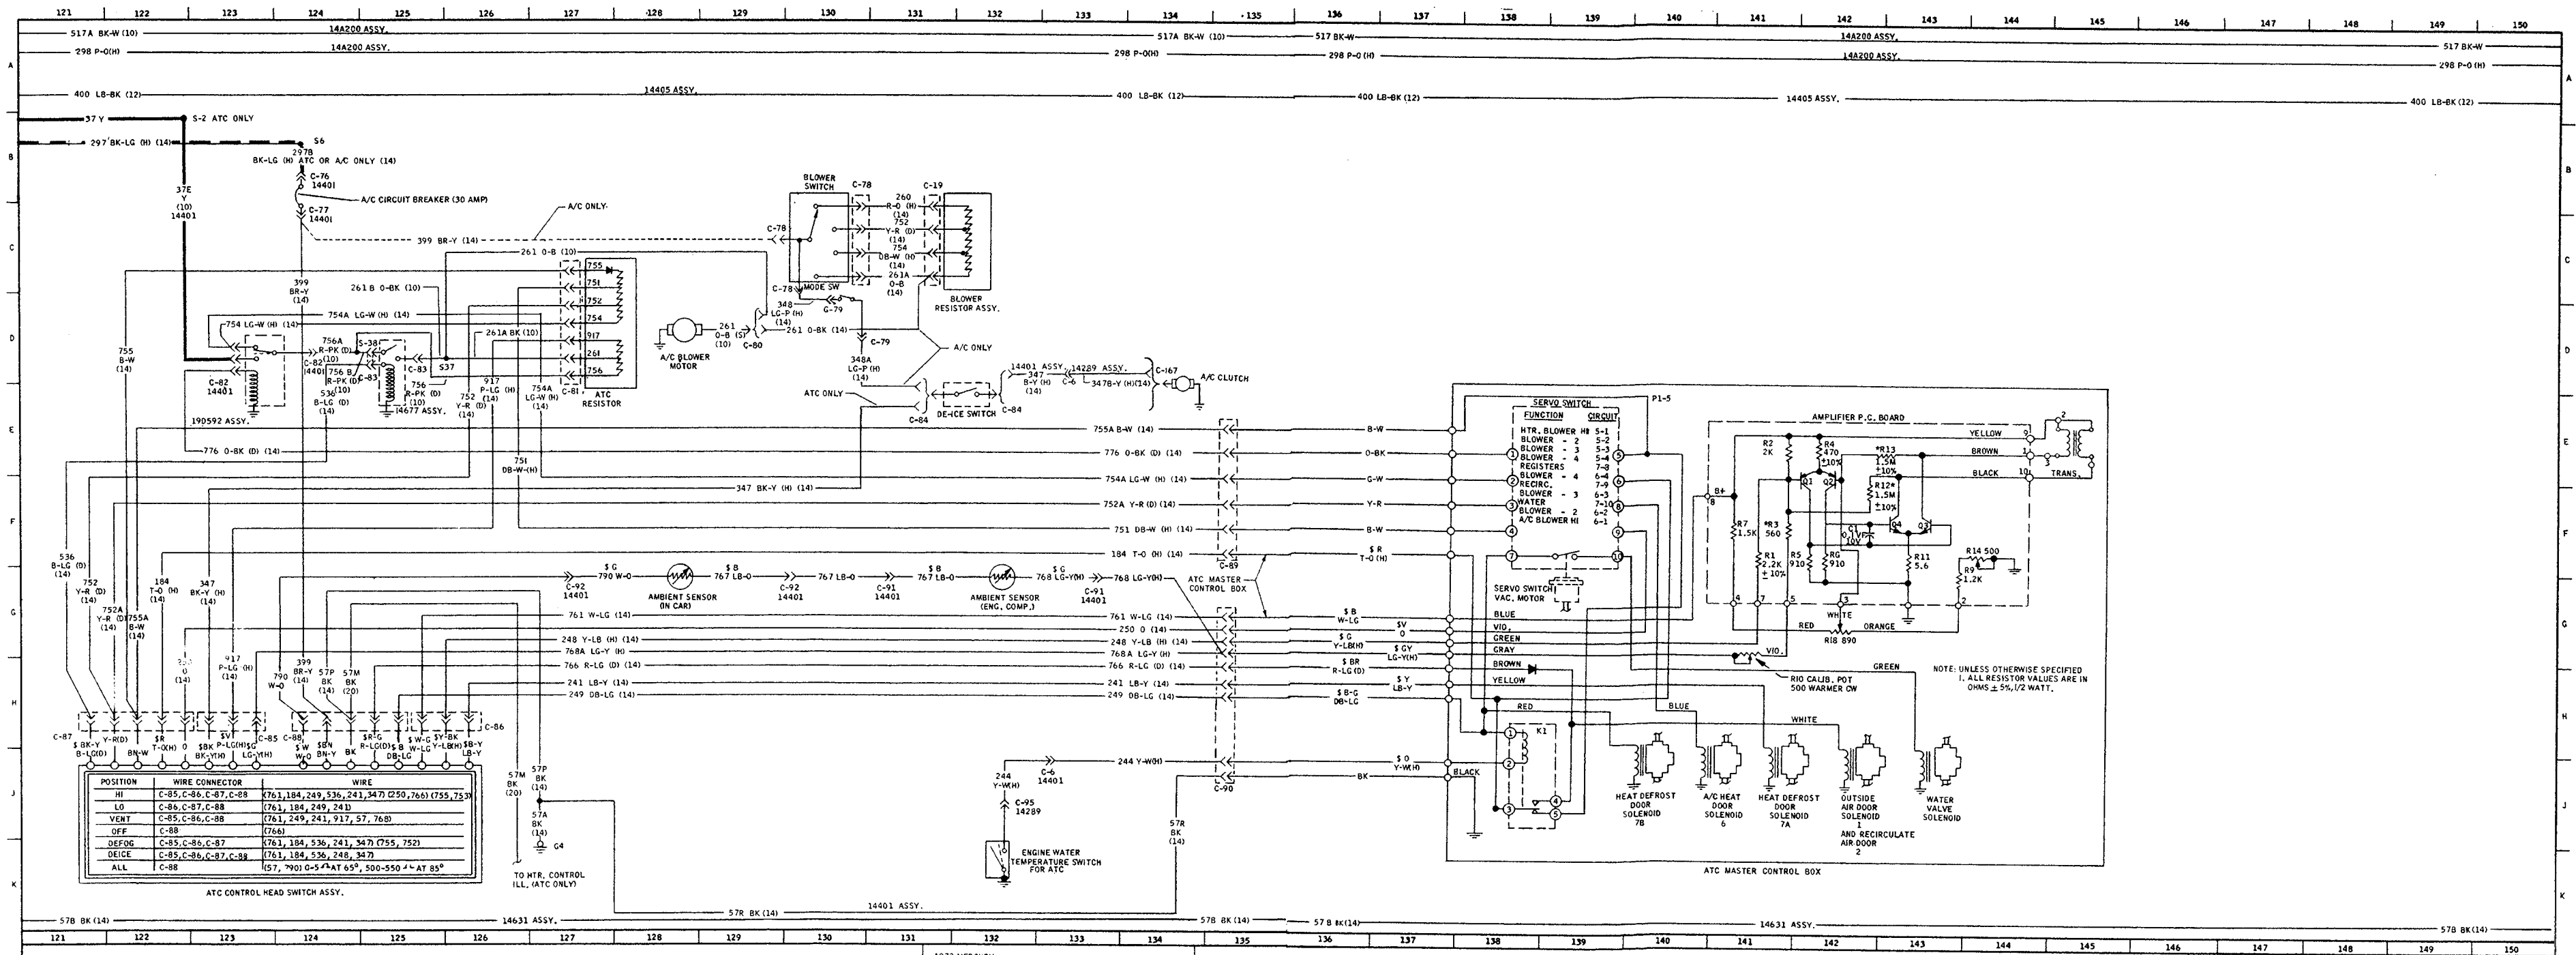


CONNECTOR CODE						GROUND CODE	
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION
C-6 14289 ASSY.	14401 ASSY. 39 R-W 31 W-R 36 R-LG 262 BR-PK 347 B-Y (H) 39-R-W 31-W-R 16-R-LG 262 BR-PK 14401 ASSY. 244-Y-W(H) 347A B-Y (H) 14289 ASSY.	C-79 14401 ASSY. 348A LG-P (H) 348 LG-P(H)	REAR OF A/C CONTROL HEAD	C-84 14401 ASSY. 347-BK-Y(H) 148-LG-P(H) 347A-BK-Y(H)	ENGINE COMPARTMENT, R.H. SIDE OF A/C CASE	C-90 14401 ASSY. 241-LB-Y 244-Y-W(H) 248-Y-LB(H) 768 LG-Y(H) 768A LG-Y (H) 761-W-LG 250-O 249-DB-LG 766-R-LG(D) 57R BK	R.H. DASH PANEL, BEHIND GLOVE BOX
C-19 14401 ASSY.	14401 ASSY. 754-LG-W(H) 261A O-BK 261 O-BK 260-R-O(H) 752-Y-R(O)	C-81 14401 ASSY. 756-R-P(D) 261A R-O (H) 917-PK-LG(H) 754-LG-W(H) 752-Y-R(D) 751-DB-W(H) 755-BR-W	ENGINE COMPARTMENT R.H. SIDE OF DASH PANEL A/C CASE	C-86 14401 ASSY. RED 761-W-LG 248-Y-LB(H) 241-LB-Y	L.H. INSTRUMENT PANEL BEHIND A.T.C. CONTROL	C-91 14401 ASSY. 767-LB-O 768-LG-Y(H)	ENGINE COMPARTMENT, R.H. SIDE OF A/C CASE AMBIENT TEMP.
C-76 14401 ASSY. 30 AMP. CB	399-BR-Y	C-82 14401 ASSY. 754 LG-W(H) 754A LG-W (D) 756A R-PK (D) 776-O-BK(D) 37E Y	ENGINE COMPARTMENT, CENTER OF DASH PANEL A.T.C. RELAY	C-87 14401 ASSY. 250-O 184-T-O (H) 752-Y-R(D) 752A-Y-R(D) 755-BR-W 755A-BR-W 536-B-LG(D)	L.H. INSTRUMENT PANEL, BEHIND A.T.C. CONTROL HEAD	C-92 14401 ASSY. 790-W-O 767-LB-O	R.H. SIDE OF INSTRUMENT PANEL ABOVE GLOVE BOX
C-77 14401 ASSY. 30 AMP. CB	297B BK-LG	C-83 14401 ASSY. 261B R-O (H) 536-BK-LG(D) 756B R-PK (D)	ENGINE COMPARTMENT, CENTER OF DASH PANEL A.T.C. RELAY	C-88 14401 ASSY. 399-BR-Y 790-W-O 57R BK 249-DB-LG 57P-BK 766-R-LG(D)	L.H. INSTRUMENT PANEL, BEHIND A.T.C. CONTROL	C-95 14289 ASSY. 39-R-W 244-Y-W(H)	ENGINE COMPARTMENT, WATER TEMPERATURE SENDER A.T.C.
C-78 14401 ASSY.	14401 ASSY. 260-R-O(H) 399-B-Y 752-Y-R(D) 754-LG-W(H) 261A R-O (H) 348-R-O(D)	C-89 14401 ASSY. 184 T-O (H) 755A BR-W 776-O-BK(D) 754A LG-W (H) 752A Y-R (D) 751-DB-W(H)	R.H. DASH PANEL, BEHIND GLOVE BOX	C-167 14289 ASSY. 347-BK-Y(H)	NEAR A/C COMPRESSOR		
							G4 EYELET ATTACHED TO INSTRUMENT PANEL REINFORCEMENT
						SPICE CODE	
						S-2 IN 14401 WIRING ASSY. NEAR STARTING MOTOR RELAY.	
						S-6 IN 14401 WIRING ASSY. NEAR LIGHT SWITCH.	
						S-37 IN 14401 WIRING ASSY. IN ENGINE COMPARTMENT NEAR ATC RESISTOR.	
						WIRE CODE	
						— DIRECT TO BATTERY	
						— TO IGNITION SWITCH	
						1972 MERCURY	
						PAGE 7 OF 7	
						LOCATION NUMBERS 151 THROUGH 165	
						Form 7795P-720	
						7-1-71	

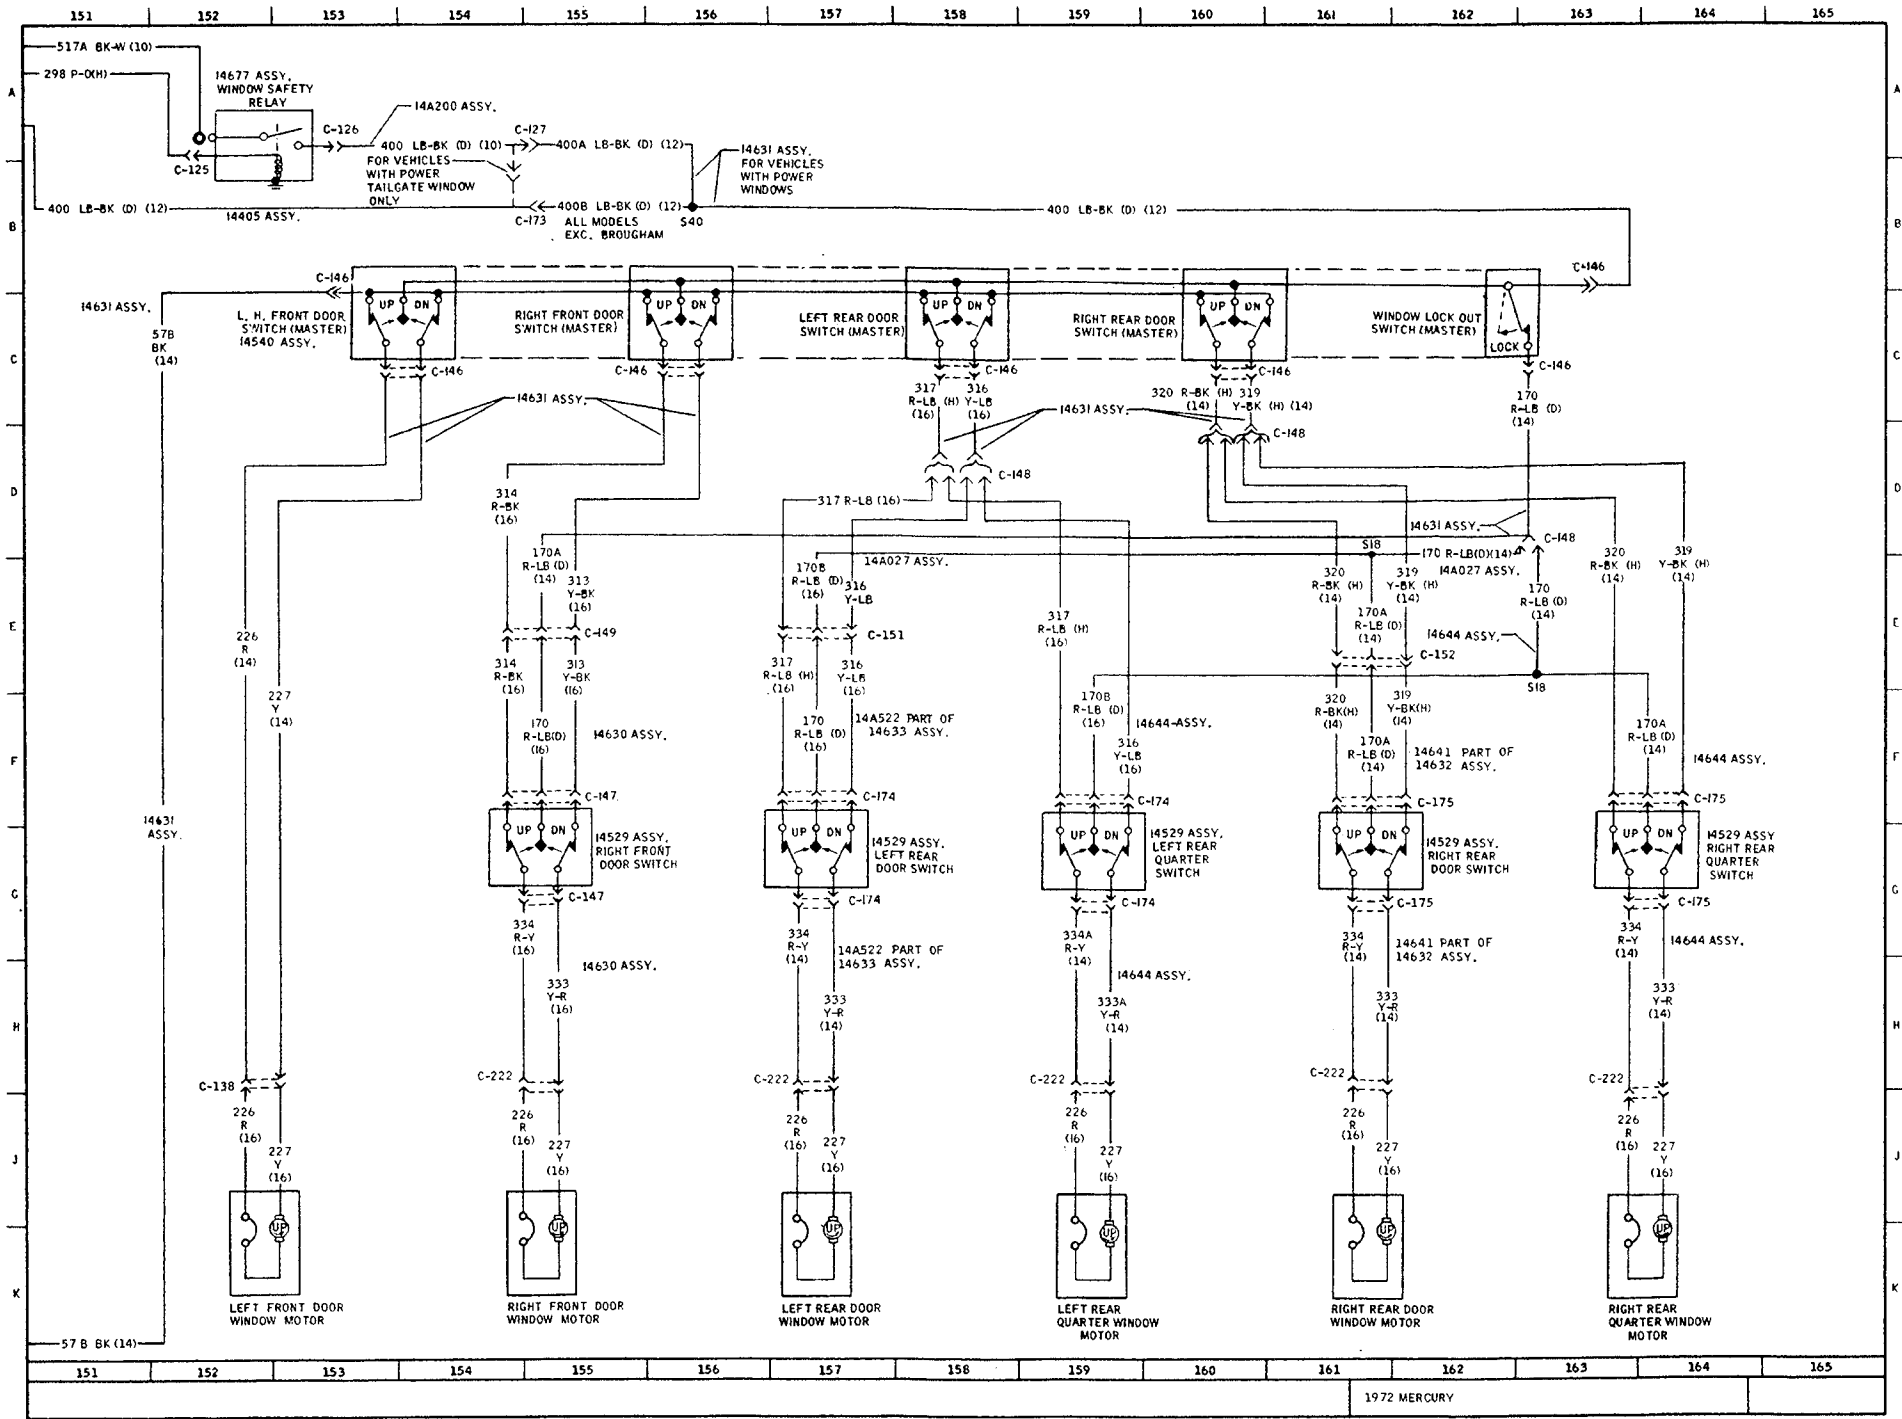

INDEX

COMPONENT	LOCATION
AIR CONDITIONER - MANUAL SYSTEM	C-26
- AUTOMATIC TEMPERATURE CONTROL SYSTEM	J-19
ALTERNATOR	F-2
CIGAR LIGHTERS - FRONT	D-77
- REAR	J-77
FLASHERS	
EMERGENCY WARNING	C-87
TURN SIGNAL	C-86
GAUGES	
FUEL	F-48
INSTRUMENT VOLTAGE REGULATOR (CONSTANT VOLTAGE UNIT)	F-49
HEATED BACK LITE	E-101
HEATER SYSTEM	
HORNS	K-101
IGNITION SYSTEM	C-8
ILLUMINATORS	
ASH TRAY	F-80
CLUSTER	F-78
HEATER	D-80
RADIO	E-80
INDICATORS	
DOOR AJAR	B-51
DUAL BRAKE WARNING & SURE TRACK	F-5
HEATED BACKLITE	D-100
HIGH BEAM	C-82
LEFT TURN	E-94
LIGHTS ON	H-53
LOW FUEL	C-48
RIGHT TURN	E-92
SEAT BELT	C-52
KEY WARNING BUZZER SYSTEM	
LAMPS	
AIR CONDITIONER LAMP	D-80
BACK-UP LAMP	J-102
"C" PILLAR COURTESY LAMP	F-56
CORNERING LAMP	F-85
DOOR COURTESY	J-55
HEADLAMPS	J-84
HEATER LAMP	D-80
LICENSE PLATE	G-95
LUGGAGE COMPARTMENT LAMP	C-56
CONSOLE LAMP	E-96
PARKING LAMP	J-88
REAR LAMPS	J-91
SIDE MARKER LAMPS - FRONT	J-87
- REAR	G-93
MOTORS	
A/C CLUTCH	D-23
HEATER BLOWER	D-23
POWER SEAT	G-124
POWER WINDOWS	
FRONT DOORS	E-8
L.H. REAR QUARTER	H-11
R.H. REAR QUARTER	H-13
STARTING	C-4
WINDSHIELD WASHER	G-104
RADIOS	
AM & FADER	F-130
AM & STEREO TAPE UNIT	D-130
AM-FM MULTIPLEX	C-131
SENDERS	
FUEL GAGE	D-46
OIL PRESSURE	H-4
WATER TEMPERATURE	C-3
SEAT BACK LATCH SYSTEM	F-112
SPEED CONTROL SYSTEM	F-107
STARTER SYSTEM	B-4
SURE TRACK CONTROL SYSTEM	H-5
AIR CONDITIONER CONTROL - MANUAL	C-28
- A.T.C.	J-19
BACK-UP LAMP	E-102
COURTESY LAMP - FRONT	D-60
DOOR LOCK	
DOOR AJAR - FRONT	D-49
DUAL BRAKE WARNING	C-6
EMERGENCY WARNING	C-92
HEADLAMP DIMMER	C-84
HEATED BACKLITE	D-99
IGNITION	C-8
LIGHTING	B-84
KEY WARNING BUZZER	X-54
POWER SEAT	C-116
POWER WINDOWS	
FRONT DOOR	D-7
REAR QUARTER	H-12
SPEED CONTROL	F-107
STOP LAMP	D-89
SURE TRACK ACTUATOR	K-4
TURN SIGNAL	C-93
WINDSHIELD WASHER	C-63

# FUSE LOCATIONS

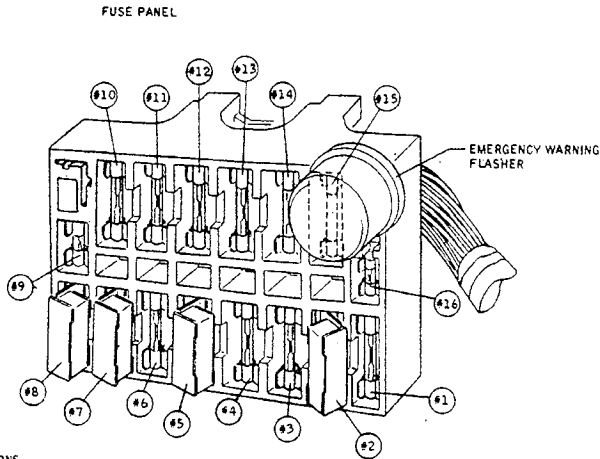

## FUSE LOCATIONS

1. (20 AMP.) INST. PNL, CIGAR LITER & DR. LOCK FEED
- \*2. (20 AMP.) STOP LAMPS
3. (20 AMP.) DR. CIGAR LITER
- \*4. (30 AMP.) HEATED BACKLITE FEED
- \*5. (30 AMP.) PWR. SEATS
6. (20 AMP.) COURT LPS., LUGGAGE LP., GLOVE BOX LP., CLOCK
- \*7. (20 AMP.) PWR. WINDOWS
- \*8. (30 AMP.) AIR COND.
9. (6 AMP.) INST. CLUSTER ILLUM. LP., HEATER SW. PRNDL LP.  
RADIO, ASH TRAY
10. (7.5 AMP.) ACCY. RELAY FEED
11. (7.5 AMP.) SPD. CONTROL & W/S/WASHER FEED
12. (7.5 AMP.) T/S LP. FEED
13. (15 AMP.) RADIO & PWR. ANT. FEED
14. (7.5 AMP.) BACKUP LP. & CORNER LP. FEED
15. (7.5 AMP.) WIRING LP. FEED
16. (3 AMP.) SURE TRACK BRAKE SYSTEM FEED

## CIRCUIT BREAKERS THAT ARE INTEGRAL PARTS OF COMPONENTS


1. (18 AMP.) HEADLAMPS, PART OF LIGHTING SWITCH
- \*2. (15 AMP.) TAIL LAMPS, PARKING LAMPS, MARKER LAMPS AND INSTRUMENT CLUSTER ILLUMINATION, PART OF LIGHTING SWITCH.
3. (8.25 AMP.) W/S/W MTR. FEED, PART OF W/S/W SWITCH.

## BULB CHART

WIRING COLOR CODE PRIMARY COLOR		LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
BLACK	BK	BACK-UP	32-	1156
BROWN	BR	C-PILLAR	12	105
TAN	T	DOOR COURTESY	6	212-1
RED	R	FRONT CORNERING	30	1196
PINK	PK	FRONT & REAR MARKER	2	194
ORANGE	O	FRONT PARK/TURN SIGNAL	32-3	1157-NA
YELLOW	Y	HEADLAMPS		
DK GREEN	DG	HI BEAM	37.5	4001
LT GREEN	LG	LO BEAM	50-37.5	4002
DK BLUE	DB	LICENSE PLATE	4 C.P.	97
LT BLUE	LB	PARKING LAMP R.P.O.	15	94
PURPLE	P	SUPPLEMENTAL MODEL 57	32	1156
GRAY	CY	SUPPLEMENTAL MODEL 65	12	211-1
WHITE	W	TAIL, STOP AND TURN	32-3	1157
HASH	(H)	FIERA LAMPS	6	212-1
DOT	(D)	CLUSTER ILLUM (PRINTED CIRCUIT)	2 C.P.	194
		CLUSTER ILLUM (SOCKET ON WIRING)	2 C.P.	1895
		HI-BEAM INDICATOR	2 C.P.	194
		TURN INDICATOR	2 C.P.	194
		HEATER & A/C CONTROLS	2 C.P.	1895
		RADIO PILOT LIGHT	1.9C.P.	1893
		AUTO TRANS. QUADRANT	.7C.P.	1445
		ASH TRAY ILLUM.	.7C.P.	1445
		DUAL BRAKE WARNING	2 C.P.	194
		ROOF CONSOLE (FUEL, BELTS, LITES & DOOR	2 C.P.	194
		AJAR	2 C.P.	194
		LUGGAGE COMPARTMENT LITE	6C.P.	631
		MAP LAMP	12C.P.	105
		COURTESY LAMPS (INST. PANEL)	6C.P.	90
		SEAT BELT WARNING	2C.P.	194





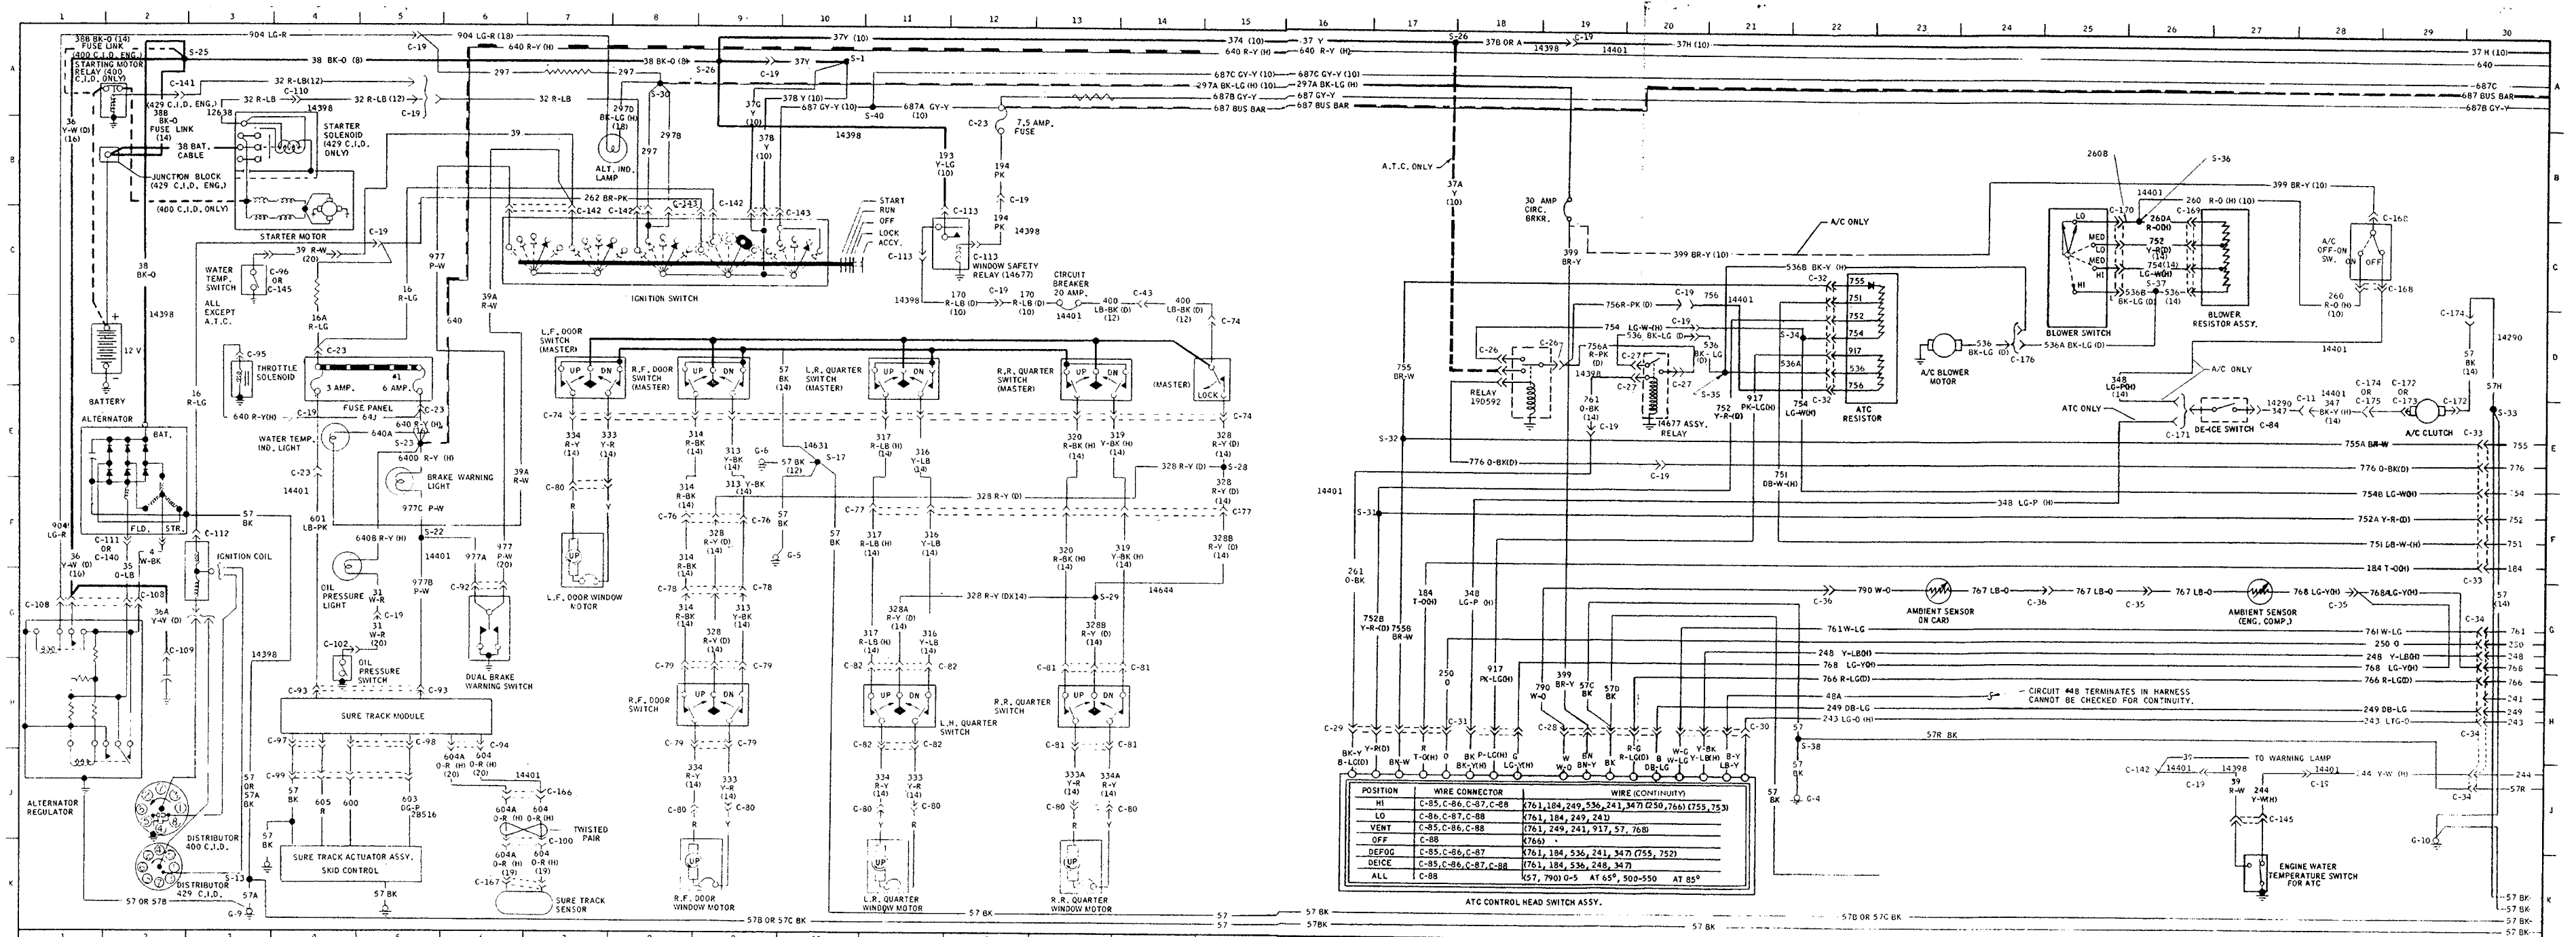

**ATC CONTROL HEAD SWITCH ASSY.**

POSITION	WIRE CONNECTOR	WIRE CONTINUITY
HI	C-85, C-86, C-87, C-88	(761, 184, 249, 536, 241, 347) (250, 766) (755, 753)
LO	C-86, C-87, C-88	(761, 184, 249, 241)
VENT	C-85, C-86, C-88	(761, 249, 241, 917, 57, 768)
OFF	C-88	(766)
DEFOG	C-85, C-86, C-87	(761, 184, 536, 241, 347) (755, 752)
DEICE	C-85, C-86, C-87, C-88	(761, 184, 536, 248, 347)
ALL	C-88	(57, 790) 0-5 AT 65°, 500-550 AT 85°



CONNECTOR CODE										SPLICE CODE			
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	SPLICE	LOCATION
C-9	14405	14401	14401	C-22	14401	C-43	14631	14401	14631	14401	14405	C-163	9E717
AT L.H. TOE BOARD		UNDER INSTRUMENT PANEL		L.H. SIDE OF BRAKE PEDAL SUPPORT		R.H. OR L.H. DOOR		GLOVE BOX LAMP		AT L.H. "C" PILLAR AREA		* 81 BR-YD	
C-10	14405	C-22	14401	C-44	14405	C-101	14401	C-116	14401	C-152	14334	C-116	14401
AT L.H. DECK LID HINGE BRACKET		L.H. SIDE OF BRAKE PEDAL SUPPORT		L.H. SIDE OF BRAKE PEDAL SUPPORT		R.H. SIDE OF INSTR. PANEL		GLOVE BOX LAMP SWITCH		TO DOME LAMP		TRANSMISSION SWITCH	
C-15	14401	C-37	14401	C-50	14405	C-103	14401	C-118	14401	C-153	14405	C-165	14401
TO STEERING COLUMN		BEHIND INSTR. CLUSTER		AT R.H. COWL SIDE		SEAT BELT WARNING LAMP		GLOVE BOX LAMP		L.H. QTR. PNL. AREA		SPEED SENSOR	
C-16	14401	C-42	14631	C-70	14405	C-104	14405	C-119	14398	C-154	14405	C-164	9E717
AT L.H. TOE BOARD		L.H. SIDE OF BRAKE PEDAL SUPPORT		DOOR SWITCH		LUGGAGE COMPARTMENT LAMP & DECK LID RELEASE SOLENOID		ENG. COMPT. LAMP		AT FUEL TANK		* 369BR-000	
C-19	14401	C-71	14405	C-105	14405	C-106	14405	C-120	14401	C-161	9E717	C-177	14334
ON DASH PANEL BEHIND FUSE PANEL		CONSOLE LIGHT		R.H. OR L.H. TO RETRACTOR SWITCH		TO SEAT SENSOR SW.		L.H. PACKAGE TRAY AREA		VACUUM SOLENOID VALVE		TO DOME LAMP	
C-22	14401	C-72	14405	C-110	14401	C-144	14630	C-178	14334	C-161	9E717	C-178	14405
UNDER INSTRUMENT PANEL		R.H. COWL SIDE		TO COURTESY LAMP		INSIDE LEFT OR RIGHT DOOR		"C" PILLAR AREA		VACUUM SOLENOID VALVE		TO READING LAMP	


**GROUND CODE**

- G-3 EYELET ATTACHED TO DECK LID STRIKER SUPPORT
- G-5 EYELET ATTACHED TO L.H. DOOR
- G-6 EYELET ATTACHED TO L.H. COWL SIDE
- G-7 EYELET ATTACHED TO R.H. DOOR

**WIRE CODE**

- DIRECT TO BATTERY
- TO IGNITION SWITCH (ACCY. TERMINAL)

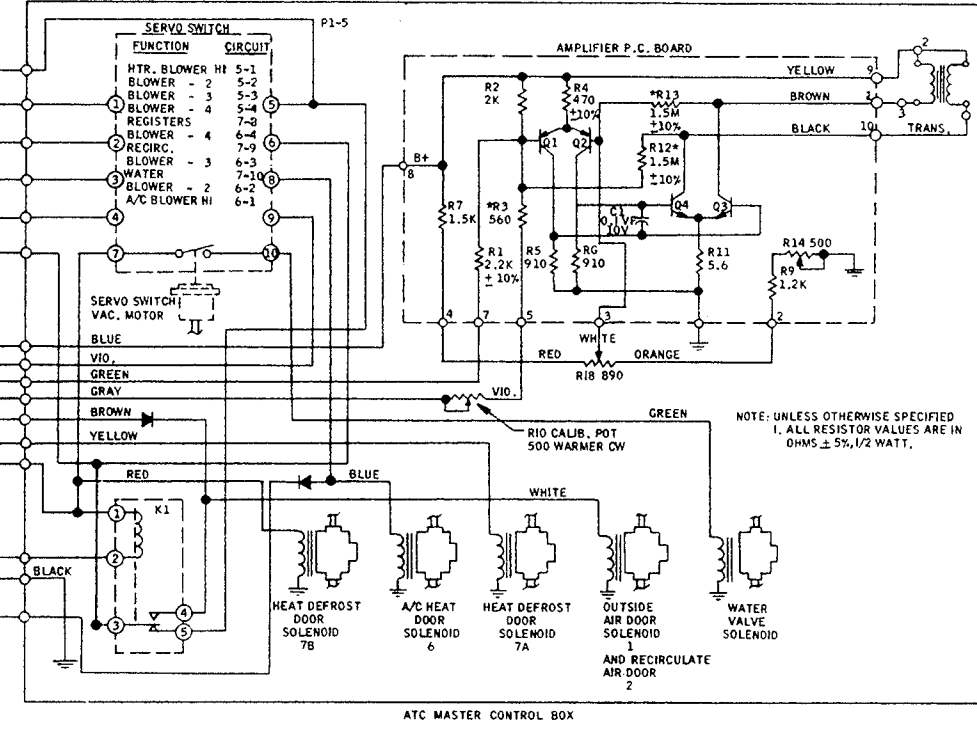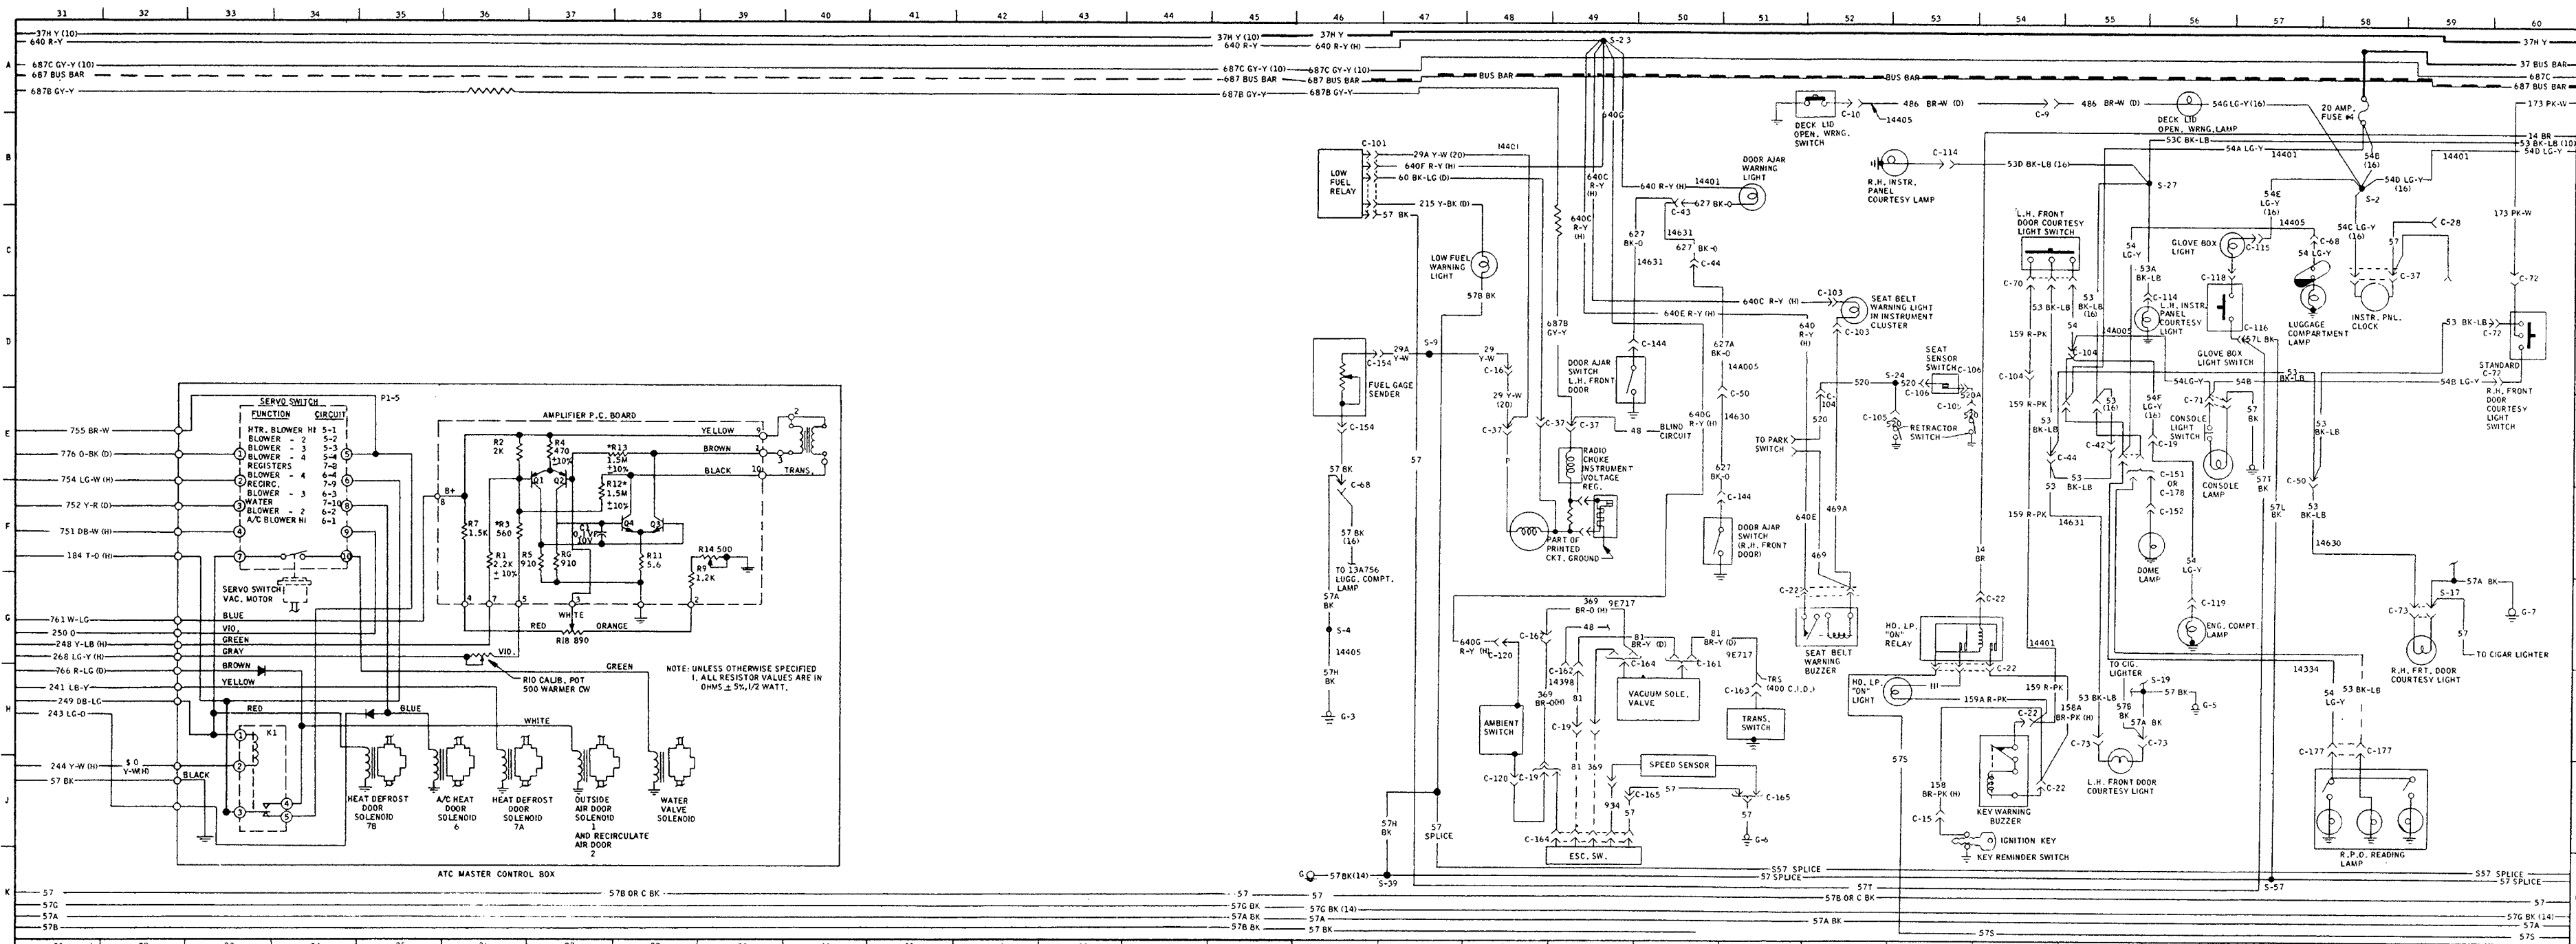

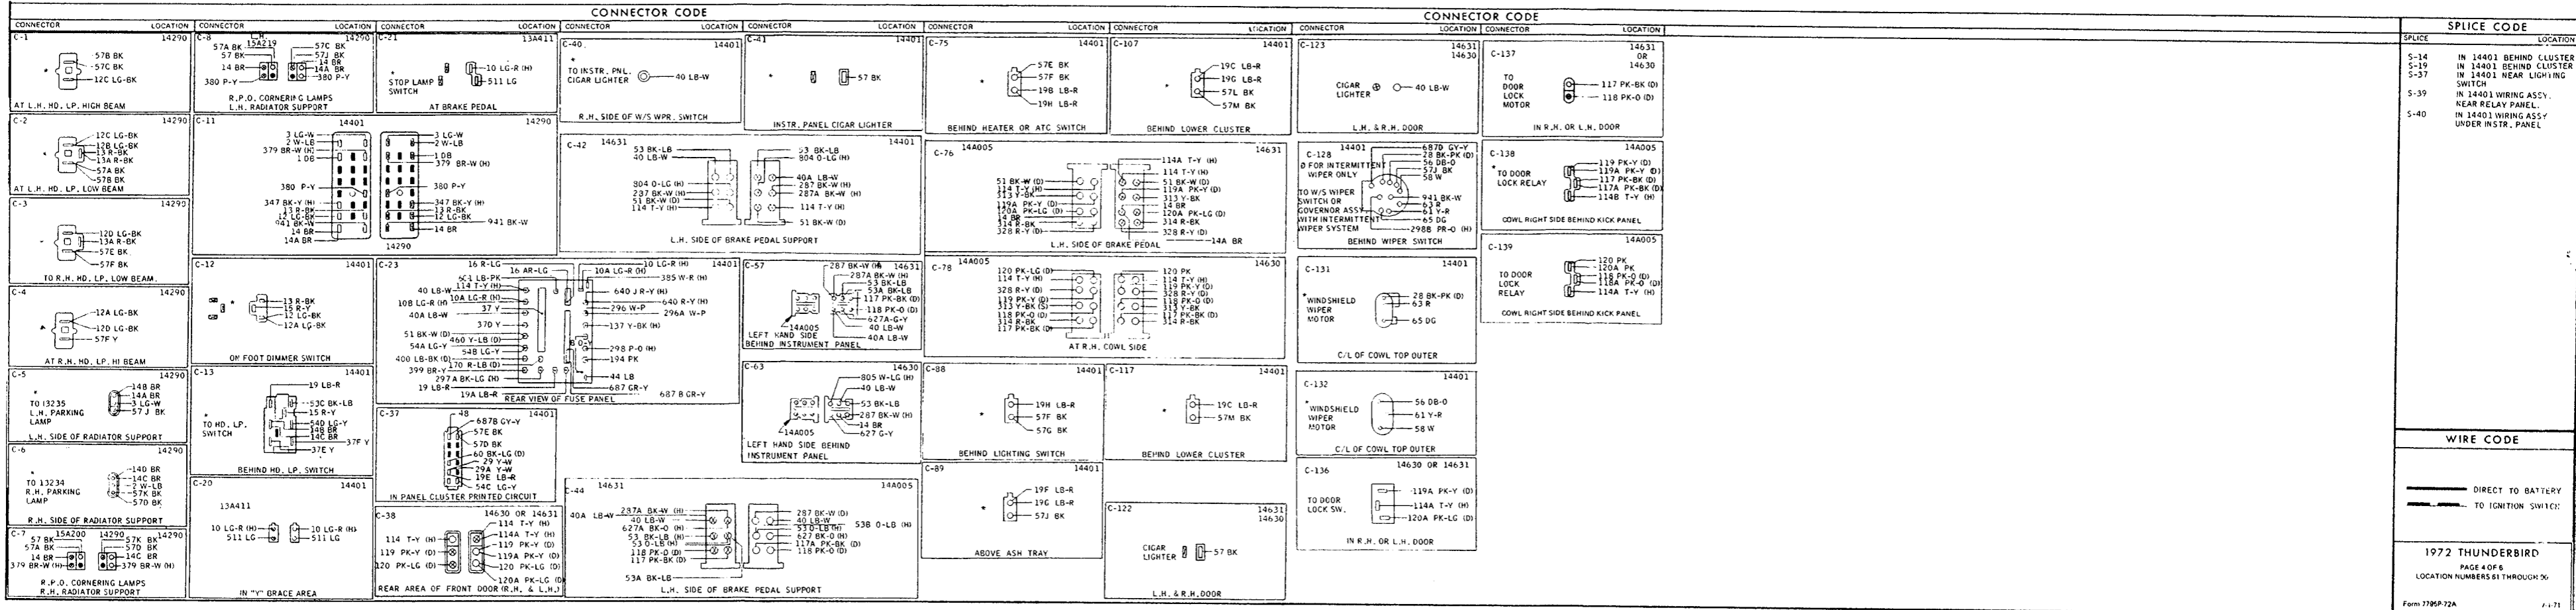


**WIRE CODE**

— DIRECT TO BATTERY  
 - - - TO IGNITION SWITCH

**1972 THUNDERBIRD**  
 PAGE 4 OF 6  
 LOCATION NUMBERS 61 THROUGH 96

Form 7785P-72A 1-71

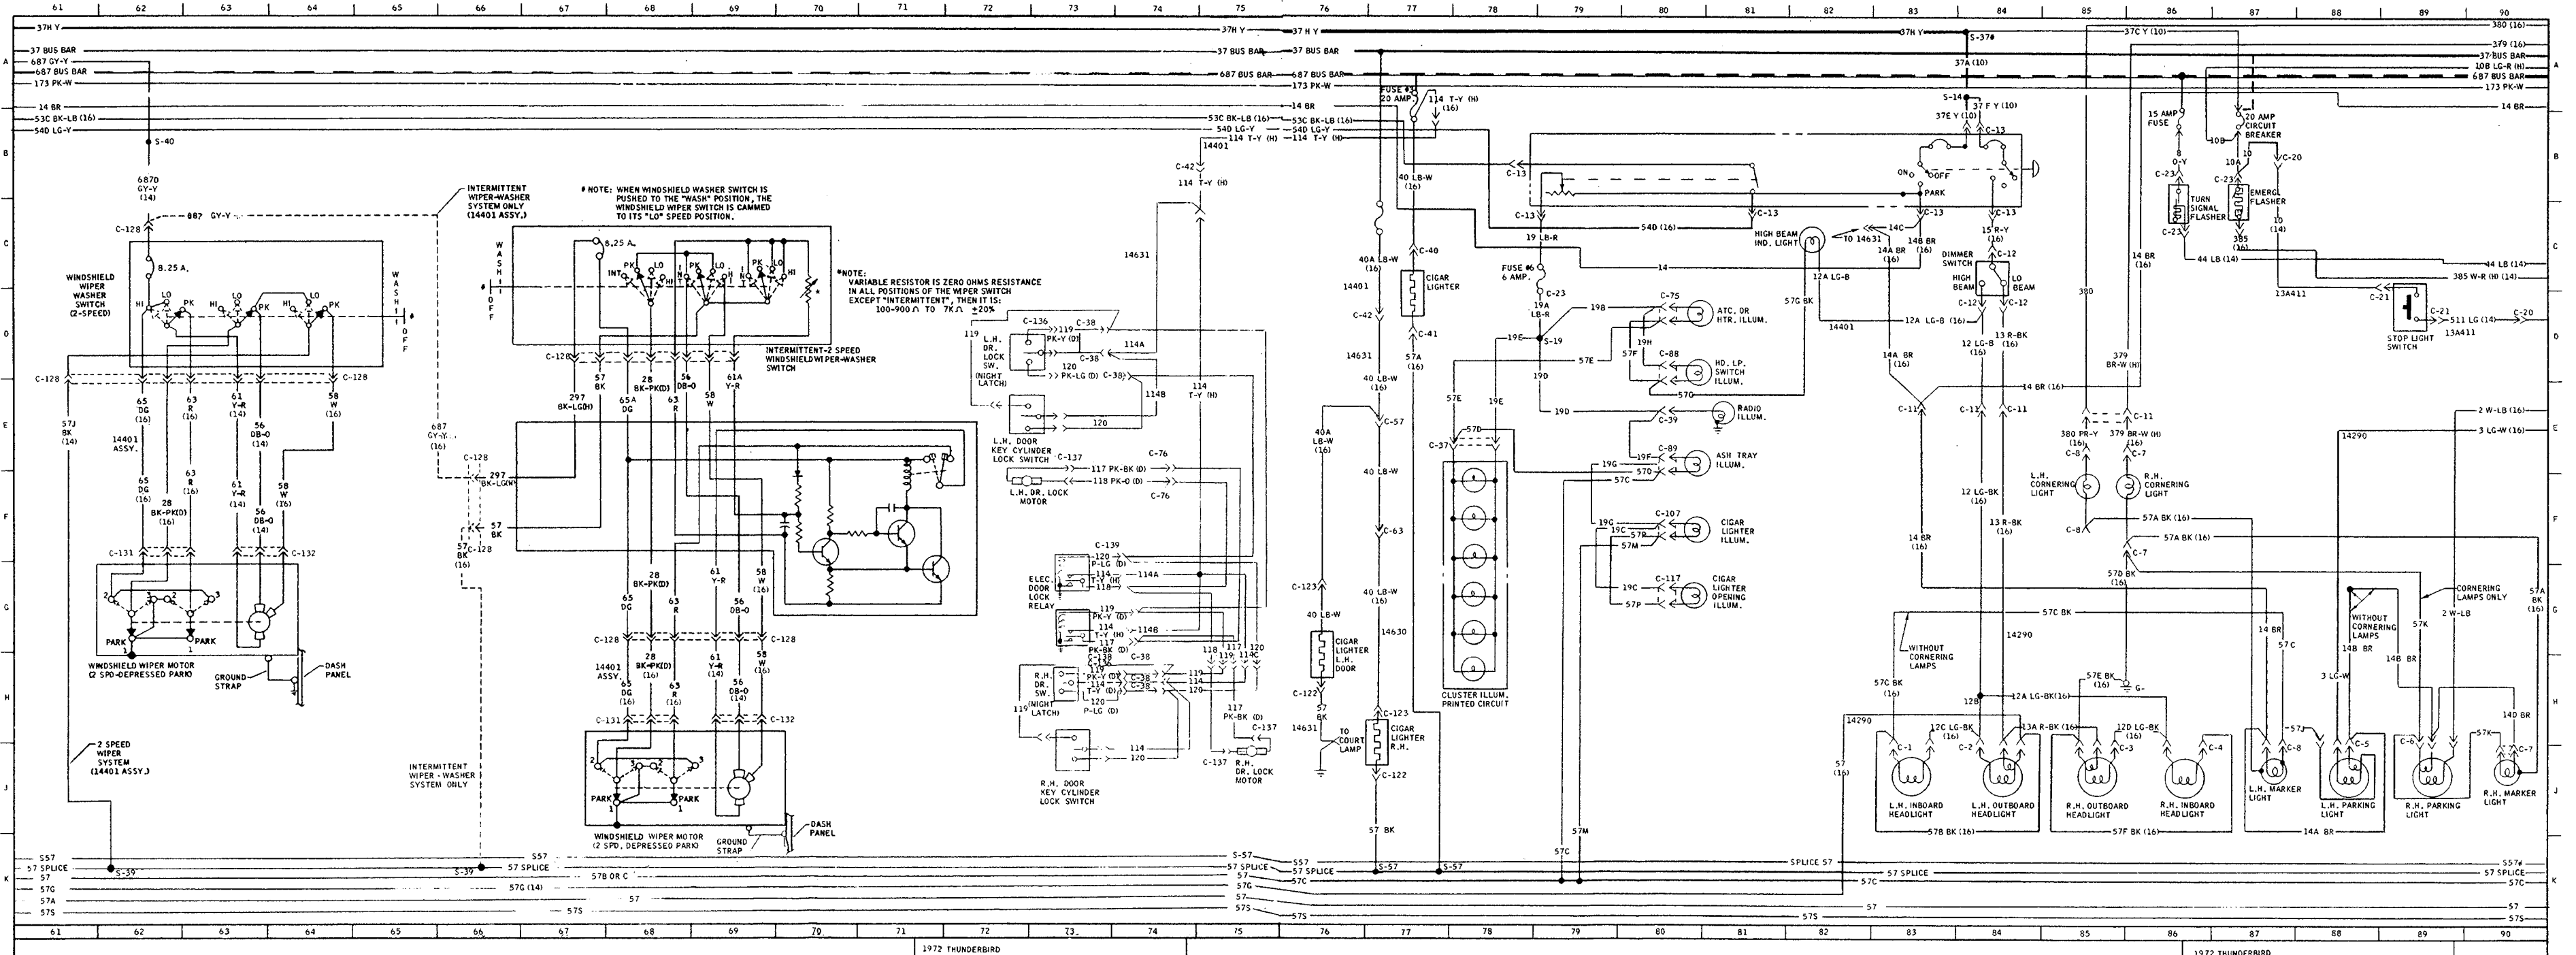

CONNECTOR CODE


CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND CODE	LOCATION
C-11		C-25	15A515	C-49	14A005	C-85	9A840	C-121	9A840	C-129	14290	G-3	EYELET ATTACHED TO DECK LID STRIKER SUPPORT
14401 14290 3-LG-W 3-W-LB 379 BR-W (H) 1-DB 1-DB 379 BR-W (H) 380 P-Y 380 P-Y 347-BK-Y (H) 347-BK-Y (H) 12-LG-BK 12-LG-BK 941-BK-W 941-BK-W 14-BR 14-BR	ON DASH PANEL BEHIND FUSE PANEL	TO BACK-UP LAMP SWITCH 140-BK-PK 296-W-P	AT STEERING COLUMN	TO 14691 (R.H. SIDE) 57C BK TO 14639 (L.H. SIDE) 172A O	SEAT BACK LATCH SOLENOID	* TO SPEED CONTROL AMPLIFIER 146-W-PK (H) 145-GY-BK (H) 144-O-Y (H)	R.H. SIDE OF BRAKE PEDAL SUPPORT	* 150 DG-W 57 BK	SPEED SENSOR	TO W/SHIELD WASHER PUMP 57G-BK 941-BK-W	L.H. SIDE ENGINE COMPT.	G-5	EYELET ATTACHED TO L.H. DOOR
C-12		C-42	14401	C-58	14401	C-86	9A840	C-124	14401	C-125	18C619	S-5	IN 14405 WIRING ASSY. L.H. REAR DECK LID.
C-14	14401	C-43	14405	C-45	14631	C-76	14A005	C-87	9A840	C-127	14401	S-6	IN 14405 WIRING ASSY. L.H. REAR LUGGAGE COMPARTMENT.
7200 ASSY. 380 P-Y 379 BR-W (H) 296-W-P	AT STEERING COLUMN	140A BK-PK L.H. ONLY 57S BK	SOCKET & WIRE ASSY. BACK-UP LAMP AT LUGGAGE COMPARTMENT	TO L.H. POWER SEAT SWITCH 57F BK 980 Y-W 981 R-W 518 BK-W (D) 983 R-L 982 Y-LG 990 Y-LB 979 R-LB	L.H. FRONT DOOR ARM REST	* TO SPEED CONTROL AMPLIFIER 149 BR-LG (H) 148 Y-R (H) 147 P-LB (H)	R.H. SIDE OF BRAKE PEDAL SUPPORT	* TO HEATED BACKLITE SWITCH 112 BK-Y (D) 688 GR-LB 298 P-O (H) 298A P-O (H)	L.H. SIDE OF INSTR. PANEL	10C877 186 BR-LB (H)	R.H. SIDE BACK WINDOW	S-7	IN 14405 WIRING ASSY. R.H. REAR DECK LID.
C-15		C-46	14631	C-82	9A840	C-91	14290	C-128	14401			S-8	IN 14405 WIRING ASSY. R.H. REAR LUGGAGE COMPARTMENT.
TO STEERING COLUMN 460 Y-LB 385 1-DB 688 GY-LB 370 Y 57K BK 57S BK 186 BR-LB (H) 186A BR-LB (H) 640E R-Y (H) 158 BK-PK (H) 158A BK-PK (H) 159 R-PK (H) 159A R-PK 158A BK-PK (H) 111 BK-Y 57S BK 148 BR	AT STEERING COLUMN	981 R-W 980 Y-W 983 R-L 982 Y-LG	LEFT HAND SIDE OF BRAKE PEDAL SUPPORT	* TO SPEED CONTROL HORN RELAY 460A Y-LB (D) 1 DB 460 Y-LB (D)	R.H. SIDE OF BRAKE PEDAL SUPPORT	TO L.H. OR R.H. HORN 1 DB	ON RADIATOR SUPPORT	FOR INTERMITTENT WIPER ONLY 297 BK-LG (H) OR 687 GY-Y 291 BK-PK (D) 291 BK-O 291 BK 291 BK-W 63-R 298 P-O (H) 63-Y-R 63-DG	TO W/S WIPER SWITCH OR GOVERNOR ASSY. WITH INTERMITTENT WIPER SYSTEM BEHIND WIPER SWITCH	18C612 186 BR-LB (H)	R.H. SIDE BACK WINDOW	S-9	IN 14405 WIRING ASSY. R.H. REAR LUGGAGE COMPARTMENT.
C-16	14405	C-47	14A005	C-83	9A840	C-91	14290					S-16	IN 14631 WIRING ASSY. L.H. COWL SIDE
14-BR 140-BK-PK 50-LB 54-LG-Y 54-LG-W 54-BK-LB 29-Y-W 84-P-Y (H)	AT L.H. TOE BOARD	TO POWER SEAT MOTOR 979 R-LB 291 BK-W 291 BK-O 291 BK 291 BK-W 981 R-W	UNDER L.H. SIDE OF FRONT SEAT	* TO SPEED CONTROL AMPLIFIER 475 DG-W (H) 151 LB-BK 298 P-O (H)	R.H. SIDE OF BRAKE PEDAL SUPPORT	TO W/S WIPER SWITCH OR GOVERNOR ASSY. WITH INTERMITTENT WIPER SYSTEM BEHIND WIPER SWITCH	BEHIND WIPER SWITCH					S-15	IN 14631 WIRING ASSY. L.H. DOOR
C-17	14405	C-48	14A005	C-84	9A840	C-120	18C619					S-21	IN 14290 WIRING ASSY. L.H. HORN
TO LICENSE LAMP 14G-BR 14F-BR	C L OF R. BACK PANEL	140 BK-PK 460 LG-W (H) 520 LG-W (H) 296A W-P	AT STEERING COLUMN	* TO SPEED CONTROL AMPLIFIER 144 O-Y (H) 149 BR-LG (H) 148 Y-R (H) 145 GY-BK (H) 146 W-PK (H)	R.H. SIDE OF BRAKE PEDAL SUPPORT							S-24	IN 14A005 WIRING ASSY. UNDER SEAT L.H. SIDE
												S-25	IN 14A005 WIRING ASSY. UNDER SEAT L.H. SIDE
												S-40	IN 14A005 WIRING ASSY. UNDER SEAT L.H. SIDE
												S-57	IN 14401 WIRING ASSY. BEHIND R.H. TOP OF INSTR. CLUSTER

**WIRE CODE**

— DIRECT TO BATTERY  
 --- TO IGNITION SWITCH (ACCY. TERMINAL)

1972 THUNDERBIRD  
 PAGE 5 OF 6  
 LOCATION NUMBERS 91 THROUGH 120

Form 7795P-72A 7-1-71

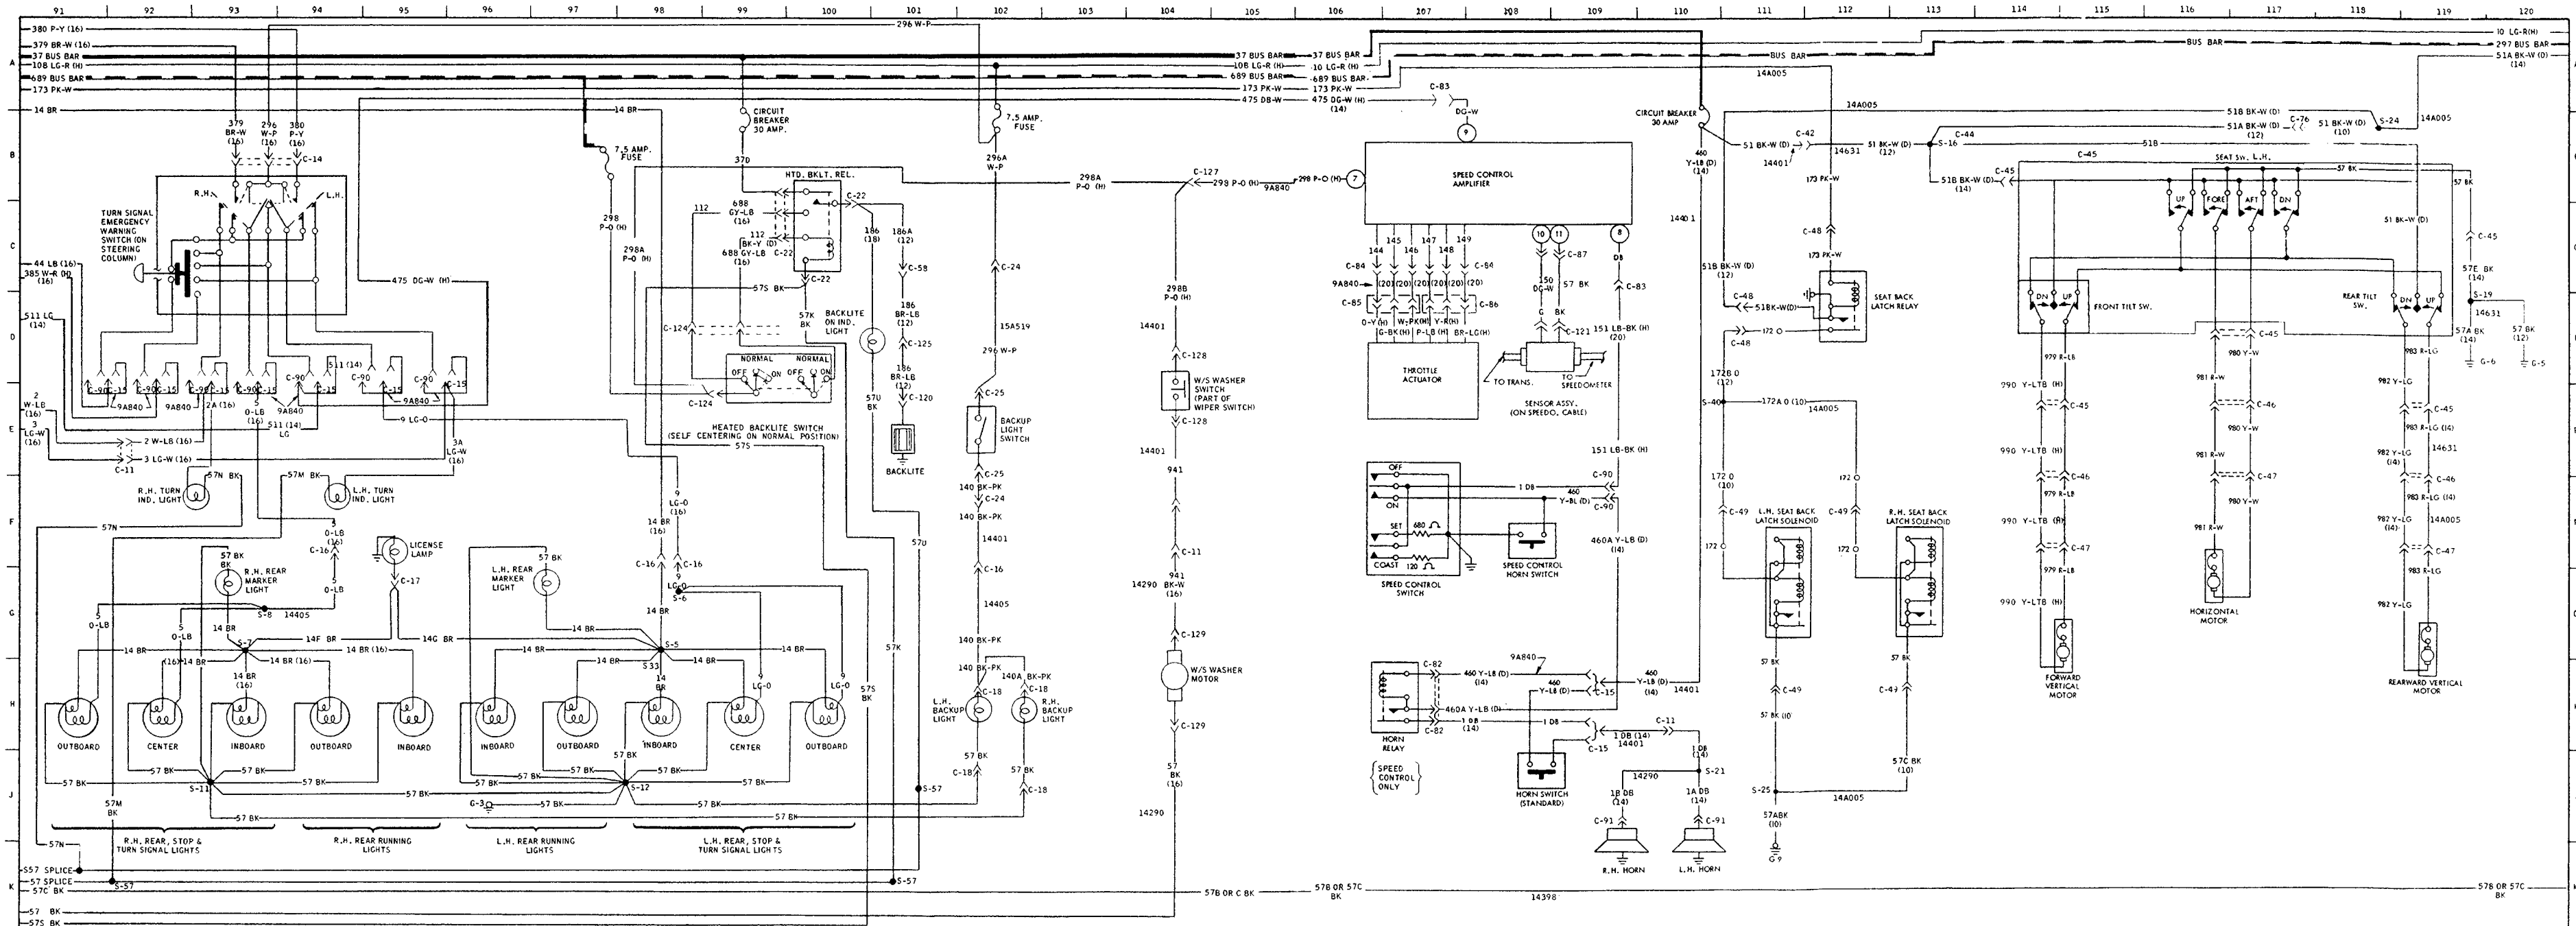

## CONNECTOR CODE

## GROUND CODE

CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION		
C-16	14401	C-50	14630	C-53	18A900	C-59	10CB77	C-65	14398		
<p>LEFT HAND TOE BOARD UNDER SHIELD</p>	14405	<p>ON FLOOR UNDER L.H. FRONT SEAT</p>	<p>FADER * CONTROL</p> <p>INSTR. PANEL BELOW RADIO</p>	<p>TO R.H. * SPEAKER</p> <p>UNDER R.H. SIDE OF PACKAGE TRAY</p>	<p>POWER ANTENNA MOTOR R.H. SIDE OF DASH</p>			G-3	EYELET ATTACHED TO DECK LID LATCH.		
										G-7	EYELET ATTACHED TO R.H. DOOR.
										G-8	EYELET ATTACHED TO R.H. COWL SIDE.
C-19	14358	C-54	18A900	C-60	10CB77	C-66	14401				
<p>ON DASH PANEL BEHIND FUSE PANEL</p>	14401	<p>* RADIO</p> <p>AT INSTRUMENT PANEL BEHIND RADIO</p>	<p>TO L.H. * SPEAKER</p> <p>UNDER L.H. SIDE OF PACKAGE TRAY</p>	<p>CIRCUIT BREAKER</p>							
S1	BR-Y (D)	C-55	18A900 OR RADIO	C-61	14631	C-67	14401				
		<p>AT INSTRUMENT PANEL BEHIND RADIO</p>	<p>TO L.F. * SPEAKER</p> <p>INSIDE LEFT HAND DOOR</p>	<p>TO DECK LID SWITCH</p> <p>BEHIND GLOVE BOX DOOR</p>							
C-39	14401	C-56	14401	C-62	14630	C-68	13A756				
<p>TO RADIO * AT INSTRUMENT PANEL BEHIND RADIO</p>	14405	<p>LEFT HAND TOE BOARD UNDER SHIELD</p>	<p>TO R.F. * SPEAKER</p> <p>INSIDE RIGHT HAND DOOR</p>	<p>INSIDE LUGGAGE COMPARTMENT BELOW PACKAGE TRAY</p>							
C-39	14401	C-57	14631	C-63	14630	C-69	13A756				
<p>TO RADIO * AT INSTRUMENT PANEL BEHIND RADIO</p>	14405	<p>LEFT HAND SIDE BEHIND INSTRUMENT PANEL</p>	<p>LEFT HAND SIDE, BEHIND INSTRUMENT PANEL</p>	<p>TO DECK * LID SOLENOID</p> <p>INSIDE DECK LID, NEAR DECK LID LATCH</p>							
C-42	14631	C-52	14A005	C-58	10CB77	C-64	14401				
<p>LEFT HAND SIDE OF BRAKE PEDAL SUPPORT</p>	14401	<p>POWER SEAT MOTOR UNDER PASS. SEAT</p>	<p>LEFT HAND TOE BOARD UNDER SHIELD</p>	<p>POWER ANTENNA SWITCH</p>							

## SPLICE CODE


- S-4 IN 14405 WIRING ASSY. L.H. REAR DECK LID AREA.
- S-17 IN 14630 WIRING ASSY. IN R.H. DOOR.

## WIRE CODE

- DIRECT TO BATTERY
- TO IGNITION SWITCH


**1972 THUNDERBIRD**  
PAGE 6 OF 6  
LOCATION NUMBERS 121 THROUGH 135



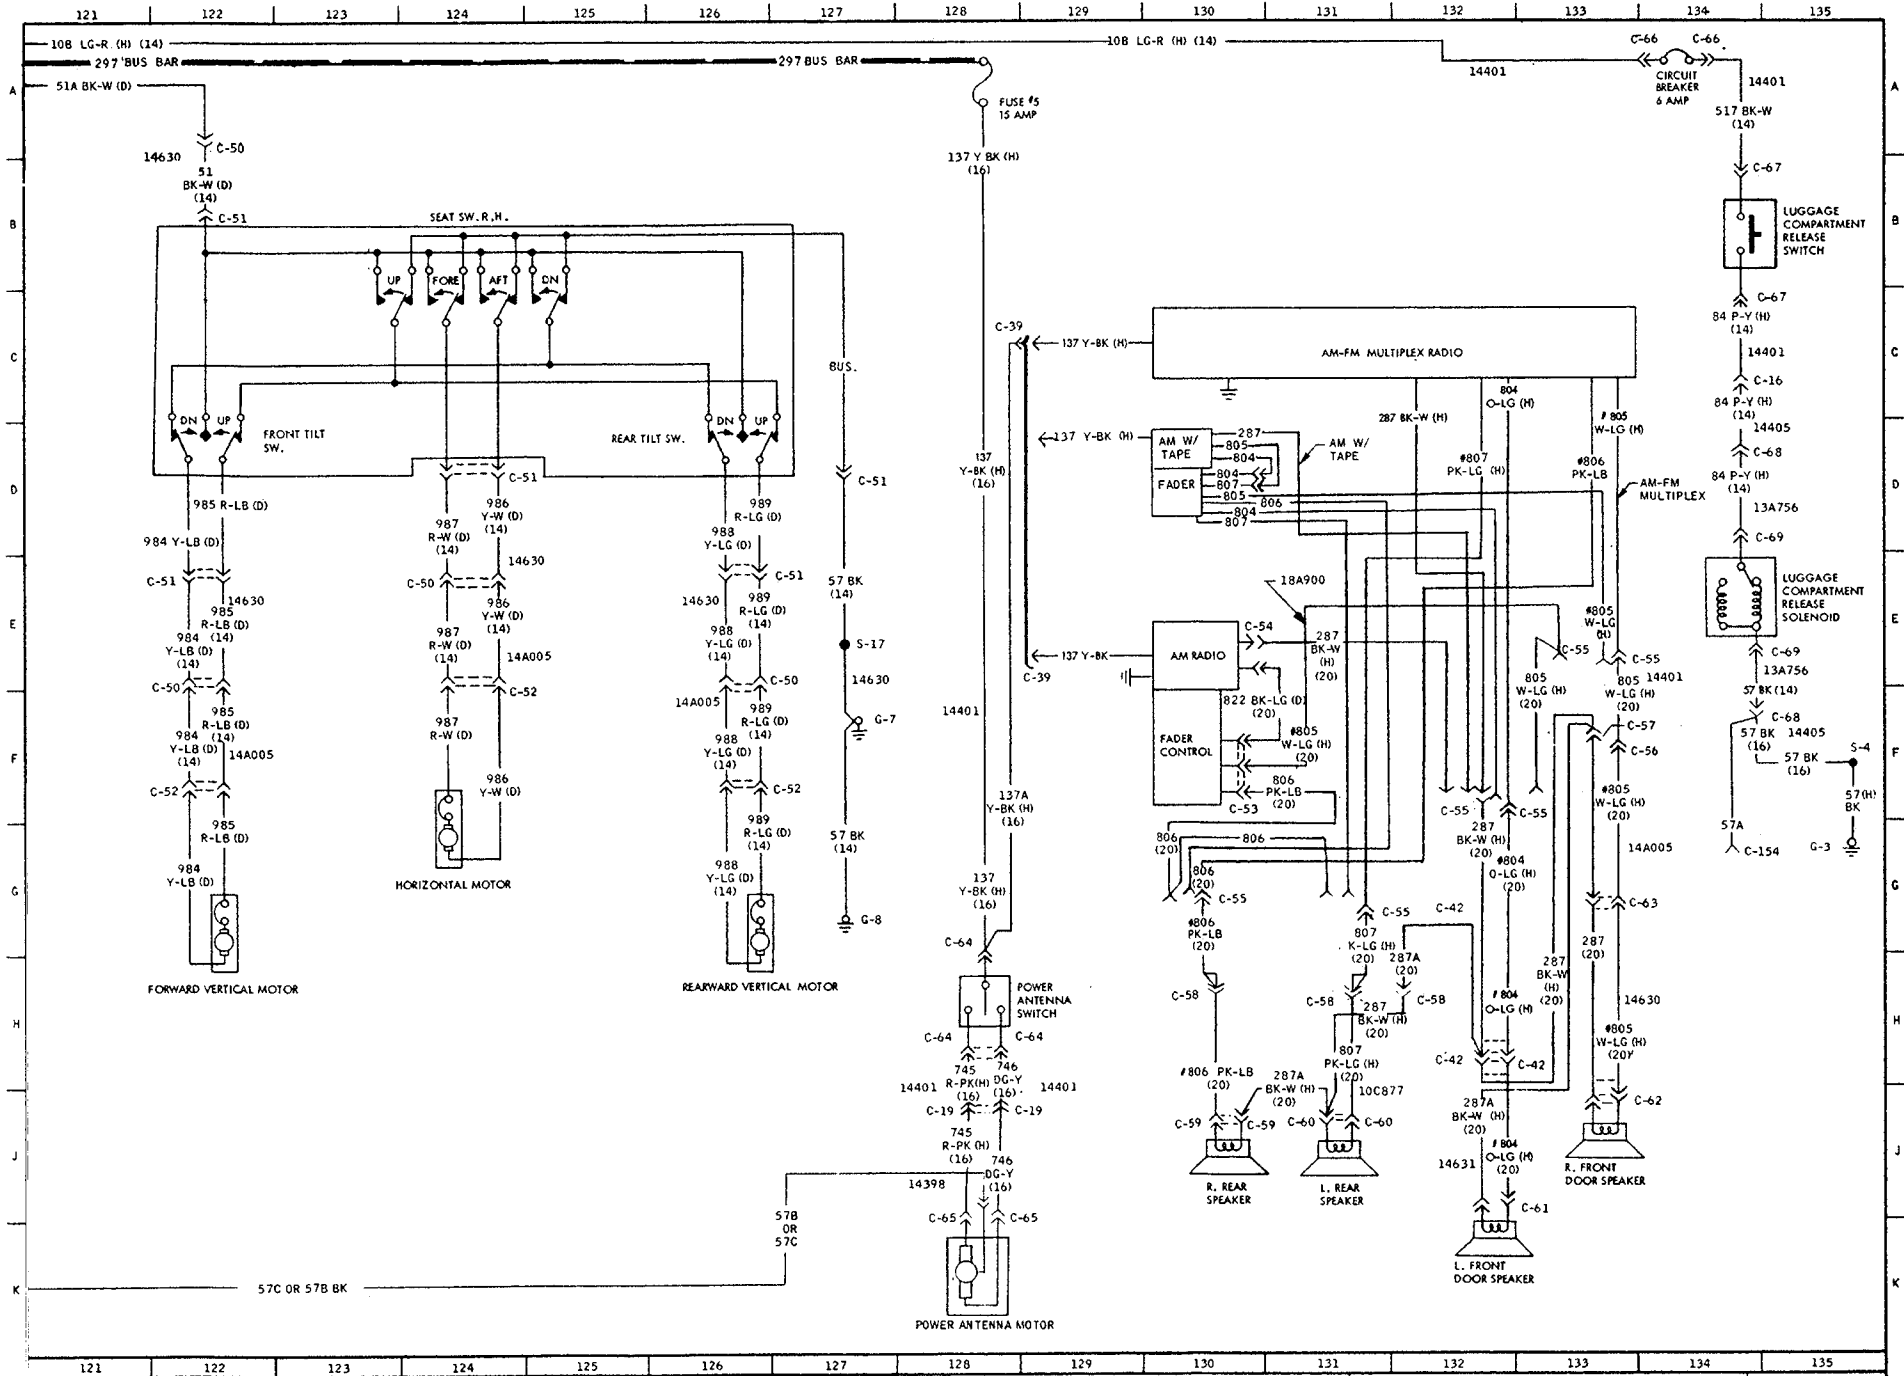

INDEX

COMPONENT	LOCATION
AIR CONDITIONER - CLUTCH TEMP.	S-43
ALTERNATOR	D-1
BUZZERS	
HEADLAMPS ON	H-65
KEY WARNING	H-65
SEAT BELT	H-111
CIGAR LIGHTERS	
FRT.	G-94
REAR	F-93
DIST.	J-2
FLASHERS	
EMERGENCY WARNING	D-123
TURN SIGNAL	C-127
GAUGES	
FUEL	F-64
HEATED BACKLITE	H-140
HORNS	F-149
IGNITION SYSTEM COIL	E-3
ILLUMINATORS	
ATC CONTROL	E-99
CIGAR LIGHTER INST. PNL.	D-102
L.H. FRT. DOOR CIGAR LHT.	G-103
R.H. FRT. DOOR CIGAR LHT.	F-105
R.H. REAR CIGAR LHT.	G-105
PART OF PRINTED CIRCUIT	H-100
POWER ANTENNA	F-100
RADIO	F-99
W/S WIPER	G-100
INDICATORS	
ALTERNATOR	B-12
DUAL BRAKE WARNING	F-7
DOOR AJAR	G-103
ENGINE TEMPERATURE	E-8
RICH BEAM	F-105
LEFT TURN	G-135
LOW FUEL	F-61
OIL PRESS.	G-8
RIGHT TURN	G-151
HEATED BACKLITE	E-140
LAMPS	
BACK-UP LPS.	F-120
CORNERING	D-111
ENG. COMPARTMENT	G-70
DOOR COURTESY	
R.H.	H-70
L.H.	H-65
GLOVE BOX	D-72
HEADLAMPS	C-107
INST. PANEL	D-72
LICENSE LAMP	B-119
LUGGAGE COMP.	G-72
MAP & DOME LP.	H-71
PARKING LIGHT	G-107
REAR LIGHTS	
L.H.	G-116
R.H.	F-118
READING LAMPS	G-77
SIDE MARKERS	
L.H. FRT.	G-107
R.H. FRT.	F-107
L.H. (REAR)	B-115
R.H. (REAR)	D-120
SEAT BELT LP.	G-115
MOTORS	
A/C BLOWER	C-35
POWER SEAT	G-154
POWER WINDOW	
FRT.	F-23
STARTING MOTOR	C-3
REAR	J-25
POWER ANT.	G-143
W/S WASHER	F-142
RADIOS	
AM & FADER	G-173
AM & TAPE UNIT	D-166
AM-FM MULTIPLEX	B-173
RELAYS	
DOOR LOCK	C-92
HEATED BACKLITE	D-138
HD/LP	G-86
HD/LP DIMMER	C-56
HORN	H-144
LOW FUEL	D-62
KEY WARNING	G-65
SEAT BACK LATCH	B-150
WINDOW SAFETY	C-25
SEAT BELT WARNING BUZZER	H-111
SENDERS	
FUEL GAUGE	G-62
SENSORS	
AMIENT SENSOR IN CAR	G-39
AMIENT SENSOR IN ENG.	G-43
SEAT BACK LATCH SOLENOID	
L.H.	D-148
R.H.	D-149
STARTER SOLENOID	B-4
SPEED CONTROL	
SURE TRACK SYSTEM	D-145
THROTTLE SOLENOID	H-4
SWITCHES	
AIR CONDITIONER CONTROL ATC	J-32
AUTO DIMMER	F-58
BACK-UP & SEAT BELT WARN.	F-113
CORNER LAMP	C-130
COURTESY LAMP FRT.	C-69
DOOR AJAR FRT.	D-05
DE-ICE	J-40
DOOR LOCK	F-91
DUAL BRAKE WARNING	H-7
ENG. WATER TEMP.	C-19
FOOT DIMMER	D-56
GLOVE BOX	D-72
HEADLAMP DIMMER	D-57
HEADLAMP	C-101
HEATED BACKLITE	F-138
HORN	H-146
IGNITION	C-8
KEY WARNING	H-63
OIL PRESSURE	G-11
POWER ANTENNA	D-163
POWER SEAT	C-154
POWER WINDOWS FRT. DOOR	D-23
READING LAMP REQR QTR.	D-26
SEAT BACK LATCH	B-149
SPEED CONTROL	G-145
SEAT BELT SENSOR	G-118
STOP LAMP	C-126
SURE TRACK ACTUATOR	E-126
TURN SIGNAL	D-131
WINDSHIELD WASHER	C-142

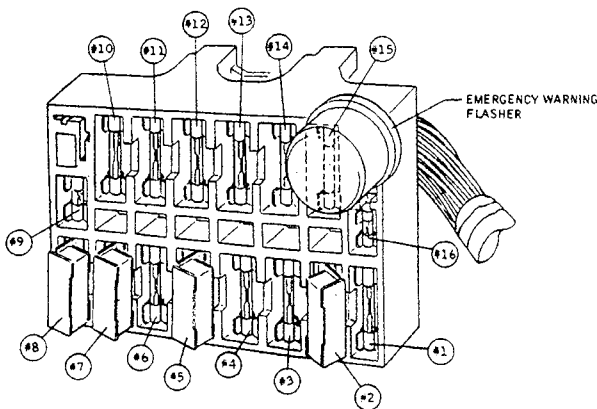

FUSE LOCATIONS

- 1. (20 AMP.) INST. PNL, CIGAR LITER & DR. LOCK FEED
- \*2. (20 AMP.) STOP LAMPS
- 3. (20 AMP.) DR. CIGAR LITER
- \*4. (30 AMP.) HEATED BACKLITE FEED
- \*5. (30 AMP.) PWR. SEATS
- 6. (20 AMP.) COURT LPS. LUGGAGE LP. GLOVE BOX LP. CLOCK
- \*7. (20 AMP.) PWR. WINDOWS
- \*8. (30 AMP.) AIR COND.
- 9. (6 AMP.) INST. CLUSTER ILLUM. LP. HEATER SW. PRNDL LP. RADIO. ASH TRAY
- 10. (7.5 AMP.) ACCY. RELAY FEED
- 11. (7.5 AMP.) SPD. CONTROL & W/S/WASHER FEED
- 12. (7.5 AMP.) T/S LP. FEED
- 13. (15 AMP.) RADIO & PWR. ANT. FEED
- 14. (7.5 AMP.) BACKUP LP. & CORNER LP. FEED
- 15. (7.5 AMP.) WIRING LP. FEED
- 16. (3 AMP.) SURE TRACK BRAKE SYSTEM FEED

CIRCUIT BREAKERS THAT ARE INTEGRAL PARTS OF COMPONENTS


- 1. (18 AMP.) HEADLAMPS, PART OF LIGHTING SWITCH
- 2. (15 AMP.) TAIL LAMPS, PARKING LAMPS, MARKER LAMPS AND INSTRUMENT CLUSTER ILLUMINATION, PART OF LIGHTING SWITCH.
- 3. (8,25 AMP.) W/S/W MTR. FEED, PART OF W/S/W SWITCH.

WIRING COLOR KEY  
PRIMARY COLOR

BLACK	BK
BROWN	BR
TAN	T
RED	R
PINK	PK
ORANGE	O
YELLOW	Y
DK GREEN	DG
LT GREEN	LG
DK BLUE	DB
LT BLUE	LB
PURPLE	P
GRAY	GY
WHITE	W
STRIPE	
HASH	(H)
DOT	(D)

BULB CHART

LAMP DESCRIPTION	CANDLE POWER OR WATTAGE	TRADE NUMBER
JACK-UP	32	1156
C-PILLAR	6	631
DOOR COURTESY	6	212-1
FRONT CORNERING	50	1296
FRONT & REAR MARKER	2	194
FRONT PARK, TURN SIGNAL	32-3, 32-3	1157-A
HEADLAMPS		
HI BEAM	37.5	4001
LO BEAM & HI BEAM	37.5 & 50	4002
LICENSE PLATE	4	97
TAIL STOP & TURN	32-3	1157
CLUSTER ILLUM. P (PRINTED CIRCUIT)	.75	1892
HI BEAM INDICATOR	2 C.P.	194
TURN INDICATOR	2 C.P.	194
HEATER & A/C CONTROLS	2 C.P.	1895
RADIO PILOT LIGHT	1.9 C.P.	1893
AUTO TRANS. QUADRANT	.7 C.P.	1445
ASH TRAY ILLUM. (ARM REST)	.7 C.P.	1445
DUAL BRAKE WARN.	2 C.P.	1895
LUGGAGE COMP. LITE	.6	631
COURTESY LAMPS (INST. PNL.)	6 C.P.	1891
HEATED BACKLITE IND.	2	105
REAR SEAT READING	12	105
GLOVE COMPARTMENT	2	105
MAP & DOME COMBINATION	12	105
ENG. COMP.	6	631
ASH TRAY ILLUM (INST. PNL.)	1	161
WARNING LAMPS		
ALTERNATOR	2	194
TEMPERATURE	2	194
OIL	2	194
LOW FUEL	2	194
DOOR AJAR	2	194
SEAT BELT	2	194
SURE TRACK	2	194

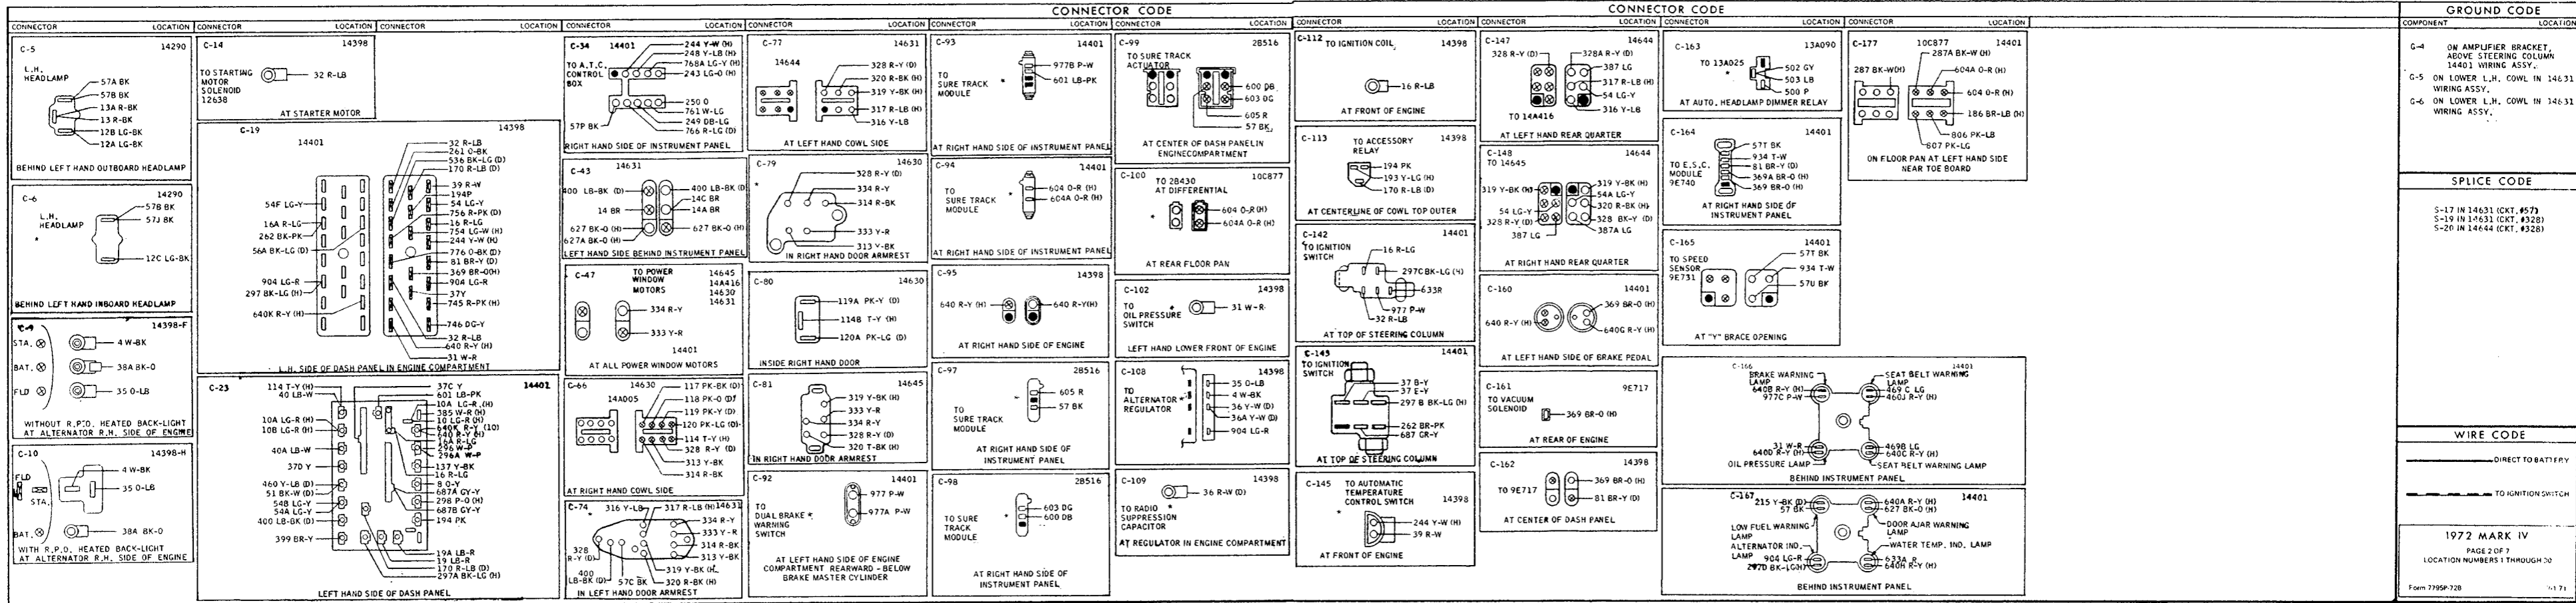


**SPLICE CODE**


S-17 IN 14631 (CKT. #57)  
 S-19 IN 14631 (CKT. #328)  
 S-20 IN 14644 (CKT. #328)

**WIRE CODE**

— DIRECT TO BATTERY  
 - - - TO IGNITION SWITCH

1972 MARK IV  
 PAGE 2 OF 7  
 LOCATION NUMBERS 1 THROUGH 20  
 Form 7795P-728

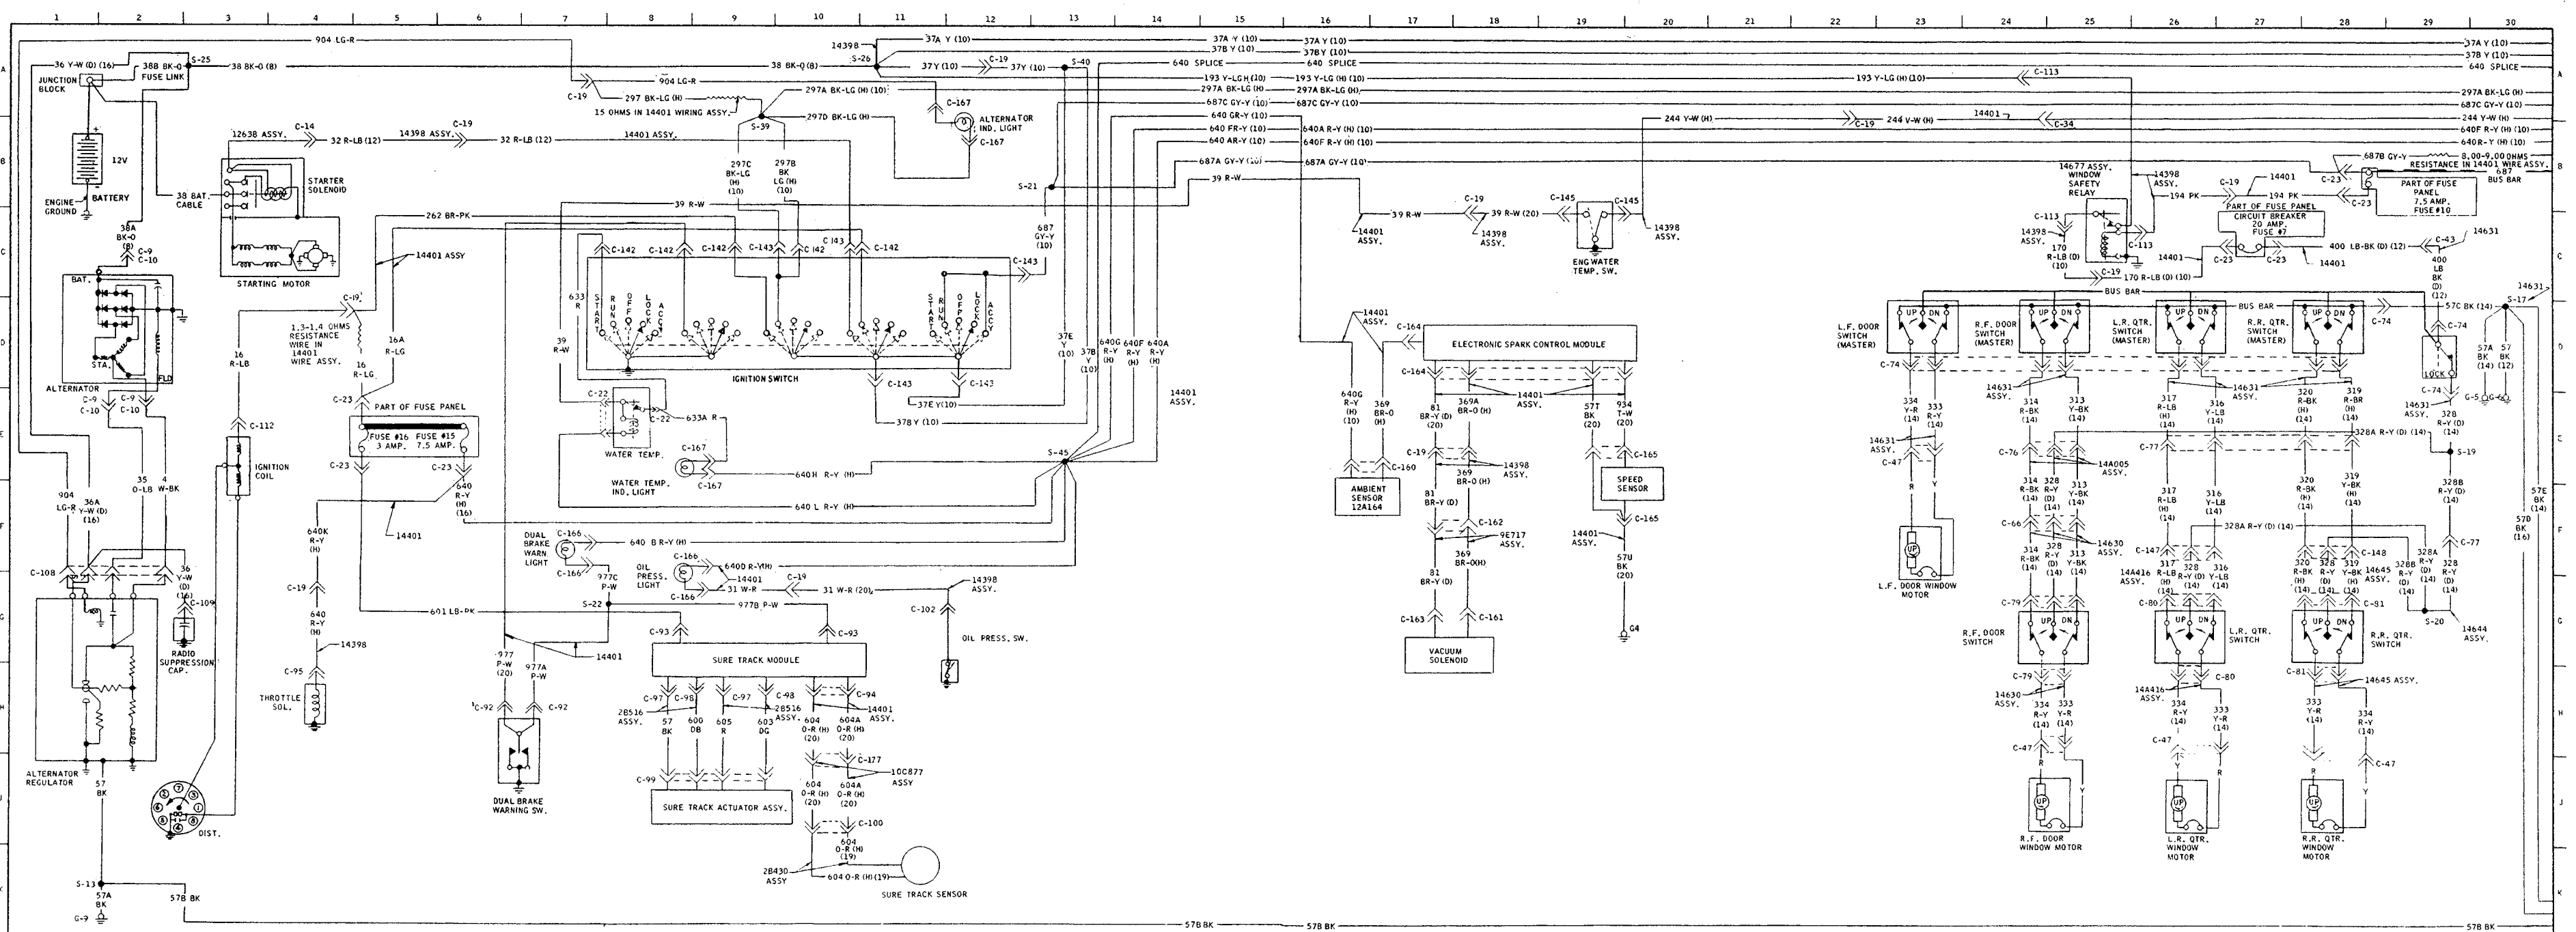


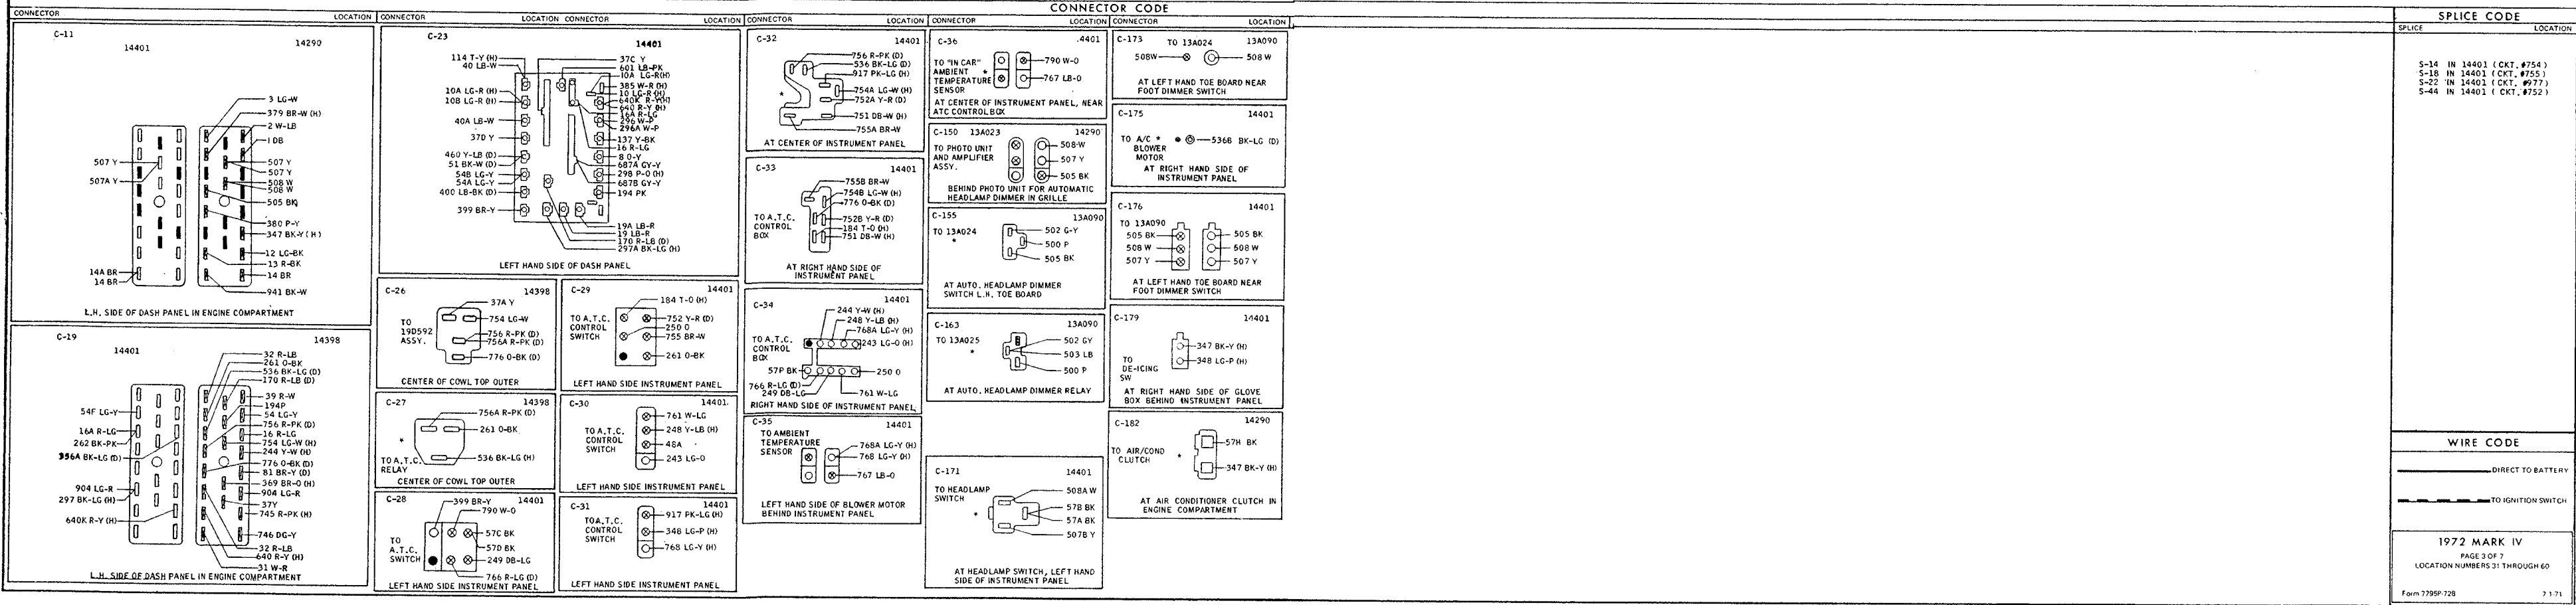

WIRE CODE

— DIRECT TO BATTERY






— TO IGNITION SWITCH

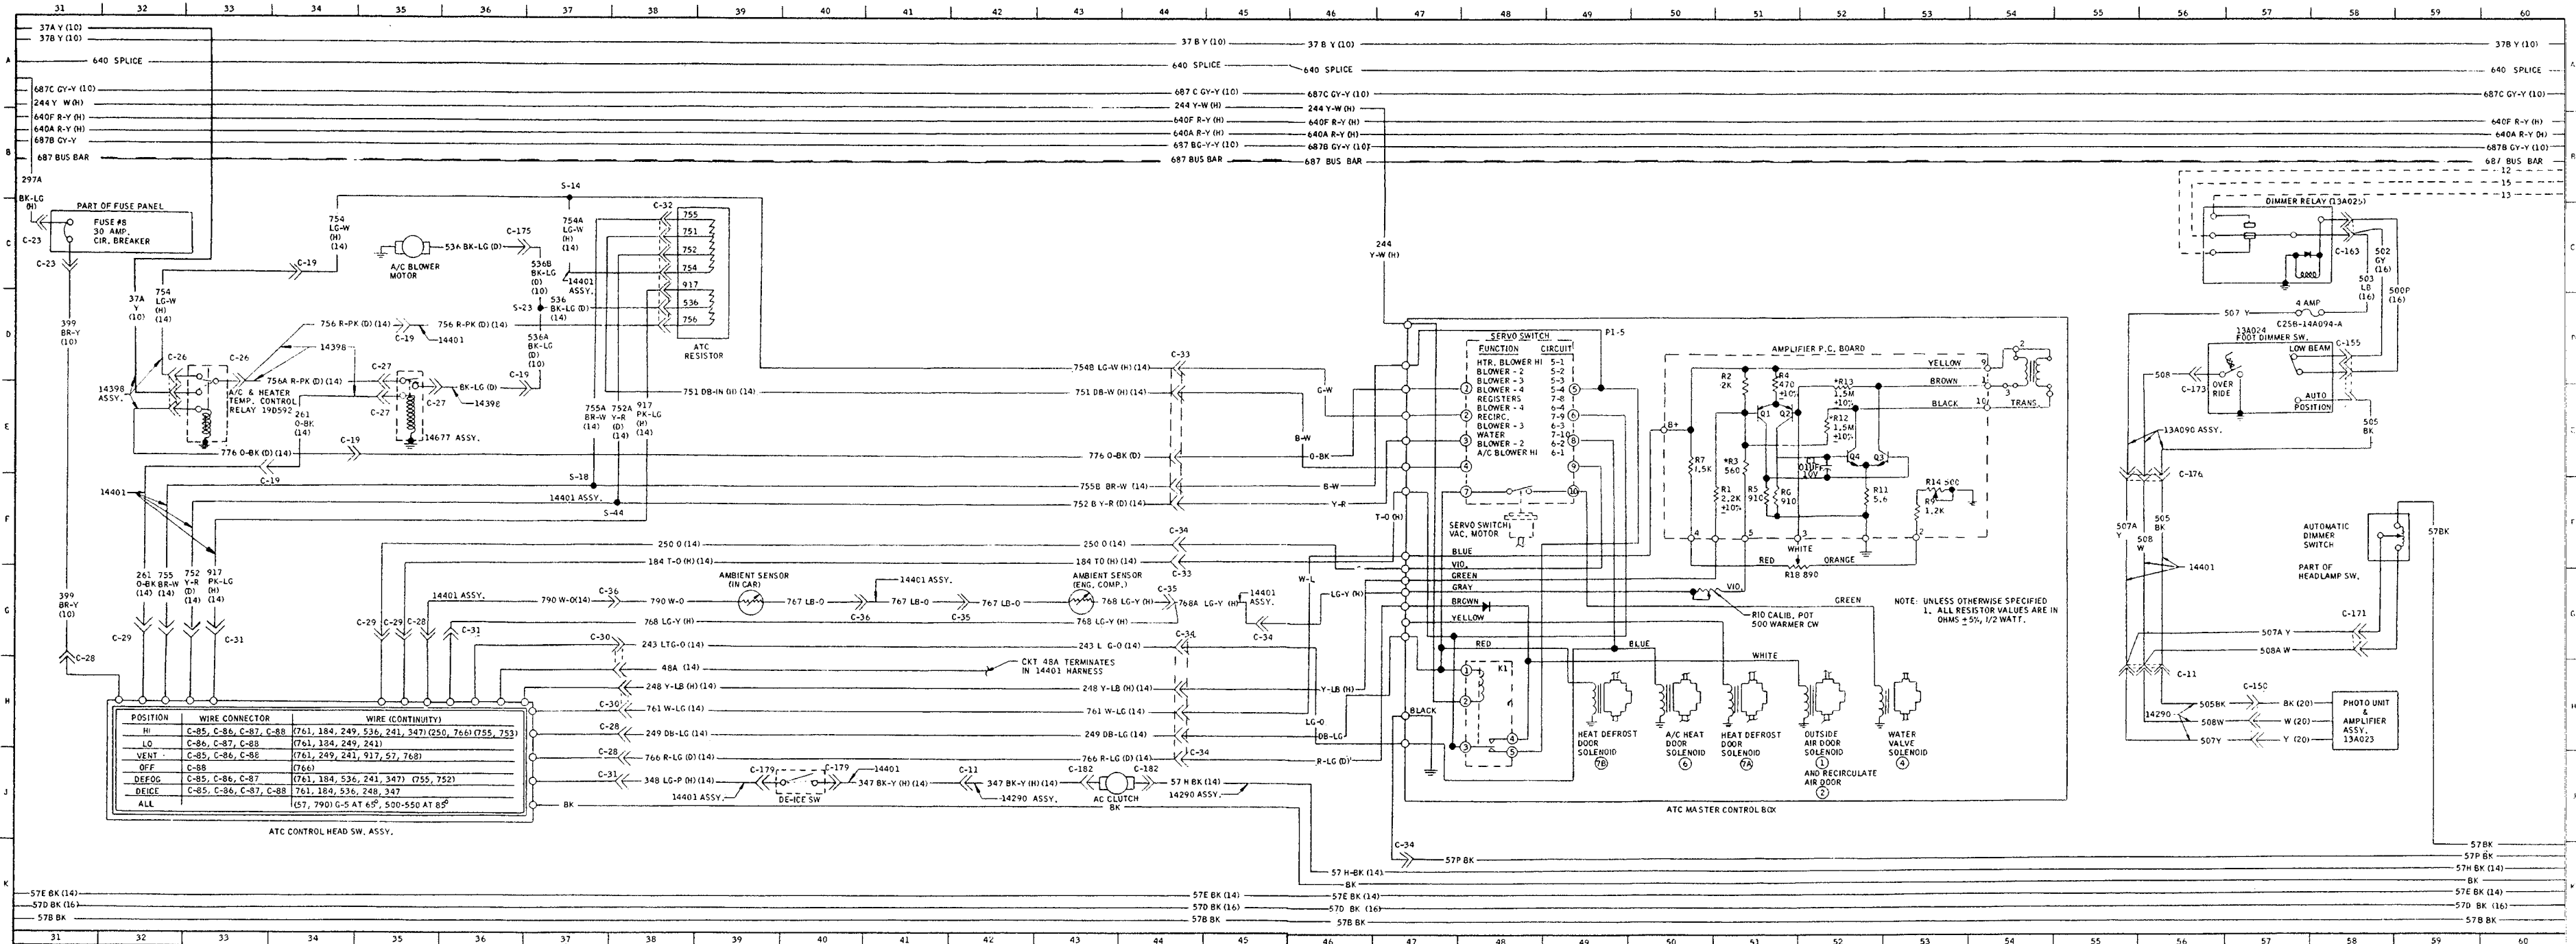

POSITION	WIRE CONNECTOR	WIRE (CONTINUITY)
HI	C-85, C-86, C-87, C-88	(761, 184, 249, 536, 241, 347) (250, 766) (755, 753)
LO	C-86, C-87, C-88	(761, 184, 249, 241)
VENT	C-85, C-86, C-88	(761, 249, 241, 917, 57, 768)
OFF	C-88	(766)
DEFOG	C-85, C-86, C-87	(761, 184, 536, 241, 347) (755, 752)
DEICE	C-85, C-86, C-87, C-88	(761, 184, 536, 248, 347)
ALL		(57, 790) C-5 AT 65°, 500-550 AT 85°


ATC CONTROL HEAD SW. ASSY.

FUNCTION	CIRCUIT
HTR. BLOWER HI	5-1
BLOWER - 2	5-2
BLOWER - 3	5-3
BLOWER - 4	5-4
REGISTERS	7-8
BLOWER - 4	6-4
RECIRC. BLOWER - 3	7-9
WATER BLOWER - 3	6-3
BLOWER - 2	7-10
A/C BLOWER HI	6-1

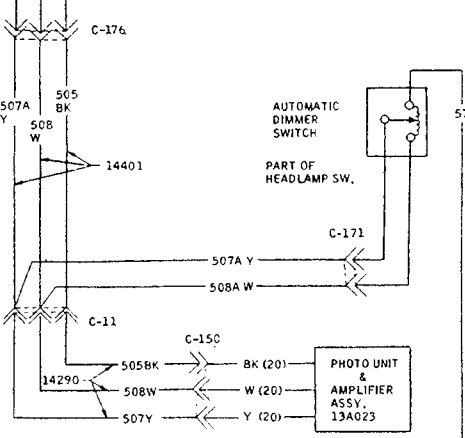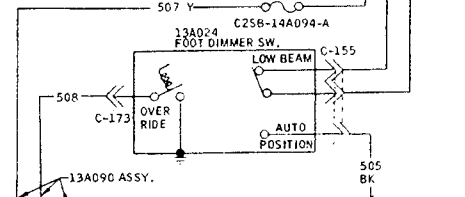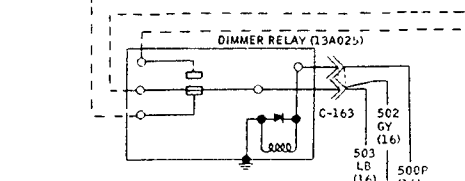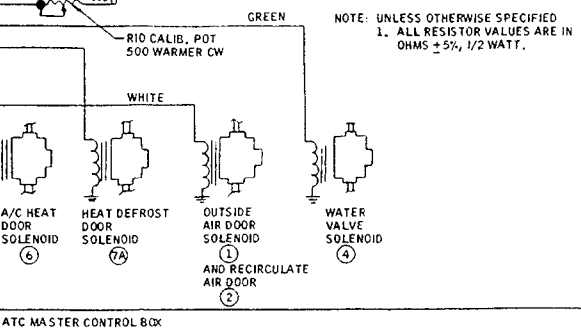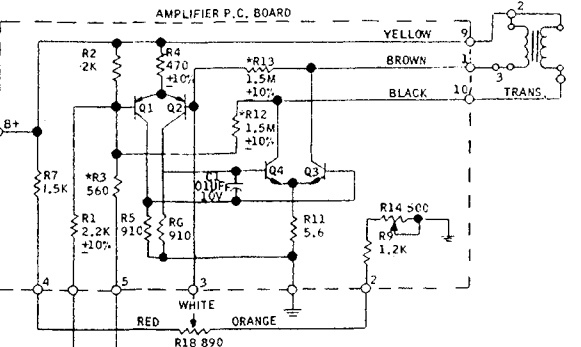







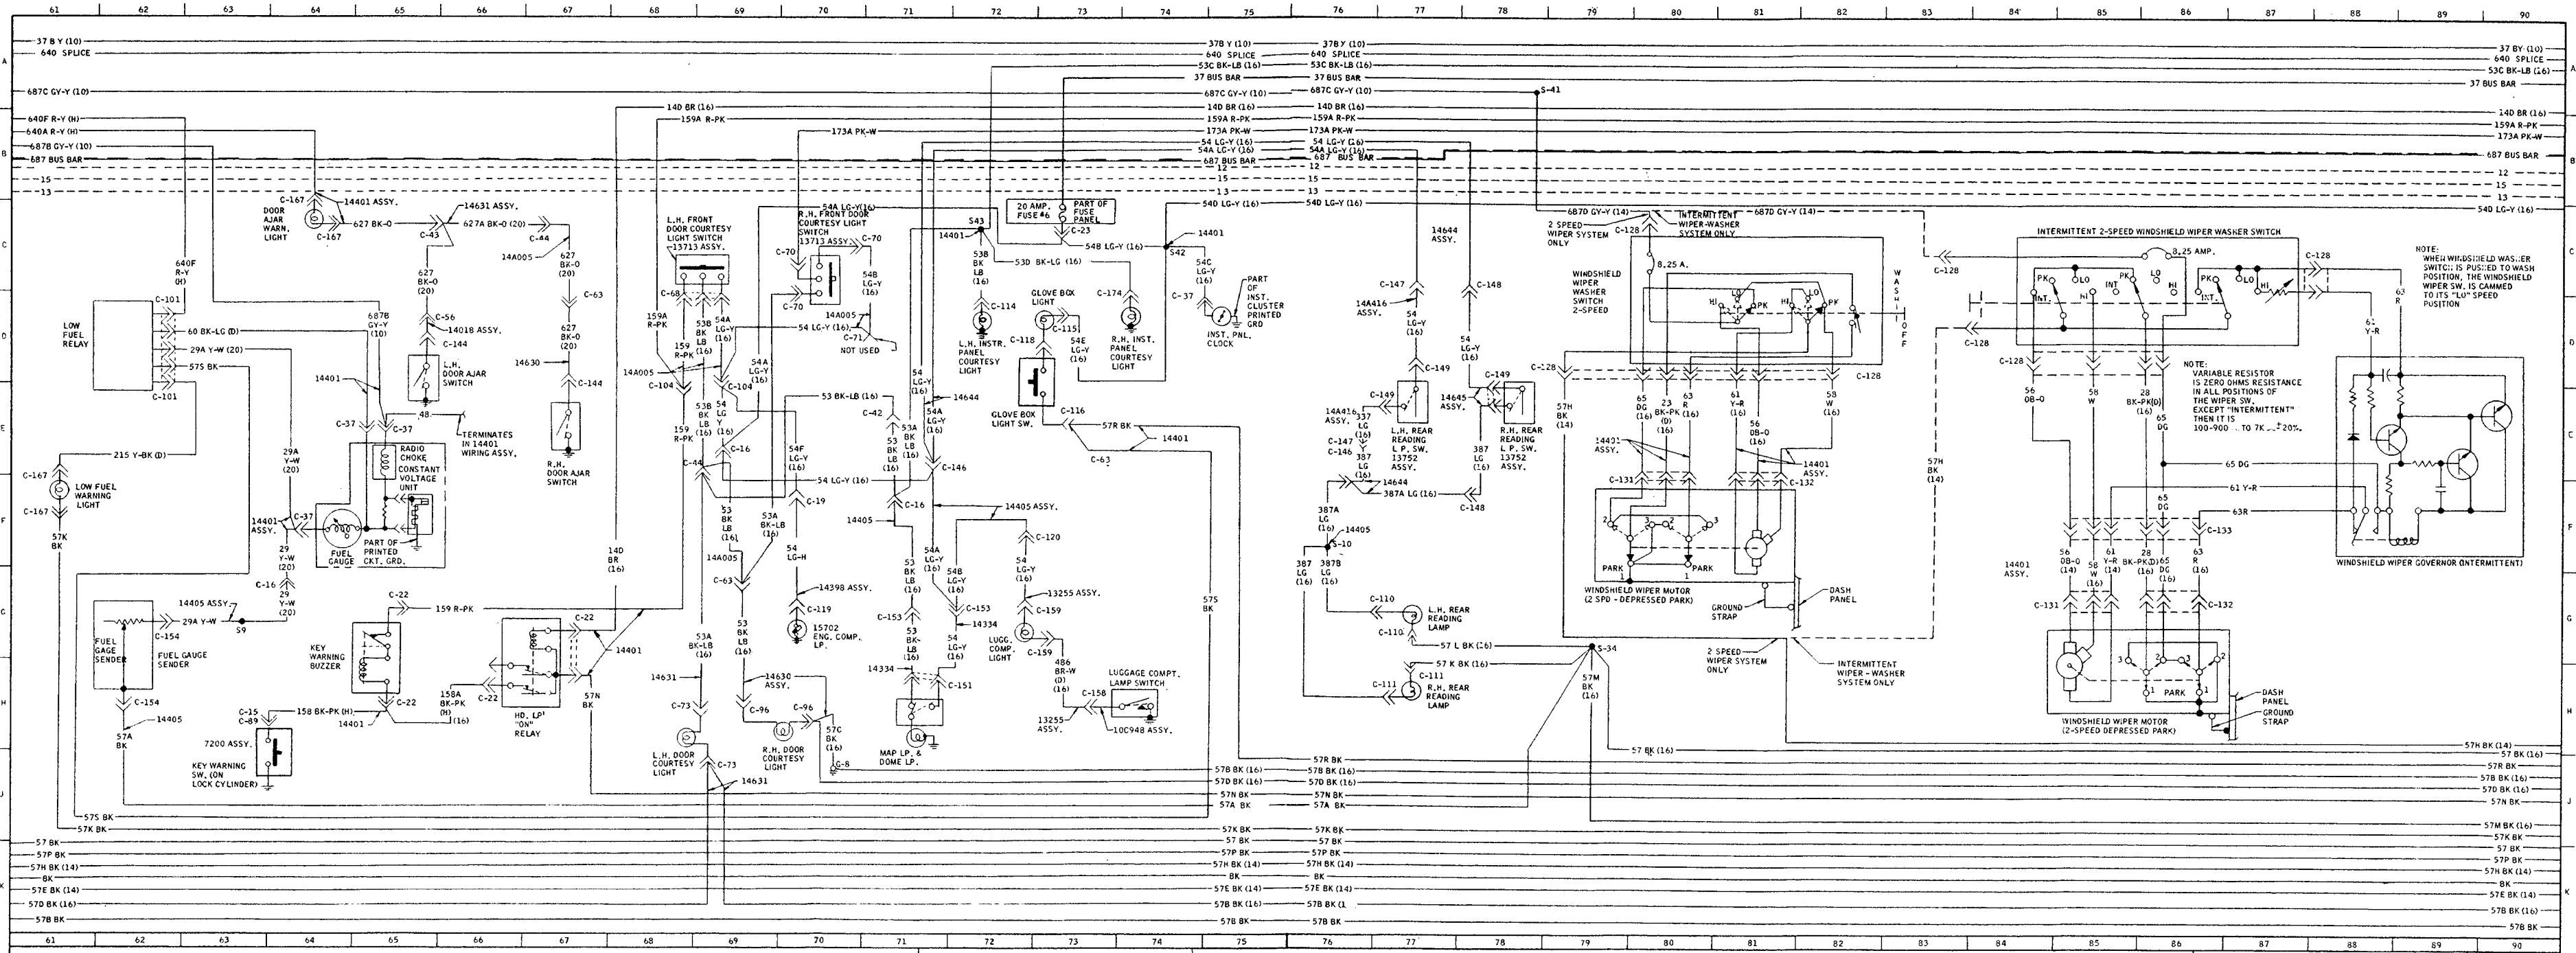



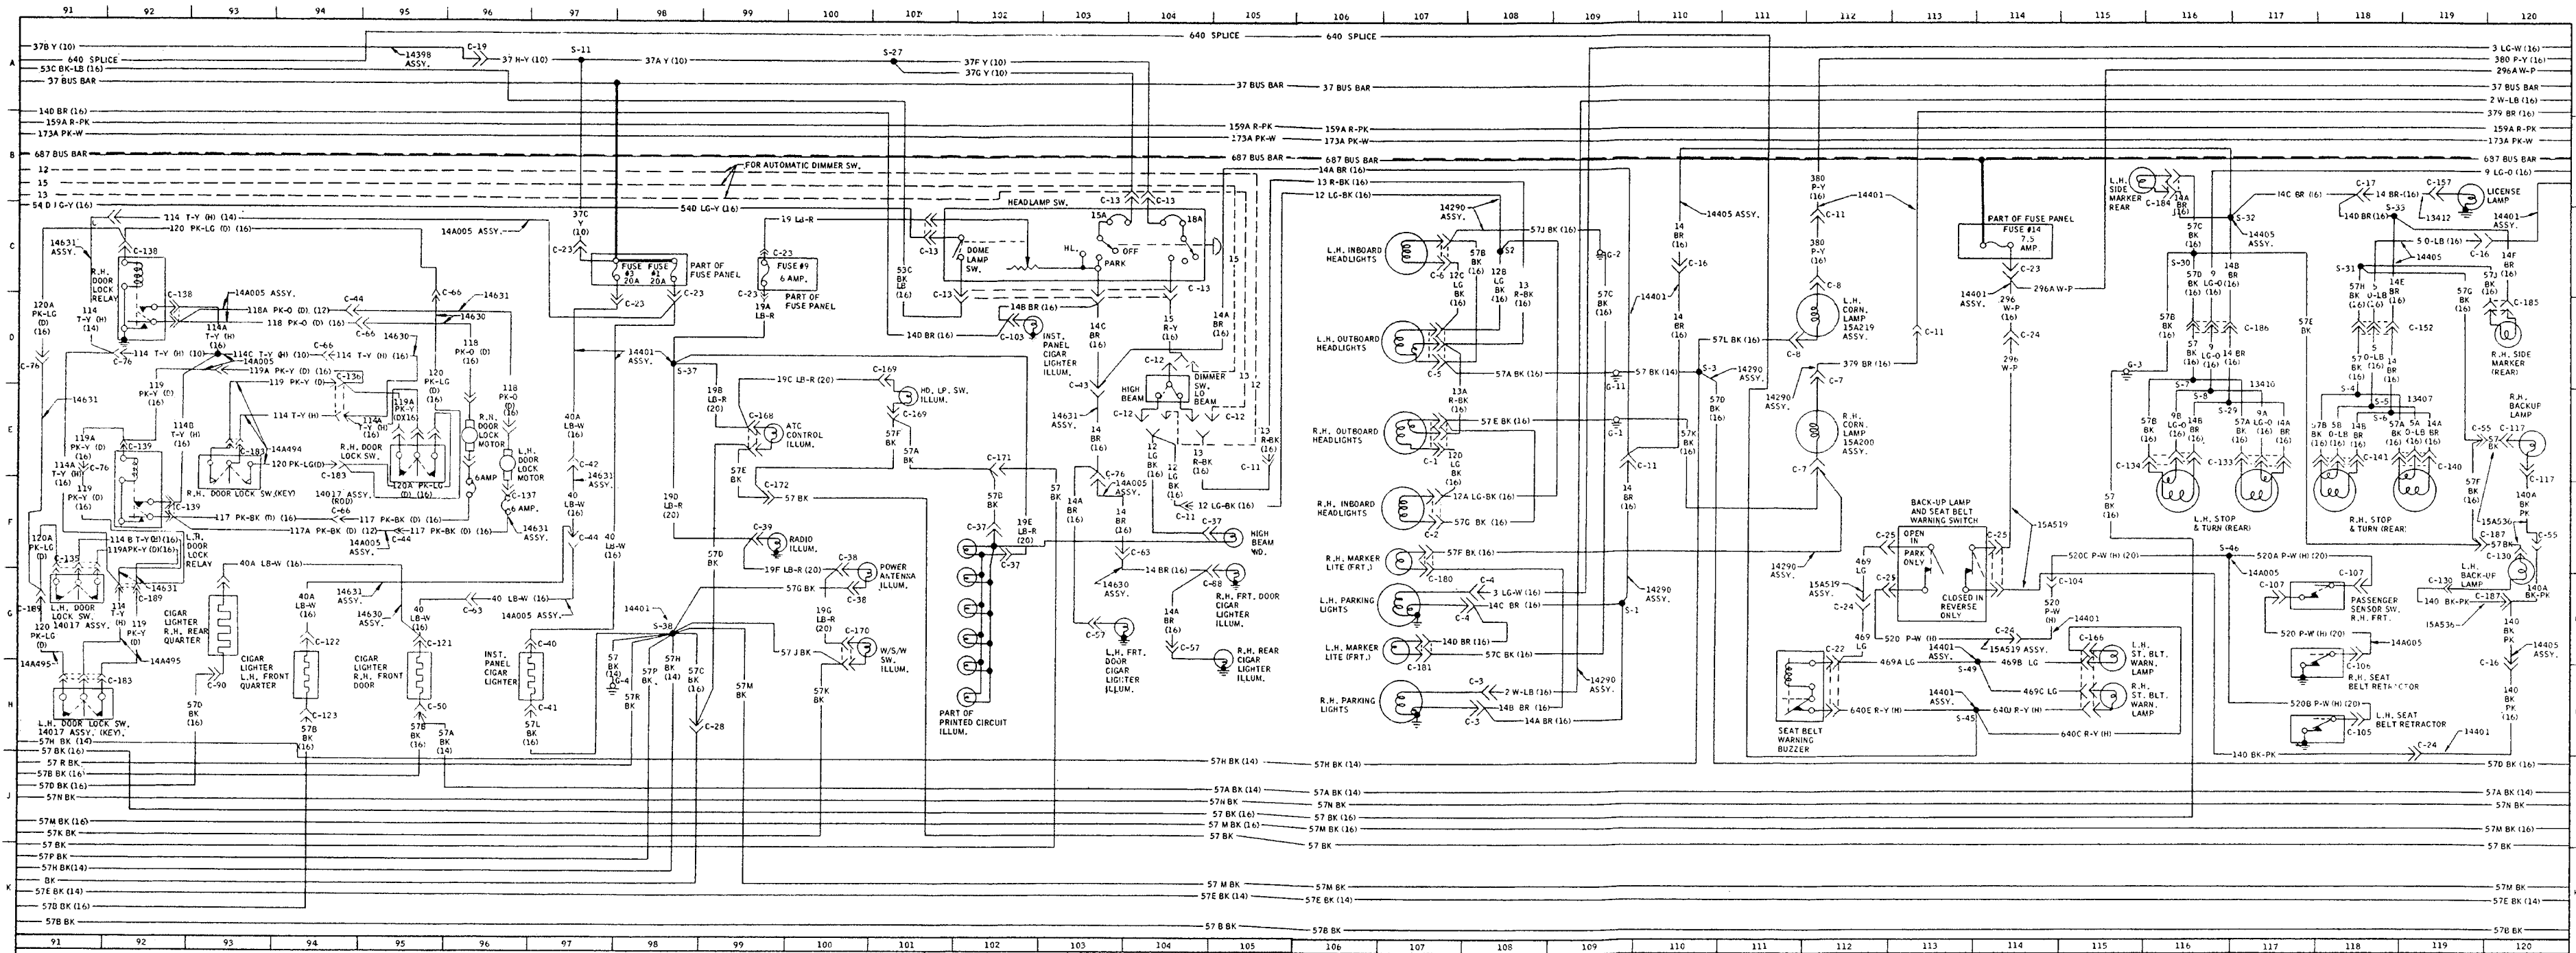

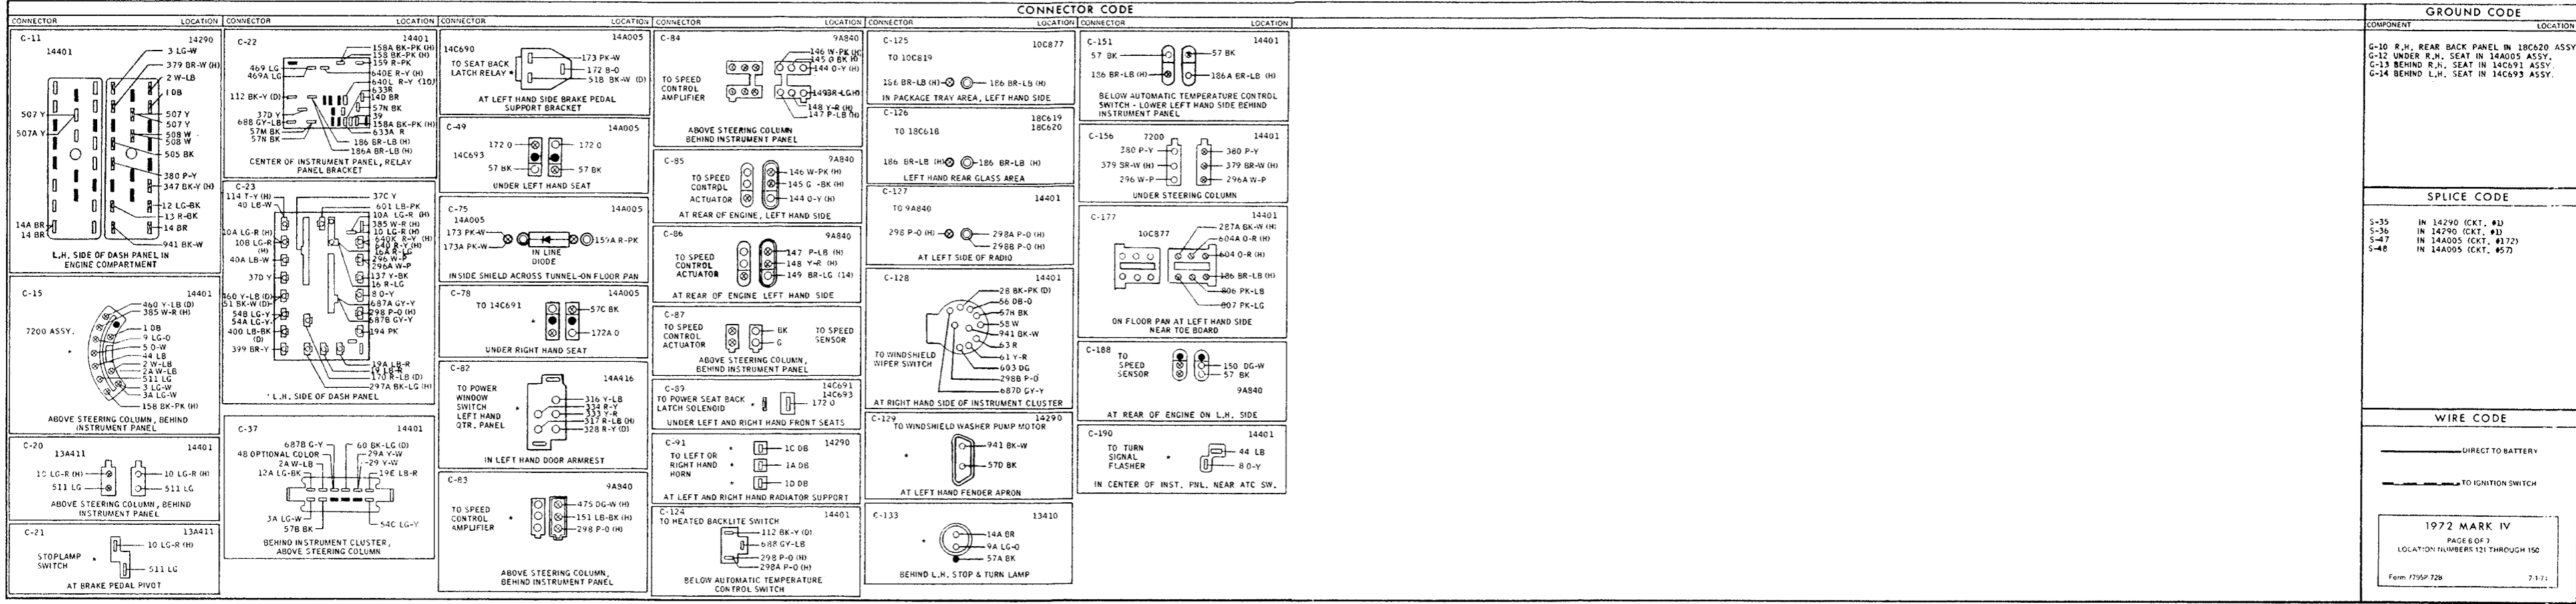

**GROUND CODE**

COMPONENT LOCATION

G-10 R.H. REAR BACK PANEL IN 18C620 ASSY.  
G-12 UNDER R.H. SEAT IN 14A005 ASSY.  
G-13 BEHIND R.H. SEAT IN 14C691 ASSY.  
G-14 BEHIND L.H. SEAT IN 14C693 ASSY.

---

**SPLICE CODE**


S-35 IN 14290 (CKT. #1)  
S-36 IN 14290 (CKT. #1)  
S-47 IN 14A005 (CKT. #172)  
S-48 IN 14A005 (CKT. #57)

---


**WIRE CODE**

— DIRECT TO BATTERY  
- - - TO IGNITION SWITCH

1972 MARK IV  
PAGE 6 OF 7  
LOCATION NUMBERS 121 THROUGH 150  
Form 77959 728 7-72

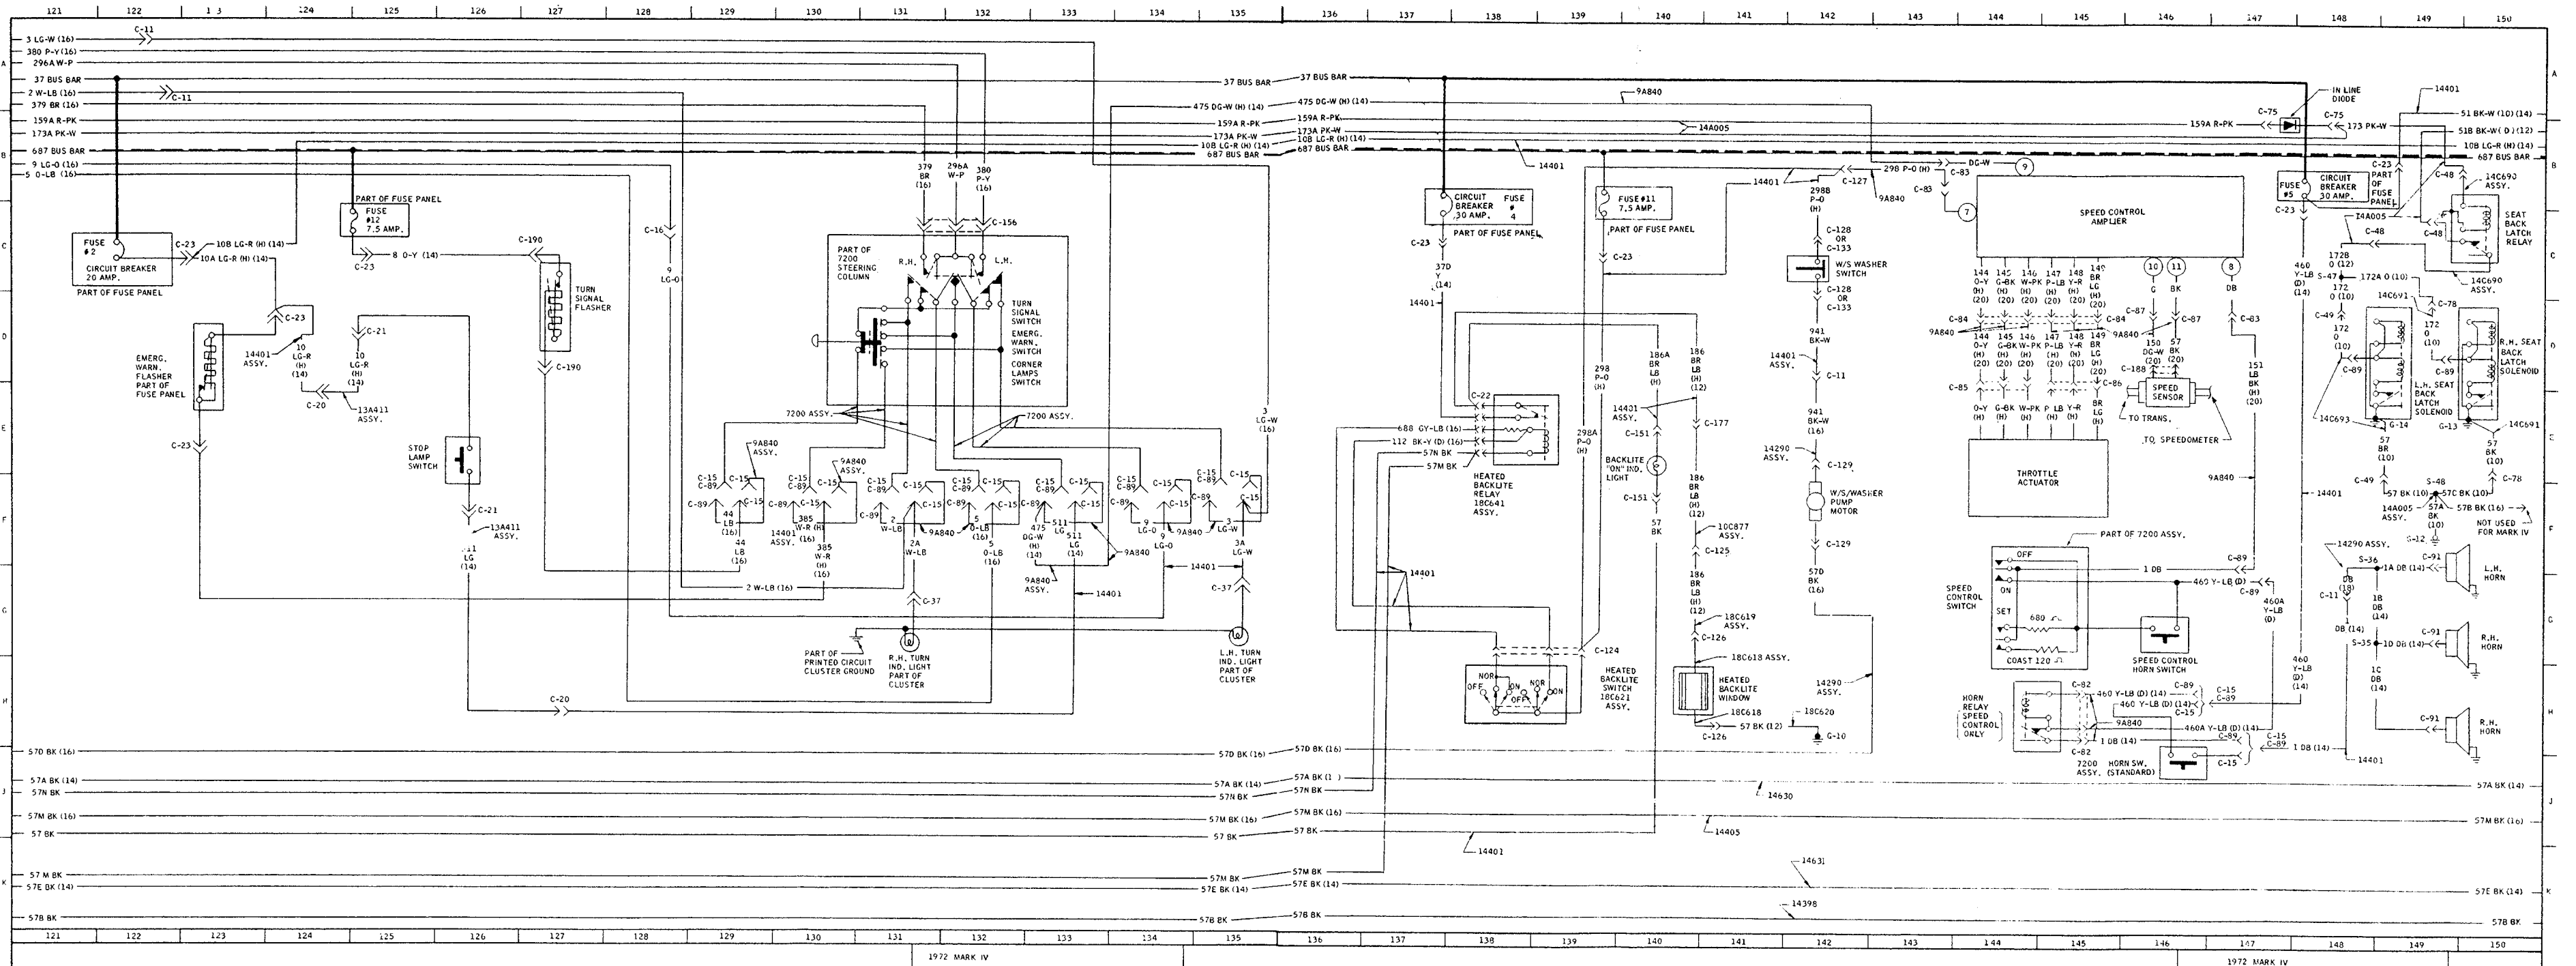




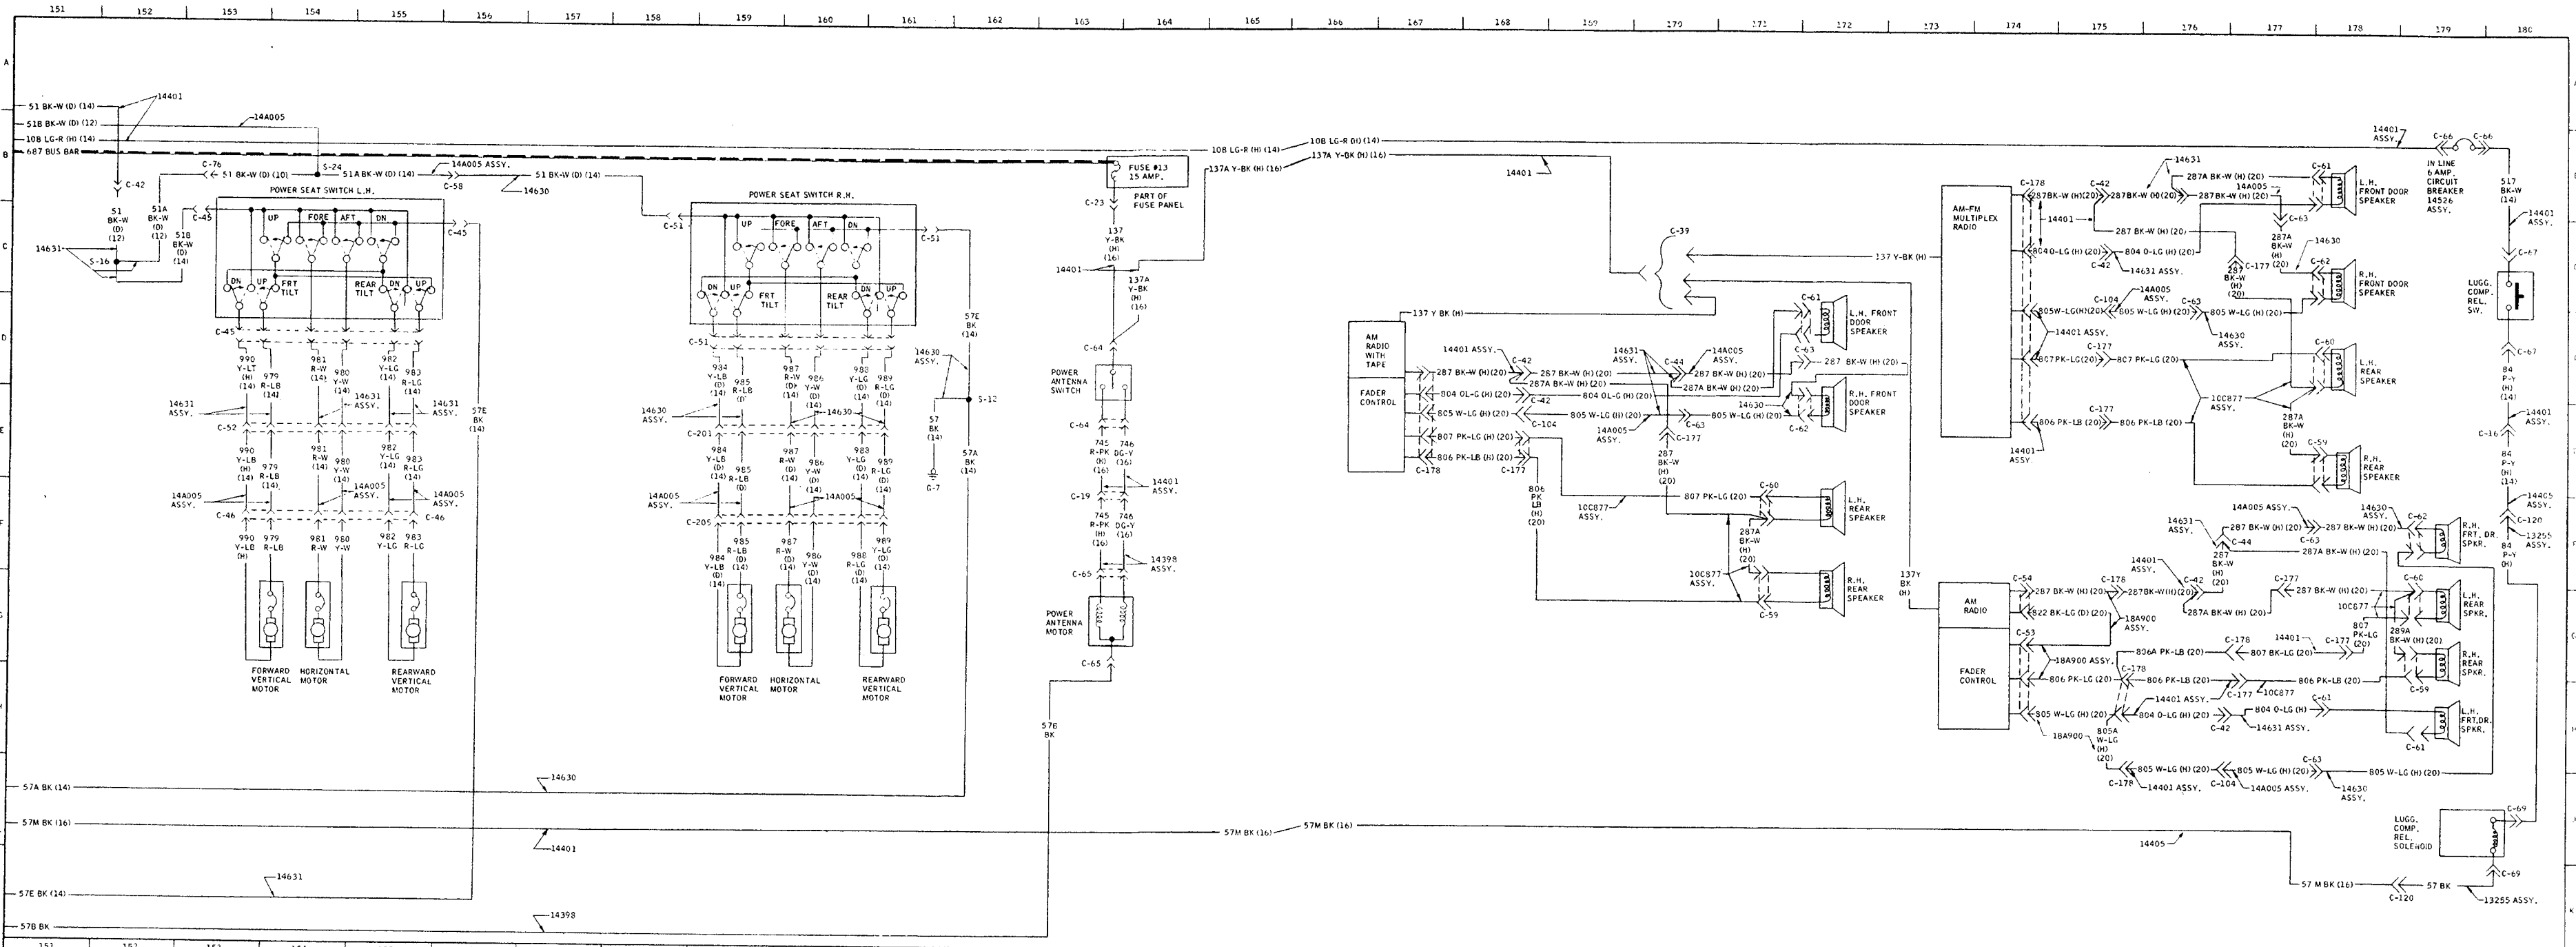

INDEX

COMPONENT	LOCATION
AIR CONDITIONER	
- AUTOMATIC TEMPERATURE CONTROL SYSTEM	B-25
ALTERNATOR	D-2
CIGAR LIGHTER	C-74
- FRONT	E-74
- REAR	
FLASHERS	
EMERGENCY WARNING TURN SIGNAL	B-103 B-101
GAUGES	
AMMETER	B-5
FUEL	E-58
OIL PRESSURE	E-59
TEMPERATURE	E-60
HEATED BACKLITE	D-119
HEATER SYSTEM	G-36
HORNS	K-106
IGNITION SYSTEM	B-7
ILLUMINATORS	
ASH TRAY	G-68
CLUSTER	H-85
HEATER	H-80
PRNDL	E-50
RADIO	H-86
INDICATORS	
DOOR AJAR	E-52
DUAL BRAKE WARNING & SURE TRACK	F-50
HEATED BACKLITE	F-120
HIGH BEAM	C-94
LEFT TURN	D-103
LITES ON	F-97
LOW FUEL	G-58
RIGHT TURN	E-103
SEAT BELT	C-54
KEY WARNING BUZZER SYSTEM	C-53
LAMPS	
AIR CONDITIONER LIGHT	H-80
BACK-UP LIGHT	K-99
"C" PILLAR COURTESY LIGHT	J-78
CORNERING LIGHT	G-93
DOOR COURTESY LIGHT	F-81
HEADLAMPS	K-91
LICENSE PLATE LIGHT	K-100
LUGGAGE COMPARTMENT LIGHT	F-82
MAP LIGHT	D-86
PARKING LIGHT	G-96
REAR LIGHTS	K-97
SIDE MARK LIGHTS - FRONT	G-92
- REAR	K-96
MOTORS	
AIR CONDITIONER	
BLOWER - ATC	D-23
POWER SEAT	K-62
POWER WINDOWS	
FRONT DOOR	F-7
REAR QUARTERS	K-11
STARTING	B-3
WINDSHIELD WASHER	F-110
RADIOS	
AM	C-125
AM & STEREO TAPE UNIT	C-131
AM-FM MULTIPLEX	C-128
RELAYS	
HEATER & A/C	D-19
HORN	E-107
LOW FUEL WARNING	F-58
MAP LAMP & SEAT BELT	C-53
SEAT BACK LATCH	E-69
HEATED BACKLITE	F-119
WINDOW SAFETY	B-11
SENDERS	
FUEL GAUGE	H-59
OIL PRESSURE	J-59
WATER TEMPERATURE	H-60
SENSORS	
AMBIENTS	E-24
IN CAR	G-23
SPEED CONTROL	G-102
SURE TRACK	K-49
SEAT BACK LATCH SYSTEM	J-71
SPEED CONTROL SYSTEM	J-108
STARTER SYSTEM	B-3
SURE TRACK CONTROL SYSTEM	H-48
SWITCHES	
CORNERING LAMP	B-98
- ATC	J-19
BACK-UP LAMP	B-105
COURTESY LAMP - FRONT	C-91
- REAR	D-76
DOOR AJAR - FRONT	H-53
DOOR LOCK	H-74
DUAL BRAKE WARNING	J-50
EMERGENCY WARNING	C-25
HEADLAMP DIMMER	C-21
HEATED BACKLITE	D-103
IGNITION	B-8
LIGHT	B-95
KEY WARNING BUZZER	D-92
POWER SEAT	F-62
POWER WINDOWS	
FRONT DOOR	C-7
REAR QUARTER	
SPEED CONTROL	J-109
STOPLAMP	E-101
SURE TRACK ACTUATOR	J-88
TURN SIGNAL	B-98
WINDSHIELD WASHER	D-110



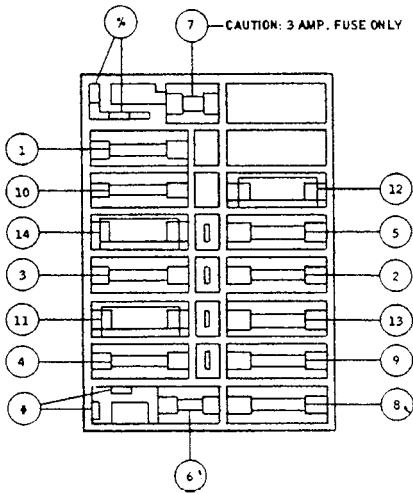

NOTE:  
 FUSE BLOCK (CONTAINS FUSES & CIRCUIT BREAKERS)  
 LOCATED IN LOWER L.H. SIDE OF DASH PANEL

FUSE LOCATIONS

1. (7.5 AMP) DUAL BRAKE WARNING LAMP, SEAT BELT, DECK LID, DOOR AJAR, & LOW FUEL WARNING SYSTEMS.
2. (7.5 AMP) WINDOW SAFETY RELAY CONTROL FEED.
3. (2.5 AMP) CIGAR LIGHTER FEED & VACUUM DOOR LOCK SOLENOID FEED.
4. (1.5 AMP) COURTESY LAMP, MAP LAMP, LUGGAGE COMPARTMENT LAMP, GLOVE BOX LAMP, CLOCK FEED.
5. (1.5 AMP) RADIO FEED & POWER ANTENNA.
6. (6 AMP) INSTRUMENT CLUSTER ILLUM. LAMPS, HEATER SWITCH ILLUM. LAMP, PRNDL LAMP, RADIO DIAL ILLUM. LAMP.
7. (3 AMP) SURE TRACK BRAKE SYSTEM FEED.
8. (7.5 AMP) SPEED CONTROL AND W/S WASHER FEED.
9. (1.5 AMP) TURN SIGNALS, CORNERING LAMPS & BACK-UP LAMPS.
10. (2.5 AMP) HEATED BACKLITE.

CIRCUIT BREAKER LOCATIONS

11. (30 AMP) FEED FOR POWER SEATS & HORNS ALSO SEAT BACK LATCH & DECK LID RELEASE SOLENOIDS.
12. (20 AMP) POWER WINDOW FEED.
13. (30 AMP) AUTOMATIC TEMPERATURE CONTROL FEED.
14. (20 AMP) STOP LAMP, EMERGENCY WARNING FLASHER.


CIRCUIT BREAKERS THAT ARE INTEGRAL PARTS OF COMPONENTS

- A. (18 AMP) HEADLAMPS, LIGHTING SWITCH
- B. (1.5 AMP) TAIL LAMPS, PARKING LAMPS, MARKER LAMPS, AND INSTRUMENT CLUSTER ILLUMINATION. PART OF LIGHTING SWITCH.

- # CONNECTION FOR TURN SIGNAL FLASHER.
- % CONNECTION FOR EMERGENCY WARNING FLASHER.

BULB CHART

LAMP DESCRIPTION		
BACK-UP	32	1076
C-PILLAR	12	205
DOOR COURTESY	6	212-1
FRONT CORNERING	50	1196
FRONT MARKER	2	194A
FRONT PARK/TURN SIGNAL	32=3	1157NA
HEADLAMPS		
HI BEAM	37.5	4001
LO BEAM	50-37.5	4002
LICENSE PLATE	6 CP	97
TAIL, STOP AND TURN	32, 3 C.P.	1157
CLUSTER ILLUM. (PRINTED CIRCUIT)	2 C.P.	194
HI BEAM INDICATOR	2 C.P.	194
TURN INDICATOR	2 C.P.	194
HEATER & A/C CONTROLS	1.9 C.P.	1893
RADIO PILOT LIGHT	1.9 C.P.	1893
AUTO TRANS. QUADRANT	.7 C.P.	1445
ASH TRAY ILLUM.	.7 C.P.	1445
DUAL BRAKE WARNING	2 C.P.	194
LUGGAGE COMPARTMENT LITE	6 C.P.	631
COURTESY LAMPS FRONT DOORS	6 C.P.	212
SEAT BELT WARNING	2 C.P.	194
REAR SIDE MARKER	2 C.P.	194
HEATED BACKLITE INDICATOR	P.I.A.	

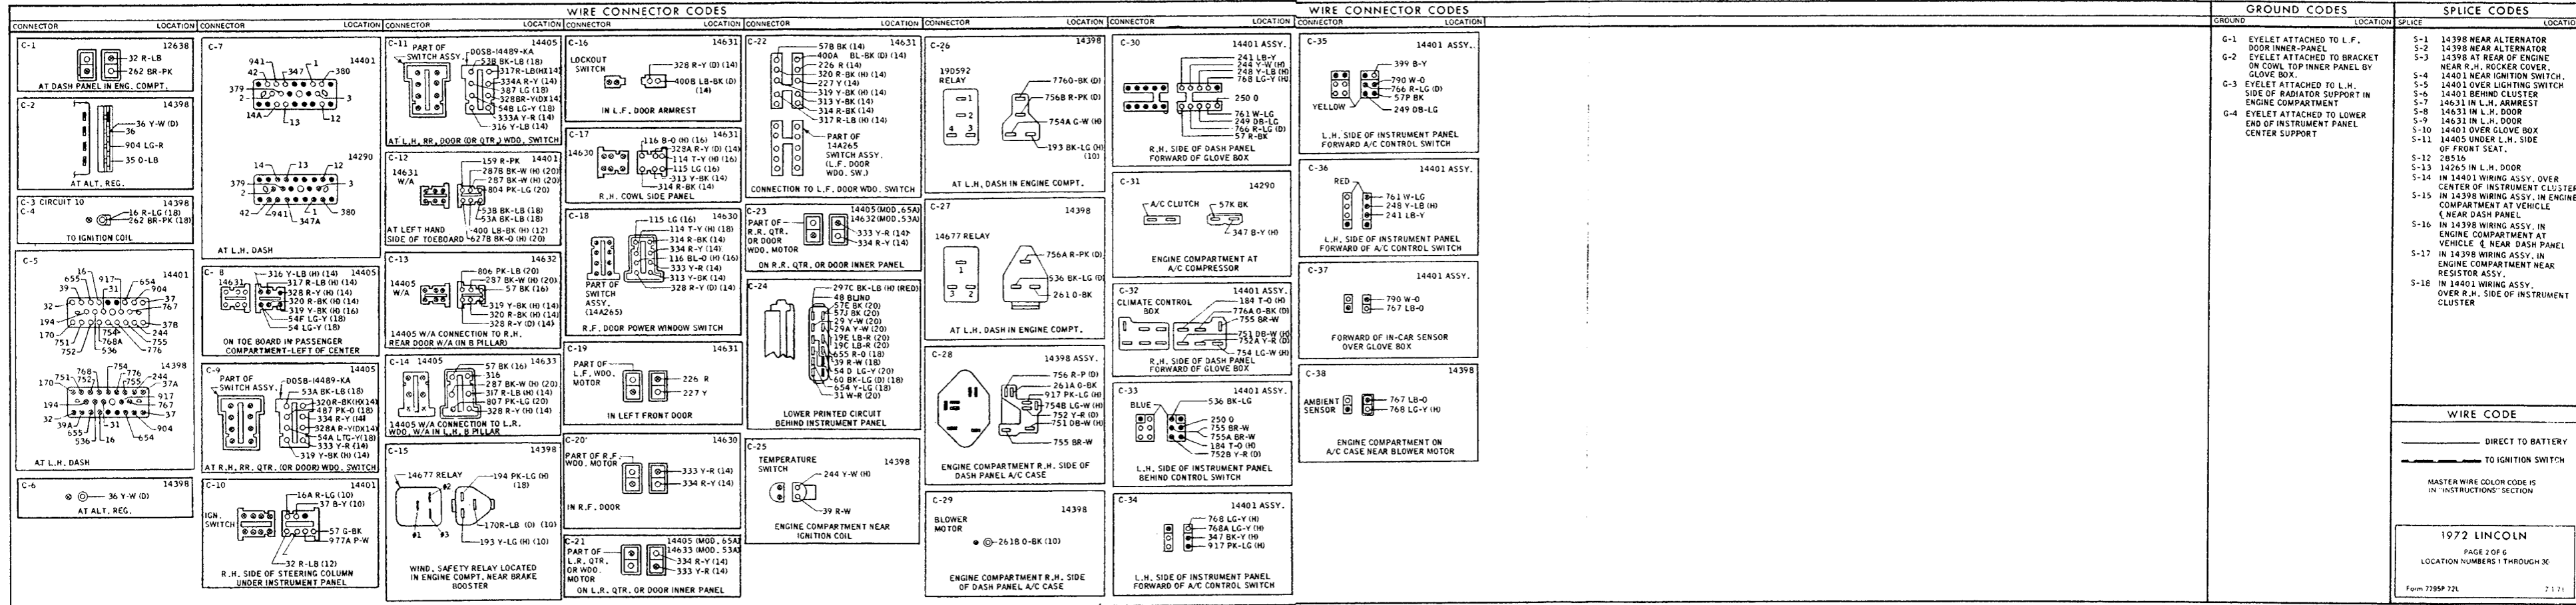

**WIRE CODE**

— DIRECT TO BATTERY

— TO IGNITION SWITCH


MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION

**1972 LINCOLN**

PAGE 2 OF 6

LOCATION NUMBERS 1 THROUGH 30

Form 7295P 72L 7 1 71

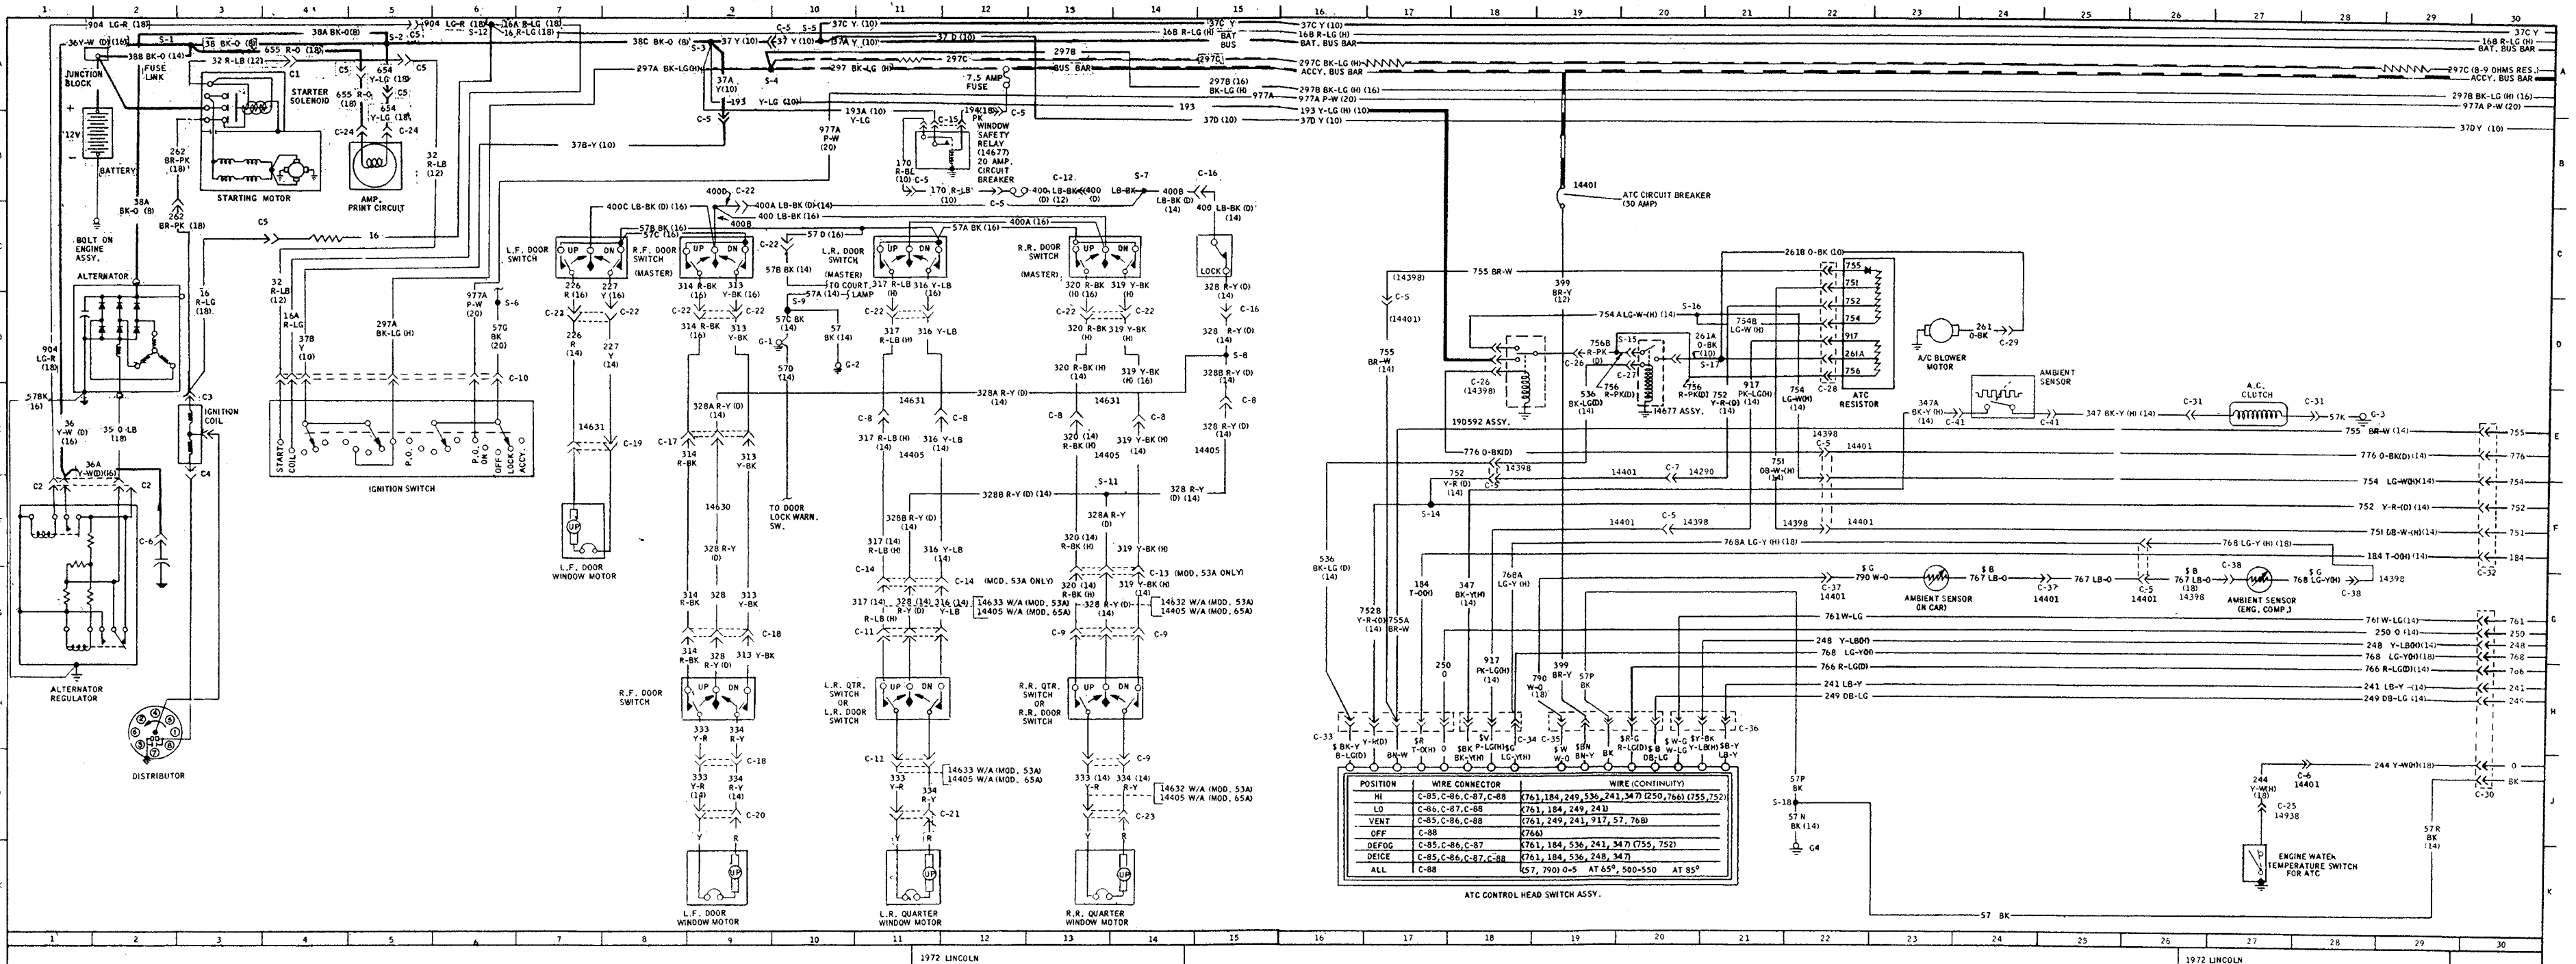


WIRE CONNECTOR CODES										WIRE CONNECTOR CODES										GROUND CODES																																																																																			
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION																																																																																				
C-7 14398 14401 ASSY. 170 R-LB (10) 751 DB-W (H) (14) 32 R-LB (12) 194 PK (18) 29 R-W (20) 252 Y-R (H) (14) 53 BK-LB (18) 768A LG-Y (H) (14) 18 BK-PK (RES.) (14) 31 W-K (20) 754 LG-W (H) (14) 640H R-Y (H) (20) 917 PK-LG (14) 54 Y-LG (18) 927 LB-O (18) 904 LG-B (18) 37 Y (10) 776 O-BK (H) (14) 755 BR-W (14) 244 Y-W (H) 378 Y (10)		C-42 14401 14405 ASSY. 53 BK-LB (18) 520 P-W (H) (20) 140 BK-PK (18) 50-LB (16) 84 P-Y (H) (14) 54F LG-Y (18) 29 Y-W (20) 486 BR-W (H) (18)		C-46 14401 ASSY. 10C859 640G R-Y (H) (20) BEHIND MAP LAMP ASSY.		C-53 14401 ASSY. LOW FUEL SWITCH 29A Y-W (20) 60 BK-LG (20) 57L BK (20) 640A R-Y (H) (20) 215 Y-B (H) (20)		C-60 14401 ASSY. 14630 627 BK-O (H) (20) 527A BK-O (H) (20) 40A LB-W (16) 14E BR (18) 805 W-LG (H) (20) 55C BK-LB (18)		C-66 10C865 ASSY. 14018 SW. ASSY. 627 BK-O (H) (20) IN R.F. DOOR BY LATCH		C-73 28392 ASSY. 28373 604 O-R (H) (20) 604A O-R (H) (20) SURE TRACK BOTTOM OF GLOVE BOX		C-79 14405 ASSY. 14632 ASSY. 53A BK-LB (18) 53B BK-LB (18) 487 PK-O (18) 627 BK-O (H) (20) 248 LG-Y (18) 40B LB-W (16) 14B BR (18) R.H. "B" PILLAR		C-86 28516 ASSY. SURE TRACK ACTUATOR 600 DB (18) 57 BK (18) 605 R (18) 603 DG (18) 14B BR (18) BEHIND GLOVE BOX		C-67 14398 ASSY. 9E717 ASSY. 369 BR-O (H) (20) 81 BR-Y (H) (20) TOP OF ENGINE BY R.H. ROCKER		C-74 28392 ASSY. 28430 ASSY. 604A O-R (H) (20) 604 O-R (H) (20) L.H. FLOOR PAN AREA OF TRUNK		D-80 10C865 ASSY. 14632 ASSY. 627 BK-O (H) (20) R.H. REAR DOOR		C-87 28430 ASSY. SURE TRACK SENSOR 604 O-R (H) (19) 604A O-R (H) (19) REAR AXLE HOUSING		C-24 14401 ASSY. PRINTED CIRCUIT 57J BK (20) 57E BK (20) 19B LB-R (20) 19C LB-R (20) 655 R-O (18) 54D LG-Y 31 W-R (20) 654 Y-LG (18) 60 BK-LG (18) 39 R-W (20) 29A Y-W (20) 29 Y-W (20) 297C 48 (BLIND CIRCUIT) LOWER PRINTED CIRCUIT BEHIND INSTRUMENT CLUSTER		C-43 14405 ASSY. DECK LID OPEN WARN. SWITCH 486 BR-W (H) (18) L.H. SIDE OF TRUNK OVER WHEELHOUSE		C-47 14401 ASSY. 10C859 520 P-W (H) (20) BEHIND MAP LAMP ASSY.		C-55 12K454 ASSY. SPARK CONTROL MODULE 57 BK (20) 934 T-W (20) 81 BR-Y (20) 369A BR-O (H) (20) 369 BR-O (H) (20)		C-61 14401 ASSY. 14405 ASSY. 14 BR (16) 287 BK (18) 287 BK (18) 808 BK-R (18) 917 PK-LG (14) 54 Y-LG (18) 927 LB-O (18) 904 LG-B (18) 745 R-PK (H) (16)		C-67 14401 ASSY. 13A726 ASSY. 57L BK (20) 57C BK (18) 14C BK (18)		C-75 14401 ASSY. 977A P-W (20) 977 P-W (20) DUAL BRAKE VALVE BY L.H. FRONT FENDER APRON		C-81 10C865 ASSY. 14018 ASSY. 627 BK-O (H) (20) R.H. REAR DOOR BY LATCH		C-87A 14398 ASSY. THROTTLE SOLENOID BLANK 640 R-Y (H) (18) ON ENGINE NEAR CARBURETOR		C-25 14398 ASSY. THERMAL SWITCH 244 Y-W (H) (18) 39 R-W (20) ENGINE COMPARTMENT NEAR DISTRIBUTOR		C-44 14401 ASSY. PRINTED CIRCUIT 42 R-W (H) (18) 57T BK (20) 215 Y-B (H) (20) 2A W-LB (18) 19A LB-R (20) 57K BK (20) 41 BK-LB (H) (16) 977B P-W (20) 977 P-W (20) 640 R-Y (H) (20) 640 R-Y (H) (20) 2A LG-BK (16) 54 LG-W (18) 57S BK (20) 57T BK (20) UPPER PRINTED CIRCUIT BEHIND INSTRUMENT CLUSTER		C-49 14405 ASSY. SEAT SENSOR 520B P-W (H) (20) 520C P-W (H) (20) NOTE-CIRCUITS MAY BE REVERSED UNDER PASSENGER SIDE OF FRONT SEAT		C-56 12K454 ASSY. 14398 ASSY. 81 BR-Y (20) 369A BR-O (H) (20) D-80 D-77 IN ENGINE COMPARTMENT AT L.H. SIDE OF DASH PANEL		C-62 14401 ASSY. 14631 ASSY. 627B BK-O (H) (20) 159 R-PK (18) 287 BK (18) 81 BK-LB (H) (16) 640 R-Y (H) (20) 53B BK-LB (20)		C-68 14401 ASSY. CIGAR LIGHTER 57C BK (18) 57F BK (16) AT INSTRUMENT PANEL LIGHTER		C-70 14398 OIL PRESSURE SENDER 31 W-R (20)		C-76 14405 ASSY. 14633 ASSY. 53C BK-LB (18) 53D BK-LB (18) 387 LG (18) 54A LG-Y (18) 54C LG-Y (18) 627A BK-O (H) (20) 40A LB-W (16) 14C BR (18) L.H. "B" PILLAR		C-82 12K454 ASSY. SPARK CONTROL SPEED SENSOR 57A BK (20) 57 BK (20) 934 T-W (20) ENGINE COMPARTMENT NEAR DASH PANEL		C-83 9E717 ASSY. SPARK CONTROL VACUUM SOLENOID 81 BR-Y (H) (18) SPARK CONTROL SOLENOID ON ENGINE		C-84 9E717 ASSY. SPARK CONTROL VACUUM SOLENOID 369 BR-O (H) (18) SPARK CONTROL SOLENOID ON ENGINE		C-26 14398 ASSY. THERMAL SWITCH 244 Y-W (H) (18) 39 R-W (20) ENGINE COMPARTMENT NEAR DISTRIBUTOR		C-45 14401 ASSY. 13150 BUZZER 640E R-Y (H) (20) 640G R-Y (H) (20) 520 P-W (H) (20) 520A P-W (H) (20) UPPER PRINTED CIRCUIT BEHIND INSTRUMENT CLUSTER		C-50 12K454 14401 640 R-Y (H) (20) OVER R.H. SIDE OF GLOVE BOX		C-57 14405 ASSY. 9275 57B BK (18) FUEL SENDER FORWARD VERTICAL SIDE OF FUEL TANK 29 Y-W (20)		C-59 14401 ASSY. 28373 977B P-W (20) 601 LB-PK (20)		C-63 10C865 ASSY. 14631 ASSY. 627 BK-O (H) (20) ON L.F. DOOR BELOW ARMREST		C-71 28516 SURE TRACK MODULE 603 DG (18) 600 DB (18) BOTTOM OF GLOVE BOX		C-77 10C844 14633 ASSY. 627 BK-O (H) (20) L.H. REAR DOOR		C-85 14401 ASSY. MAP LAMP 53C BK-LB (18) 53 BK-LB (18) 54B LG-Y (18) 57F BK (16) 57D BK (16) BEHIND MAP LAMP ASSY.		C-64 10C865 14018 SW. ASSY. 627 BK-O (H) (20) IN L.F. DOOR BY LATCH		C-72 28516 605 R (18) 57 BK (18) BOTTOM OF GLOVE BOX		C-78 10C844 ASSY. 14018 ASSY. 627 BK-O (H) (20) IN L.H. REAR DOOR BY LATCH		G-5 EYELET OF 12K454 W/A (SPARK CONTROL) ATTACHED TO BRACKET ON R.H. SIDE OF COWL TOP INNER		G-6 EYELET OF 14405 W/A ATTACHED TO STRAINER BY L.H. WHEELHOUSE IN TRUNK.		G-7 EYELET OF 14401 W/A ATTACHED TO CENTER SUPPORT OF INSTRUMENT PANEL BY ASH TRAY		S-19 IN 14401 MAIN W/A OVER GLOVE BOX		S-20 IN 14405 W/A UNDER DRIVERS SEAT		S-21 IN 14401 MAIN W/A BEHIND INSTRUMENT CLUSTER.		S-22 IN 14401 MAIN W/A BEHIND INSTRUMENT CLUSTER.	

WIRE CODE


— DIRECT TO BATTERY

— TO IGNITION SWITCH (ACCY. TERMINAL)

MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION

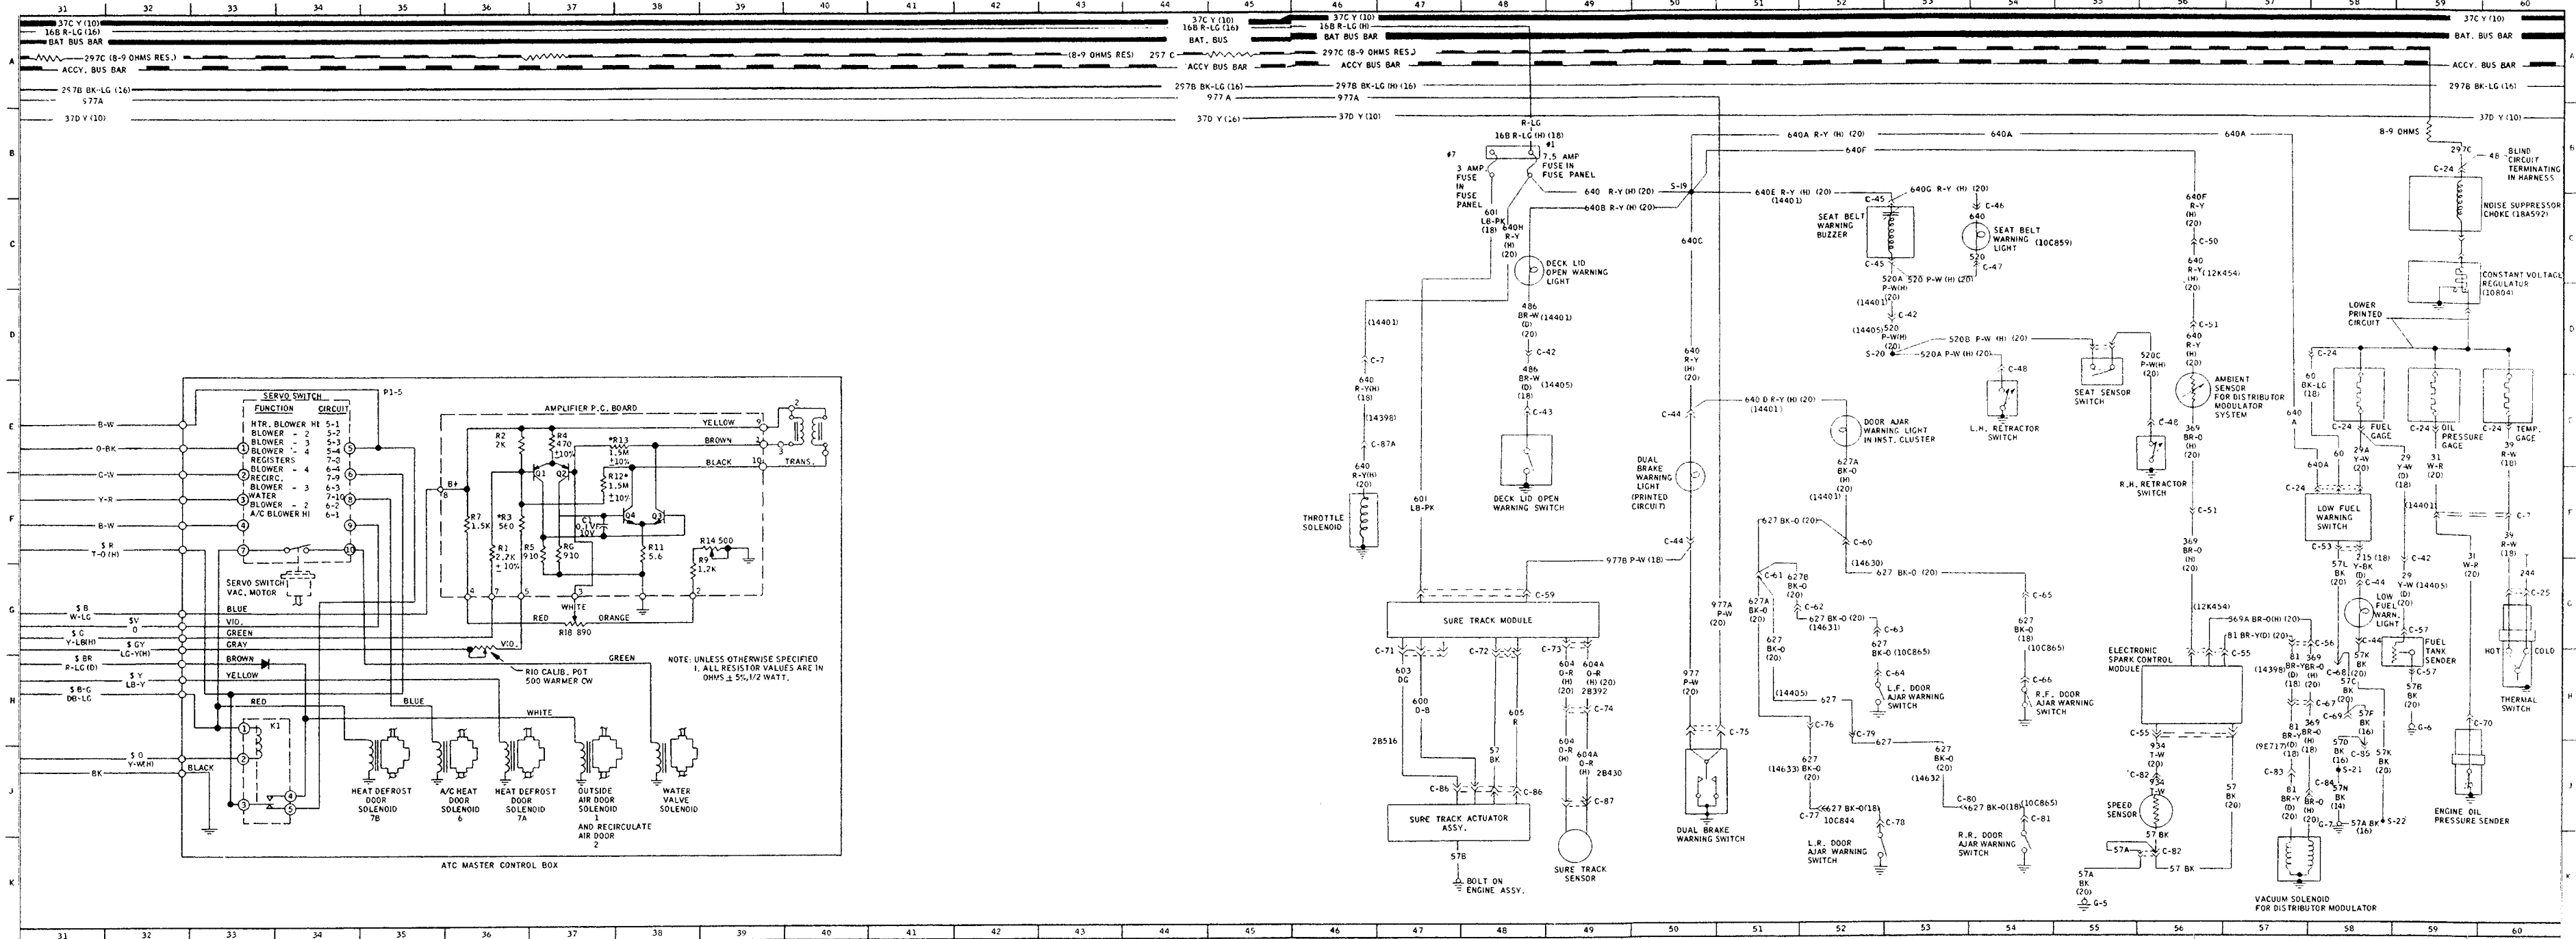


WIRE CONNECTOR CODES												WIRE CONNECTOR CODES												GROUND CODES		SPlice CODES					
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	GROUND	LOCATION	SPlice	LOCATION						
C-9	14405 ASSY. (MOD. 65A) 14632 ASSY. (MOD. 53A)	C-24	14401 ASSY.	C-60	14401	C-85	14401 ASSY.	C-94	144699	C-101	148724	C-108	14401	C-116	14633	C-127	14631 ASSY.	C-141	14401 ASSY.	C-148	13A090 ASSY.	C-153	13A090 ASSY.	G-8	IN 14405 UNDER FRONT SEAT (L.H. SIDE)						
14A265 R.R. READING LAMP SWITCH	333 Y-R (14) 319 Y-BK (H) (14) 54 77 R-Y (H) (14) 487 PK-O (18) 53 BK-LB (16) 320 R-BK (H) (14)	* LOWER PRINTED CIRCUIT (PART OF INSTR. CLUSTER)	577 BK (20) 57 BK (20) 19E LB-R (20) 19E LB-R (20) 487 PK-O (18) 655 R-O (18) 540 LG-Y (20)	14630 627 BK-O 627 BK-O 287A BK-W (H) 40A LB-W 14E BR 805 PK-LB 53 BK-LB	627 BK-O 627 BK-O 287A BK-W (H) 40A LB-W 14E BR 805 PK-LB 53 BK-LB	* MAP LAMP ASSY.	577 BK (16) 54B LG-Y (18) 53C BK-LB (18) 53 BK-LB (18)	TO SEAT MOTOR	179 Y 180 R	14405 172 O	148724 173C PK-W	57 BK 172 O	TO R.H. SEAT SOLENOID	57 BK 172 O	CIGAR LIGHTER	57 BK	* 13A772 ASSY.	53 BK-LB (18)	* 14412 (GLOVE BOX LAMP) ASSY.	54E LG-Y (18)	* 13A024 DIMMER SW.	502 GY (16) 500 P (16) 505 BK (18)	14A320 ASSY.	505 BK (18) 507 Y (18) 508 W (18)	G-9	IN 14401 IN R.H. FRONT DOOR					
C-11	14405 ASSY. (MOD. 65A) 14633 ASSY. (MOD. 53A)	C-28	14405 ASSY.	C-61	14401	C-88	14401	C-95	144631	C-103	148724	C-109	14401	C-118	14632	C-128	14401 ASSY.	C-142	* 14412 ASSY.	C-149	13A090 ASSY.	C-154	14A320 ASSY.	G-10	IN 14630 IN R.H. COWL TOP						
14A265 L.R. READING LAMP SW.	333 Y-R (14) 316 Y-LB (14) 54 77 R-Y (H) (14) 328 R-Y (H) (14) 387 LG (18) 53 BK-LB (16) 317 R-BK (H) (14)	LOWER PRINTED CIRCUIT BEHIND CLUSTER	31 W-R (20) 60 BK (H) (18) 54 Y-LG (18) 29 Y-W (20) 297 W-W 48 BLIND CCT	14405 14 BR 14A BR 287B BK-W (H) 261 O-BK 806 PK-LB 9 LG-O 40B LB-W 527 BK-O 627 BK-O 74E DG-Y 807 PK-LG 745 R-PK	14401 51A BK-W (H)	148724 51A BK-W (H)	UNDER L.H. TOEBOARD COVER	TO SEAT MOTOR	979 R-LB 982 Y-LG 990 Y-LB (H) 983 R-LB 980 Y-W 981 R-W	14631 173B PK-W	148724 173B PK-W	40 LB-W 40A LB-W	CIGAR LIGHTER	40 LB-W	CIGAR LIGHTER	40 LB-W	14405 ASSY.	486 B-W (H) (20) 29 Y-W (20) 54A LG-Y (18) 84 P-Y (H) (14) 50-LB (18) 140 BK-PK (18) 520A P-W (H) (20) 53B BK-LB (18)	* 14412 ASSY.	* 14412 ASSY.	8K (18)	13A024 DIMMER SW.	527 R (18)	* 13A023 ASSY.	505 BK (20) 507 Y (20) 508 W (20)	G-11	IN 14630 IN L.H. FRONT DOOR				
C-13	14405	C-28	14405 ASSY.	C-62	14401 ASSY.	C-91	14631	C-96	14401	C-105	14405	C-110	14401	C-119	14632	C-131	14405	C-143	14405 ASSY.	C-149	13A090 ASSY.	C-154	14A320 ASSY.	G-12	IN 14631 IN R.H. COWL TOP						
14405 R.H. SIDE "B" PILLAR	57 BK 319 Y-BK (H) (14) 287 BK-W (H) (14) 320 R-BK (H) (14) 328 R-Y (H) (14) 806 PK-LB	14631 ASSY.	328 R-Y (H) (14) 319 Y-BK (H) (14) 320 R-BK (H) (14) 54 LG-Y (18) 316 Y-LB (14)	14401 ASSY.	627B BK-O (H) (20) 159 R-PK (18) 287 BK-W (H) (20) 783 R-LG 400 LB-BK (H) (12) 804 O-LG (H) (20) 53A BK-LB (18) 53B BK-LB (18)	14631 981 R-W 980 Y-W 982 Y-LG 979 R-LB 983 R-LG 990 Y-LB (H) 527 BK-O 627 BK-O 51 BK-W (H)	BEHIND INSTR. PANEL ASH TRAY	13A726	57L BK 57C BK 14C BR WHITE	14631 172A O 57H BK	14C691 172A O 57H BK	CIGAR LIGHTER	40 LB-W 114 T-Y	CIGAR LIGHTER	57 BK 57C BK	13A709	53D BK-LB (18) 54C LG-Y (18)	13A756 LUGG. COMP. LAMP	84 P-Y (H) (14) 540 LG-Y (18) 57E BK (14)	13A024 DIMMER SW.	527 R (18)	* 13A023 ASSY.	505 BK (20) 507 Y (20) 508 W (20)	G-13	IN 14631 UNDER FRONT SEAT (L.H. SIDE)						
C-14	14633	C-44	14401 ASSY.	C-76	14405	C-92	144699	C-97	14401	C-106	14405	C-112	14630	C-123	14630	C-124	14631	C-132	14630 R.H. DOOR	C-137	14405 ASSY. (MOD. 53A ONLY)	C-150	14405 ASSY.	G-14	IN 14405 UNDER FRONT SEAT (L.H. SIDE)						
57 BK 316 Y-LB 287 BK-W (H) 317 R-LB (H) 328 R-Y (H) 807 PK-LG	42 R-W (H) (18) 577 BK (20) 215 Y-B (H) (20) 2A-W-LB (18) 14C BR 19A LB-R (20) 577 BK (20) 21 BK-LB (H) (16) 977B P-W (20) 977 P-W (20) 480 R-Y (H) (20) 40 R-Y (H) (20) 17A LG-BK (16) 53 LG-W (18) 575 BK (20) 57 BK (20)	14405	40A LB-W 14C BR 627A BK-O 54A LG-Y 54C LG-Y 53C BK-LB 53D BK-LB	14401 14D BR	14405	51 BK-W (H) 180 R 179 Y	BEHIND CIGAR LIGHTER	15080	14D BR	14C691 172B O 57C BK	14405	40 LB-W 114 T-Y	CIGAR LIGHTER	57A BK 57B BK	VACUUM DOOR LOCK SWITCH	114 T-Y 115 LB 116 BR-O	* 13771 ASSY.	57 BK (18) 387 LG (18)	14633 ASSY. (MOD. 53A ONLY)	40 LB-W (16) 627 BK-O (20) 54 LG-Y (18) 387 LG (18) 53 BK-LB (18)	13A025 RELAY	13R-BK (16) 12 LG-BK (16) 12A LG-BK (16) 15 R-Y (16)	14334 ASSY.	387 LG (18) 487 PK-O (18)	G-15	EYELET TO BRACKET ON COWL TOP INNER ABOVE GLOVE BOX					
C-19	14A265	C-79	14405	C-93	14630	C-99	14630	C-100	148724	C-107	14C691	C-113	14630	C-125	14630	C-126	14631 ASSY.	C-133	14334 ASSY.	C-145	14405 ASSY. (MOD. 53A ONLY)	C-151	13A090 ASSY.	G-16	IN 14631 IN R.H. COWL TOP						
14A265 R.H. FRONT DOOR ARMREST	313 Y-BK 328 R-Y (H) 333 Y-R 334 R-Y 114 T-Y 115 LG 314 R-BK	14405	40B LB-W 148 BR 54B LG-Y 627 BK-O 54E LG-Y 487 PK-O 53A BK-LB 53B BK-LB	14630 180 R 179 Y	14630 172 O 53 BK-W (H) 173B PK-W 173C PK-W	144699 172 O 57 BK 172 O	SEAT BACK LATCH RELAY L. OF BRAKE PEDAL	TO L.H. SEAT SOLENOID	57 BK 172 O	14C691 172B O 57C BK	14405	57A BK 57B BK	CIGAR LIGHTER	57A BK 57B BK	VACUUM DOOR LOCK SOLENOID	57D BK 116 BR-O 116A BR-O 115 LG 115A LG	* 13A772 ASSY.	54A LG-Y (18)	* L.H. READING LAMP	57 BK (18) 387 LG (18)	14405 ASSY. (MOD. 53A ONLY)	40 LB-W (16) 627 BK-O (20) 54 LG-Y (18) 387 LG (18) 53 BK-LB (18)	13A025 RELAY	500 P (16) 503 LB (16) 502 GY (16)	G-17	IN 14405 UNDER FRONT SEAT (L.H. SIDE)					
C-99	14630	C-93	14630	C-99	14630	C-99	14630	C-100	148724	C-107	14C691	C-113	14630	C-125	14630	C-126	14631 ASSY.	C-133	14334 ASSY.	C-145	14405 ASSY. (MOD. 53A ONLY)	C-151	13A090 ASSY.	G-18	IN 14405 UNDER FRONT SEAT (L.H. SIDE)						
14630 172 O 53 BK-W (H) 173B PK-W 173C PK-W	180 R 179 Y	14630 172 O 53 BK-W (H) 173B PK-W 173C PK-W	180 R 179 Y	14630 172 O 53 BK-W (H) 173B PK-W 173C PK-W	148724 180 R 179 Y	14630 172 O 53 BK-W (H) 173B PK-W 173C PK-W	REAR SIDE OF L.H. SEAT	TO L.H. SEAT SOLENOID	57 BK 172 O	14C691 172B O 57C BK	14405	57A BK 57B BK	CIGAR LIGHTER	57A BK 57B BK	VACUUM DOOR LOCK SOLENOID	57D BK 116 BR-O 116A BR-O 115 LG 115A LG	* 13A772 ASSY.	54A LG-Y (18)	* L.H. READING LAMP	57 BK (18) 387 LG (18)	14405 ASSY. (MOD. 53A ONLY)	40 LB-W (16) 627 BK-O (20) 54 LG-Y (18) 387 LG (18) 53 BK-LB (18)	13A025 RELAY	500 P (16) 503 LB (16) 502 GY (16)	G-19	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.					
C-126	14631 ASSY.	C-135	13A709 ASSY.	C-143	14405 ASSY.	C-149	13A090 ASSY.	C-154	14A320 ASSY.																	G-20	EYELET TO R.F. DOOR INNER PANEL.				
* 13A772 ASSY.	54A LG-Y (18)	* 13713 ASSY.	57B BK (20) 57A BK (16)	* 14412 (GLOVE BOX LAMP) ASSY.	54E LG-Y (18)	* 13A024 DIMMER SW.	502 GY (16) 500 P (16) 505 BK (18)	* 13A023 ASSY.	505 BK (20) 507 Y (20) 508 W (20)																	G-21	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.				
C-153	14A320 ASSY.	C-154	14A320 ASSY.	C-155	14405 ASSY.																					G-22	EYELET TO R.F. DOOR INNER PANEL.				
505 BK (18) 507 Y (18) 508 W (18)	505 BK (20) 507 Y (20) 508 W (20)	14334 ASSY.	387 LG (18) 487 PK-O (18)	14405 ASSY.	387 LG (18) 487 PK-O (18)																					G-23	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.				
G-8	IN 14405 UNDER FRONT SEAT (L.H. SIDE)	G-9	IN 14401 IN R.H. FRONT DOOR	G-10	IN 14630 IN R.H. COWL TOP	G-11	IN 14630 IN L.H. FRONT DOOR	G-12	IN 14631 IN R.H. COWL TOP	G-13	IN 14631 UNDER FRONT SEAT (L.H. SIDE)	G-14	IN 14405 UNDER FRONT SEAT (L.H. SIDE)	G-15	EYELET TO BRACKET ON COWL TOP INNER ABOVE GLOVE BOX	G-16	EYELET TO L.H. QTR. PANEL BELOW L.H. READING LAMP.	G-17	EYELET TO R.H. QTR. PANEL BELOW R.H. READING LAMP.	G-18	EYELET TO PACKAGE TRAY STRAINER NEAR L.H. WHEELHOUSE IN TRUNK.	G-19	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.	G-20	EYELET TO R.F. DOOR INNER PANEL.	G-21	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.	G-22	EYELET TO R.F. DOOR INNER PANEL.	G-23	EYELET TO INSTR. PANEL CENTER SUPPORT BELOW & RIGHT OF A/C CONTROL ASSY.
<p>WIRE CODE</p> <p>— DIRECT TO BATTERY</p> <p>— TO IGNITION SWITCH</p> <p>MASTER WIRE COLOR CODE IS IN "INSTRUCTIONS" SECTION</p> <p>1972 LINCOLN</p> <p>PAGE 4 OF 6</p> <p>LOCATION NUMBERS 61 THROUGH 90</p>																															
Form 719SP-72c 7-72																															

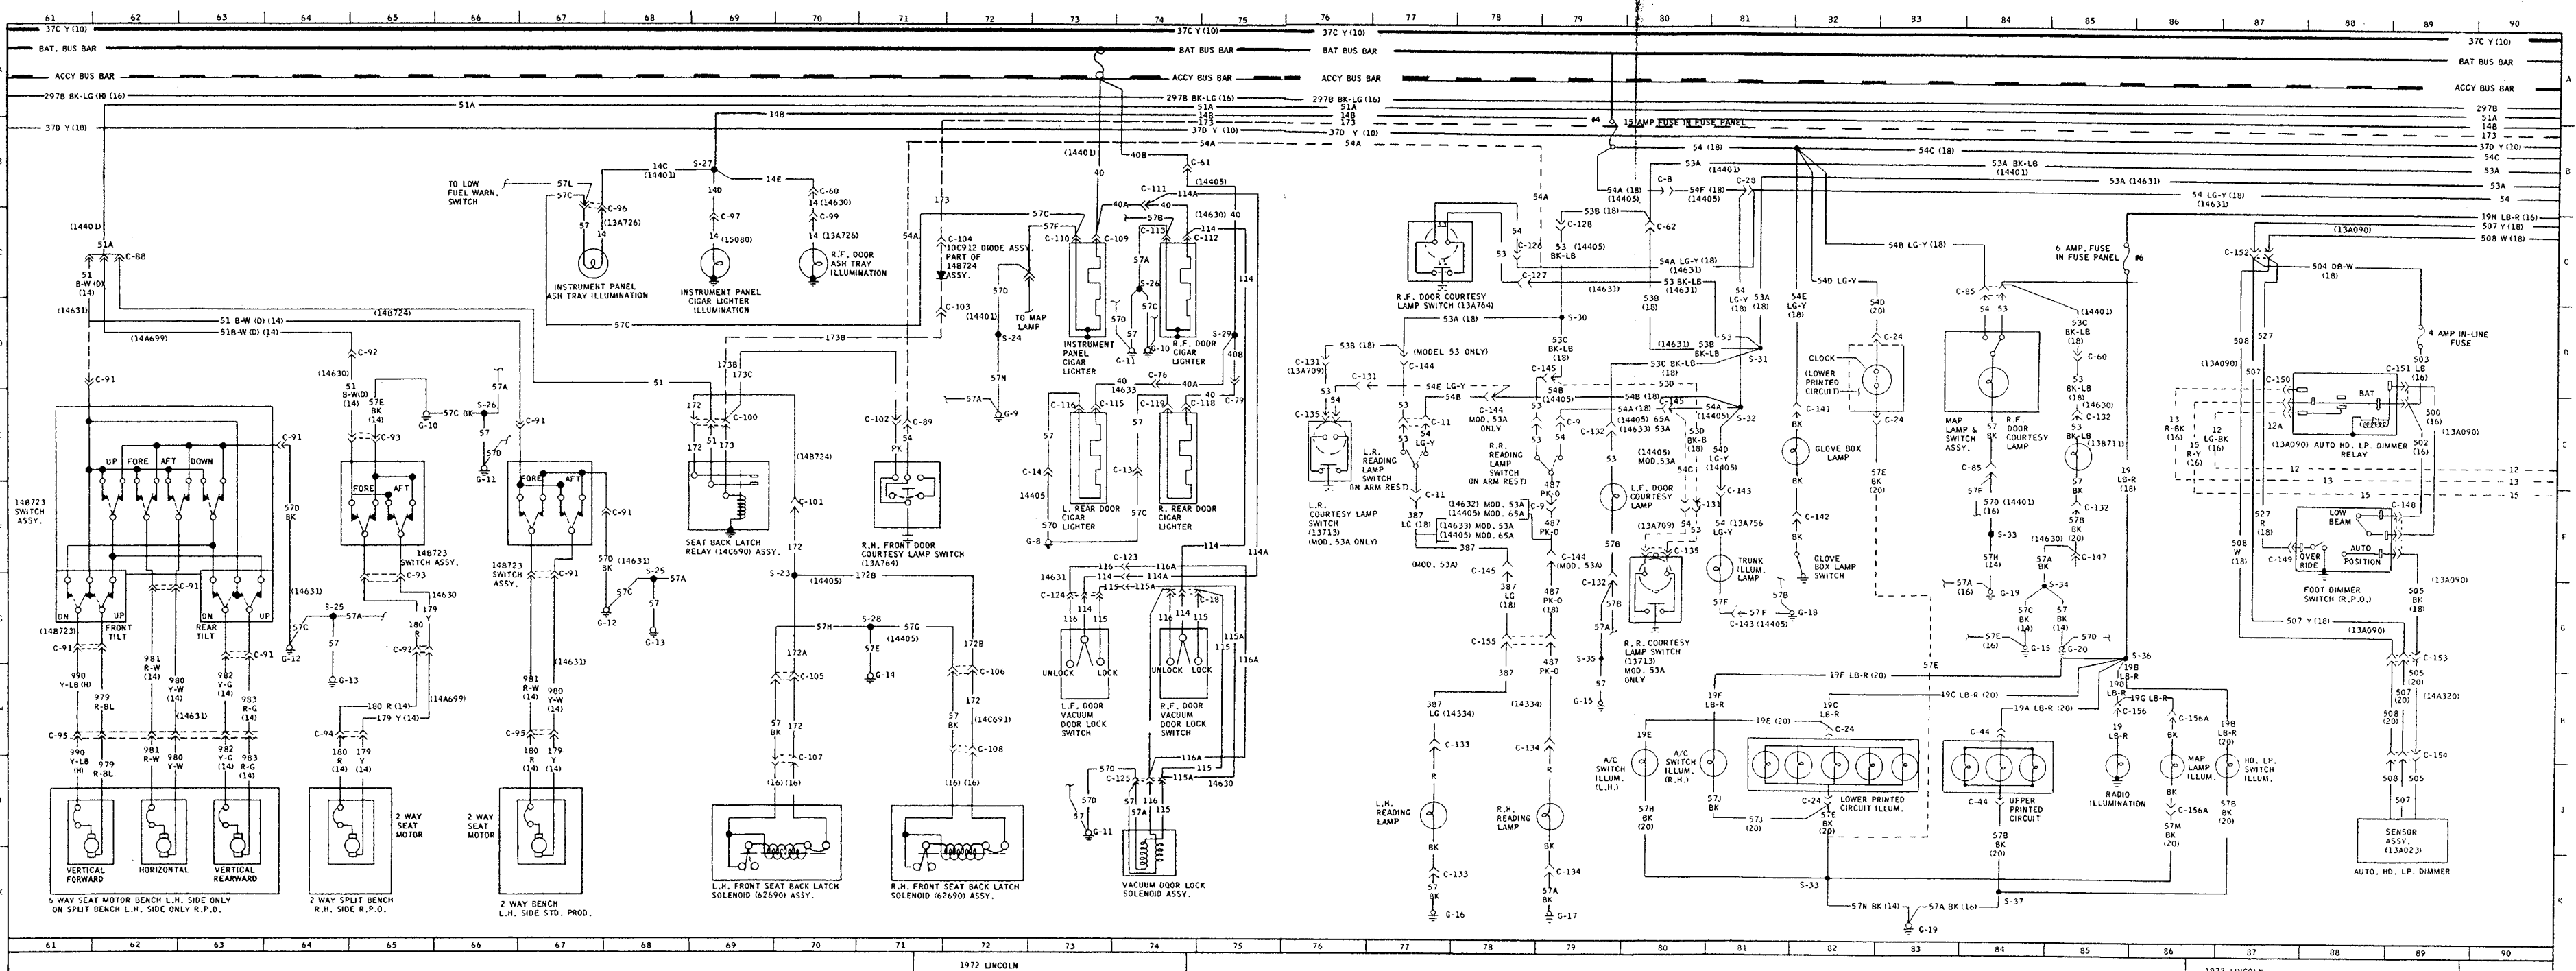


WIRE CONNECTOR CODES						WIRE CONNECTOR CODES						SPLICE CODES		GROUND CODES																																																																																																																							
CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION																																																																																																																				
C-7	14290 ASSY. 42 R-W (D) (18) 2 W-LB (18) 14A BR (18) 94B BK-W (18) 379 BR-W (H) (16) 347 BK-Y (H) (14) 13 R-BK (16) 12 LG-BK (16) 1 DB (14) 3 LG-W (18) 380 P-Y (18) L.H. SIDE OF DASH PANEL	C-62	14401 ASSY. 14631 ASSY. 627B BK-O (20) 159 R-PK (18) 400 LB-BK (D) (12) 287 BK-W (H) (20) 287B BK-W (H) (20) 804 O-LG (20) 53A BK-LB (18) 53B BK-LB (18)	C-163	14290 15A200 57H BK (18) 14D BR (18) REAR OF R.H. CORNERING LAMP	C-171	14401 ASSY. 14405 ASSY. 486 BR-W (D) (20) 29 Y-W (20) 54A LG-Y (18) 84 P-Y (H) (14) 50-LB (16) 140 BK-PK (18) 520A P-W (H) (20) 53B BK-LB (18)	C-177	14401 ASSY. 14405 ASSY. 13350 FLASHER 44 LB (14) PART OF FUSE PANEL LOWER L.H. CORNER OF FUSE PANEL	C-183	14290 ASSY. R.H. OUTBOARD HEADLAMP 120 LG-BK (16) 13A R-BK (16) 57G BK (16) AT R.H. OUTBOARD HEADLAMP	C-189	9A840 ASSY. SPEED CONTROL AMPLIFIER 150 DG-W (20) 57 BK (20) R.H. SIDE OF BRAKE PEDAL SUPPORT	C-194	148724 14631 173 P-W 173A P-W NEAR R.H. COWL OVER GLOVE BOX	C-201	INTERMITTENT GOV. 14401 ASSY. 63 R 68 W 941 BK-W 57 BK 96 BK-O 28 BK-P (D) 298 P-O 297 BK-LG 65 DG 61 Y-R UNDER CRASH PAD REAR OF WIPER SWITCH	C-206	14401 ASSY. DECK LID RELEASE SW. 517 BK-W (14) 51B BK-W (D) (14) BEHIND GLOVE BOX DOOR	C-213	18C617 ASSY. 18C621 ASSY. 688 GY-LB (16) 112 BK-Y (D) (16) 298 P-O (H) (18) BEHIND MAP LAMP SWITCH HOUSING	C-214	18C617 ASSY. HEATED BACKLITE RELAY 112 BK-Y (D) (16) 261 O-BK (14) 261A O-BK (14) 686 GY-O (14) 688 GY-LB (16) BEHIND GLOVE BOX ON COWL	C-215	18C617 ASSY. HTD. BACKLITE IND. LAMP 261A O-BK (14) BEHIND MAP LAMP SWITCH HOUSING	C-216	18C617 ASSY. HTD. BACKLITE IND. LAMP 57 BK (18) BEHIND MAP LAMP SWITCH HOUSING	C-217	18C617 ASSY. 14401 ASSY. 261 O-BK (14) OVER GLOVE BOX	C-219	14405 ASSY. 18C619 ASSY. 261 O-BK (14) BY L.H. WHEELHOUSE NEAR SEAT BACK	C-220	18C618 ASSY. PART OF REAR GLASS 261 O-BK (14) L.H. SIDE OF REAR GLASS (BACKLITE)	G-21	EYELET ATTACHED TO INSTR. PANEL CENTER SUPPORT BRACKET	G-22	EYELET ATTACHED TO L.H. UPPER RADIATOR SUPPORT	G-23	EYELET ATTACHED TO LOWER BACK PANEL CENTER SUPPORT BRACKET	G-24	EYELET OF 14290 ASSY. ATTACHED TO L.H. SIDE OF RADIATOR SUPPORT	G-25	EYELET OF 14401 ASSY. ATTACHED TO LOWER PART OF INSTR. PANEL CENTER SUPPORT NEAR A/C SWITCH	G-26	EYELET OF 14405 ASSY. ATTACHED TO STRAINER NEAR L.H. WHEELHOUSE	G-27	EYELET OF 18C617 ASSY. ATTACHED TO RELAY MOUNTING PANEL OVER GLOVE BOX	G-28	EYELET OF 18C620 (PART OF BACKLITE TO QUARTER - NEAR R.H. SIDE OF BACKLITE)																																																																																				
C-42	14405 ASSY. 14401 ASSY. 53 BK-LB (18) 520P-W (H) (20) 140 BK-PK (18) 84 P-Y (H) (14) 57 BK (20) 29 Y-W (20) UNDER L.H. TOEBOARD COVER	C-157	14401 ASSY. 11654 LIGHTING SW. 19H LB-R (16) 53 BK-LB (18) 53A BK-LB (18) 41 BK-LB (H) (16) 15 R-Y (16) 54C LG-Y (18) 14B BR (18) 14B BR (18) 37C Y (10) ABOVE LIGHT SWITCH	C-158	14631 13A777 SW. ASSY. 54 LG-Y (18) NEAR R.H. COWL OVER GLOVE BOX	C-159	14401 158 BK-PK (H) (18) 159 R-PK (H) (18) NEAR L.H. HEADLAMPS	C-160	14401 13A024 HUMMER SW. 12 LG-BK (16) 12A LG-BK (16) 15 R-Y (16) 13 R-BK (16) AT HEADLAMP DIMMER SWITCH	C-161	14401 ASSY. 14 BR (16) 14A BR (18) 287B BK-W (20) 804 PK-LB (20) 57 BK (20) 746 DG-Y (18) 807 PK-LG (20) 745 R-PK (H) (16) UNDER L.H. TOEBOARD COVER	C-162	14290 ASSY. 15A219 L.H. CORNERING LAMP 570 BK (18) 380 P-Y (18) 14A BR (16)	C-164	14290 L.F. TURN SIGNAL LAMP 14B BR (18) 3 LG-W (18) BEHIND L.H. FRONT TURN SIGNAL LAMP	C-165	14290 R.F. TURN SIG. LAMP 14E BR (18) 2 W-LB (18) BEHIND R.H. FRONT TURN SIGNAL LAMP	C-166	14405 13412 14 BR (18) 14 BR (18) AT LOWER BACK PANEL	C-167	14405 140A BK-PK (18) 50-LB (16) AT LOWER BACK PANEL (R. OF C.)	C-168	14290 HEADLAMP DOOR SWITCH 42 R-W (D) (18) 57C BK (18) NEAR L.H. HEADLAMPS	C-169	14405 13407 140A BK-PK (18) 50-LB (16) AT LOWER BACK PANEL (R. OF C.)	C-170	14405 13410 140 BK-PK (18) 140A BK-PK (18) 9 LG-O (16) AT LOWER BACK PANEL (L. OF C.)	C-172	14401 ASSY. 13480 STOPLAMP SW. 10 LG-R (H) (16) 511 LG (16) STOPLAMP SWITCH ON BRAKE PEDAL SUPPORT	C-173	14401 ASSY. 9A840 ASSY. 460 Y-LB (D) (14) 385 W-R (H) (16) 1 DB (14) 9 LG-O (16) 50-LB (16) 44 LB (14) 2 W-LB (18) 2A W-LB (18) 511 LG (16) 3A LG-W (18) 3 LG-W (18) 15B BK-PK (H) (18) ABOVE STEERING COLUMN ON R.H. SIDE	C-174	9A840 ASSY. 7200 ASSY. 460A Y-LB (D) (14) 385 W-R (H) (16) 151 LB-BK (H) (20) 9 LG-O (16) 50-LB (16) 44 LB (14) 2 W-LB (16) 2A W-LB (18) 511 LG (14) 475 DG-W (H) (20) 3 LG-W (16) 15B BK-PK (H) (18) ABOVE STEERING COLUMN ON R.H. SIDE	C-175	14401 ASSY. 14405 ASSY. 140 BK-PK (18) 296B W-P (18) 296A W-P (14) OVER STEERING COLUMN NEAR STOPLAMP SWITCH	C-176	14401 ASSY. PART OF 7200 ASSY. 380 P-Y (18) 379 BR-W (H) (16) 296B W-P (18) ABOVE STEERING COLUMN ON R.H. SIDE	C-177	14401 ASSY. 14405 ASSY. 13350 FLASHER 44 LB (14) PART OF FUSE PANEL UPPER L.H. CORNER OF FUSE PANEL	C-178	14401 ASSY. 13350 FLASHER 385 W-R (H) (16) 383 R-W (H) (16) 10 LG-R (H) (16) UPPER L.H. CORNER OF FUSE PANEL	C-179	14401 ASSY. BACKUP LAMP SW. 140 BK-PK (18) 296B W-P (18) 296A W-P (14) OVER STEERING COLUMN NEAR STOPLAMP SWITCH	C-180	14290 ASSY. L.H. INBOARD HEADLAMP 12B LG-BK (16) 57B BK (16) AT L.H. INBOARD HEADLAMP	C-181	14290 ASSY. L.H. OUTBOARD HEADLAMPS 12A LG-BK (16) 13 R-BK (16) 13A R-BK (16) 57A BK (16) AT L.H. OUTBOARD HEADLAMP	C-182	14290 ASSY. R.H. INBOARD HEADLAMP 57J BK (16) 12E LG-BK (16) AT R.H. INBOARD HEADLAMP	C-183	14290 ASSY. R.H. OUTBOARD HEADLAMP 120 LG-BK (16) 13A R-BK (16) 57G BK (16) AT R.H. OUTBOARD HEADLAMP	C-184	14633 ASSY. 14405 53 BK-LB (16) 387 LG (18) 54 LG-Y (18) 627 BK-O (H) (20) 14 BR (18) 40 LB-W (16) L.H. "B" PILLAR MOD. 53A ONLY	C-185	14632 ASSY. 14405 ASSY. 53 BK-LB (16) 487 PK-O (18) 54 LG-Y (18) 627 BK-O (20) 14 BR (18) 40 LB-W (16) R.H. "B" PILLAR MOD. 53A	C-186	MOD. 53A=14632 ASSY. 13A726 ASSY. MOD. 65=14405 ASSY. 14 BR (18) R.H. REAR QTR. OR DOOR	C-187	MOD. 53A=14633 ASSY. MOD. 65A=14405 ASSY. 14 BR (18) L.H. REAR DOOR OR QTR.	C-188	9A840 ASSY. SPEED CONTROL AMPLIFIER ASSY. 144 O-Y (H) (20) 149 BR-LG (H) (20) 145 GY-BK (H) (20) 148 Y-R (H) (20) 146 W-PK (H) (20) 147 P-LB (H) (20) R.H. SIDE OF BRAKE PEDAL SUPPORT	C-189	9A840 ASSY. SPEED CONTROL AMPLIFIER 150 DG-W (20) 57 BK (20) R.H. SIDE OF BRAKE PEDAL SUPPORT	C-190	9A840 ASSY. SPEED CONTROL AMPLIFIER 298 P-O (H) (18) 151 LB-BK (H) (20) 475 DG-W (H) (20) R.H. SIDE OF BRAKE PEDAL SUPPORT	C-191	9A840 ASSY. SPEED CONTROL SENSOR 57 BK (20) 150 DG-W (20) ENGINE COMPARTMENT BY DASH PANEL	C-192	9A840 ASSY. SPEED CONTROL SERVO 147 P-LB (20) 148 Y-R (20) 149 BR-LG (20) ENGINE COMPARTMENT AT REAR OF ENGINE	C-193	9A840 ASSY. SPEED CONTROL SERVO BLUE BLUE 144 O-Y (H) (20) 145 GY-BK (H) (20) 146 W-PK (H) (20) ENGINE COMPARTMENT AT REAR OF ENGINE	C-194	148724 14631 173 P-W 173A P-W NEAR R.H. COWL OVER GLOVE BOX	C-196	14401 ASSY. 9A840 ASSY. 298 P-O (H) (18) 298 P-O (H) (18) ABOVE STEERING COLUMN	C-197	9A840 460 Y-LB (D) (14) 460A Y-LB (D) (14) HORN RELAY FOR SPEED CONTROL ON R.H. SIDE OF BRAKE PEDAL SUPPORT	C-199	14290 ASSY. HORNS 1 DB (14) IN FRONT OF RADIATOR	C-200	INTERMITTENT GOVERNOR 57 BK 58 W 941 BK-W 61 Y-R 65 DG 298 P-O 28 BK-PK (D) 297 BK-LG (H) 56 DB-O WIPER SWITCH UNDER CRASH PAD REAR OF WIPER SWITCH	C-201	14401 ASSY. INTERMITTENT GOVERNOR 57 BK 58 W 941 BK-W 61 Y-R 65 DG 298 P-O 28 BK-PK (D) 297 BK-LG (H) 56 DB-O WIPER SWITCH UNDER CRASH PAD, REAR OF WIPER SWITCH	C-202	14401 ASSY. 57 BK 58 W 941 BK-W 61 Y-R 65 DG 298 P-O 297B BK-LG (H) 28 BK-PK (D) 56 DB-O WIPER SWITCH UNDER CRASH PAD, REAR OF WIPER SWITCH	C-203	14401 ASSY. 58 W 61 Y-R 56 DB-O ENGINE COMPARTMENT, L.H. DASH PANEL WINDSHIELD WIPER MOTOR	C-204	14401 ASSY. 65 DG 63 R 28 BK-PK (D) ENGINE COMPARTMENT, L.H. DASH PANEL WINDSHIELD WIPER MOTOR	C-205	14290 ASSY. 57E BK 941 BK-W L.H. FENDER APRON AT WASHER	C-206	14401 ASSY. DECK LID RELEASE SW. 517 BK-W (14) 51B BK-W (D) (14) BEHIND GLOVE BOX DOOR	C-207	14401 ASSY. C. BREAKER (6 AMP.) 517 BK-W (14) OVER GLOVE BOX	C-208	14401 ASSY. C. BREAKER (6 AMP.) 84 P-Y (H) (14) OVER GLOVE BOX	C-210	14405 ASSY. 13A756 ASSY. 57E BK (14) 54D LG-Y (18) 84 P-Y (H) (14) IN TRUNK BY L.H. WHEELHOUSE	C-211	13A756 ASSY. DECK LID RELEASE SOLENOID 57 BK (14) 84 P-Y (H) (14) IN DECK LID BY RELEASE SOLENOID	C-212	14401 ASSY. 18C617 ASSY. 298B P-O (H) (18) 686 GY-O (14) OVER GLOVE BOX	C-213	18C617 ASSY. 18C621 ASSY. 688 GY-LB (16) 112 BK-Y (D) (16) 298 P-O (H) (18) BEHIND MAP LAMP SWITCH HOUSING	C-214	18C617 ASSY. HEATED BACKLITE RELAY 112 BK-Y (D) (16) 261 O-BK (14) 261A O-BK (14) 686 GY-O (14) 688 GY-LB (16) BEHIND GLOVE BOX ON COWL	C-215	18C617 ASSY. HTD. BACKLITE IND. LAMP 261A O-BK (14) BEHIND MAP LAMP SWITCH HOUSING	C-216	18C617 ASSY. HTD. BACKLITE IND. LAMP 57 BK (18) BEHIND MAP LAMP SWITCH HOUSING	C-217	18C617 ASSY. 14401 ASSY. 261 O-BK (14) OVER GLOVE BOX	C-219	14405 ASSY. 18C619 ASSY. 261 O-BK (14) BY L.H. WHEELHOUSE NEAR SEAT BACK	C-220	18C618 ASSY. PART OF REAR GLASS 261 O-BK (14) L.H. SIDE OF REAR GLASS (BACKLITE)	G-21	EYELET ATTACHED TO INSTR. PANEL CENTER SUPPORT BRACKET	G-22	EYELET ATTACHED TO L.H. UPPER RADIATOR SUPPORT	G-23	EYELET ATTACHED TO LOWER BACK PANEL CENTER SUPPORT BRACKET	G-24	EYELET OF 14290 ASSY. ATTACHED TO L.H. SIDE OF RADIATOR SUPPORT	G-25	EYELET OF 14401 ASSY. ATTACHED TO LOWER PART OF INSTR. PANEL CENTER SUPPORT NEAR A/C SWITCH	G-26	EYELET OF 14405 ASSY. ATTACHED TO STRAINER NEAR L.H. WHEELHOUSE	G-27	EYELET OF 18C617 ASSY. ATTACHED TO RELAY MOUNTING PANEL OVER GLOVE BOX	G-28	EYELET OF 18C620 (PART OF BACKLITE TO QUARTER - NEAR R.H. SIDE OF BACKLITE)

 WIRE CODE



1972 LINCOLN  
PAGE 5 OF 6  
LOCATION NUMBERS 91 THROUGH 120  
Form 7795P-72L 7-71



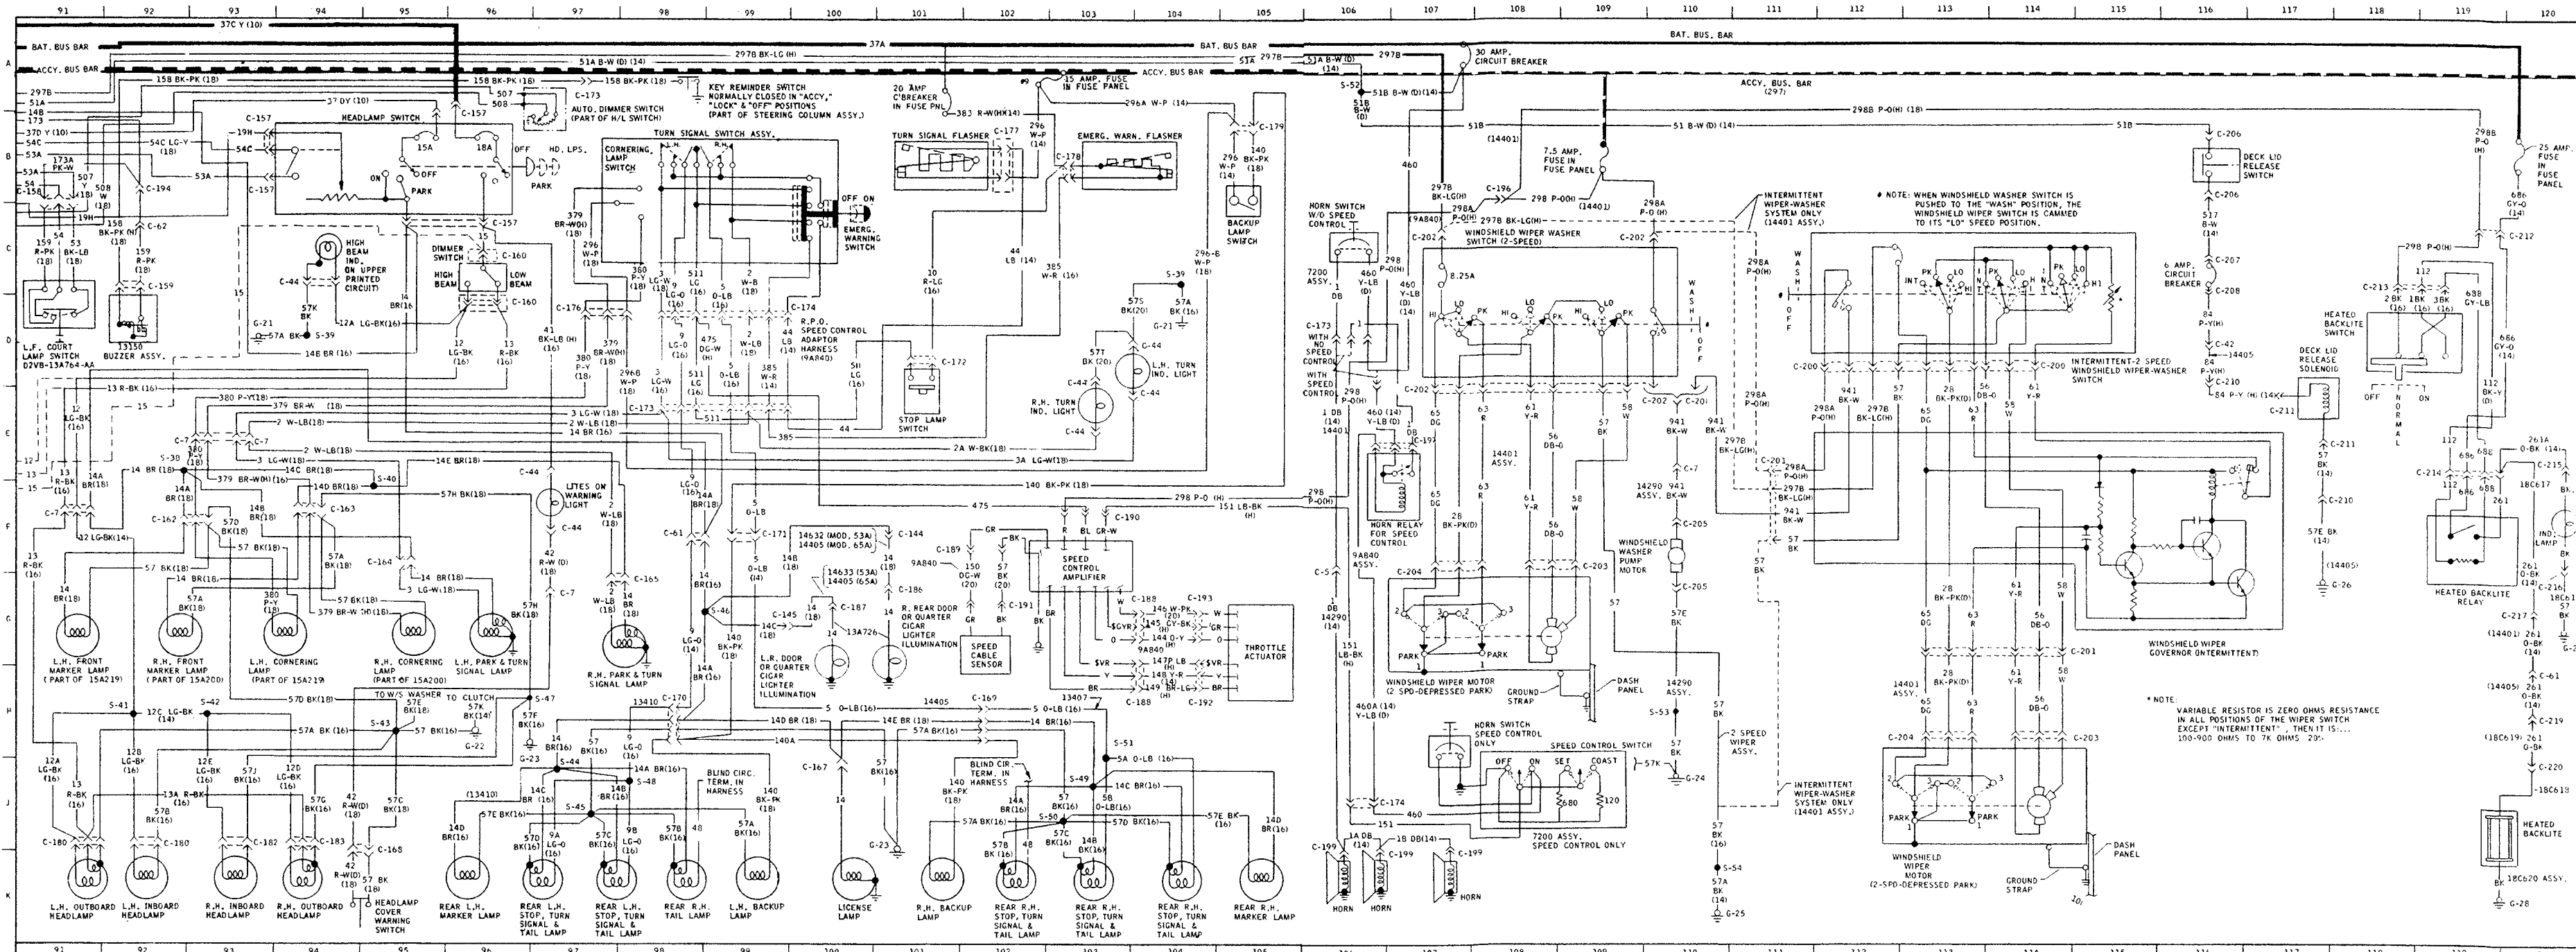

WIRE CONNECTOR CODES

SPLICE CODES

CONNECTOR	LOCATION	CONNECTOR	LOCATION	CONNECTOR	LOCATION
C-13 14405 ASSY.	14632 ASSY.	C-222 RADIO	14401 ASSY.	C-232 *SPEAKER ASSY. (18808)	14630 ASSY.
	R.H. "B" PILLAR		BEHIND MAP LAMP HOUSING		R.F. DOOR
C-14 14405 ASSY.	14633 ASSY.	C-223 AM RADIO, AM TAPE AM-FM MULTI RADIO FADER	14401 ASSY.	C-233 *SPEAKER ASSY. 14405 ASSY. (MOD. 65A) (18808)	14632 ASSY. (MOD. 53)
	L.H. "B" PILLAR		BEHIND MAP LAMP HOUSING		R,R. QTR. (MOD. 65) OR R.R. DOOR (MOD. 53A)
C-60 14630 ASSY.	14401 ASSY.	C-225 14631 ASSY.	14401 ASSY.	C-234 *ANTENNA MOTOR	14405 ASSY.
	BEHIND GLOVE BOX		UNDER L.H. TOEBOARD COVER		AT REAR OF L.H. WHEELHOUSE
C-61 14405 ASSY.	14401 ASSY.	C-229 FADER CONTROL * AM TAPE RADIO ASSY.	(18972)	C-230 (14633 ASSY. MOD. 53) * SPEAKER ASSY. (14405 ASSY. MOD. 65) (18808)	
	UNDER L.H. TOEBOARD COVER		BEHIND MAP LAMP HOUSING		L.R. QTR. (MOD. 65) OR L.R. DOOR (MOD. 53)
C-221 ANTENNA SWITCH	14401 ASSY.	C-231 * SPEAKER ASSY. (18808)	14631 ASSY.		
	BEHIND MAP LAMP HOUSING		L.F. DOOR		


S-55 IN 14405 ASSY. (MOD. 65A ONLY)  
UNDER LEFT SIDE OF FRONT SEAT

WIRE CODE

- DIRECT TO BATTERY
- TO IGNITION SWITCH

MASTER WIRE COLOR CODE IS  
IN "INSTRUCTIONS" SECTION

1972 LINCOLN  
PAGE 6 OF 8  
LOCATION NUMBERS 121 THROUGH 136

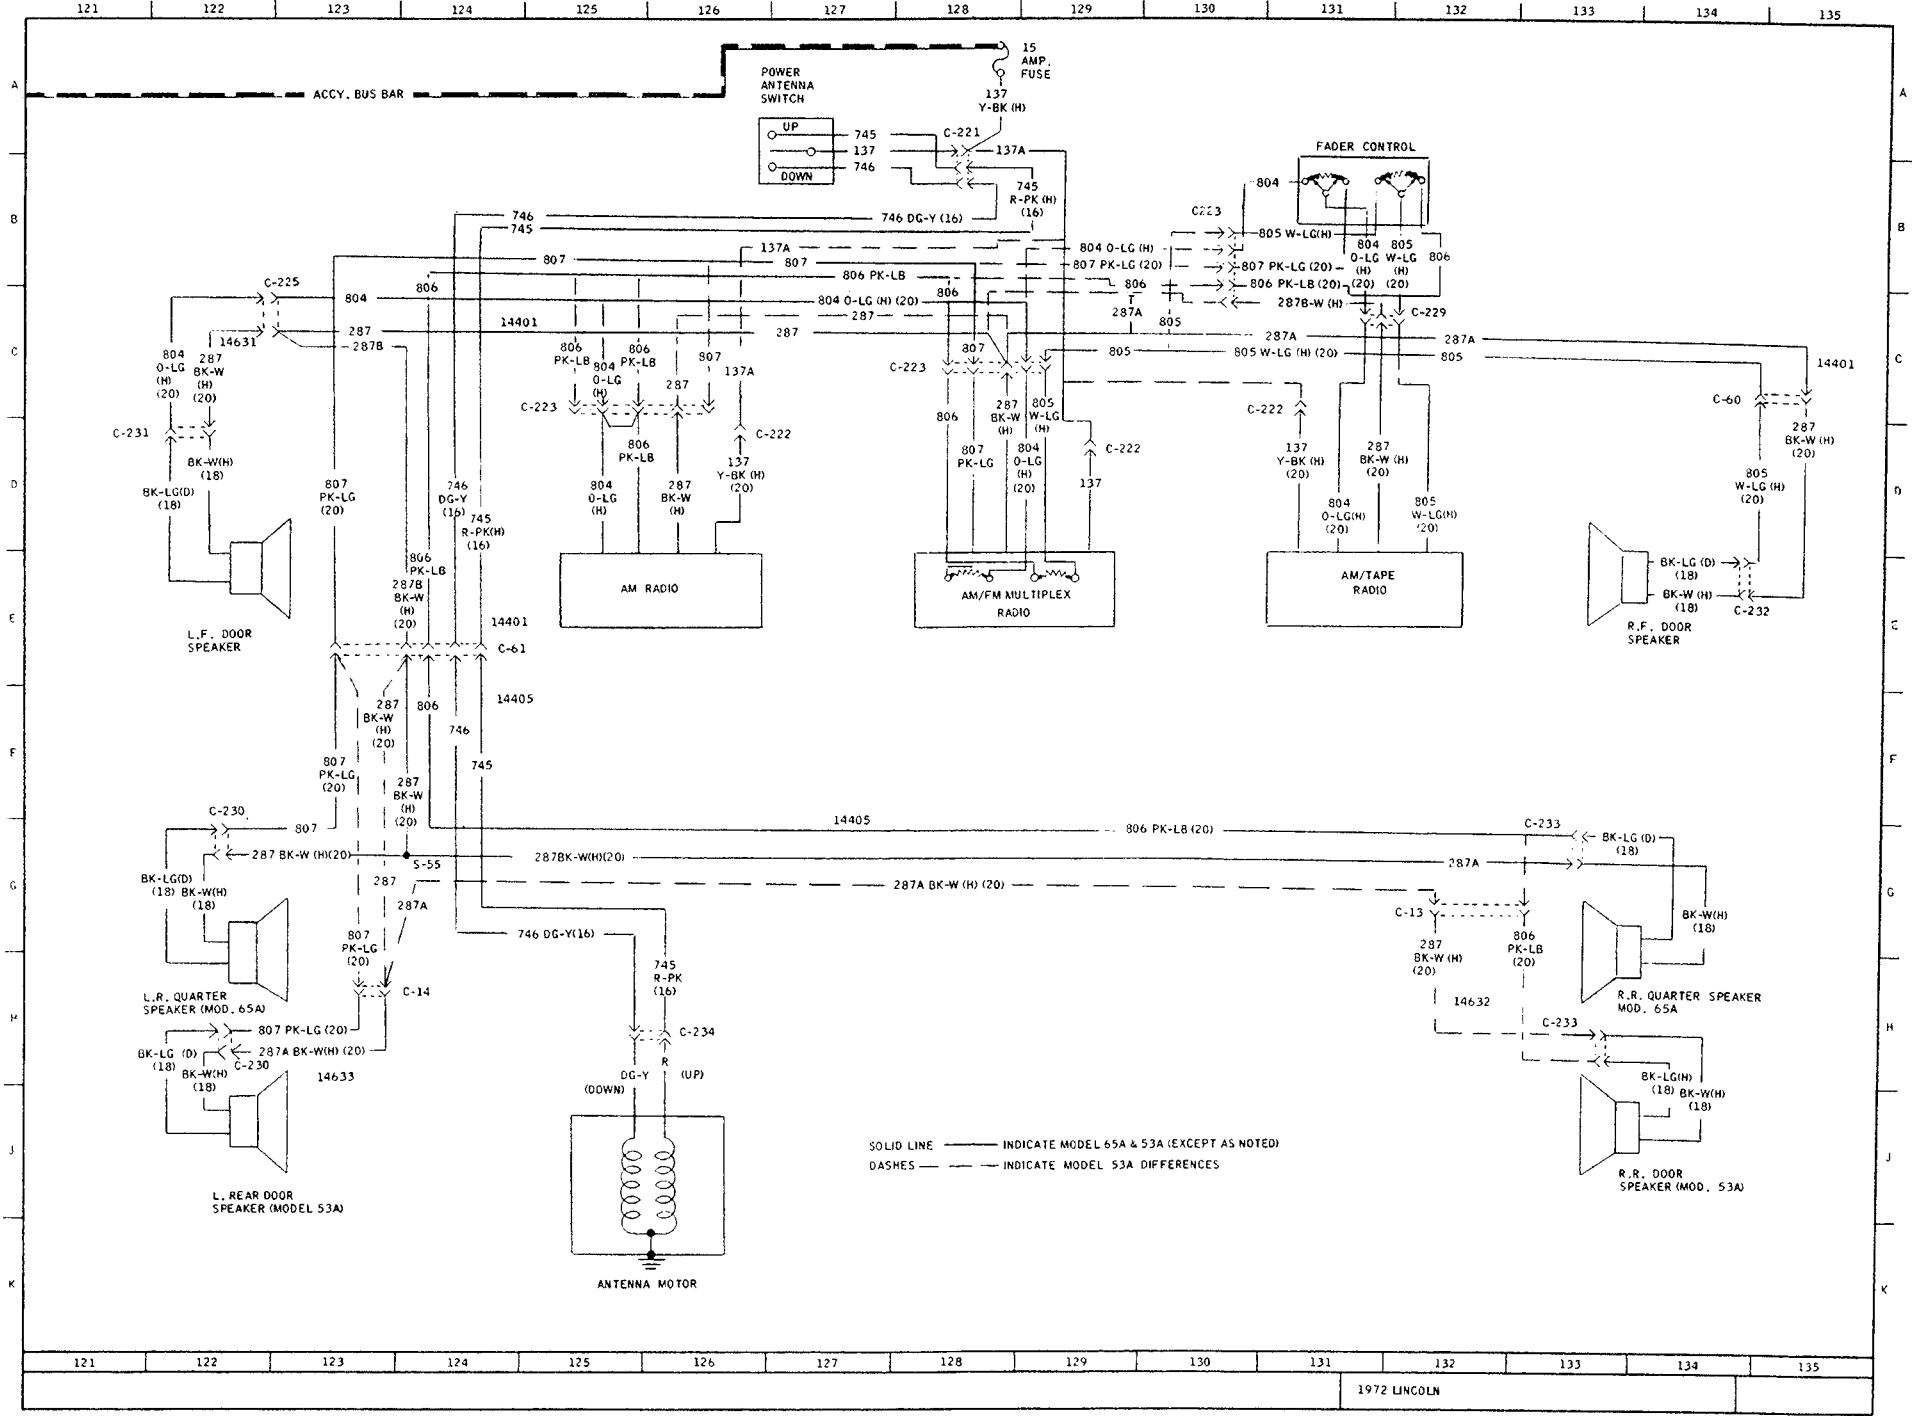

SOLID LINE ——— INDICATE MODEL 65A & 53A (EXCEPT AS NOTED)  
 DASHES - - - - - INDICATE MODEL 53A DIFFERENCES