
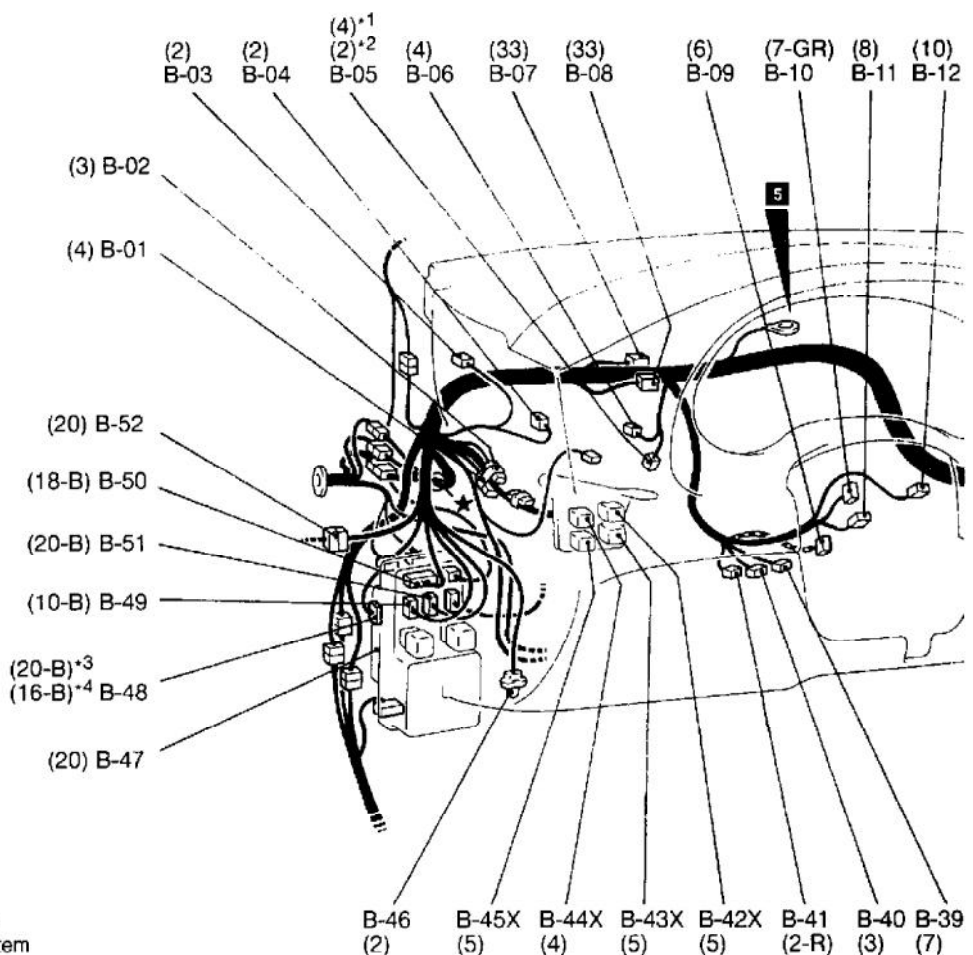


Vehicle: Diagrams


Dash Panel Harness - B Connectors

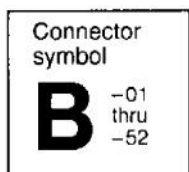

B-01 Diode (for central door locking system)
 B-02 Diode (for theft-alarm system)
 B-03 Clutch pedal position switch
 B-04 Clutch pedal position switch
 <2.0L Engine (Turbo) and 2.4L Engine>
 B-05 Stop light switch (four terminals)
 <2.0L Engine (Non-turbo)>
 Stop light switch (two terminals)
 <2.0L Engine (Turbo) and 2.4L Engine>
 B-06 Stop light switch (four terminals)
 <2.0L Engine (Turbo) and 2.4L Engine>
 B-07 J/C (1)
 B-08 J/C (2)
 B-09 Ignition switch
 B-10 Column switch
 B-11 Column switch

B-12 Column switch
 B-14 Resistor <with ABS or auto-cruise control system>
 B-15 A/C switch illumination light
 B-16 Blower switch
 B-17 A/C switch
 B-18 Turn signal and hazard flasher unit
 B-20 Fan thermo sensor <2.0L Engine (Non-turbo)>
 B-22 Blower resistor
 B-24 Blower motor
 B-25 Automatic compressor-ECM
 <2.0L Engine (Turbo) and 2.4L Engine>
 B-26 Automatic compressor-ECM
 <2.0L Engine (Non-turbo)>
 B-27 Body wiring harness and door wiring harness
 (right side) combination


Dash Panel Harness (Part 1 Of 4)

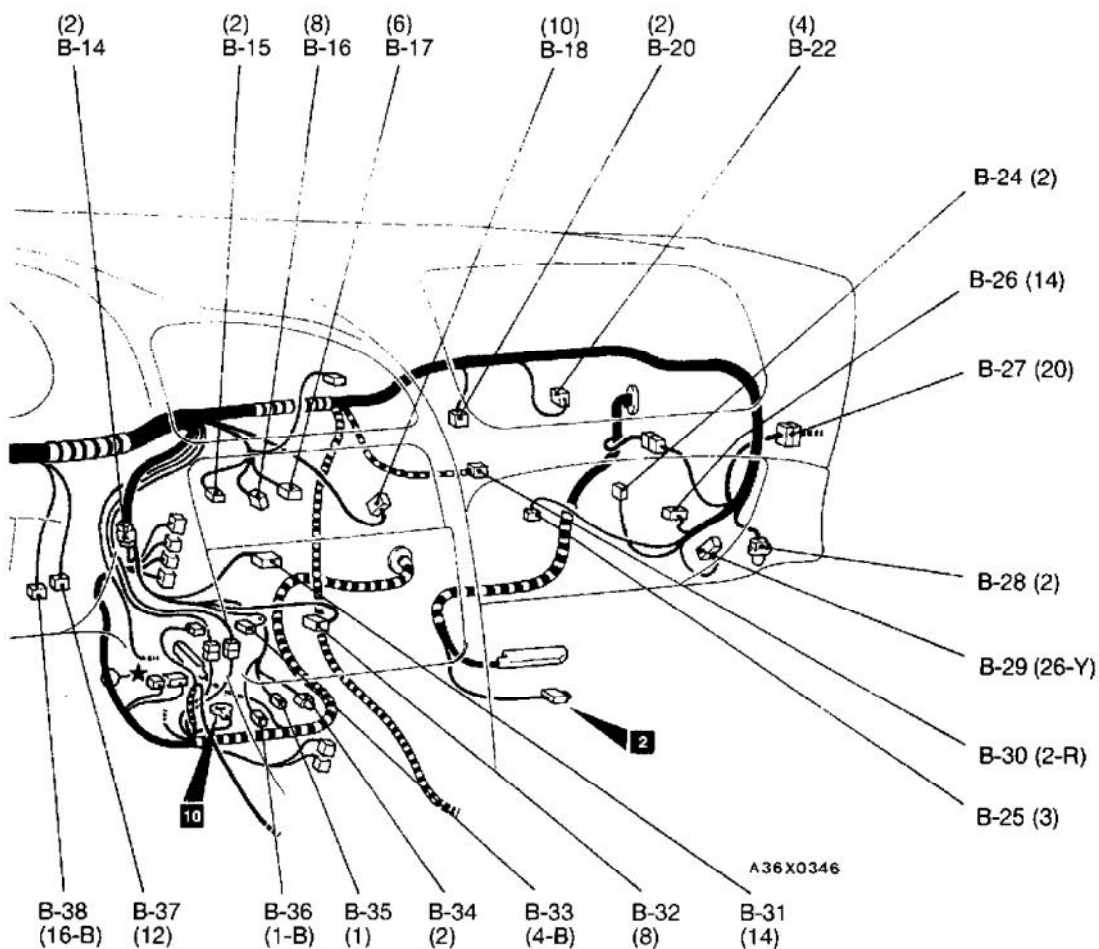

B-28 Foot light (right side)
 B-29 Auto-cruise-ECU
 <2.0L Engine (Turbo) and 2.4L Engine>
 B-30 Air bag module (passenger's side)
 B-31 Radio
 B-32 Door lock power relay 1
 B-33 ABS G sensor <AWD>
 B-34 Cigarette lighter illumination light
 B-35 Cigarette lighter
 B-36 Cigarette lighter
 B-37 Data link connector <2.0L Engine (Non-turbo)>
 B-38 Data link connector
 B-39 Key reminder switch
 B-40 Clock spring

B-41 Air bag module (driver's side)
 B-42X Power window relay
 B-43X Theft-alarm starter relay <M/T>
 B-44X Theft-alarm starter relay <A/T>
 B-45X Theft-alarm horn relay
 B-46 Foot light (left side)
 B-47 ETACS-ECU
 B-48 ETACS-ECU
 B-49 J/B and body wiring harness combination
 B-50 J/B and body wiring harness combination
 B-51 J/B and body wiring harness combination
 B-52 Body wiring harness and door wiring harness
 (left side) combination

Dash Panel Harness (Part 2 Of 4)

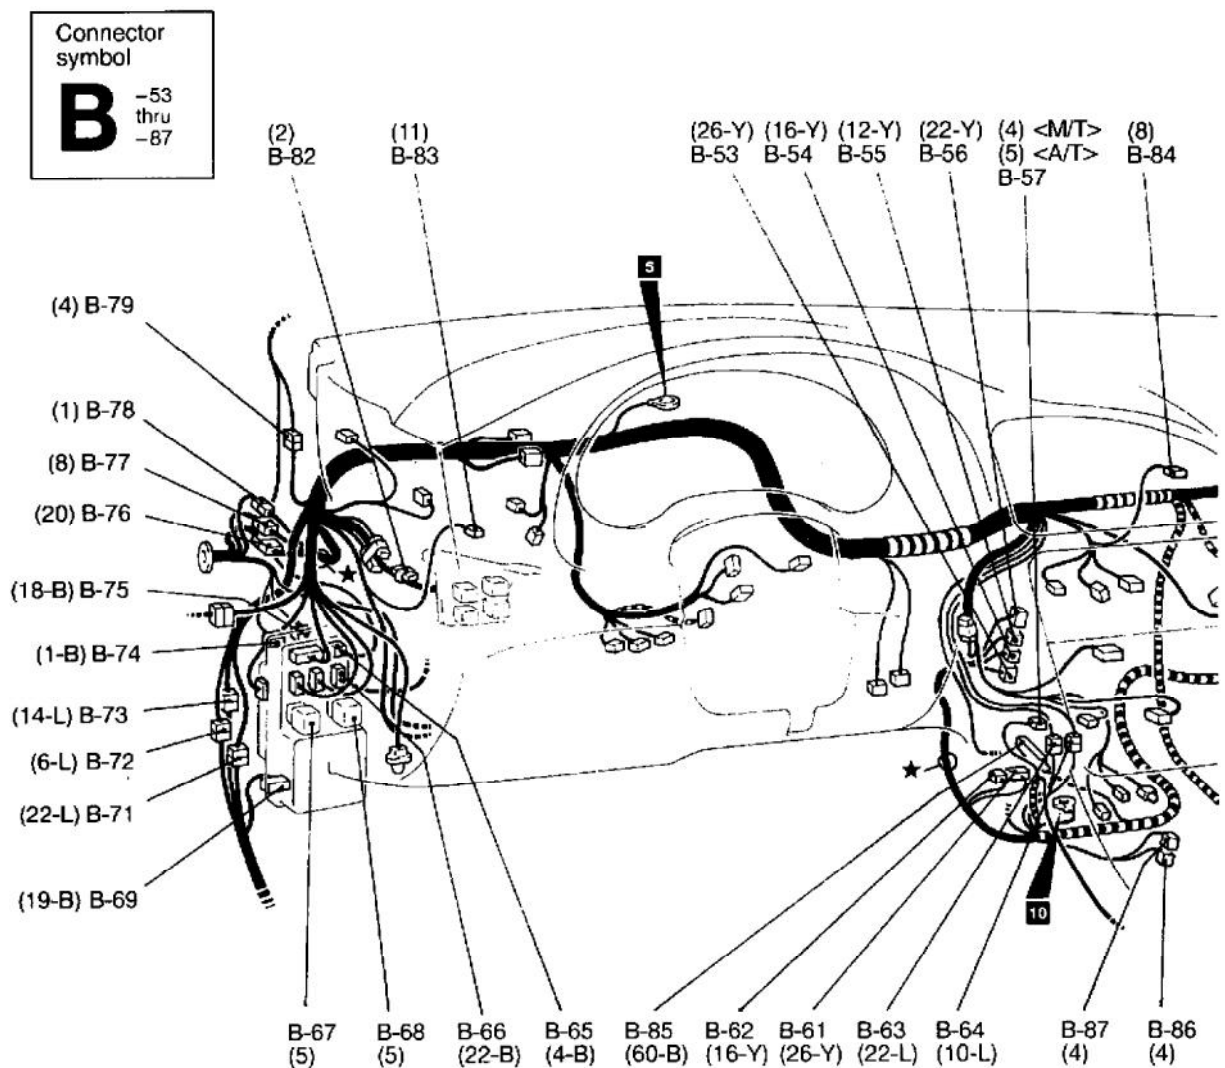

B-53 Engine control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-54 Engine control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-55 Engine control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-56 Engine control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-57 Starter relay

B-58 ABS-ECU

B-59 Body wiring harness and front wiring harness
combination <with ABS>

B-61 ELC 4-speed automatic transaxle control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-62 ELC 4-speed automatic transaxle control module
<2.0L Engine (Turbo) and 2.4L Engine>

B-63 Body wiring harness and control wiring harness
combination

B-64 Body wiring harness and control wiring harness
combination

B-65 J/B and roof wiring harness combination

B-66 J/B and instrument panel wiring harness combina-
tion



B-67 Defogger relay

B-68 Blower motor relay

B-69 J/B and rear wiring harness combination

B-71 Rear wiring harness and body wiring harness
combination

Dash Panel Harness (Part 3 Of 4)

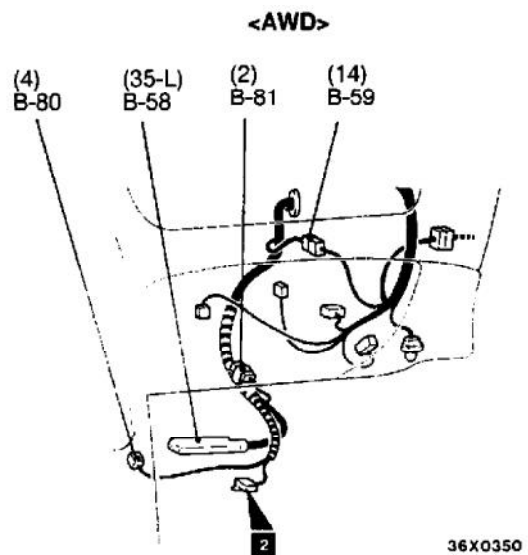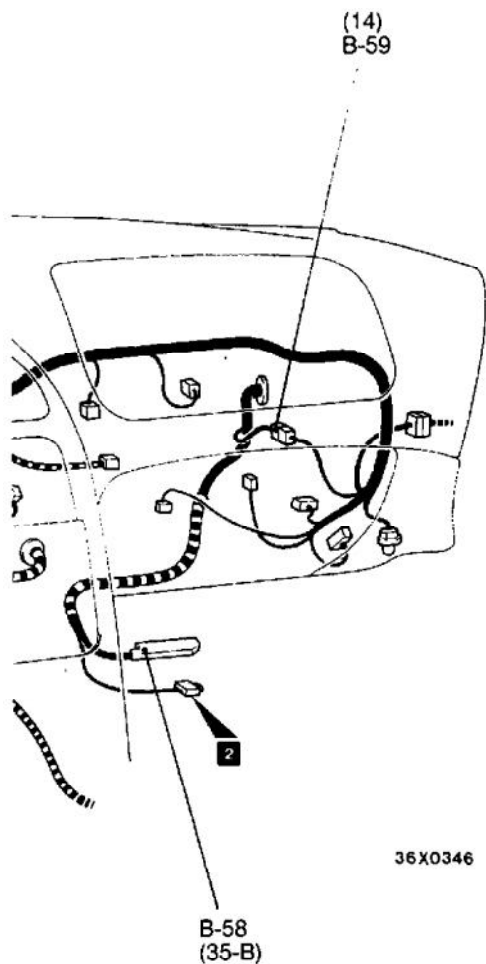

00004159

- B-72 Rear wiring harness and body wiring harness combination
- B-73 Rear wiring harness and body wiring harness combination <with central door locking system>
- B-74 J/B and front wiring harness combination
- B-75 J/B and front wiring harness combination
- B-76 Front wiring harness and body wiring harness combination
- B-77 Front wiring harness and body wiring harness combination
- B-78 Front wiring harness and body wiring harness combination

- B-79 Roof wiring harness and body wiring harness combination
- B-80 ABS power relay <AWD>
- B-81 Diode (for ABS circuit) <AWD>
- B-82 Dedicated fuse <with auto-cruise control system (2.0L Engine (Turbo) and 2.4L Engine)>
- B-83 Remote controlled mirror switch
- B-84 Rear wiper and washer switch
- B-85 EATX-ECM <2.0L Engine (Non-turbo)-A/T>
- B-86 Fuel pump relay <2.0L Engine (Turbo) and 2.4L Engine>
- B-87 MFI relay <2.0L Engine (Turbo) and 2.4L Engine>

Dash Panel Harness (Part 4 Of 4)