



REDLINE WEBER CARBURETORS

40 44 48 IDF- XE

18950-138 40 IDF 70

18890-030 44 IDF 71

19030-021 48 IDF 6

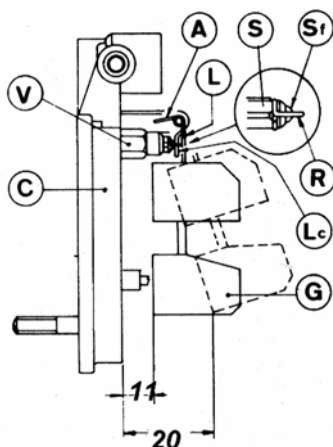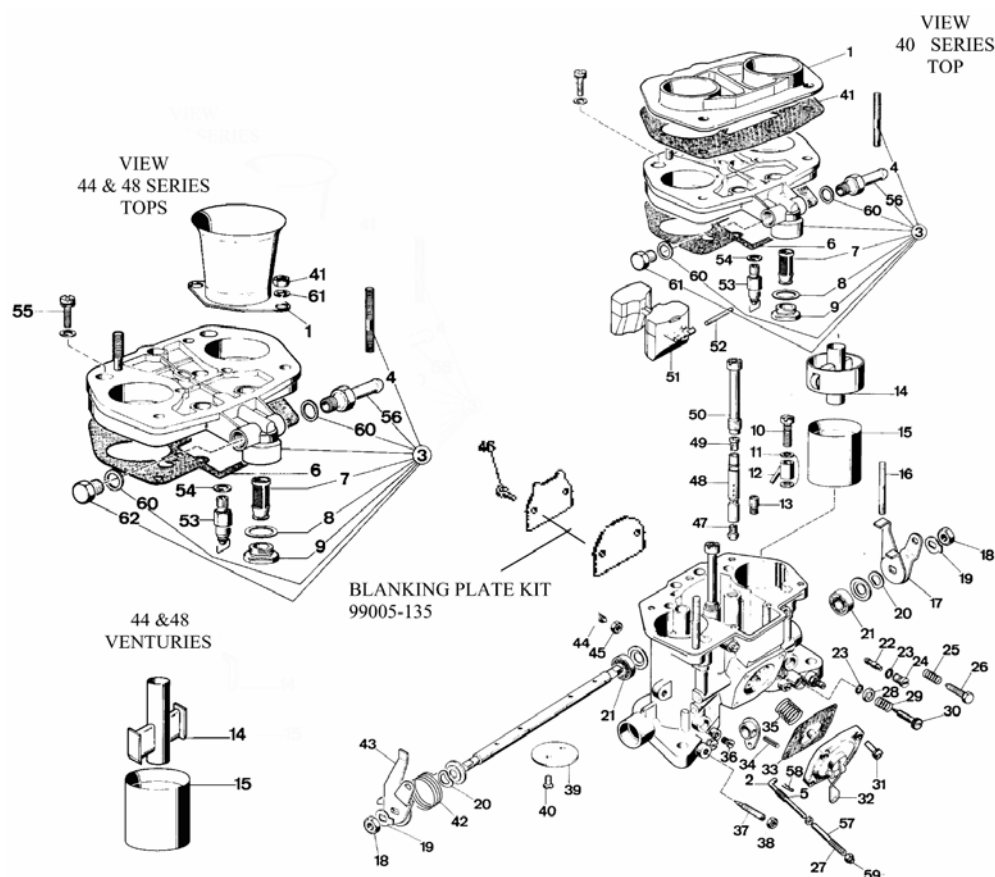

Float setting notes

1. Fuel pressure is critical to float spillage 2.5 to 3 PSI.
2. For aggressive off-road use float drop should be limited to 15 .5 mm max drop

KEY CALIBRATED PARTS

- 15) 41030-008 Float
- 50) 52580-006 Extended Jet holder
- 53) 79511-xxx Needle & Seat (steel)
- 79519-xxx Viton performance Needle & Seat
- 19) 73401-xxx Main Jet
- 94) 77401-xxx Air corrector Jet
- 34) 74405-xxx Idle Jet
- 13) 79701-xxx Pump by-pass (use 000 for performance)
- 96) 76210-xxx Accelerator pump Jet
- 33) 47407-207 Accelerator pump diaphragm XE style
- 47407-027 Accelerator pump diaphragm early style
- Rebuild kit 92-3240-05