


# Mallory Unilite Distributor Static Timing Light

Neil P. Albaugh 10 June 2019

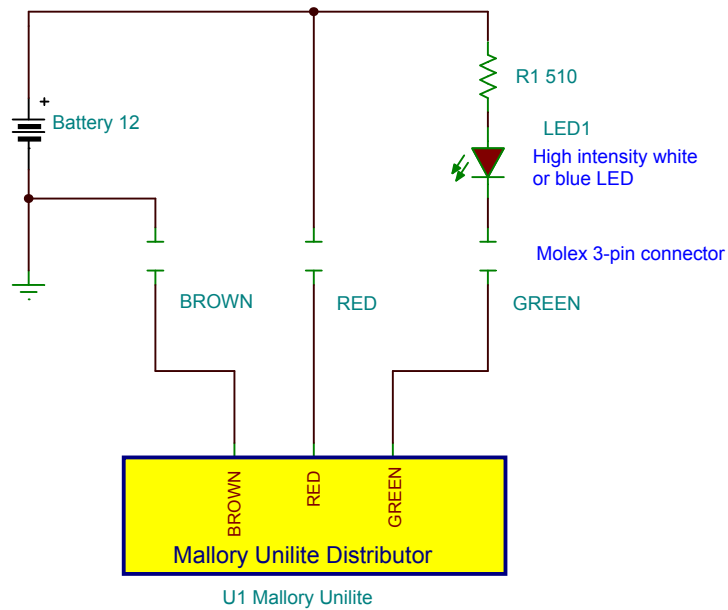

1. Rotate crankshaft to desired initial advance from TDC on the compression stroke.
2. Plug this timing light into the 3-pin connector on the distributor. Loosen distributor clamp.
3. Rotate the distributor until the LED just turns OFF. Re-tighten distributor clamp.
4. Unplug connector and re- connect the distributor to the ignition box.